

CG109 GSM&CDMA 1X Mobile Phone

User Manual

Notes and Notices

Notes:

A *NOTE* indicates important information that helps you make better use of your mobile phone.

 Notices:

A *NOTICE* indicates either potential damage to the phone or loss of data and tells you how to avoid the problem.

Friendly Tips

This manual is used for introducing M801 GSM&CDMA dual standby mobile phone. If description, photographs and actual products are nuances, please practical products. For mobile phone version upgrade, further notice, please contact with the customer service.

Our company will reserve the right of modifying the contents of manual under any circumstance without need notify in advance.

FCC Interference Statement

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operations.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio/television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAR Information

- This device complies with Part 24 of the FCC Rules.
- This device meets government requirements for exposure to radio waves. This device is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for device employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your device, the SAR limit is 1.6 W/kg . The highest SAR value for this device when tested for use at the ear is 0.931 W/kg and when worn on the body is 0.562 W/kg.

Safety and Health Precautions

Read the guidelines before using your phone. Failure to comply with them may be dangerous.

Only use the approved batteries and charger. Other products may lead to leaking, over heat, exploding and fire

Avoid violent drop, shake or hit to the mobile phone, otherwise damage or fire may occur.

Do not place mobile phone, batteries or charger in or on the microwave oven or high pressure equipment. That may damage the mobile phone.

Do not use mobile phone in potentially explosive or flammable atmosphere. Using mobile phone in such area could cause fire or explosion.

Do not keep mobile phone in hot, humidity or dusty space.

Keep mobile phone out of the reach of children. Do not let children play with mobile phone.

Do not leave mobile phone on unstable or uneven place. Such condition may result in mobile phone falling.

Switch off your mobile phone before boarding an aircraft or in hospital and any other facility where posted notices require you to do so. Mobile phone effects the electronic equipments and medication equipments. This phone set has auto switch on function, please check your alarm setting and make sure the phone set will not switch on automatically during the flight.

Certain electronic equipment may not be shielded against the RF signals from our phone, such as hearing aid, pacemakers, other medical devices, fire sensor, auto gate and others. For the satisfactory operation of the equipment and for the safety of personnel, please consult the manufacturer or local sales outlet to discuss alternatives.

Do not put hard pressure or hit on the screen. Rough handling can break the internal circuit

board and the screen. The liquid from screen can dangerous human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.

Do not modify or dismantle the mobile. Unauthorized modify or dismantle will result in damaging the mobile phone.

In some cases, mobile phone has side effect to the vehicle carried electronic equipments. Please do not use mobile phone under that circumstance. Failure to observe these instructions may lead to the denial of legal right.

Do not operate mobile phone with sharp object such as needle or ball pen. Sharp object will damage mobile phone or lead to malfunction.

Please do not use mobile phone which wire is damaged. Otherwise it will dangerous the user.

Please do not place mobile phone close to magnetic objects. Mobile phone can eliminate the information from disc, credit car and other cards.

Please keep small metal objects away from mobile phone's ear phone. The speaker has magnetism and attracts a small metal object which has potential to damage itself and the one who use it.

Precipitation, humidity and liquids will corrode electronic circuits. Keep the phone dry.

During changing batteries, hard pressure will cause the batteries leaking, over heated, explosion and caught fire.

Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (wire line, clip) or necklace connect two terminals. Short circuit may damage the battery.

Please do not weld the battery's terminal. Welding the battery will damage it.

The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.

Do not modify or dismantle the battery. Unauthorized modify or dismantle will result in damaging the mobile battery.

Do not place batteries in or on the microwave oven or over heated places. That may damage the battery.

During charging, using or storing, if batteries temperature rise, color change, or deformed, please stop using and replace with new battery.

The battery liquid is dangerous to human eyes. Please wash eyes with water immediately and go to hospital for further exam if the liquid is in eyes.

If the battery liquid is leaking or smelly, please remove it from fire to avoid explosion.

Please keep battery away from humidity. Humidity will cause over heat, corrosion of the batteries.

Please do not leave the battery in hot places such as in a car in summer as you will reduce the capacity and life time of the battery.

Please do not leave the battery on charger for over 24 hours.

Please charge with dedicated voltage. Using mismatched power will damage the mobile phone

and charger.

Short circuit charger is forbidden. It will cause electric shock and damage the charger.

Take the terminal to unplug the charger. Pulling the power line to unplug will damage the charger and cause electric shock or fire.

Keep the phone and all the parts and accessories (for example, SIM card, T-FLASH card) out of the reach of small children.

Contents

1 Your Phone.....	8
1.1 Basic Specification.....	8
1.2 Keys Definition.....	9
2 Get Started.....	10
2.1 Battery.....	10
2.2 Charging Battery.....	10
2.3 SIM Card.....	11
2.4 T-Flash Card.....	11
3 Basic Functions.....	11
3.1 Power on/off.....	11
3.2 Making a Call.....	12
3.3 Answer/End a Call.....	12
4 Main Menu.....	13
4.1 Phone Book.....	13
4.1.1 Quick Search.....	13
4.1.2 Search Contact.....	14
4.1.3 Add New Contact.....	14
4.1.4 Copy All.....	14
4.1.5 Delete.....	14
4.1.6 Caller Groups.....	14
4.1.7 Extra Numbers.....	14
4.1.8 Settings.....	14
4.2 Messages.....	15
4.2.1 SMS.....	15
4.2.2 MMS.....	16
4.2.3 Voice Mail Server.....	18
4.2.4 Broadcast Message.....	19
4.3 Call History.....	19
4.3.1 Missed Calls.....	19
4.3.2 Dialed Calls.....	19
4.3.3 Received Calls.....	19
4.3.4 Delete Call Log.....	19
4.3.5 Call Time.....	19
4.3.6 GPRS Counter.....	19
4.4 Settings.....	19
4.4.1 Phone Setup.....	19
4.4.2 Call Setup.....	21
4.4.3 Network Setup.....	23
4.4.4 Security Setup.....	23
4.4.5 Restore Factory Settings.....	24
4.4.6 Sound Effect.....	24
4.5 Multimedia.....	25
4.5.1 Camera.....	25

4.5.2 Image Viewer.....	25
4.5.3 Video Recorder.....	25
4.5.4 Video Player.....	26
4.5.5 Audio Player.....	26
4.5.6 Sound Recorder.....	27
4.5.7 Melody Compose.....	27
4.5.8 File Manager.....	28
4.6 Fun & Games.....	28
4.6.1 Games.....	28
4.6.2 Themes.....	28
4.7 User Profiles.....	29
4.7.1 General.....	29
4.7.2 Meeting.....	29
4.7.3 Outdoor.....	29
4.7.4 Indoor.....	29
4.7.5 Headset.....	29
4.8 Organizer.....	30
4.8.1 Calendar.....	30
4.8.2 To do.....	30
4.8.3 Alarm.....	30
4.8.4 Calculator.....	30
4.8.5 Currency Converter.....	31
4.8.6 World Clock.....	31
4.8.7 E-Book Reader.....	31
4.9 Services.....	31
4.9.1 SIM Service.....	31
4.9.2 WAP.....	32
4.9.3 Data Account.....	33
4.10 Text input.....	33
4.10.1 keypad.....	33
4.10.2 Pinyin Input.....	34
4.10.3 Stroke Input.....	34
4.10.4 abc/ABC Mode.....	34
4.10.5 E abc/ABC Mode.....	34
4.10.6 123 Mode.....	35
4.11 Menu Tree.....	35

1 Your Phone

1.1 Basic Specification

Name	Spec.
Phone	100mm[L]x 44.6mm[W]x 16.5mm[H]
	Weight: 88g
Screen	128x 160, 1.8" CSTN
Storage	GSM: 128MBit Nor Flash+32Mbit PSRAM Flash CDMA: 32Mbit Nor Flash+8Mbit PSRAM Flash
Camera	0.1M pixels
Ext. Storage	T-Flash card
Phone Book (PB)	500
Call History	120
SMS	400
Li Battery	Rated Capacity: 900mAh
	Standard Voltage: 3.7V
	Airtime: About 90 minutes
	Waiting time: About 72 hours
	Working temperature: -10 ~+55

Notes:

Waiting time is not in the mobile phone calls and not moving, the continuing movement begun working hours. Waiting time and airtime has related with the use of the network, the surrounding environment.

1.2 Keys Definition



Name	Descriptions
Left Soft key /CDMA Dial key	Execute the dial and answer function through CDMA network; Execute the displayed function on the left bottom line.
Right Soft key	Execute the displayed function on the right bottom line.
Navigation Keys	Up: Enter Audio Player interface;
	Down: Enter Alarm interface;
	Left: Enter User Profiles interface;
	Right: Enter Tone Setup interface.
OK key	Execute the displayed function on the middle of the bottom line;
GSM Dial key	In the idle, Enter Call Logs interface; Execute the dial and answer function through SIM card; Answer all the incoming calls.
End key	Make, hang up or refuse a call; In the idle, long press this key to power on/off; In the other interfaces, return to the idle.
Side Key	Adjust the volume.
1~9	Input 1~9; In the idle, Long press 1 to dial the Voice Mail, long press 2~9 to dial the

	Speed Dial Numbers.
0	Input 0; In the edited interface, input a blank character.
*	In the idle, long press * to input "+", "P" or "W"; In the edited interface, input the symbol character.
#	In the idle, long press # to switch to Silent mode; In the edited interface, switch the input method.

Notes:

(1) *Long press means press the key and hold on more than 2 seconds; Press the key means the hold time less than 2 seconds;*

(2) *"P" is a pause symbol. "W" is a wait symbol. When you dial an ext. number, you can input the host number firstly, and then input "P/W" and the ext. numbers. Otherwise, you can dial the host number, and then dial the ext. numbers after the voice prompt. This function only support non-manual telephone exchange.*

2 Get Started

2.1 Battery

Your phone uses Lithium battery only. Use original battery or authorized one and keep it in good place.

Please follow the steps to remove the battery:

- (1) Push the back cover backward;
- (2) lift the battery up to remove it.

Please follow the steps to install a battery:

- (1) Place the top part of the battery to connect with grooves on the phone.
- (2) Push the battery downward till it clicks into place.

2.2 Charging Battery

Use only original charger or authorized one for this phone. Insert the plug (with arrow on it) of your charger to the charging port on the side of your phone.

Notices:

(1) *Do not charging the mobile phone without battery, in order to avoid damaging the phone or*

adapter;

- (2) *Do not be forcibly inserted into joints to avoid damage the phone or adapter;*
- (3) *Please use the battery after it is used up completely and then charged full for the first three times, your battery will be in the best status;*
- (4) *The battery will be automatically discharge, please charging it when its not used for a long time;*
- (5) *Do not use any damage or failure of battery and adapter;*
- (6) *After charged and discharged for hundred times, it will be disabled. If the working time is shorter, please replace it.*

2.3 SIM Card

Install the SIM card: Slip the card into the slot (GSM: SIM card; CDMA: Non-UIM card). Make sure that the gold-colored contacts on the card face down into the phone.

Notices:

- (1) *Must close the phone, charger and then continued to remove the phone card.*
- (2) *Please do not touch the metal area to avoid losing and breaking the information in the phone card. Put the phone card far from electricity and magnetism.*
- (3) *Phone card must be in the place with the temperature -20 to 85 .*
- (4) *Please put the phone card out of the reach of the children.*

2.4 T-Flash Card

T-Flash card, the formal name of TransFlash card, is an extended memory card that stores multimedia files.

Install the T-Flash card: Slip the cover according to the “Open” arrow to open the cover, and then put into the card. Slip the cover according to the “Close” arrow to lock the cover. Remove the T-Flash card: slip the cover contrarily.

Notices:

- (1) *The card is damaged easily, please do not bend and injury it, and put it far from electricity, dust and water.*
- (2) *T-Flash card has many brands currently on the market, compatibility varies greatly. Suggest using the card in the package or buy the regularity brands.*
- (3) *Use the USB-reader to receive and save files to the T-Flash card.*

3 Basic Functions

3.1 Power on/off

Long press End key to power on and the backlight brighten, and then display the on animation.

Long press End key again to power off.

Insert Card

Without the phone card or the card contacted badly, you can view some menus and dial the emergency calls which unused the phone card. Please long press End key to power off and insert phone card.

Enter Phone Lock Code

You need to input the phone code. After inputted the right phone code, you can enter the idle. Select [Menu/Settings/Security Setup/Phone Lock] to turn on/off it; select [Menu/Settings/Security Setup/Change Password/Phone Lock Password] to change the Lock code.

Enter GSM PIN

You need to input the GSM PIN code. After inputted the right code, you can enter the idle. Select [Menu/Settings/Security Setup/GSM SIM Lock] to turn on/off it; select [Menu/Settings/Security Setup/ Change Password/GSM_Card PIN] to change the GSM PIN code.

3.2 Making a Call

Making a Domestic Call

Input the number and add an area number as a prefix, and then press GSM/CDMA Dial key to dial it.

Dialing PSTN's Extensions

Dialing PSTN's extensions, you can long press * to input the pause symbol "P/W" between the host number and ext. number. And then you can press GSM/CDMA Dial key to dial it. And you can also dial the host number firstly, after the voice prompt, dial the ext. number.

Making IDD

Long press * to input + or input "00" firstly, and then you input the country code and telephone number. After inputted completely, you can GSM/CDMA Dial key to dial it.

SOS

You can dial the urgency service as long as you are in the network range (You can check it on the top left corner of the screen.). If you are in the network range, you can dial the urgency number such as "112" without phone card or keypad locked.

3.3 Answer/End a Call

When your phone has an incoming call, it will give the corresponding advice according to your setup (ring, vibration or incoming picture). Generally, it will display the number. If the number is saved in the phone book, it will display the name. Press GSM /CDMA Dial key to answer it, press End key to refuse it.

During Conversation, press Right Soft key to turn on/off loudspeaker; Press Left Soft key to

display the submenus: Hold, End, New Call, Phone Book, SMS, Sound Recorder, Mute, DTMF.

Hold: hold on the current conversation.

End: hang up the current conversation.

New Call: Enter the dial panel to dial a new call.

Phone Book: Enter the phone book menu.

SMS: Enter the messages menu.

Sound Recorder: Record the current conversation.

Mute: You can close your mike.

DTMF: According to the key-press to execute the DTMF operation. (DTMF: Dual Tone Multi-Frequency; It means that key-press will be sent to the other one as audio signal. This function is used in Phone Bank, RSP, and so on.)

Notes:

(1) *In the submenus, you can switch the two conversations. This meeting function need to apply to the network provider. And it is only supported by SIM card.*

(2) *When you use the earphone, you can not switch two conversations through the earphone.*

4 Main Menu

4.1 Phone Book

4.1.1 Quick Search

In the idle, select [Menu/Phone Book/Quick Search] to enter the list interface. Input the first letter of the name, the cursor will display the corresponding record when you found it; otherwise, the result is blank.

In the list interface, select someone and press GSM/CDMA Dial key to dial it; press OK key to display the submenus: GSM IP Dial, CDMA IP Dial, GSM Send SMS, CDMA Send SMS, Send MMS, View, Edit, Delete, Copy, Move, Send vCard and Print.

GSM IP Dial: Dial the current number through SIM card and add IP prefix automatically.

CDMA IP Dial: Dial the current number through CDMA network and add IP prefix automatically.

GSM Send SMS: Send a message to the current number through SIM card.

CDMA Send SMS: Send a message to the current number through CDMA network.

Send MMS: Send a MMS to the current number through SIM card.

View: You can view the detail of the contact.

Edit: You can change the contact.

Delete: Delete the current contact.

Copy: Copy the current contact from SIM card to Phone or from Phone to SIM card.

Move: Move the current contact from SIM card to Phone or from Phone to SIM card.

Send vCard: Send the contact information by SMS, MMS to others or save as a File in memory

card.

Print: Use the printer to print the content.

4.1.2 Search Contact

In the idle, select [Menu/Phone Book/Search Contact] to input the name, and then press Left Soft key to display the submenus: Search and Input Method.

Search: Search the contact in phone book.

Input Method: Select and choose an input method.

4.1.3 Add New Contact

In the idle, select [Menu/PIM/Phone Book/Add New Contact]. You can select To SIM, To Phone. If you select SIM Card, you can input a name and one number. If you select Phone, you can input Name, Number, Home Number, Company Name, Email Address, Office Number, Fax Number, Birthday, Associate Picture, Associate Video, Associate Sound and Caller Group.

4.1.4 Copy All

In the idle, select [Menu/Phone Book/Copy All], you can select to copy all contacts from SIM card to Phone, or from Phone to SIM card.

4.1.5 Delete

In the idle, select [Menu/Phone Book/Delete], you can select From GSM Card, From Phone, From CDMA Card or One By One to delete the contacts in the phone book.

Notes:

When you select From GSM Card, From Phone or >From CDMA Card, please input the password "1234" firstly. This password will be changed in [Menu/Settings/Security Setup/Change Password/Phone Lock Password].

4.1.6 Caller Groups

In the idle, select [Menu/Phone Book/Caller Group] to display the group list, includes Friends, Family, VIP, Business and Others. You can select someone to view and edit the details. The detail includes Group Name, Associate Sound, Associate Video, Associate Picture and Member List.

4.1.7 Extra Numbers

In the idle, select [Menu/Phone Book/Extra Numbers]. You can set Owner Number, Service Dialing and SOS Number.

Owner Number: You can edit two groups of names and numbers.

Service Dialing: This function needs SIM support and this service can only use in Europe.

SOS Number: you can set five numbers mostly.

4.1.8 Settings

In the idle, select [Menu/Phone Book/Settings] to display the submenus: Memory Status,

Preferred Storage, Fields, My vCard and vCard Version.

Memory Status: You can view the count of the contacts in the SIM card and the phone.

Preferred Storage: Set the stored place and you can select it when you save the contact too.

Fields: Set the displayed options, includes Home Number, Company Name, Email Address, Office Number, Fax Number, Birthday, Associate Picture, Associate Video, Associate Sound and Caller Group.

My vCard: Edit or send my card. It includes Name, Phone Number, Home Number, Company Name, Email Address, Office Number and Fax Number.

vCard Version: Select vCard 2.1 or vCard 3.0.

4.2 Messages

4.2.1 SMS

Inbox

In the idle, select [Menu/Messages/SMS/Inbox] to display the message list. Select someone and press Left Soft key to view the detail.

In the detail interface, press Left Soft key to display the submenus: GSM Reply, CDMA Reply, Delete, Edit, Forward, Delete All and User Number.

GSM Reply: reply to the number of the current message through SIM card.

CDMA Reply: reply to the number of the current message through CDMA network.

Delete: Delete the current message.

Edit: Edit the current message.

Forward: Edit and forward the message.

Delete All: Delete the entire messages in the list.

User Number: Take the numbers out of the message and address as a list, and then dial or save them.

Outbox

In the idle, select [Menu/Messages/SMS/Outbox] to display the message list. Select someone and press Left Soft key to view the detail.

In the detail interface, press Left Soft key to display the submenus: Send, Edit, Delete, Delete All and User Number.

Send: Send the current message.

Edit: Edit the current message.

Delete: Delete the current message.

Delete All: Delete the entire messages in the list.

User Number: take the numbers out of the message and address as a list, and then dial or save them.

Write Message

In the idle, select [Menu/Messages/SMS/Write Message] to edit a new message. If you have an interrupt or press End key to exit during editing, the edited content will be still in the edit interface.

In the editing interface, press Left Soft key to display the submenus: Done, Use Template, Insert Number, Insert Contact and Input Method.

Done: Complete the edited message and then send it.

Use Template: You can insert the template ones into the message.

Insert Number: You can insert a number from the phone book.

Insert Contact: You can insert a name from the phone book.

Input Method: Select and choose an input method.

Notes:

Before you write the message, please confirm that you edited the number of the message centre.

Templates

In the idle, select [Menu/Messages/SMS/Templates] to display the 10 templates list. Select someone and press Left Soft key to display the submenus: Edit, Erase and Write Message.

Edit: Edit and save the template.

Erase: Delete the current template.

Write Message: put the template to the edit interface directly and edit a new message.

SMS Settings

In the idle, select [Menu/Messages/SMS/Message Settings] to display the submenus: GSM Message Settings and Memory Status.

Profile Setting: Select someone and then set the options.

Common Settings: Choose Delivery Report and Reply Path functions.

Preferred Storage: Select SIM or Phone to store firstly.

Pref. Connection: Select Prefer GPRS, Prefer GSM or GSM Only.

Memory Stats: you can view the status of card and Phone.

Notes:

All of above settings need the network support.

4.2.2 MMS

Write Message

In the idle, select [Menu/Messages/MMS/Write Message] to edit a new message.

To: select Add Number or Add Email.

Cc: select Add Number or Add Email.

Bcc: select Add Number or Add Email.

Subject: Edit the subject of the message and most input 40 letters.

Edit Content: Edit the content of the MMS. During editing, you can press Left Soft key to select Done, Input Method, Add Picture, Add Audio, Add Video, Add Attachment, Add Slide Before, Add

Slide After, Add Bookmark Text, Preview and Slide Timing.

After you edited the message, press Left Soft key to display the submenus: Send Only, Save and Send, Save To Drafts, Send Options and Exit.

Send Only: Send the edited message.

Save and Send: send the edited message and save it.

Save To Drafts: save the edited message in Drafts.

Send as Template: save it as a template item.

Send Options: You can set Validity Period, Delivery Report, Read Report, Priority, Delivery Time and Hide Sender.

Exit: leave the current interface and the phone will prompt you to save the edited message.

Notes:

(1) *When you edit the MMS, the options will be different from the different files.*

(2) *The MMS supports jpeg, bmp and gif pictures; AVI video; midi, wav, mp3, amr and melody audio files.*

(3) *This phone supports the largest MMS of 300KB, but the network provider will not support the largest size.*

Inbox

In the idle, select [Menu/Messages/MMS/Inbox] to display the list. Select someone and press Left Soft key to display the submenus: View, Properties, Reply, Reply All, Forward, Delete, Delete All and Use Details.

View: play the MMS, press Right Soft key to stop playing.

Properties: View the detail of the message.

Replay: Replay a MMS to the sender.

Replay All: Replay a MMS to all persons.

Forward: Edit the numbers and send the current message to others.

Delete: Delete the current message.

Delete All: Delete all the messages.

Use Details: Dial the numbers in the message or save them into phone book.

Outbox

In the idle, select [Menu/Messages/MMS/Outbox] to display the list. Press Left Soft key to display the submenus: View, Resend, Send To Others, Delete, Delete All, Move To Drafts, Use Details and Properties.

View: play the MMS, press Right Soft key to stop playing.

Resend: Resend the current message.

Send To Others: Edit the numbers and send the current message to others.

Delete: Delete the current message.

Delete All: Delete all the messages.

Move To Drafts: Move the message to the drafts.

Use Details: Dial the numbers in the message or save them into phone book.

Properties: View the detail of the message.

Drafts

In the idle, select [Menu/Messages/MMS/Drafts] to display the list. Press Left Soft key to display the submenus: View, Send, Edit Message, Delete, Delete All, Use Details and Properties.

View: play the MMS, press Right Soft key to stop playing.

Send: Send the message. If it does not have a receiver, this submenu would not exist.

Edit Message: Edit the current message.

Delete: Delete the current message.

Delete All: Delete all the messages.

Use Details: Dial the numbers in the message or save them into phone book.

Properties: View the detail of the message.

Templates

In the idle, select [Menu/Messages/MMS/Templates] to display the templates. Press Left Soft key to display the submenus: View, Write Message and Properties.

View: play the MMS, press Right Soft key to stop playing.

Write Message: using the template to write a message.

Properties: View the detail of the message.

MMS Settings

In the idle, select [Menu/Messages/MMS/MMS Settings]. It includes that Compose, Send, Retrieve, Filter, Server Profile and Memory Status.

Compose: Set the Slide Time, Layout, Creation Modes, Image Resizing, Max Slides, Best Slide Time, Auto Signature and so on.

Send: Set the options that Validity Period, Delivery Report, Read Report, Priority, Delivery Time and Hide Sender.

Retrieve: Set the options that Home Network, Roaming, Filters, Read Report and Delivery Report.

Filter: allow or reject Anonymous, advertisement MMS.

Server Profile: Select someone and then activate and edit it.

Memory Status: View the Usage, Used Space and Free Space.

4.2.3 Voice Mail Server

In the idle, select [Menu/Messages/Voice Mail Server]. When you cannot answer a call, you can set the incoming call divert to the voice mail. The incoming person will give a message and save it in the network terminal. You receive it and listen to the message from the voice mail system. This service can only support by the SIM card.

Enter the voice mail server; you can edit two voice mail numbers. Press Left Soft key to display the submenus: Edit and Connect to Voice.

Edit: Input the voice mail number.

Connect to Voice: Listen to the sent messages.

4.2.4 Broadcast Message

In the idle, select [Menu/Messages/Broadcast Message]. The broadcast means that the network sends the commonality information. You can receive kinds of subjects' information such as weather, taxi, hospital, and so on. This service can only support by the SIM card.

4.3 Call History

4.3.1 Missed Calls

In the idle, select [Menu/Call History/Missed Calls] to display the missed calls list. Select someone and press GSM/CDMA Dial key to dial the number, press OK key to view the details.

In the detail of missed call interface, press OK key display the submenus: Delete, Save to Phone book, Edit, GSM Send SMS and CDMA Send SMS.

Delete: Delete the current missed call.

Save to Phone book: Save the current missed call to the phone book.

Edit: Edit the current missed number.

GSM Send SMS: Send a message to the current missed number through SIM card.

CDMA Send SMS: Send a message to the current missed number through CDMA network.

4.3.2 Dialed Calls

In the idle, select [Menu/Call History/Dialed Calls] to display the dialed calls list. The detail operation is as same as "Missed Calls".

4.3.3 Received Calls

In the idle, select [Menu/Call History/Received Calls] to display the received calls list. The detail operation is as same as "Missed Calls".

4.3.4 Delete Call Log

In the idle, select [Menu/Call History/Delete Call Log] to delete the Missed Calls, Dialed Calls, Received Calls or delete all the calls.

4.3.5 Call Time

In the idle, select [Menu/Call History/Call Time] to display the GSM Call Time and CDMA Call Time. You can view the call time records, includes Last Call Time, Total Sent, Total Received and Reset All Time.

4.3.6 GPRS Counter

In the idle, select [Menu/Call History/GPRS Counter] to view the data flow on the GPRS network, and this service can only support by SIM card.

4.4 Settings

4.4.1 Phone Setup

In the idle, select [Menu/Settings/Phone Setup] to display the submenus: Time and Date, Schedule Power on/off, Language, Display Characteristic, Greeting Text, Speed Dial, Shortcuts,

Dedicated Key, Auto Update of Date and time and Misc. Settings.

Time and Date

In the idle, select [Menu/Settings/Phone Setup/Time and Date] to display the submenus: Set Home City, Set Time/Date and Set Format.

Set Home City: This setup can not change the phone time.

Set Time/Date: You can edit the time and date; take on/off the daylight saving.

Set Format: You can set the format of the time and date.

Schedule Power on/off

In the idle, select [Menu/Settings/Phone Setup/Schedule Power on/off], you can the time of Power on/off.

Notices:

(1) Please pay a attention that you can not set the same time as the power on/off.

(2) When you are in especially environment such as near the exactitude electron equipment, flammability and explosive area, on the plane, and so on. Please close the function of schedule power on.

Language

In the idle, select [Menu/Settings/Phone Setup/Language], you can set the language.

Display Characteristic

In the idle, select [Menu/Settings/Phone Setup/Display Characteristic] to display the submenus: Wallpaper, Screen Saver, Power On Display, Power Off Display, Show Date and Time, Show Owner Number.

Wallpaper: Set your favorite wallpaper.

Screen Saver: Set your favorite picture when the screen in saver status.

Power On Display: Set your favorite power on display.

Power Off Display: Set your favorite power off display.

Show Date and Time: Take on or off the function of show the date and Time.

Show Owner Number: Take on or off the function of show owner number.

Greeting Text

In the idle, select [Menu/Settings/Phone Setup/Greeting Text] to edit and open the greeting display. It will display on the idle screen.

Speed Dial

In the idle, select [Menu/Settings/Phone Setup/Speed Dial] to display the submenus: Enable Speed Dial and Set Number. You can take it on in Enable Speed Dial. And set 2~9 as speed numbers. After that, long press number key to dial the set numbers in the idle.

Shortcuts

In the idle, select [Menu/ Settings/Phone Setup/Shortcuts] to display the shortcuts menus: Add New Contact, Search Contact, Caller Groups, Owner Number, Memory Status, Preferred Storage,

Greeting Text, Tone Setup, Volume and Alarm.

In the list interface, press Left Soft key to display the submenus: Add, Edit, Delete, Delete All, Disable and Change Order.

Add: Add a shortcut function.

Edit: Enter the functions list, select someone and change the current function.

Delete: Delete the current shortcuts function.

Delete All: Delete all the shortcuts functions.

Disable: Close the shortcuts of the current function.

Change Order: Edit the order of the functions in the list.

Notes:

When you select Pen Calibration, the submenu has only Add and Delete All. And it cannot be deleted when you delete all.

Dedicated Key

In the idle, select [Menu/Settings/Phone Setup/Dedicated Key], you can set the shortcut menus when you press Up/Down/Left/Right key to enter in the idle.

Auto Update of Date and Time

In the idle, select [Menu/Settings/Phone Setup/Auto update of date and time]. If you change the time area, please take on or off this function.

Misc. Settings

In the idle, select [Menu/Settings/Phone Setup/Misc. Settings] to set the brightness and time of LCD backlight.

4.4.2 Call Setup

In the idle, select [Menu/Settings/Call Setup] to display the submenus: GSM Call Setup and CDMA Call Setup. GSM Call Setup includes Caller ID, Call Waiting, Call Divert, Call Barring, Line Switching, Call Time Reminder, Call Time Display, Auto Redial, Closed User Group and IP Dial. CDMA Call Setup only includes Call Waiting, Call Divert, Call Time Reminder, Call Time Display, Auto Redial and IP Dial.

Caller ID

In the idle, select [Menu/Settings/Call Setup/Caller ID], you can select Set by Network, Hide Id and Send Id.

Call Waiting

In the idle, select [Menu/Settings/Call Setup/Call Waiting]. If you activate this function, the network will give notice when you have a new incoming call during the conversation.

Activate: activate the call waiting function.

Deactivate: deactivate the call waiting function.

Query Status: Query the status of call waiting function.

Call Divert

In the idle, select [Menu/Settings/Call Setup/Call Divert]. This function includes Divert All Voice Calls, Divert If Unreachable, Divert If No Answer, Divert If Busy, Divert All Data Calls and Cancel All Divert. Enter the corresponding menus and execute the operations as follows:

Activate: activate the call divert function.

Deactivate: deactivate the call divert function.

Query Status: Query the status of call divert function.

After setup, you can cancel all divert when you do not need them.

Call Barring

In the idle, select [Menu/Settings/Call Setup/Call Barring] to display the submenus: Outgoing Calls, Incoming Calls, Cancel All and change Barring Password. This function related with the network, please ask the detail for the network provider.

Outgoing Calls: You can activate, Deactivate or Query status of All Calls, International Calls and International Call Except for Home PLMN.

Incoming Calls: You can activate, Deactivate or Query status of All Calls and When Roaming.

Cancel All: Input the barring password to cancel all the barring.

Change Barring Password: Change the barring password.

Line Switching

In the idle, select [Menu/Settings/Call Setup/Line Switching] to switch Line 1 or Line 2.

Call Time Reminder

In the idle, select [Menu/Settings/Call Setup/Call Time Reminder], you can set the time of reminder.

Off: Close this function.

Single: Input a number between 1 ~ 3000 (s), when the time is out it will give a prompt.

Periodic: Input a number between 30 ~ 60 (s), it will give a prompt each the time.

Call Time Display

In the idle, select [Menu/Settings/Call Setup/Call Time Display] to take on or off this function.

Auto Redial

In the idle, select [Menu/Settings/Call Setup/Auto Redial], take on or off this function. If you take on it, the phone will auto redial the number 10 times till it answer or end it when it dial failure.

Closed User Group

In the idle, select [Menu/Settings/Call Setup/Closed User Group] to display the groups. If the group has nothing, select Add to add something. Otherwise, select someone and press Left Soft key to display the submenus: Edit, Add, Activate, Deactivate and Delete.

Edit: Edit the name and content of the group.

Add: Add a new group.

Activate: Activate the current group.

Deactivate: Close the current group.

Delete: Delete the current group.

Notes:

After open some group, the numbers will be only dial each other in the group. But the network will not be supported now, so open or close this function is ineffective.

IP Dial

In the idle, select [Menu/Settings/Call Setup/IP Dial] to edit three IP number mostly. When you select IP dial, the phone will add the IP prefix before the number automatically.

Choose one IP number and press Left Soft key to display the submenus: Activate and Edit.

Activate: Set the selected IP number as the current one.

Edit: Input the IP number and save it.

4.4.3 Network Setup

In the idle, select [Menu/Settings/Network Setup] to display the submenus: Network Selection, Preferred Networks and GPRS Connection.

Network Selection: select Automatic or Manual mode.

Preferred Network: During searching the network, the phone will select the network which one was preferred network.

GPRS Connection: press Left Soft key to switch it between Always and When Needed.

Notes:

You can save eight network providers mostly. The option is related with the SIM card service.

4.4.4 Security Setup

In the idle, select [Menu/Settings/Security Setup] to display the submenus: SIM Lock, Phone Lock, Auto Keypad Lock, Fixed Dial, Barred Dial and Change Password.

SIM Lock

In the idle, select [Menu/Settings/Security Setup/SIM Lock]. The lock is executed by the PIN code to avoid your SIM card using illegality.

If the SIM Lock is off, please input the PIN code to take it on. After that, you need to input the correct PIN code to power on. If the SIM Lock is on, please input the correct PIN code to take it off.

 **Notices:**

If you input a wrong PIN code for three times, the SIM card will be locked. You need to input PUK code to unlock. The PIN code and PUK code is supplied with the SIM card. If you have not them, please contact with your network provider.

Phone Lock

In the idle, select [Menu/Settings/Security Setup/Phone Lock]. This phone password avoids others using your phone illegality.

 **Notices:**

The default password of phone lock is “1234”, please change it ASAP in [Menu/Settings /Security Setup/Change Password/Phone Password].

Auto Keypad Lock

In the idle, select [Menu/Settings/Security Setup/Auto Keypad Lock] to set the auto keypad lock function. You can select None, 5 sec., 30 sec., 1 min., 5 min. If the phone has no operation in the idle, the keypad will lock when the time is out. Press Right Soft key + # to lock/unlock it.

Fixed Dial

In the idle, select [Menu/Settings/Security Setup/Fixed Dial]. If your SIM card supports this function, you can limit several fixed numbers to dial. When you activated this function, you can edit several numbers or several kinds of numbers. It includes the submenus: Mode and Fixed Dial List.

Mode: Input the correct PIN2 code and then take on/off this function.

Fixed Dial List: Display the numbers list. When the list is null, **press Left Soft key to** add someone and save it after you input the correct PIN2 code; otherwise, execute the operations to the numbers.

 **Notices:**

After you input PIN2 code, you can take on or off Fixed Dial. Please contact with the network provider to ask for PIN2 code. The phone book will display the fixed dial numbers after you take on this function.

Barred Dial

In the idle, select [Menu/Settings/Security Setup/Barred Dial]. If your SIM card supports this function, you can edit some barred numbers.

 **Notices:**

After you input PIN2 code, you can take on or off Barred Dial. Please contact with the network provider to ask for PIN2 code. The phone book did not display the barred numbers after you take on this function.

Change Password

In the idle, select [Menu/Settings/Security Setup/Change Password] to change the PIN, PIN2 and Phone Password.

PIN : You can change the SIM PIN.

PIN2: You can change PIN2 code.

Phone Password: Input the old password and then change a new one.

 **Notices:**

The passwords upwards must be 4~8 digits.

4.4.5 Restore Factory Settings

In the idle, select [Menu/Settings/Restore Factory Settings]. Input the phone lock password and then let the parameters restore factory settings.

4.4.6 Sound Effect

In the idle, select [Menu/Settings/Sound Effect]. Set the Equalizer as Normal, Bass, Dance, Classical, Treble, Party, Pop and Rock.

4.5 Multimedia

4.5.1 Camera

In the idle, select [Menu/Multimedia/Camera] to find a view. Press # key to display or cancel the icons; press OK key to take a photo and then save it.

In the view interface, press Left Soft key to display the submenus: Album, Camera Settings, Image Settings, White Balance, Scene Mode, Effect Settings, Add Frame, Storage and Restore Default.

Album: Go to the album and display the photos list.

Camera Settings: It includes Shutter Sound, EV, Banding, Delay Timer and Cont Shot.

Image Settings: It includes image size and image quality.

White Balance: It includes Auto, Daylight, Tungsten, Fluorescent, Cloud and Incandescence.

Scene Mode: set it as Auto or Night mode.

Effect Settings: It includes Normal, Grayscale, Sepia, Sepia Green, Sepia Blue and Color Invert.

Add Frame: Set the wallpaper frame.

Storage: Select Phone or Memory card to store.

Restore Default: Let the parameters of the camera restore to default.

4.5.2 Image Viewer

In the idle, select [Menu/Multimedia/Image Viewer], you can view the photos which you take by the camera. Press Left Soft key to display the submenus: View, Browse Style, Forward, Rename, Delete, Delete All Files, Sort and Storage.

View: View the detail of the current photo. Press Left Soft key to use the printer to print the content.

Browse Style: You can select List Style or Matrix Style.

Forward: Forward the photo to Screen Save, Power On Picture, Power Off Picture, Phone book, MMS.

Rename: Edit the name of the photo.

Delete: Delete the current photo.

Delete All Files: Delete all the photos in the list.

Sort: sort the files.

Storage: Select Phone or Memory card to store.

4.5.3 Video Recorder

In the idle, select [Menu/Multimedia/Video Recorder] to find a view. Press Up/ Down key to adjust the focus. Press OK key to start REC.

In the view interface, press Left Soft key to display the submenus: To Player, Camcorder Setting, Video Setting, Effect Setting, Storage and Restore Default.

To Player: go to the list interface and display the files.

Camcorder Setting: It includes White Balance, EV, Night Mode and Banding.

Video Setting: You can set the Video Quality.

Effect Setting: It includes Normal, Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert, Copper Carving and Blue Carving.

Storage: Select Phone or Memory card to store.

Restore Default: Let the parameters of the recorder restore to default.

4.5.4 Video Player

In the idle, select [Menu/Multimedia/Video Player] to display the list.

In the list interface, press Left Soft key to display the submenus: Play, Forward, Rename, Delete, Delete All Files, Sort and Storage.

Play: Play the current video.

Forward: Forward the video to Screen Save, Power On Picture, Power Off Picture, MMS.

Rename: Edit the name of the video.

Delete: Delete the current video.

Delete All Files: Delete all the files in the list.

Sort: sort the files.

Storage: Select Phone or Memory card to store.

In the playing interface, press Left Soft key/OK key to start playing; press * key to switch lateral/normal playing; press Left/Right key to decelerate/speed; Press Side key to adjust the volume.

Notes:

If you switch to Slient mode in the idle, please cancel it and then use this function.

4.5.5 Audio Player

In the idle, select [Menu/Multimedia/Audio Player] to enter the audio player interface.

In the player interface, it displays “00:00” that means the playing time; “0/0” means that the playing one’s turn in the list; Press Up key to play/pause the current music; press Down key to stop it; Press OK/Left Soft key to enter the list; Press Left key to play the previous one; Press Right key to play the next one; Press Side key to adjust the volume.

In the player interface, press Left Soft key to enter the playing list. In the list interface, press Left Soft key to display the submenus: Play, Detail, Add To Rings, Refresh List and Settings.

Play: Play the current music.

Detail: View the detail of the current music.

Add To Rings: Add the current music to the rings.

Refresh List: Refresh the music list from the memory card.

Settings: Enter the settings submenus and set them.

Notes:

- (1) If you switch to Slient mode in the idle, please cancel it and then use this function.
- (2) If you take off the Auto-Refresh List function, it will display submenus of Add and Settings when it has no music on list interface.
- (3) Under the same content, put in a lyric file and the name of the file is as same as the music. And take on the display function; you can see the lyric when you play it.
- (4) Please choose the stereo headset to listen to the music, and set the state in [Settings/BT Stereo Output], “Off” means that the sound from headset is single track; “On” means that the sound is stere .

4.5.6 Sound Recorder

In the idle, select [Menu/Multimedia/Sound Recorder] to display the list. When it has no files, press Left Soft key to display the submenus: Record and Settings; When it has records, press Left Soft key to display the submenus: Record, Play, Append, Rename, Delete, Delete All, Settings and Forward.

Record: Start recording. During recording, you can press Left /Right Soft key to Pause or Stop. You can continue to record if you let it pause. Press Right Soft key to stop and then edit the name and save it.

Play: Play the current recorder file.

Append: Continue to record the current file.

Rename: Edit the name of the current file.

Delete: Delete the current recorder file.

Delete All: Delete all the files.

Settings: You can select the file format of AMR or WAV.

Forward: Send the current file to User Profile, MMS.

4.5.7 Melody Compose

In the idle, select [Menu/Multimedia/Melody Compose] to enter the list interface. If it has no file in the list, press Left Soft key to enter the edit interface, press 1~7 to input notes and then press Left Soft key to display the submenus: Play, Play Speed, Select Instrument and Save.

Play: play the current melody.

Play Speed: set the speed of Fast, Normal or Slow.

Select Instrument: Select Piano, Guitar, Violin, Saxophone, Steel Drums, Flute, Harmonica, Trumpet, Music Box and Xylophone.

Save: Edit and save the name of melody.

If it has some files in the list, press Left Soft key to display the submenus: Play, Edit, Add, Rename, Delete, Delete All Files, Forward.

Play: play the current melody.

Edit: Edit the current melody again.

Add: Add a new melody.

Rename: Edit the name of the melody again.

Delete: Delete the current melody.

Delete All Files: Delete all the melodies.

Forward: Forward the melody to User Profile, MMS, SMS.

4.5.9 File Manager

In the idle, select [Menu/Multimedia/File Manager] to display the phone and memory card (Please inserted the card firstly). It will display the storage on the top of the interface. Press Left Soft key to display the submenus: Open, Create Folder and Format.

Open: Display the content and files.

Create Folder: Create a new folder and edit the name of the folder.

Format: Format the memory card and delete all the data in it.

Select a place such as a folder; press Left Soft key to display the submenus: Open, Create Folder, Rename, Delete and Sort.

Open: Open the folder and display the content and files.

Create Folder: Create a new folder and edit the name of the folder.

Rename: Rename the name of the folder.

Delete: Delete the current folder.

Sort: sort the files and folders.

If you select a file; press Left Soft key to display the submenus. The submenus will be different from the files.

Notes:

(1) When you edit the music file as a MMS, the operation will be contact with the size of the file.

(2) This phone does not have USB function; please use the USB-reader to manage the files on PC.

4.6 Fun & Games

4.6.1 Games

In the idle, select [Menu/Fun & Games/Games]. It has three games: Copter, Puzzle and Robot.

Please view the game help before you play the games.

Otherwise, you can press Left/Right/Up/Down key to set BGM, Sound Effect and Vibration in Game Setting.

4.6.2 Themes

In idle mode, select [Menu/Fun & Games/Themes] to select three themes such as Blue, Orange and Grey. Choose someone and then press Left Soft key to display the submenus: Activate, Update Period and Set Order.

Activate: choose the selected theme.

Update Period: Select the update period such as Off, Hourly, Daily, Weekly, Monthly and Seasonally.

Set Order: Press Left/Right key to select the themes.

4.7 User Profiles

There are many predetermined profiles for you to select, they are General, Meeting, Outdoor, Indoor, Headset. You can choose different profiles in different settings. Also you can modify options such as ring tone, alert type and volume under certain profile option.

4.7.1 General

In the idle, select [Menu/User Profiles/General]. Press Left Soft key to display the submenus: Activate and Customize.

Activate: activate the current profile.

Customize: Set the options of the current profile.

In the Customize, it includes Tone Setup, Volume, Alert Type, Ring Type, Extra Tone and Answer Mode.

Tone Setup: You can set the Incoming Call, Power On, Power Off, Message Tone and Keypad Tone.

Volume: Set the Ring Tone and Key Tone.

Alert Type: You can set Ring, Vib. (Vibration) Only, Vib. and Ring, Vib. then Ring.

Ring Type: You can select Single, Repeat or Ascending.

Extra Tone: You can set Warning, Error, Camp on or Connect.

Answer Mode: You can take on/off the any key answer function.

Notes:

The phone is in General mode when it took out of the factory.

4.7.2 Meeting

In the idle, select [Menu/User Profiles/Meeting]. The detail operation refers to "General".

4.7.3 Outdoor

In the idle, select [Menu/User Profiles/Outdoor]. The detail operation refers to "General".

4.7.4 Indoor

In the idle, select [Menu/User Profiles/Indoor]. The detail operation refers to "General".

4.7.5 Headset

In the idle, select [Menu/User Profiles/Headset]. Before set this profile, please confirm that you inserted a headset. The detail operation refers to "General".

4.8 Organizer

4.8.1 Calendar

In the idle, select [Menu/Organizer/Calendar] to display the calendar interface.

In the calendar interface, press Left Soft key to display the submenus: View Tasks, Add Task, Jump To Date and Go to Weekly View.

View Tasks: View and Edit the options about the task.

Add Task: Select a task type such as Reminder, Meeting, Course, Date, Call or Anniversary; and then add a task.

Jump To Date: Input a date and speed to display the calendar.

Go to Weekly View: View the tasks weekly.

4.8.2 To do

In the idle, select [Menu/Organizer/To Do] to enter the tasks list. You can edit the options about them.

4.8.3 Alarm

In the idle, select [Menu/Organizer/Alarm]. You can set five alarm clocks, includes State, Time, Repeat, Audio Options, Snooze and Ring Type. If you power off, it will also give a prompt.

State: Press Left/Right key to turn on/off the alarm.

Time: Edit the alarm time.

Repeat: set alarm times as Once, Everyday or Days.

Audio Options: Select Tone or FM Radio as ring type.

Snooze: set the snooze time.

Ring Type: set the ring type as Ring, Vib. (Vibration) Only, Vib. and Ring.

4.8.4 Calculator

In the idle, select [Menu/Organizer/Calculator] to display the calculator interface.

In the calculator interface, press Right Soft key to delete or exit; Press Left/Right /Up/Down key as follows to execute the corresponding operations.

M+ : Press Up key two times and then press Left Soft key to make adding with [] and displayed numbers, and the result stores in the memory [].

M- : Press Down key two times and then press Left Soft key to make minus with [] and the displayed numbers, and the result stores in the memory [].

MR : Press Right key two times and then press Left Soft key to transfer the data from the memory [] to the displayed place.

MC : Press Left key two times and then press Left Soft key to erase the data in the memory [].

4.8.5 Currency Converter

In the idle, select [Menu/Organizer/Currency Converter]. You can edit the rate by yourself.

After you edit a value, press Left Soft key to make a result.

Notes:

The input range is eight effective numbers which includes decimal. The result can be displayed 14 numbers mostly which includes decimal too. Press # to input a decimal during inputting.

4.8.6 World Clock

In the idle, select [Menu/Organizer/World Clock], press Left/Right key to view the times of many cities.

4.8.7 E-Book Reader

In the idle, select [Menu/Organizer/E-Book Reader]. Open it and display the list. If it has no book, press Left Soft key to display the submenus: Cleanup Bookshelf and Global Settings.

If it has some books, press Left Soft key to display the submenus: Open E-Book, CleanUp Bookshelf, Global Settings, Book Info, Delete, Delete All Files, Sort, Apply Global Settings and Help.

Open E-Book: Open the current book.

Cleanup Bookshelf: Cleanup the e-book list.

Global Settings: You can set Font Style, Font Size, Scroll By, Auto Scroll, Scroll Speed, Full Screen, Encoding and Select Memory.

Book Info: View the information of the E-Book.

Delete: Delete the current e-book.

Delete All Files: Delete all the e-books in the list.

Sort: sort the files.

Apply Global Settings: execute the settings in the global settings.

Help: To view how to use the shortcuts, about that use 7 to toggle the uto scroll; use 9 to toggle full screen mode; use 1 for help; use 2 to add a bookmark; use 3 to go to find screen; use 4 to go to jump to screen; use 5 to go to bookmark; use 6 for find next; use 8 to remove bookmark; use 0 to go to book settings.

Notes:

This phone supports the largest E-Book file of 300KB of txt format.

4.9 Services

4.9.1 SIM Service

In the idle, select [Menu/Services/SIM Service] to enter the service submenus. This increment service is supported by the network provider.

Notes:

This submenu is different from the SIM card.

4.9.2 WAP

Homepage

In the idle, select [Menu/Services/WAP/Homepage], you can logon on the homepage web. If you did not set it, you can logon on the default page.

Bookmarks

In the idle, select [Menu/Services/WAP/Bookmarks] to display the bookmarks in the list. Select someone and press Left Soft key to display the submenus: Goto, Edit, Delete, Delete All, Add Bookmark and Set as Homepage.

Goto: connect the network service.

Edit: Edit the title and address of the current bookmark.

Delete: Delete the current bookmark.

Delete All: Delete all the bookmarks.

Add Bookmark: Edit the title and address of a new bookmark.

Set as Homepage: Set the current page as the homepage.

Notes:

Before use this function, please confirm the bookmark list is not null. So the phone save some bookmarks in advance.

Recent Pages

In the idle, select [Menu/Services/WAP/Recent Pages] to display the recent page records. You can visit them convenience.

 **Notices:**

If you try to access to your password information such as net-bank , please clear the pages after it for safety.

Enter Address

In the idle, select [Menu/Services/WAP/Enter Address]. Input the URL address and then access to them.

Notes:

You can not need to add "http://", only input "wap.sina.com" for example.

Service Inbox

In the idle, select [Menu/Services/WAP/Service Inbox]. Your phone can receive the messages (PUSH messages). You can read, delete or delete all of them.

Settings

In the idle, select [Menu/Services/WAP/Settings]. It includes that Edit Profile, Brower Options, Service Messages, Clear Cache, Clear Cookie and Trusted Certificates.

Edit Profile: Activate and edit the profile.

Browser Options: Set the options of the browser.

Service Messages: Turn on or off this service.

Clear Cache: Clear all the information in the cache.

Clear Cookies: Delete the personal information.

Trusted Certificates: View the trusted certification information.

4.9.3 Data Account

GSM Data

In the idle, select [Menu/Services/Data Account/GSM Data] to display the accounts list. Select someone and press Left Soft key to edit the options: Account Name, Number, User Name, Password, Line Type, Speed and DNS.

GPRS

In the idle, select [Menu/Services/Data Account/GPRS] to display the accounts list. Press Left Soft key to edit the options: Account Name, APN, User Name, Password and Auth. Type.

4.10 Text Input

4.10.1 Keypad

Methods Keys	Pinyin	Stroke	abc	ABC	123
1		—	Symbols	Symbols	1
2	abc	—	abc 2	ABC 2	2
3	def	乚	def 3	DEF 3	3
4	ghi	丶	ghi 4	GHI 4	4
5	JKL	乚	JKL 5	JKL 5	5
6	mno	乚	mno 6	MNO 6	6
7	pqrs	ㄥ	pqrs 7	PQRS 7	7
8	tuv	？	tuv 8	TUV 8	8
9	wxyz	ㄣ	wxyz 9	WXYZ 9	9
0			(0)	(0)	0
*	Symbols				
#	Switch Input Methods				

4.10.2 Pinyin Input

- 1 . In Pinyin Mode, press 2~9 key to input the pinyin characters. For example, input “开心”.
- 2 .Press 5, 2, 4 key in turn to display “lai, kai”, and then you can press Left/Right key to select “kai”.
- 3 .Press Left/Right/Up/Down key to move the cursor and select “开” and then press Left Soft key to input it.
- 4 . After you input “开”, it will associate some Chinese characters such as “始”, “会”, “车”, “发”, “门”, “心”, “放”, “...” and then press Up/Down key to turn over pages.
- 5 .Press Left/Right/Up/Down key to move the cursor and select “心” and then press Left Soft key to input it.
- 6 . Press Right Soft key to exit.

4.10.3 Stroke Input

- 1 . In Stroke Mode, press 2~9 key to input the strokes and press 8 key to input the unknown stroke. For example, input “好友”.
- 2 . Press 7, 3, 1, 5 key in turn to input “ㄥ ㄥ ㄥ”.
- 3 .Press Left/Right/Up/Down key to move the cursor and select “好” and then press Left Soft key to input it.
- 4 . After you input “好”, it will associate some Chinese characters, press Up/Down/Left/ Right key to select and input “友”.
- 5 . Press Right Soft key to exit.

4.10.4 abc/ABC Mode

- 1 . In the abc/ABC input, please input the characters followed the order according to the letters on the keys. Press the key once to input the first letter, press it twice to input the second one and so on.
- 2 . Press # key to switch the abc/ABC input. For example, input “Book”.
- 3 . In ABC input, press 2 key twice to input “B”.
- 4 . In abc input, press 6 key thrice to input “o”.
- 5 . Press 6 key thrice to input “o”.
- 6 . Press 5 key twice to input “k”.

Notes:

When you input the second letter, please wait a few seconds after the first one. Press 0 key to input the blank. Long press keys to input the numbers.

4.10.5 E abc/ABC Input

- 1 . Press 2~ 9 to input letters, press Right Soft key to delete the latest one.
- 2 .The e ABC/abc mode has association function, press one key to input the letters which ones are on the key. You can press Up/Down/Left/Right key to select the work and press OK key to input it. Press Right Soft key to exit.

3 . For example, press 4, 3, 5, 7 key by turns to input “help”.

4 . And then you can press * key to input a symbol.

4.11 123 Mode

1 . Press # key to switch 123 input.

2 . Press the keys to input the corresponding numbers.

Notes:

In 123 input, you can not input the blank and the symbols.

4.12 Menu Tree

Phone Book

Quick Search

Search Contact

Add New Contact

Copy All

Delete

Caller Groups

Extra Numbers

Settings

Messages

SMS

MMS

Voice Mail Server

Broadcast Message

Call History

Missed Calls

Dialed Calls

Received Calls

Delete Call Log

Call Time

GPRS Counter

Settings

Phone Setup

Call Setup

Network Setup

Security Setup

Restore Factory Settings

Sound Effect

Multimedia

Camera

Image Viewer

Video Recorder

Video Player

Audio Player

Sound Recorder

FM Radio

Melody Compose

File Manager

Fun & Games

Games

Themes

User Profiles

General

Meeting

Outdoor

Indoor

Headset

Organizer

Calendar

To do

Alarm

Calculator

Currency Converter

World Clock

E-Book Reader

Services

SIM Service

WAP

Data Account