

CG601 CDMA 1X&GSM Dual Standby

User Manual

Notes and Notices

 Notes:

A NOTE indicates important information that helps you make better use of your mobile phone.

 Notices:

A NOTICE indicates either potential damage to the phone or loss of data and tells you how to avoid the problem.

Friendly Tips

This manual is used for introducing CG601 CDMA 1X&GSM dual standby mobile phone. If description, photographs and actual products are nuances, please practical products. For mobile phone version upgrade, further notice, please contact with the customer service.

Content

1	Your Phone.....	6
1.1	Basic Spec.....	6
1.2	Keys and Features	7
1.3	Screen Icons	8
1.4	Shortcut Icons	8
2	Get Started.....	9
2.1	Touch Pen.....	9
2.2	Install/Remove Battery.....	9
2.3	Charging.....	9
2.4	SIM Card.....	10
2.5	T-FLASH Card.....	10
3	Basic Function.....	11
3.1	Power On/Off.....	11
3.1.1	Normal Power On/Off.....	11
3.1.2	Time Power On/Off.....	11
3.1.3	Alarm Power On/Off.....	11
3.2	Menu Tree	11
3.3	Making a Call.....	11
3.3.1	Making a Domestic Call.....	11
3.3.2	Dialing PSTN's Extensions.....	12
3.3.3	Making IDD	12
3.3.4	Answering the Call.....	12
3.3.5	Conversation Operation	12
3.3.6	End/Refuse the Call.....	12
4	Text Input	13
4.1	Touch Input	13
4.2	Keypad Input.....	13
4.2.1	word Mode	13
4.2.2	abc & ABC & Abc Mode	13
4.2.3	123 Mode.....	14
5	Main Function.....	15
5.1	Message.....	15
5.1.1	New Message	15
5.1.2	Inbox	15
5.1.3	Outbox.....	16
5.1.4	Drafts.....	16
5.1.5	Voice Box	17
5.1.6	Predefine Phrase.....	17
5.1.7	Settings.....	17
5.1.8	Msg. Firewall	17
5.1.9	Msg. Capacity	18
5.2	Calls	18

5.2.1	Call Record	18
5.2.2	Call Setting.....	18
5.2.3	Call Firewall.....	19
5.2.4	Delete Record.....	20
5.2.5	Duration	20
5.3	Tools.....	20
5.3.1	Alarm	20
5.3.2	Database.....	20
5.3.3	Schedule	21
5.3.4	Stopwatch.....	21
5.3.5	Calculator	22
5.4	Multimedia	22
5.4.1	Media player.....	22
5.4.2	Karaok.....	22
5.4.3	Folder	22
5.4.4	Camera	22
5.4.5	Video	23
5.4.6	PC Camera	23
5.5	Profile.....	27
5.5.1	Normal	27
5.5.2	Meeting	27
5.5.3	Outdoor	27
5.5.4	Silent	27
5.6	Game	27
5.6.1	Carrier	27
5.6.2	Tetris.....	27
5.6.3	HuaRongDao.....	27
5.6.4	Game Ring	28
5.7	Settings.....	28
5.7.1	Phone Settings.....	28
5.7.2	Display Settings	28
5.7.3	Security	28
5.7.4	TF Card	29
5.7.5	USB Function.....	30
5.8	U-Max	30
5.8.1	U-Magic	30
5.8.2	UNI-INFO	30
5.9	World Wind	30
6	P.Book	32
6.1	View	32
6.2	Add.....	32
6.3	Search.....	32
6.4	Delete	33
6.5	CDMA IP	33

6.6	GSM IP	33
6.7	CDMA SMS	33
6.8	GSM SMS	33
6.9	Send Card	33
6.10	Storage	33
7	Troubleshooting	34
8	Important Safety Precautions	35

1 Your Phone

1.1 Basic Spec

Phone	Spec.
Mobile Phone	Dimension: 113mm[L]×47mm[W]×15.5mm[H] Weight: 100g
Screen	176×220, TFT
Storage	32Mbyte
Camera	1.3M pixel
Ext. Storage	T-Flash
Contacts	500
Call logs	120
SMS	300
MMS	100
Li Battery	Rated Capacity: 1100mA Standard Voltage: 3.7V Airtime: About 180 minutes Waiting time: About 90 hours Working temperature: -10°C~+55°C

 Note:

Waiting time is not in the mobile phone calls and not moving, the continuing movement begun working hours. Waiting time and airtime has related with the use of the network, the surrounding environment.

1.2 Keys and Features



Name	Description
CDMA Dial key	Dial or answer a call through CDMA network.
GSM Dial key/Left Soft key	Dial or answer a call through GSM network; Execute the function on the left bottom line.
Right Soft key	Press it to clear the characters in Text input; Press it to close the small menu; Execute the displayed function on the right bottom line.
Play key	In idle, press it to Multimedia.
Camera key	In idle, press it to capture by the camera.
End key	Long press it to power on or off; End or refuse the calls; Press it to exit to the idle.
Left/Right/Up/Down key	In idle, press Left Key to enter into Profile; In idle, press Right Key to enter into Message; In idle, press Up Key to enter into World Wind; In idle, press Down Key to enter into Call Record; Change them in [Menu/Settings/Phone Settings/ Shortcut Settings]; In the others, scroll the submenus to up direction.
OK key	Execute the displayed function on the middle bottom line; In idle, press OK key to enter into U-Max; Confirm key.
Side key	Adjust the volume.
0~9 Numbers key	In idle, long press 0 key to input "+"; In idle, press Numbers key to input numbers.
* key	In idle, long press * key to lock or unlock the keypad.

# key	In idle, long press # key to switch the profiles; In edit interface, long press # key to input “P”.
-------	--

 Note:

- (1) Long press or long click means press the key and hold on more than 2 seconds; press the key means the hold time less than 2 seconds;
- (2) Press the number before the submenus to speed-enter into the submenu;
- (3) “P” is a pause symbol. When you dial a ext. number, you can input the host number firstly, then input “P” and the ext. numbers. Otherwise, you can dial the host number, then dial the ext. numbers after the voice prompt.

1.3 Screen Icons

Icons	Description
	CDMA Signal Indicator; More bars indicates stronger signal.
	GSM Signal Indicator; More bars indicates stronger signal.
	Alarm
	New CDMA Message
	New GSM Message
	New CDMA & GSM Message
	Full CDMA Inbox
	Full GSM Inbox
	Full CDMA & GSM Inbox
	Normal Icon
	Meeting Icon
	Outdoor Icon
	Silent Icon
	Battery Level Indicator.

1.4 Shortcut Icons

Icons	Description
	Enter into the main menus;
	Enter into the messages;
	Enter into the multimedia;
	Enter into the phone book;
	Enter into the dial panel.

2 Get Started

2.1 Touch Pen

You need to use your touch pen operating the procedures on the touch screen to input the information with conventional keypad. Touch the screen can choose or implement a file of command, as in the use of the computer mouse to click on the same.

Touch pen stored in the phone behind, when you do not need to use it, can be inserted back to its jack.

2.2 Install/Remove Battery

Your phone uses Lithium battery only. Use original battery or authorized one and keep it in good place.

Install or remove the back cover. Do as the illustration showed below to install the back cover according to the upward arrow. Do as the illustration showed below to remove the back cover according to the downward arrow.

Install Battery: Place the battery on the backside of the phone. Clip the top of the battery and push it down to lock into place. Take out battery: face the backside of the phone, take out the battery just by lifting it up as the illustration showed below.



Notices:

Long press the End Key to power off, wait for 10 seconds, then remove the battery to avoid damaging the storage.

2.3 Charging

Use only original charger or authorized one for this GSM Double-card phone. Insert the plug (with arrow on it) of your charger to the charging port at the base of your phone.


When you begin to charge the battery, the stripe of Signal Strength on the right corner of the screen starts to roll. The battery is fully charged when the stripe becomes full and stops rolling. Push the buttons on both sides of the charger to take out the plug.



Notices:

- (1) Do not charging the mobile phone without battery, in order to avoid damaging the phone or adapter;
- (2) Do not be forcibly inserted into joints to avoid damage the phone or adapter;
- (3) Please use the battery after it is used up completely and then charged full for the first three times, your battery will be in the best status;
- (4) The battery will be automatically discharge, please charging it when its not used for a long time;
- (5) Do not use any damage or failure of battery and adapter;
- (6) After charged and discharged for hundred times, it will be disabled. If the working time is shorter, please replace it.

2.4 SIM Card

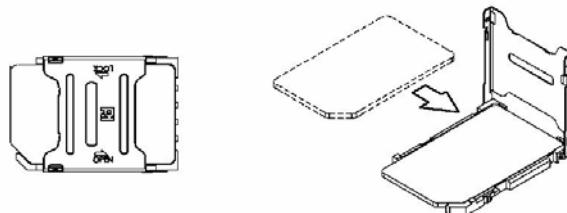

Find the slot place, open the button, and then put the card into it and buckled to fix the card. Make sure that the gold-colored contacts on the card face down into the phone, and notice the angles cutting.

⚠ Notices:

- (1) Must close the phone, charger and then continued to remove the SIM card.
- (2) Please do not touch the metal area to avoid losing and breaking the information in the SIM card. Put the SIM card far from electricity and magnetism.
- (3) SIM card must be in the place with the temperature -20°C to 85°C.
- (4) Please put the SIM card out of the reach of the children.

2.5 T-FLASH Card

T-FLASH card, the formal name of TransFlash card, is an extended memory card that stores multimedia files.

Insert: ①open the T-FLASH plastic plug;

②insert the card horizontally with the metal contacts facing upward and hear a click.

Take out: ①open the T-FLASH plastic plug;

②press the card gently and it will be released after you hear a click.

⚠ Notices:

- (1) The card is damaged easily, please do not bend and injury it, and put it far from electricity, dust and water.
- (2) Hot swap the T-FLASH card in the idle, avoid swap it during using, that will lead to loss the files or ruin.
- (3) T-FLASH card has many brands currently on the market, compatibility varies greatly. Suggest using the card in the package or buy the regularity brands as KingMAX, Kingston, SanDisk.

3 Basic Function

3.1 Power On/Off

3.1.1 Normal Power On/Off

In power off state, you can long press End Key to power on. After the phone power on, it will enter into World Wind to select the type of card, and then you can start using.

In power on state, you can long press End Key to power off.

3.1.2 Time Power On/Off

When you start this function, your phone will automatically power on or off on time. But during your conversation, it will delay that not be on or off on time.

 
The detail refers to [Menu/Settings/Phone Setting/Power On & Off].

3.1.3 Alarm Power On/Off

If you start the alarm function, the alarm will prompt when the phone is off. You can click [Power] or press [Left Soft Key] to power on. Otherwise, you can click [Exit] or press [Right Soft Key] to continue power off.

The detail is in [Menu/Tools/Alarm].

3.2 Menu Tree

		
Profile	Calls	Game
		
Tools	Message	Multimedia
		
Settings	World Wind	U-Max

3.3 Making a Call

3.3.1 Making a Domestic Call

In idle, press Numbers key to input the numbers, please add the area code before the numbers (Some area does not need the area code.). And then select CDMA or GSM network to dial it.

3.3.2 Dialing PSTN's Extensions

Dialing PSTN's extensions, you can long press # key to input the pause symbol between the host number and ext. number. And then you can select CDMA or GSM network to dial it.

And you can also dial the host number firstly, after the voice prompt, dial the ext. number.

3.3.3 Making IDD

Long press 0 key to input “+” or input “00” firstly, and then you input the country code and telephone number. After inputted completely, you can select CDMA or GSM network to dial it.

3.3.4 Answering the Call

When your phone has an incoming call, it will give the corresponding advice according to your setup (ring, vibration or incoming picture).

Generally, it will display the number. If the number is saved in the phone book, it will display the name. Press CDMA Dial key or GSM Dial key to answer it.

3.3.5 Conversation Operation

During the conversation, click Hold/Resume or press Left Soft key to hold the current conversation. Meanwhile, dial the other numbers. After you talked with them, you can switch line1 and line2. Click Menu or press OK key to display the submenus: Silent, P.Book, Message, Build MPTY, Release Line1 and Release Line2.

Silent/Unmute: You can close your mike.

P.Book: Enter into the phone book to execute the operation.

Message: Enter into the message to execute the operation.

Build MPTY: Build the Multi-party conversation.

Release Line1: Cut and hold the line1 conversation.

Release Line2: Cut and hold the line2 conversation.

 Note:

When you build MPTY, please confirm that you open this service firstly because it needs the support of the network.

3.3.6 End/Refuse the Call

Press the End Key to end the conversation or refuse the incoming call. The screen will display the airtime and exit to the idle after several seconds.

4 Text Input

4.1 Touch Input

Handwritten characters in the area, screen will show the results after wait several seconds. You can select the characters which you need.

This phone supports the legend function, after you click the first character, the screen will show the second word with the first one in a word.

Switch the input, you can write the characters and numbers.

 Note:

Press # key to switch the input mode. Under  拼音 and  筆画 mode, you can write chinese characters. Under  Word,  abc,  Abc and  ABC mode, you can write letters. Under  123 mode, you can write numbers.

4.2 Keypad Input

Mode Keys	 Word /  abc	 ABC	 123
1	Inefficacy/ symbol	symbol	1
2	abc 2	ABC 2	2
3	def 3	DEF 3	3
4	ghi 4	GHI 4	4
5	jkl 5	JKL 5	5
6	mno 6	MNO 6	6
7	pqrs 7	PQRS 7	7
8	tuv 8	TUV 8	8
9	wxyz 9	WXYZ 9	9
0	Blank 0	Blank 0	0

4.2.1 Word Mode

1. Press 2~9 to input letters, press Right Soft key to delete the latest one.
2. The  method has association function, press one key to input the letters which ones are on the key. You can press Up/Down/Left/Right key to select the work and press OK key to input it. Press Right Soft key to exit.
3. For example, press 4, 3, 5, 7 key by turns to input "help".
4. And then you can press * key to input a symbol.

4.2.2 abc & ABC & Abc Mode

1.  abc: Input the lowercase;  ABC: Input the capital;  Abc: Input a capital at the first

time and then input lowercase.

2. Press 2~9 key to input letters. You can speed-press a key to input the correct letter and then wait several seconds to input the second one.
3. And then you can press * key to input a symbol.

4.2.3 123 Mode

1. Press Numbers key to input numbers, press Right Soft key to delete the latest one.
2. And then you can press * key to input a symbol.

 Note:

You can not input a blank when it is under  123 mode.

5 Main Function

5.1 Message

5.1.1 New Message

In idle; select [Menu/Message/New Message] to enter into the edit interface. During the Editing, the edited content will be saved in drafts automatically when you press End key to exit. In Edit interface, please the detail refers to [Text Input], click Menu or press OK key to display the submenus: Send, Save, Template, Smiley, Net symbol and P.Book.

Send: Enter into the address interface. You can click the cursor bar to enter into the edit interface, and you can also click P.Book or press Left Soft key to enter into phone book to select numbers. You can input 10 contacts at most. In the address interface, click Menu or press OK key to display the submenus: Edit, Save only and P.Book. When you edited some addresses, click Menu or press OK key to display the submenus: Edit, CDMA Send & Save, CDMA Send only, GSM Send & Save, GSM Send Only, Save only and P.Book.

Save: Save the current content to drafts.

Template: Enter into the list interface, select and insert someone to your message. You can edit them in [Menu/Message/Predefine Phrase/Template].

Smiley: Enter into the list interface, select and insert someone to your message. You can edit them in [Menu/Message/Predefine Phrase/Smiley].

Net Symbol: Enter into the list interface, select and insert someone to your message. You can edit them in [Menu/Message/Predefine Phrase/Net Symbol].

P.Book: Enter into the phone book list interface, select and insert the record to your message.

5.1.2 Inbox

In idle; select [Menu/Message/Inbox] to enter into the messages list. In the list interface, click  /  or press Left/Right key to switch CDMA inbox and GSM inbox.

In the list interface, click View or press Left Soft key to view the content; click Menu or press OK key to display the submenus: View, CDMA Reply, GSM Reply, Delete, Delete All, Sel. Delete, CDMA Call, GSM Call and Copy To Card/Phone.

View: View the detail of the current message.

CDMA Reply: Reply the sender of the current message through CDMA network.

GSM Reply: Reply the sender of the current message through GSM network.

Delete: Delete the current message.

Delete All: Delete all the messages in the list.

Sel. Delete: Enter into the select interface. Click the pane to of selected or press Left Soft key before the messages, or click Menu or press OK key to display the submenus: All, Rev. All, Choose Card, Choose Phone and Delete Choose. And then delete your selected messages.

CDMA Call: Dial the number of the current contact through CDMA network.

GSM Call: Dial the number of the current contact through GSM network.

Copy To Card/Phone: Copy the current message to the card or the phone.

In the detail interface, click Reply or press Left Soft key to reply the sender; Click Menu or press OK key to display the submenus: CDMA Reply, GSM Reply, Delete, Forward, Get number, CDMA Call, GSM Call and Copy To Card/Phone.

CDMA Reply: Reply the sender of the current message through CDMA network.

GSM Reply: Reply the sender of the current message through GSM network.

Delete: Delete the current message.

Forward: Send the current message to others.

Get number: Get the numbers out of the message and save them in phone book.

CDMA Call: Dial the sender through CDMA network.

GSM Call: Dial the sender through GSM network.

Copy To Card/Phone: Copy the current message to the card or the phone.

5.1.3 Outbox

In idle; select [Menu/Message/Outbox] to enter into messages list. In the list interface, click / or press Left/Right key to switch CDMA Outbox and GSM Outbox.

In the list interface, click View or press Left Soft key to view the detail of the message; Click Menu or press OK key to display the submenus: View, Delete, Delete All, Sel. Delete and Copy To Phone/Card.

View: View the detail of the current message.

Delete: Delete the current message.

Delete All: Delete all the messages in the list.

Sel. Delete: Enter into the select interface. Click the pane to of selected or press Left Soft key before the messages, or click Menu or press OK key to display the submenus: All, Rev. All, Choose Card, Choose Phone and Delete Choose. And then delete your selected messages.

Copy To Card/Phone: Copy the current message to the card or the phone.

In the detail interface, click Edit or press Left Soft key to edit this message; Click Menu or press OK key to display the submenus: Delete and Forward.

Delete: Delete the current message.

Forward: Send the current message to others.

5.1.4 Drafts

In idle; select [Menu/Message/Drafts] to enter into the message list. In the list interface, click View or press Left Soft key to view the detail of the message; Click Menu or press OK key to display the submenus: View, Delete, Delete All and Sel. Delete.

View: View the current content.

Delete: Delete the current message.

Delete All: Delete all the messages in the list.

Sel. Delete: Enter into the select interface. Click the pane to of selected or press Left Soft key before the messages, or click Menu or press OK key to display the submenus: All, Rev. All, Choose Card, Choose Phone and Delete Choose. And then delete your selected messages.

5.1.5 Voice Box

In idle; select [Menu/Message/Voice Box] to display CDMA voice box and GSM voice box. Enter into someone; it displays Answer Message and Number Setting.

Before you use this function, please set the number firstly. And then listen to the message according to the network terminal.

 **Note:**

This function related with your phone card. Please ask for the voice box number from the network provider and open it before using it.

5.1.6 Predefine Phrase

In idle; select [Menu/Message/Predefine Phrase] to display Template, Smiley and Net Symbol. After enter into someone, selected one record to edit and save it again.

5.1.7 Settings

In idle; select [Menu/Message/Settings] to display the submenus: Storage, CDMA Msg. Period, CDMA Delivery Report, CDMA Priority, GSM Message Centre and GSM Msg. Period.

Storage: Select to save to the Card or Phone.

CDMA Msg. Period: The CDMA message period includes 12 hours, 1 day, 3 days or Max.

CDMA Delivery Report: Open or Close the CDMA Delivery Report.

CDMA Priority: The priority includes Normal, Interactive, Urgent and Emergency.

GSM Message Centre: Set the number of GSM Message Centre.

GSM Msg. Period: The GSM message period includes 12 hours, 1 day, 3 days or Max.

5.1.8 Msg. Firewall

In idle; select [Menu/Message/Msg. Firewall] to display Incoming and Outgoing.

Incoming

In idle; select [Menu/Message/Msg. Firewall/Incoming] to display the submenus: Restrict All, Restrict Part and Only Directory.

Restrict All: If you started all the incoming restriction, the phone will never receive any messages.

Restrict Part: Click Menu or press OK key to display Add and P.Book. If you select the part restriction, you can edit several numbers or several types of numbers. For example, if you edit and start “133”, and then you can not receive the messages which incoming from the numbers begin with “133”.

Only Directory: Open or Close this function. If you open it, you can only receive messages from the senders which ones were in the phone book.

Outgoing

In idle; select [Menu/Message/Msg. Firewall/Outgoing] to display the submenus: Restrict All Restrict Part and Only Directory.

Restrict All: If you started all the incoming restriction, the phone will never send any

message.

Restrict Part: Click Menu or press OK key to display Add and P.Book. If you select the part restriction, you can edit several numbers or several types of numbers. For example, if you edit and start “133”, and then you can not send the messages to the numbers which ones begin with “133”.

Only Directory: Open or Close this function. If you open it, you can only send messages to somebody which one is in the phone book.

5.1.9 Msg. Capacity

In idle; select [Menu/Message/Msg. Capacity] to view the capacity of the phone and card.

5.2 Calls

5.2.1 Call Record

In idle; select [Menu/Calls/Call Record] to view CDMA Missed, CDMA Incoming, CDMA Dialed, GSM Missed, GSM Incoming, GSM Dialed by turning the pages. Click  /  or press Left/Right key to switch the pages.

In someone interface, click View or press Left Soft key to view the detail of the current record; Click Menu or press OK key to display the submenus: Save Number, CDMA Call, CDMA IP Number, CDMA SMS, GSM Call, GSM IP Number, GSM SMS, Delete and Delete All.

Save Number: Save the current number to the phone book.

CDMA Call: Dial the current number through CDMA network.

CDMA IP Number: Dial the current number with IP prefix through CDMA network. If you do not set the IP number, the phone will prompt you to set it now.

CDMA SMS: Send a message to the current number through CDMA network.

GSM Call: Dial the current number through GSM network.

GSM IP Number: Dial the current number with IP prefix through GSM network. If you do not set the IP number, the phone will prompt you to set it now.

GSM SMS: Send a message to the current number through GSM network.

Delete: Delete the current record.

Delete All: Delete all the records in the page.

Note:

These submenus related with the phone card. If the number is an unkown number, the submenus include only Delete and Delete All; If the number is in phone book, Save Number will be inexistence; If your phone only inserted UIM card, the submenus include Save Number, CDMA Call, CDMA IP Number, CDMA SMS, Delete and Delete All.

5.2.2 Call Setting

In idle; select [Menu/Calls/Call Setting] to display the submenus: Auto Redial, Min. Reminder, Answer Mode, CDMA Call Setting, GSM Call Setting and Speed Dial.

Auto Redial

In idle; select [Menu/Calls/Call Setting/Auto Redial] to open or close this function. If you open it, the phone will redial the number automatically when you dial failure.

Min. Reminder

In idle; select [Menu/Calls/Call Setting/Min. Reminder] to open or close this function. If you open it, the phone will give a prompt between 50~60 seconds during your conversation.

Answer Mode

In idle; select [Menu/Calls/Call Setting/Answer Mode] to select Any Key Answer or Send Key Answer. If you choose Any Key Answer, you can press any key to answer the incoming call except for End key.

CDMA Call Setting

In idle; select [Menu/Calls/Call Setting/CDMA Call Setting] to display the submenus: CDMA IP Number, CDMA Phone Number, CDMA Call Waiting and CDMA Call Forward.

CDMA IP Number: Set the CDMA IP number.

CDMA Phone Number: View or Edit the number of UIM card.

CDMA Call Waiting: After you open this function, the network terminal will give a prompt when you have an incoming call but your phone is busy. You can execute something according to the interface.

CDMA Call Forward: All means divert all the incoming calls; Busy means divert the calls when your phone is busy; No Answer means divert the calls when your phone has no answer; Default means divert the calls when the network failed to arrive. Behind every case, it has two buttons of Register and Cancel, you can click Register to open the function or click Cancel to close it.

GSM Call Setting

In idle; select [Menu/Calls/Call Setting/GSM Call Setting] to display the submenus: GSM IP Number, GSM Phone Number, GSM Call Waiting and GSM Call Forward. The detail is as same as [Menu/Calls/Call Setting/CDMA Call Setting].

Speed Dial

In idle; select [Menu/Calls/Call Setting/Speed Dial]. Click the cursor bar or press OK key to enter into the edit interface; otherwise click P.Book or press Left Soft key to select numbers from the phone book. You can set 1~9 key as speed dial key. After setup completely, long press 1~9 key to input the number in idle.

5.2.3 Call Firewall

In idle; select [Menu/Calls/Call Firewall] to display the submenus Incoming and Outgoing.

Incoming

In idle; select [Menu/Calls/Call Firewall/Incoming] to display the submenus: Restrict All, Restrict Part and Only Directory.

Restrict All: If you started all the incoming restriction, nobody can dial your phone.

Restrict Part: Click Menu or press OK key to display the submenus Add and P.Book. You can edit several numbers or several types of numbers. For example, if you edit and start “133”, and then anybody can not dial your phone which numbers begin with “133”.

Only Directory: Open or Close this function. If you open it, you can only answer the incoming calls from the numbers which ones were in phone book.

Outgoing

In idle; select [Menu/Calls/Call Firewall/Outgoing] to display the submenus: Restrict All, Restrict Part and Only Directory.

Restrict All: Open or Close this function. If you open it, you can not dial any numbers except for SOS.

Restrict Part: Click Menu or press OK key to display the submenus Add and P.Book. You can edit several numbers or several types of numbers. For example, if you edit and start “133”, and then you can not dial any numbers which numbers begin with “133”.

Only Directory: Open or Close this function. If you open it, you can only dial the numbers which ones were in phone book.

5.2.4 Delete Record

In idle; select [Menu/Calls/Delete Record] to display the submenus: Delete All, CDMA Missed, CDMA Incoming, CDMA Dialed, GSM Missed, GSM Incoming and GSM Dialed. Select someone and press Left Soft key to delete it.

5.2.5 Duration

In idle; select [Menu/Calls/Duration] to display the submenus: CDMA Last Call, CDMA Total Call, GSM Last Call, GSM Total Call and Reset Timer.

CDMA Last Call: View the time of the last call through CDMA network.

CDMA Total Call: View the time of the total call through CDMA network.

GSM Last Call: View the time of the last call through GSM network.

GSM Total Call: View the time of the total call through GSM network.

Reset Timer: Reset the timer to zero.

5.3 Tools

5.3.1 Alarm

In idle; select [Menu/Tools/Alarm]. Click Switch or press OK key to switch the two clocks. Select an alarm clock, input the time by keypad, press Up/Down key to select items. Click Select or press OK key to enter into edit interface when you select Content. After you setup completely, click Save or press Left Soft key to save the settings.

5.3.2 Database

In idle; select [Menu/Tools/Database] to display the submenus Memo, City Code, World Time, Unit Conversion and Currency Exchange.

Memo

In idle; select [Menu/Tools/Database/Memo] to display the list interface. If you have no record, click Add or press OK key to enter into edit interface to add records. Otherwise, click Edit or press Left Soft key to edit the current record; or click Menu or press OK key to display the submenus: Add, Delete and Delete All.

Add: Enter into the edit interface to add some records.

Delete: Delete the current record.

Delete All: Delete all the records in the list.

World Time

In idle; select [Menu/Tools/Database/World Time], click  /  or press Left/Right key to switch different cities to view the time of them.

Unit Conversion

In idle; select [Menu/Tools/Database/Unit Conversion], press Up/Down key to move the cursor. Press Left/Right key to select the type and unit and input the value by keypad. After that, click Equal or press Left Soft key to make a result.

Currency Exchange

In idle; select [Menu/Tools/Database/Currency Exchange]. You can press Up/Down key to move the cursor. Press Left/Right key to select the currency and input the value by keypad. Meanwhile, edit the rate. After that, click Equal or press Left Soft key to make a result.

5.3.3 Schedule

In idle; select [Menu/Tools/Schedule] to view the calendar. In calendar interface, click Ok or press Left Soft key to enter into the current day to add a plan; Click Menu or press OK key to display the submenus: New Plan, Missed, All Plans, By Date, By Week, By Month, Delete Overdue, Delete All and Storage.

New Plan: Enter into the edit interface, press Up/Down key to select items. Click Select or press Left Soft key to edit the content when you select Edit; Input the date and Time by keypad; and then set the type of prompt.

Missed: View the plans which ones missed.

All Plans: View all the plans in the list.

By Date: Input the year, month and date to search the plan.

By Week: Input the year, month and week to search the plan.

By Month: Input the year and month to search the plan.

Delete Overdue: Delete the plans which ones were overdue.

Delete All: Delete all the plans in the list.

Storage: View the storage of the plans.

5.3.4 Stopwatch

In idle; select [Menu/Tools/Stopwatch] to enter stopwatch interface. Click Start or press Left Soft key to begin and then click LAP or press Left Soft key to save a record. You can save 12 records at most. After that, you can click Stop or press Right Soft key to pause the timer. Here, you can click Reset or press Left Soft key to clear; click Exit or

press Right Soft key to exit.

5.3.5 Calculator

In idle; select [Menu/Tools/Calculator] to enter into the calculator interface. Press Numbers key to input the numbers; press # key to input a decimal; press * key to input “-”; press Up/Down/Left/Right key to input the operators; press Right Soft key to clear the error number. After that, press Left Soft key or OK key to make a result.

5.4 Multimedia

5.4.1 Media player

In idle; select [Menu/Multimedia/Media player] to enter into the playing interface. In the playing interface, click List or press Left Soft key to enter the list interface to add files; Press * key to switch the play mode; Press # key to lock or unlock the keypad; Press Left Soft key to play the previous one; Press Right Soft key to play the next one; Press OK key to play or pause; Press Up/Down key to adjust the volume.

5.4.2 Karaok

In idle; select [Menu/Multimedia/Karaok] to enter into the playing interface. The detail is as same as [Menu/Multimedia/Media player].

5.4.3 Folder

In idle; select [Menu/Multimedia/Folder] to display the submenus: Phone, TransFlash Card (TF card for short) and Capacity.

Phone folder includes Downloading Images and Downloading Rings. TransFlash Card folder includes KARAOK, MP3, JPG and 3GP. And the files of kov format store in KARAOK, the files of mid and mp3 format store in MP3; the files of jpg format store in JPG; the files of 3gp and mp5 format store in 3GP.

In files list interface, click Menu or press OK key to display the submenus: Delete, Sel. Delete, Rename, Property, As wallpaper and As Ring.

Delete: Delete the current picture or music.

Sel. Delete: you can select some files to delete.

Rename: Change the name of the file.

Property: View the detail of the file.

As Wallpaper: You can set the current picture as wallpaper.

As Ring: You can set the current music as a ring.

Note:

According to the packaging card users for a user ID and password. You can download the files of 3gp, mp5 and kov format from <http://vip.yepop.com> through the network.

5.4.4 Camera

In idle; select [Menu/Multimedia/Camera] to display the submenus: Normal Shoot, Icon Shoot, General Album, Icon Album and Settings.

Normal Shoot: Enter into it and shoot photos.

Icon Shoot: Enter into it and shoot icons. The dimension of icon is smaller than the normal photo. It can be set as incoming icon.

General Album: View the photos in TF card. And you can execute the operation as Delete, Sel. Delete, Rename, Property, Auto Browser, As Wallpaper and etc.

Icon Album: View the icons in the phone. And you can execute the operation as Delete, Sel. Delete, Rename, Property, Auto Browser and etc.

Settings: You can set Resolution, Vision Model and Shutter Sound.

5.4.5 Video

In idle; select [Menu/Multimedia/Video] to display the submenus: Video and Video Book.

Video: Enter into the preview interface. And then REC and save it in Video Book.

Video Book: View the video file and execute the operation.

 Note:

- (1) Please do not insert the earphone during you REC.
- (2) To improve the safety of preservation video document, if it has video calls, new message, alarm, schedule, suggest ways as follows: The ring prompt will delay 3 seconds, meanwhile, it will be vibrator automatically.


5.4.6 PC Camera

In idle; select [Menu/Multimedia/PC Camera]. Before using it, please connect the phone and the computer with data cable. And then enter into the submenu to open the PC camera. Install the device as follows.


1. Click Open or press Left Soft key to open it on the phone. It will pops-up a window as follows.



2. Select "Yes, this time only" and click Next to pop-up a window as follows.

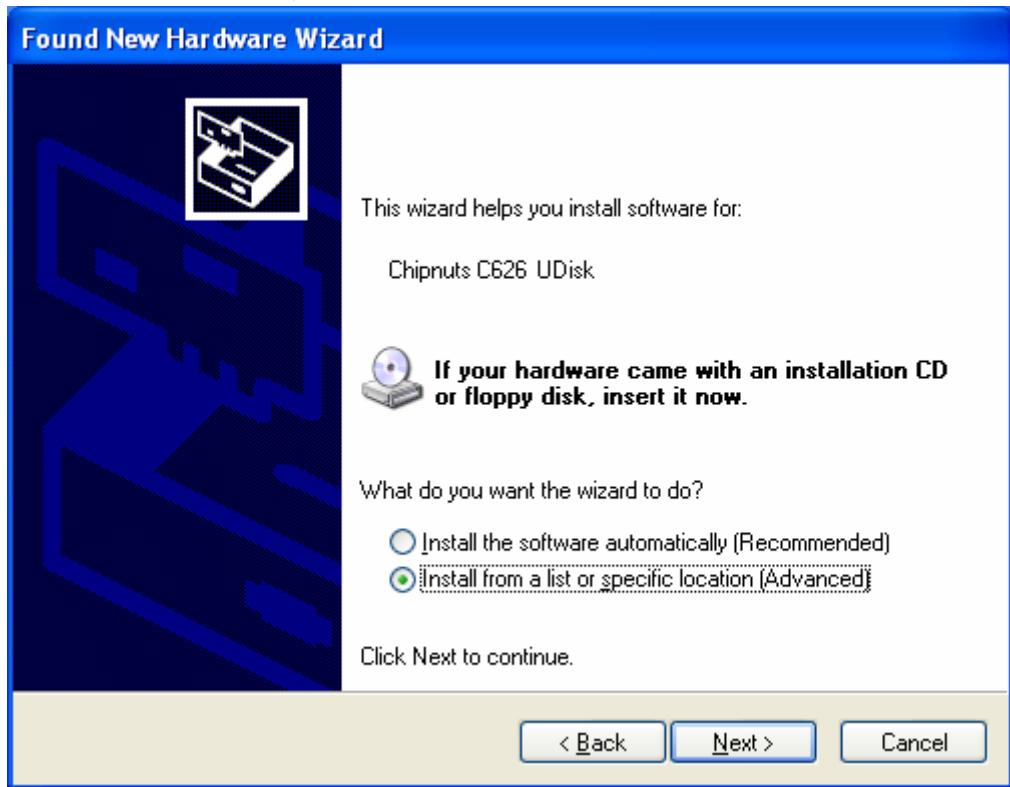

3. Select "Install from a list or specific location" and click Next to pop-up a window as follows.

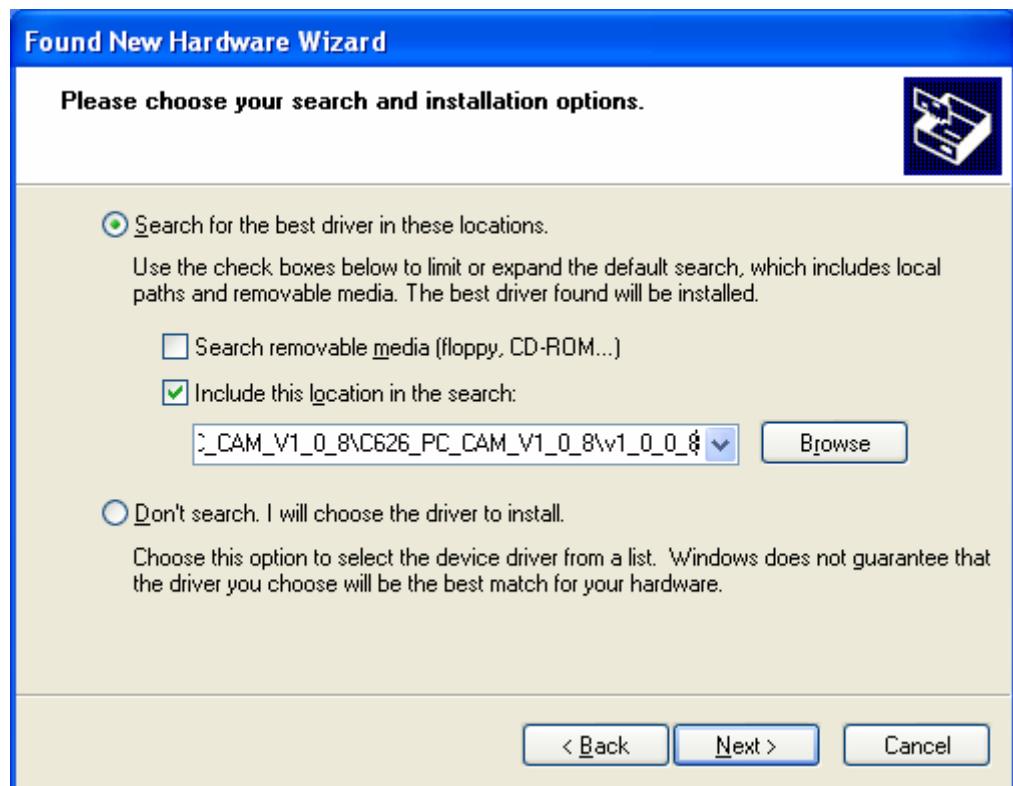


4. Choose "Include this location in the search" and single-click Browse to select the path of the device files. Click Next to pop-up a window as follows.
5. Wait several seconds and pop-up a window as follows.



6. Click "Continue Anyway" to continue. And till pop-up a window as follows. Click Finish to complete installed.



7. Right-click "My Computer" and select Mange to pop-up a window as follows. You can see "Chipnups C626 PC Camera" that means the installation is successful.

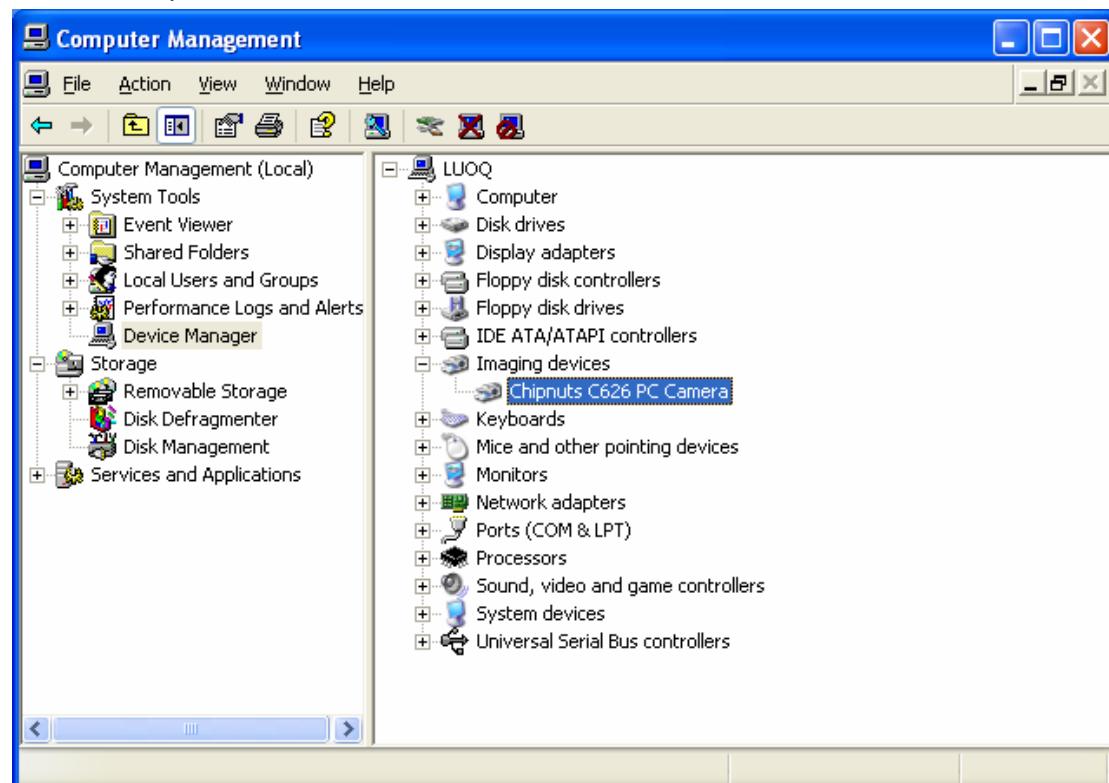

5.5 Profile

5.5.1 Normal

In idle; select [Menu/Profile/Normal] to display the submenus: Start and Edit Profiles. If you do not change the items, you can start it directly. Otherwise, you enter into Edit Profiles to set Ring Setting, Volume, Vibrator, Keypad Setting and Warning Beep. After you set, you can start it again.

5.5.2 Meeting

In idle; select [Menu/Profile/Meeting] to display the submenus: Start and Edit Profiles. The detail is as same as [Menu/Profile/Normal].

5.5.3 Outdoor

In idle; select [Menu/Profile/Outdoor] to display the submenus: Start and Edit Profiles. The detail is as same as [Menu/Profile/Normal].

5.5.4 Silent

In idle; select [Menu/Profile/Silent] to display the submenus: Start and Edit Profiles. The detail is as same as [Menu/Profile/Normal].

5.6 Game

5.6.1 Carrier

In idle; select [Menu/Game/Carrier] to display the submenus: New Game, Stage and Help. Please read the help and according to its guide to play the game.

The rule: Press Up/Down/Left/Right key (or 2,4,6,8 key) to control the panda. It can only push the box and only move one step every time. Push all the boxes to the destination to pass. You can play from the first stage and you can also select the stages. It has 99 stages.

5.6.2 Tetris

In idle; select [Menu/Game/Tetris] to display the submenus: New Game, Setting, Players and Help.

The rule: Make as many complete rows as possible. When you fill a row it disappears and gives you scores. If you reach the top you lose! You can make the game harder by increasing the handicap and speed. The Hero List notes the scores of the front-six. Press Up/2 key to rotate; Press Down/8 key to drop; Press Left/4 key to move left; Press Right/6 key to move right; Press * key to pause; Press # key to open or close the game sound.

5.6.3 HuaRongDao

In idle; select [Menu/Game/HuaRongDao] to display the submenus: New Game, Help and Highscore.

The rule: Press Up/Down/Left/Right key (or 2, 4, 6, 8 key) to select, press OK/5 key to move one piece only to the free field, and only one step can be moved at a time. Move the signed piece to the middle of the bottom, and use few steps at the best of your abilities.

You can choose any map, input your name only that the steps are fewer than which in the Hero List. During the game, you can click Restart or press Left Soft key to play it again. Press # key to open or close the game sound.

5.6.4 Game Ring

In idle; select [Menu/Game/Game Ring] to open or close the game ring.

5.7 Settings

5.7.1 Phone Settings

In idle; select [Menu/Settings/Phone Settings] to display the submenus: Language, Time Format, Date Format, Time & Date, Shortcut Settings, Power On & Off and Lock Mode.

Language: Select the language as 中文 or English.

Time Format: Select the time format as 12 hours or 24 hours.

Date Format: Select the date format as yyyy-mm-dd, mm-dd-yyyy or dd-mm-yyyy (y means year; m means month; d means day.).

Time & Date: View or edit the time and date.

Shortcut Settings: Set the shortcut functions of Up/Down/Left/Right key.

Power On & Off: You can set the time of Power on and Power off. You can press Up/Down key to select items. Press Left/Right key to open or close it; Press Numbers key to input the time. And then you can click Save or press Left Soft key to save them.

Lock Mode: Open or Close this function. If you open it, the keypad will be locked after several seconds without any touch and press.

5.7.2 Display Settings

In idle; select [Menu/Settings/Display Settings] to display the submenus: Menu Style, Backlight, Brightness, Wallpaper, Screen Adjust and Keypad Light.

Menu Style: Select Red or Black.

Backlight: Select 10s, 20s or 60s.

Brightness: Press Up/Down key to adjust the brightness.

Wallpaper: Select your favorite wallpaper from Default or Download.

Screen Adjust: Click + on the screen to adjust the touch screen.

Keypad Light: Open or Close the keypad light.

5.7.3 Security

In idle; select [Menu/Settings/Security] to input the correct password (The first password is 1234.). Enter into the submenus: CDMA PIN, GSM PIN, Phone Password, Data Password, Secret Items and Default Setting.

CDMA PIN: The PIN code prevents the UIM card illegal use. You can select Open, Close or Change to input a new PIN code.

GSM PIN: The PIN code prevents the UIM card illegal use. You can select Open, Close or Change to input a new PIN code.

Phone Password: The phone code prevents your phone illegal use. You can select Open, Close or Change to input a new phone password.

Data Password: The data code prevents your data illegal use. You can select Open, Close or Change to input a new data password.

Secret Items: Input the password to enter into it (The first password is 1234.). You can select the secret items which includes P.Book, Message and Calls.

Default Setting: The phone supplies some default settings out of the factory. During the using, you maybe change someone. Reset all of your phone's settings back to the factory settings via this menu such as profile and etc.

 Note:


- (1) If you enter your PIN incorrectly 3 times, the card will be locked. To unblock it you need to enter your PUK (Personal Unblocking Key). Your provider supplies your PIN and PUK. Please change it ASAP.
- (2) When you use the data security, please choose the items firstly and then open the data password.

5.7.4 TF Card

In idle; select [Menu/Settings/TF Card]. In order to video and play the multimedia files fluently, you must format the TF card on PC before you using it (PC: Personal Computer).

Enter into TF Card, it will give a prompt “Format TF?”. Click “√” to format the TF card; click “×” to cancel. After formatted, the phone will auto set up four folders such as 3GP, JPG, MP3 and KARAOK.

1. Under the Windows XP / 2000 / 2003 system, click “My Computer” with the left of the mouse after connected TF card, select “Manage” and then it will pop-up a window. Select “Storage→Disk Management” as follows.

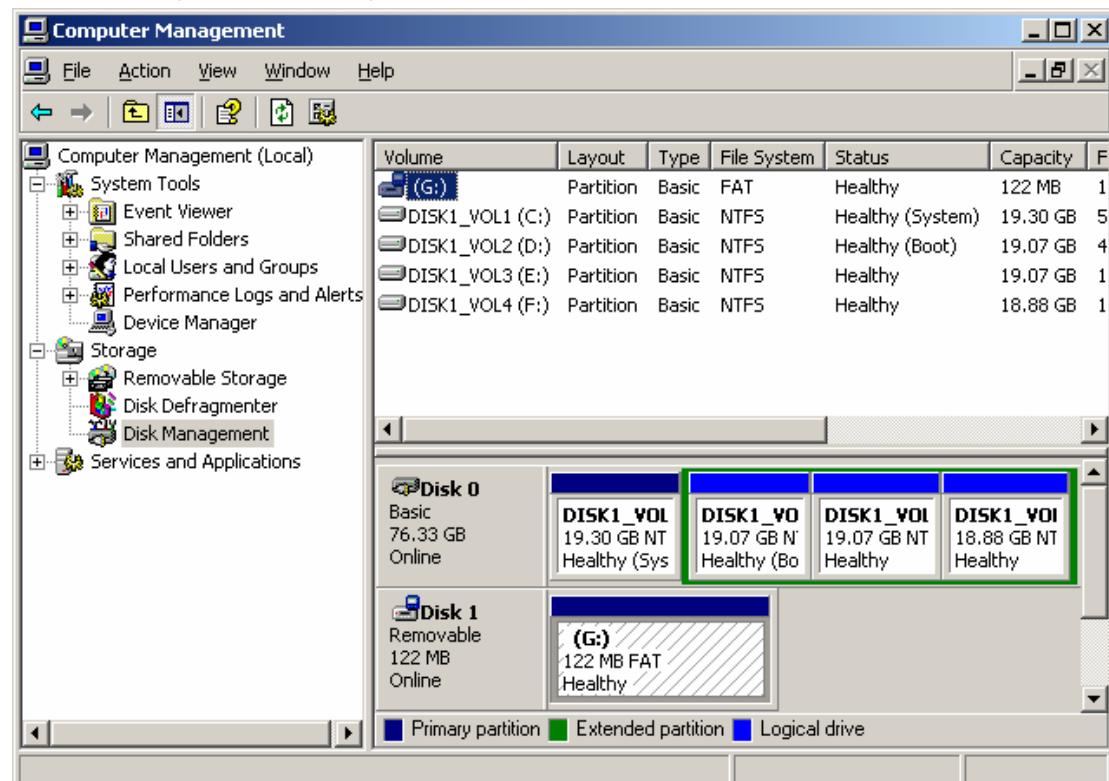


2. Choose the disk; click the area by the right of mouse. The choosing area will

display the shadow. In the pop-up window, select “Format.....” option.

⚠ Notices:

Generally, “Disk 0” means the area on PC, “Disk 1” means the flash storage such as TF card.

3. In the format window, choose “16K” in the “Allocation unit size” and then click **[OK]** to begin formatting as follows.

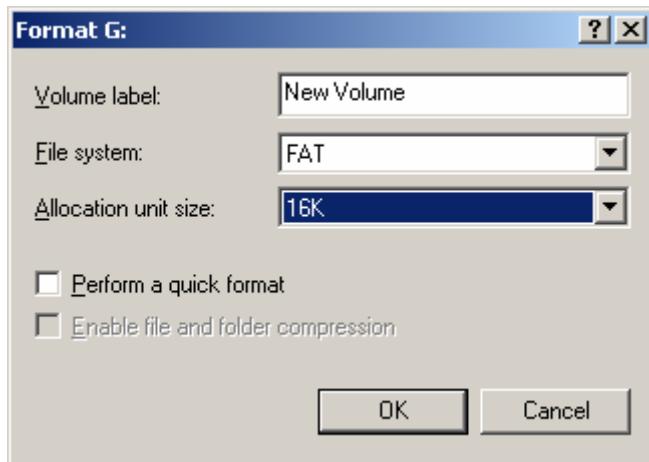

4. After finished, the phone will auto set up four folders as 3GP, JPG, MP3 and KARAOK.

5.7.5 USB Function

In idle; Select [Menu/Settings/USB Function] to open the USB function. After open the USB function, you can connect the phone and PC with USB cable to send and receive data. But the transmission will be intermittent when you have incoming call, message, alarm or other prompt events.

5.8 U-Max

5.8.1 U-Magic

After connected the network, enter into U-Magic interface and make related operation. This function needs the support of the local provider.

5.8.2 UNI-INFO

After connected the network, enter into UNI-INFO interface and make related operations. This function needs the support of the local provider.

5.9 World Wind

In idle; select [Menu/World Wind]. You can set the type of the phone cards.

In the World Wind interface, if there are two cards but you do not want to use, you can select one slot to close it. Otherwise, you will use two card standbys. After that, click Ok or press Left Soft key to confirm.

6 P.Book



In idle, Click [P.Book] or press Right Soft key to enter into the list interface. If the phone book has no record, click Add or press Left Soft key to add contacts. If the phone book has some records, click Menu or press OK key to display the submenus: View, Add, Search, Delete, CDMA IP, GSM IP, CDMA SMS, GSM SMS, Send Card and Storage.

6.1 View

In the list interface, click Menu or press OK key to select View. You can view the detail of the current record.

6.2 Add

In the list interface, click Menu or press OK key to select Add. Enter into the Storage interface; you can select Phone, UIM or SIM. If you select UIM or SIM, you can only input one name and one number of each record; If you select Phone, you can input Name, three numbers, E-mail, Address, URL, Remark, Ring, Group and Pictures.

After you edited, click Save or press Left Soft key to save the record.

Note:

- (1) Please input one number at least when you add a record.
- (2) You can select an icon from the icon album as an incoming picture when you add a record in the phone.

6.3 Search

In the list interface, click Menu or press OK key to select Search. Enter into the edit interface; input the name which you want to search. If matched with the list of characters, the cursor will position the records. Otherwise, the list will not be changed.

In the list interface, you can use the speed search method. Input the first letters directly, it can list the matched records. Otherwise, it will prompt that Not Found.

6.4 Delete

In the list interface, click Menu or press OK key to select Delete. You can delete the current record.

6.5 CDMA IP

In the list interface, click Menu or press OK key to select CDMA IP. You can dial the current number with IP prefix through CDMA network. If you do not set the IP number, the phone will prompt you to set it now.

6.6 GSM IP

In the list interface, click Menu or press OK key to select GSM IP. You can dial the current number with IP prefix through GSM network. If you do not set the IP number, the phone will prompt you to set it now.

6.7 CDMA SMS

In the list interface, click Menu or press OK key to select CDMA SMS. Enter into the edit interface, you can send a message to the current number through CDMA network. The detail is as same as [Menu/Message/New Message].

6.8 GSM SMS

In the list interface, click Menu or press OK key to select GSM SMS. Enter into the edit interface, you can send a message to the current number through GSM network. The detail is as same as [Menu/Message/New Message].

6.9 Send Card

In the list interface, click Menu or press OK key to select Send Card. You can select one or several items to send as a message.

6.10 Storage

In the list interface, click Menu or press OK key to select Storage. You can view the capacity of Phone, UIM and SIM card.

7 Troubleshooting

If you meet the following situation when using the phone, please read the information as follows, please contact the seller if still cannot resolve the problem.

1. Cannot dial/answer a number, or cannot send/receive a message to anybody.

Please check the call firewall and message firewall.

2. If you find some files lost in Phone.

Please check the total, ensure the total is less than 300.

3. If you can not find some one of MP3, 3GP, JPG or KARAOK folder in the root directory of the TF card.

Please check from these parts as follows:

(1) MP3 folder only stores the file format of mp3 and mid; 3GP folder only stores the file format of 3gp and mp5; JPG folder only stores the jpg format; KARAOK folder only stores the kov format;

(2) Please check the total under the root, ensure it is less than 300;

(3) Please ensure the length of the files is less than 28.

4. If you cannot identify some folder except for MP3, 3GP, JPG and KARAOK.

To make sure that your phone works well, the phone is designed to identify only four folders as MP3, 3GP, JPG and KARAOK. Please divide them into the four folders according to “3(1)”.

5. Inserted a TF card, but it shows a prompt to insert the TF card.

Please check the TF card, maybe damaged or inserted error.

6. If you find some one cannot be played.

(1) Please check the file, maybe damaged, or not a correct format.

(2) This phone supports a part of mid and mp3 files;

(3) If the 3gp files will not be supported, please use the DJ star (Saturn version) to convert tools, see the CD-ROM.

8 Important Safety Precautions

General

- Use your phone in the intended manner; for example, hold it to your ear. Incorrect usage may affect its performance.
- Use only compatible batteries and accessories. Using incompatible items may permanently damage the phone.
- Do not connect the phone to any other device without reading the provided documentation. The other device may be incompatible.
- When making emergency calls from your phone, ensure that the phone is switched on and in service.
- Interference may affect your phone's performance. Once you move away from the source of interference, the phone should function as usual.
- When you are using ear buds or other headphones, be careful not to listen at excessive volume. Listening to very loud sound levels may lead to hearing loss. Also, listening through the ear buds or headphones for prolonged periods of time, even at normal sound levels, may lead to hearing loss. You should consult your doctor for more information on proper use of ear buds or headphones.

Electronic Devices

- Near the electronic devices which control by the high precision, please power off the phone. Otherwise it may lead to malfunction.
- Your phone may interfere with hearing aids, pacemaker, medical devices, and electronic systems. Please contact with the service provider or doctor. Consult a physician or the device manufacturer to ensure safe practice.

Children Health

Keep the phone and all the parts and accessories (for example, UIM card, SIM card, TF card) out of the reach of small children.

Operating Environment

- Does not use the phone hand-held while driving or otherwise operating machinery? If using the phone hand-held, park the vehicle before conversing. If using an integrated hands-free device, make sure the phone is securely in its holder.
- Switch your phone off when entering a hospital or other such institutions. Medical equipment may be effected by the phone so you should observe any building regulation governing phone usage.
- Switch your phone off when on an aircraft. The aircraft's systems may be affected by the phone signal. You are legally obliged to comply with this recommendation.
- Switch your phone off in any facility where posted notices so require.
- Do not use your phone when refueling. You should keep your phone away from fuel and chemicals.

- Switch your phone off when blasting is in progress. Observe any provided guidelines or regulations.
- Switch your phone off when in an area of a potentially explosive atmosphere (for example fuel storage areas, spray paint facilities etc.).
- Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty. For more information, check with the manufacturer, or its representative for your vehicle.

Care and Maintenance

- Keep the phone dry as moisture of any kind can contain minerals that will corrode the electronic circuits.
- Do not use or store the phone in dusty or dirty locations as the movable parts of the electronic circuits.
- Do not use or store the phone in excessively hot places. High temperatures will shorten the life-span of the phone, damage the battery or warp/welt the plastic used in the phone's manufacture.
- Do not store the phone in excessively cold places. When there is a difference in temperature between the room and the phone, condensation can form inside the phone, causing damage to the electronic circuits.
- Do not open the phone unless absolutely necessary, for example, to install the battery or SIM card. We recommend that you go to your dealer when problems arise with either of these items and allow their experts to handle the phone instead.
- Do not mishandle or abuse the phone. Dropping, knocking or shaking it can damage the internal circuits.
- Do not use harsh chemicals, strong detergents, or cleaning solvents to clean the phone. If you must clean it, then use a soft, clean and dry lint-free cloth.
- Do not apply paint or other such substances to the phone. This could clog the phone's movable parts.
- If the phone or any of the accessories are not working as they should, please consult your dealer who can provide you with the expert assistance required.
- Electrical interference may affect your phone's performance. This is perfectly normal and once you move away from the source of interference, the phone should function as usual.
- Do not attempt to disassemble your product, including accessories. Only the manufacturer authorized personnel should perform the service.

Environment Protect

Do not dispose of the battery in an ordinary bin. The battery contains toxic chemicals and must be disposed of in the correct manner. Contact your local authority for more information.

SOS

The SOS enables you to call the emergency services without the service. Because the network could not guarantee connectivity under all circumstances, so that in case of

emergency, not as the sole contact to the phone.

Battery and Charger Safety

- A new battery or one that has not been used for a long time could have reduced capacity the first few times it is used.
- Only use batteries approved by the phone manufacturer.
- When the charger is not in use disconnecting it from the power source.
- Do not leave the battery connected to the charger and power source for longer than necessary as overcharging it will shorten its life.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object causes a direct connection between the + and – terminals of the battery.
- Do not expose the battery to extreme temperatures, for example, a fridge or a car exposed to direct sunlight, as this will affect its performance.
- Do not dispose of the battery in a fire.

Health and safety information

SAR certification information

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. The guidelines were developed by independent scientific organisation ICNIRP and include margins designed to assure the protection of all persons, regardless of age and health.

This guideline uses a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg and the highest SAR value for this device when tested at the ear was 0.586W/kg.¹

1. The tests are carried out in accordance with international guidelines for testing. As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines