

# User Manual

GC01C  
CDMA/GSM simultaneous standby  
Handset

## Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your phone. For detailed information, see the appendix of "Warnings and Precautions".

	Do not switch your phone on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your phone while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your phone off near medical devices.
	Switch your phone off in aircraft. The radio signal from it may cause interference in signals of the aircraft.
	Switch your phone off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel may service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.

	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Observe any laws or regulations on the use of phone. Respect others' privacy and legal rights when using your phone.
	Operate strictly abiding by the relevant descriptions of this manual while using the USB cable. Otherwise, your phone or PC may be damaged.

## **FCC Interference Statement**

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operations.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio/television reception, which can be

determined by turning the device off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **WARNING:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **SAR Information**

- This device complies with Part 22H of the FCC Rules.
- This device meets government requirements for exposure to radio waves. This device is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the population. The guidelines were developed and confirmed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all

persons, regardless of age and health. The exposure standard for device employs a unit of measurement known as the Specific Absorption Rate, or SAR. Under the guidelines for your device, the SAR limit is 1.6 W/kg .The highest SAR value for this device when tested for use at the ear is 0.817 W/kg and when worn on the body is 0.594 W/kg.

## Contents

<b>1 Getting to know your phone.....</b>	<b>8</b>
Specifications list .....	9
Keys .....	15
Display .....	16
<b>2 Getting started.....</b>	<b>18</b>
Installing your SIM/UIM card .....	18
PIN code for SIM card .....	18
PIN code for UIM card.....	19
Loading and removing a memory card .....	19
Loading the battery .....	19
Charging your battery.....	20
Procedure for charging the battery .....	20
Using USB cable.....	21
<b>3 Basic operations .....</b>	<b>21</b>
Switching on.....	21
Switching off .....	22
Dialing a call.....	22
Saving a number by dialing .....	23
Earphone volume controlling.....	23
Answering a call.....	23
Speed dial .....	24
Speed read messages .....	24
Speed view recent calls.....	24
Connecting voice mailbox .....	24
Using earphone accessory .....	24
<b>4 Instructions of input methods.....</b>	<b>24</b>
Basic English letters input method.....	25
The common operations of English input method....	26
eZiABC/eZiabc input method .....	26
"123" numeric input .....	26
Symbol input .....	26

<b>5 Using the menu.....</b>	<b>27</b>
Contacts .....	27
Call logs.....	29
Messages .....	31
Settings .....	41
Profiles .....	46
Multimedia .....	47
Organizer .....	53
Browser .....	56
<b>6 Appendix.....</b>	<b>58</b>
Appendix I Common fault diagnosis .....	58
Appendix II Warnings and precautions .....	59
Appendix III Abbreviations and explanations .....	62

## 1 Getting to know your phone

Your phone (GC01C) can operate in GSM/GPRS 900/1800MHz and CDMA2000 1X 800MHz. It can connect to two networks simultaneously (if you insert the SIM card and UIM card). So you can enjoy the mobile telecommunication services at any time.

**Note:**

*The services must be supported by the network where your phone is in. For details, please consult local network operator.*

### **Packing list**

Your phone package box contains the following articles:

- One GC01C handset
- One USB charger
- One Li-ion battery
- One USB data cable
- One user manual

## Your phone

### Specifications list

Specification/function	Description	Remark
Size	114.6×50×17 mm	
Weight	83g	
LCD display	2.2" TFT	
Memory	128Mb NorFlash+32Mb PSRAM	
SIM card/UIM card	Support	
Text message capacity	Total 300 Items	
Phone book capacity	Phone 1000, SIM card/UIM card according to the capacity of card.	
Audio	Support MP3, AMR, WAV, MID, IMY	
Video	Support AVI, 3gp	
Camera function	0.3 M pixel	
Webcam	support	
Record function	Support WAV and AMR format, circumstance record and calling record	
Call divert/Call barring	Support	*
Call waiting	Support	*
Tool	Support Alarm, Stopwatch, Currency converter, Calendar, World time, Schedule, Power on/off and keypad lock	
Game	Build-in 3 games	


---

Text message /EMS /multimedia message	Support	*
WAP and GPRS	Support WAP2.0, GPRS Class12	*
Voice message	Support	*

---


**Note:** Functions or service marked with “\*” require network or SIM/UIM card support.

## Appearance

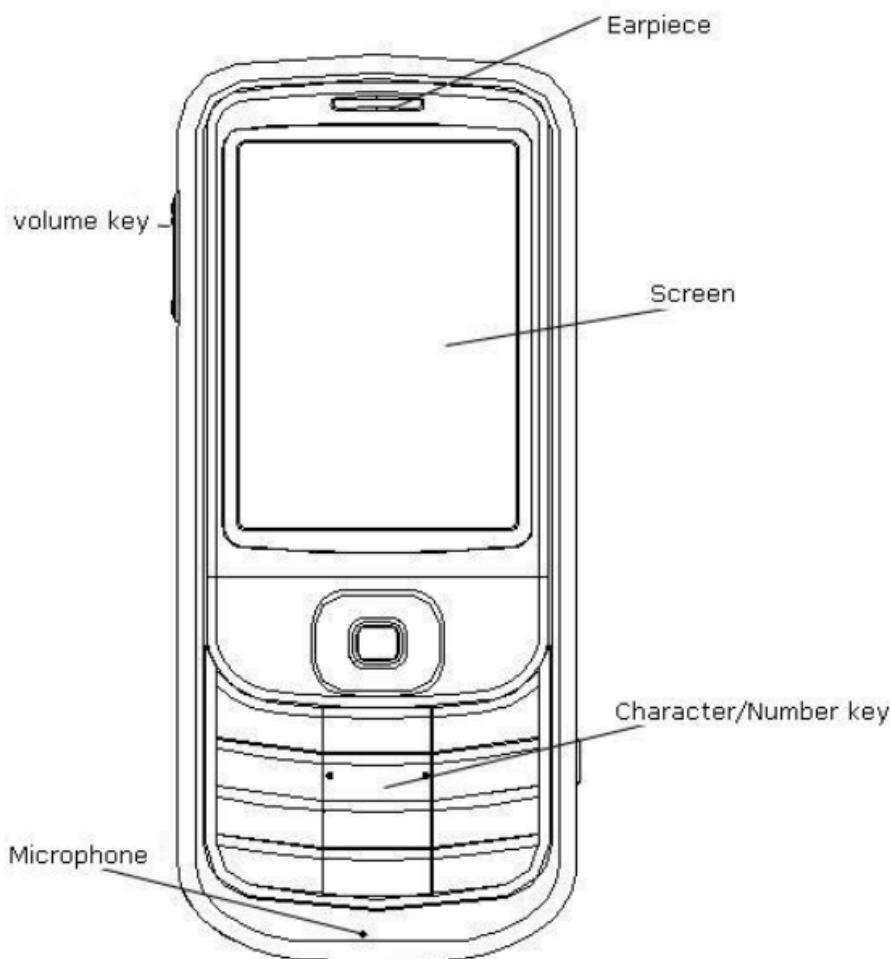


*Front View*



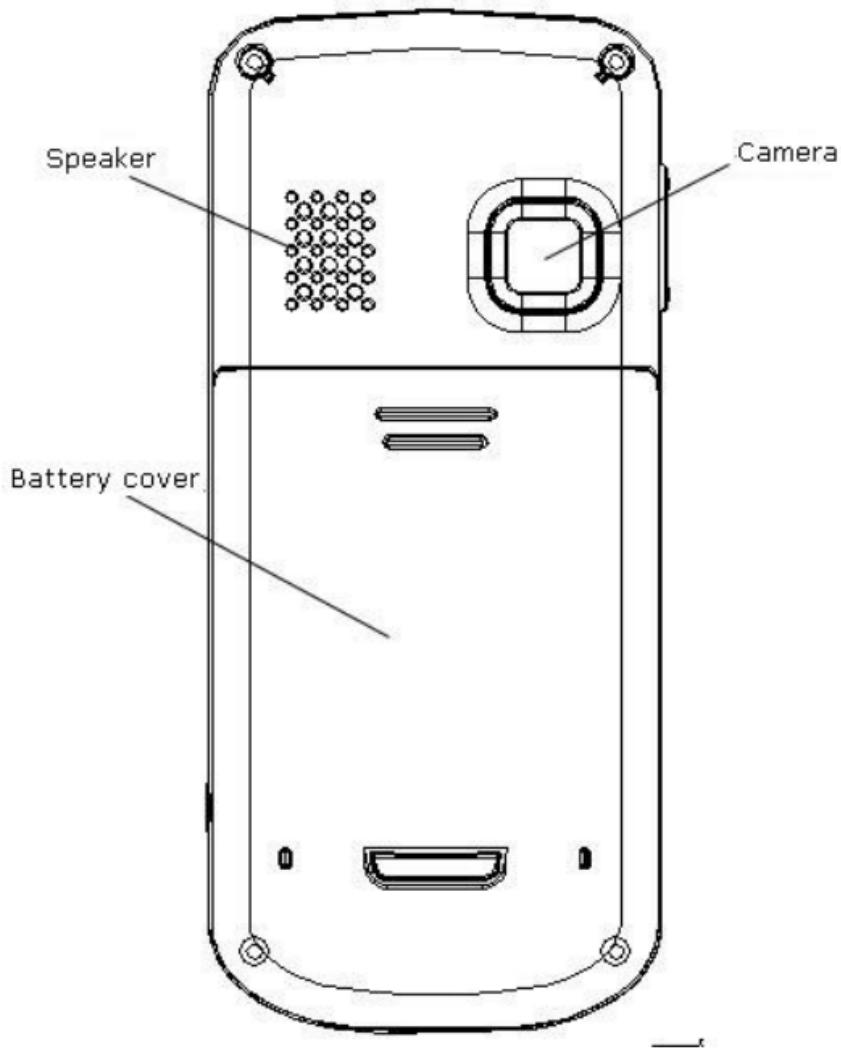


*Back View*

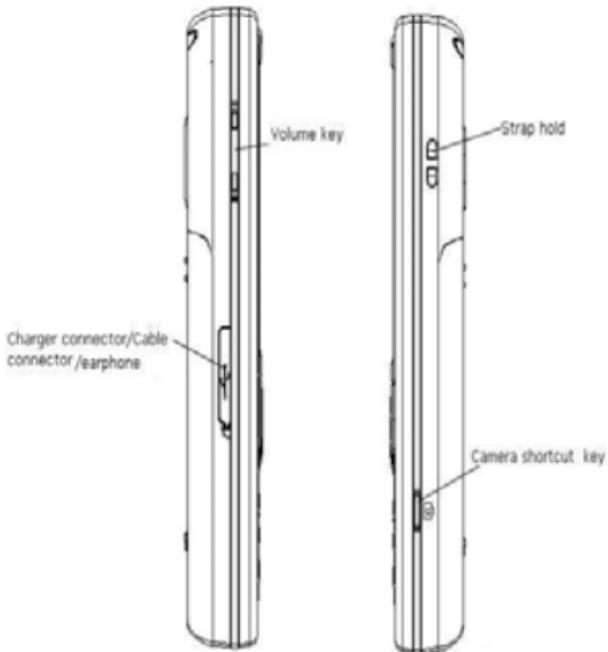

*Side View*

*Note: For reference only.*

## Keys

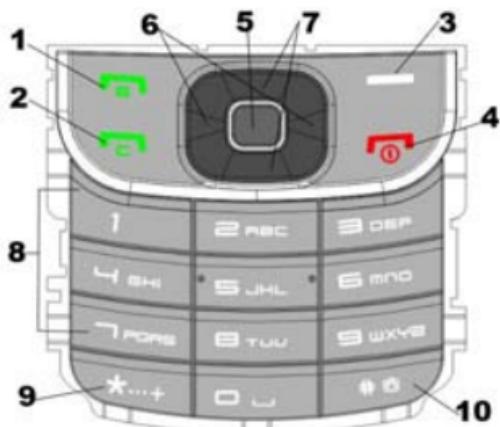

### 1. Left soft key (GSM network call key)

In the standby mode, press left soft key to access the main menu. Press this key after inputting number to dial the number in GSM network. You can see the relevant functions on the left bottom of the screen.

### 2. Dial key (CDMA network call key)

It's used for dialing a number in CDMA network or receiving a call. In the standby mode, press this key to display recent call records.

### 3. Right soft key

It's used for returning to the upper menu or clearing contents. The relevant functions will be displayed on the right bottom of the screen.

### 4. End call key /Power on/off key

End calling out, finish a conversation or exit to standby mode. Press and hold this key to switch on/off the phone.

### 5. OK key

Press this key to access the Shortcut menu. It has the function of "Confirmation" as left soft key. It could display other functions according to different menu.

### 6. Left/right direction keys

It's used for entering (left direction key) or exiting (right direction key) menu. They have specific functions of some menus.

## 7. Up/down direction keys

It's used for browsing the menu. See the relevant functions according to specific menu.

**Note:** *In the standby mode, you can press direction keys to enter the menu you have set for shortcut.*

## 8. Number keys

Under inputting or editing status, press the keys "0-9", key "\*" and key "#" to input numbers, English letters, symbols. You can also choose menu with these keys. Press one of "2-9" keys for more than one second to enter speed dial.

**Note:** *Press and hold "1" key to call the voice mail box center if you have set the voice mail number.*

9, 10. \*、# keys have different functions in different menus.

In display dialing mode, keep pressing key "#" to activate or quit silent mode.

In number dialing mode, press the key "\*" continually or keep pressing for long time can input "P"、"+"、or "W" characters. "P" and "W" is to dial extensions for convenience, "+" is to dial international numbers.

**Note:** *The differences between "W" and "P" is that "P" means sending to DTMF directly after a moment, and when you press "W", there will be a window inquiring you whether want to send DTMF or not.*

## Volume key

It's on the left side of the phone. It's used for adjusting volume or browsing the menu options after accessing the menu.

## Camera shortcut key

It's on the right side of the phone. It's used as the shortcut key for camera in the standby mode.

## Display

Display areas of the screen:

Top: Display different icons, such as the strength of single, auto keypad lock, capacity of battery and so on.

Middle: Display message, information and inputting contents, including numbers, words and dynamic icons.

Bottom: Display the functions of two soft keys and "OK" key.

Icons on the top:

---

Icon	Description	Icon	Description
	Indicate single strength (GSM)		Earphone mode
	Indicate single strength (CDMA)		Keypad lock
	Get new text message		PUSH message
	Battery level indicator		Stopwatch
	Get new multimedia message		Ring
	Connect to GPRS		Vibrate
	Alarm clock is enable		Vibrate and ring
	Missed calls		Vibrate first then ring

---

## 2 Getting started

### Installing your SIM/UIM card

Before registering your number, you should apply two different numbers for relevant network services, so you have got two different cards, SIM card and UIM card.

With these two cards, you can use all the functions in the phone. Many communication parameters are stored in the cards, including individual information, such as PIN code, phonebook, messages and other additional system services.

***Caution:*** Please do not twist or scrape the SIM/UIM card. Keep away from static, dust or liquid. If you lost the SIM/UIM card, please contact with your service provider in order to get help.

Before inserting the SIM/UIM card, please switch the phone off. The SIM/UIM card slot is stored inside the back of the phone.

Please insert cards into relevant card slot. (As shown in the slot)

### PIN code for SIM card

PIN code for SIM card: This code is used for preventing others from using your SIM card. If you startup this code when switching on the phone, the screen will display "Enter PIN". When entering the password, the screen will display "\*" instead of the contents. You can get the PIN code while obtaining the SIM card from your network operator.

PIN2 code for SIM card: When you use some special functions, this code is needed.

PUK (Personal Unlock code) code and PUK2 code for SIM card:

It is used for unlocking the SIM card if you input wrong PIN code for three times and SIM card is locked. You can also use it to modify PIN code. It's supplied together with SIM card.

***Caution:*** If the SIM card is locked, please enter the PUK code provided with the service provider for unlocked.

## **PIN code for UIM card**

PIN code for UIM card: This code is used for preventing others from using your UIM card. If you startup this code when switching on the phone, the screen will display "Enter UIM PIN". When entering the password, the screen will display "\*" instead of the contents to ensure confidentiality.

PUK code and PUK2 code for UIM card:

It is used for unlocking the UIM card if you input wrong PIN code for three times and UIM card is locked. You can also use it to modify PIN code. It's supplied together with UIM card. If these codes are not provided with the card, please get them from the service provider.

***Caution:*** *If the SIM/UIM card is locked, please enter the PUK code provided with the service provider for unlocked.*

## **Loading and removing a memory card**

If you want to use certain functions, you may have to insert a memory card. (This phone uses T-Flash memory card)

Insert T-Flash card: Please switch off the phone first. The T-Flash card slot is inside the back of the phone. Open the lock of T-Flash card and insert the card into the jack with the metal side down. Lock the jack then insert successfully.

Remove T-Flash card: Open the lock, pull the T-Flash card lightly then remove the card.

***Caution:*** *T-Flash card is tiny. Please keep T-Flash card out of the reach of young children to avoid their swallowing!*

## **Loading the battery**

To load the battery

- Put the battery into the battery slot on back of the phone.
- Press the battery down till it fit the slot.

Unload the battery

Make sure your phone is switched off before unloading the battery. Otherwise, your phone may be damaged.

To unload the battery:

- Push the battery cover latch downward.
- Take the battery out.

## Charging your battery

Before charging the battery, please read carefully the following precautions.

The battery used in the phone is rechargeable. New batteries must be fully charged before they are used for the first time. Only after several times of charging and discharging, the battery's efficiency would be the best.

To ensure the battery is in optimal state, we recommend you discharge the battery fully at least once every month by consuming the power till the phone is switched off automatically.

During the course of charging, it is normal to find the battery and the phone slightly hot. The phone will automatically protect itself when the temperature of the battery rises so as to control temperature variation.

The phone will display alert as the battery start running out. When the power has run out the phone will be switched off automatically.

***Note:*** Actual time of usage of the battery varies according to different operation modes and settings of network base station. If you use the phone when battery is rather low, the phone may restart or switch off automatically. Please recharge it on time.

## Procedure for charging the battery

Before charging the battery with a cable charger, please make sure that the battery has been properly loaded into your phone.

- Connect the charger to a main socket, and insert the charging plug into the left side jack (USB/ earphone /charger jack) of the phone.
- Then the phone starts charging. The battery symbol will be gradually lengthened from right to left.

You may choose to charge the battery under power-off or power-on status.

If the phone is charged in power-off mode, the screen will light up and it will display a prompt picture. When the battery is fully charged, charging operation stops automatically. If the phone is charged in power-on mode, when the battery is fully charged, the battery symbol on the screen will be five-grid. Then you should unplug the charging plug.

To ensure safety, do not change the parts and fitments of the battery by yourself nor take off the battery of the outer case.

## **Using USB cable**

- Please make sure that the operation of connecting and disconnecting of USB accessories are proper.
- Do not use the format command to format the phone with your computer, or it may cause permanent damage.
- USB operating system:
  - Windows2000 / XP: No need to set up the USB driver software.
  - USB driver software must be setup in other operating system.
  - Webcam: If you have connected USB cable to computer, after the option is selected, webcam status is entered, such as shoot function in chatting by OICQ.

***Note:*** *USB cable has both the data transfers and the charging functions.*

## **3 Basic operations**

### **Switching on**

Press and hold the power on/off key to switch it on. If SIM/UIM card code and the phone code are not enabled after it is switched on, the phone goes through various start-up stages, and then searching for the network service. After logging in the service, the name of the service provider will be shown on the screen. Now you can dial or answer calls.

If the screen shows "Insert SIM/UIM card", please check the SIM/UIM card after switching the phone off.

After you insert the SIM/UIM card, the phone will check it automatically.

If you have set some parameters of phone or the phone can't find the network, the screen will show you the following clews:

- 1) "Enter phone lock code"—if the phone lock enabled.
- 2) "Input PIN code"—if SIM/UIM lock enabled.
- 3) "No service"—means service logging in failed or calls disabled.
- 4) "SOS"—means logging in other network service successfully but dialing 112 only.
- 5) "Searching"—the phone is searching for the network service till logging in successfully.

**Note:** If you have not got PIN code for SIM card or UIM card, please contact with the service provider. The default phone code is 1234.

## Switching off

Press and hold the power off key till the phone is switched off. Please do not remove the battery to switch the phone off directly. This may damage the SIM/UIM card and cause certain memories losing.

## Dialing a call

- In the dialing interface, input numbers and press GSM network call key to dial by SIM card. Press CDMA network call key to dial by UIM card. If you want to hang up or cancel dialing, please press left soft key to choose the relevant options or press end call key. After finishing a call, the screen shows duration time.
- Dial though contact: Find the number or the name stored in the phonebook you want to call and press GSM network call key to dial though SIM card. Press CDMA network call key to dial though UIM card.
- Redial recent calls: In the standby mode, press dial key once to see the list of the recent calls. Then dial the selected number or name.

## **Saving a number by dialing**

You may save the other party's number to phonebook, or by dialing under standby status. The number saving procedure of the former method is described in details in contacts menu. Specific steps for saving a number by dialing in the standby mode are as follows:

- Input the other party's phone number in the standby mode.
- Press "OK" key to perform function selection. You may choose to save this number in the UIM/SIM card or phone.

## **Earphone volume controlling**

During a conversation, you may press volume adjusting key (at the left side of phone) to adjust the volume of earphone.

## **Answering a call**

When there is an incoming call, the phone will remind you by ringing, vibrating, vibrating and ringing, vibrating first then ringing according to your settings.

If SIM card has an incoming call, there will be a prompt "GSM". You can press GSM network call key to answer the call. If UIM card has an incoming call, there will be a prompt "CDMA". You can press CDMA network call key to answer the call.

If you don't want to answer the incoming call, press end call key or choose "Reject". If you apply a call number recognizing service, the number will be shown on the screen when you have an incoming call. If you set the name in phonebook, the screen will show the name.

***Note:*** If you have subscribed to the following additional services, the incoming call may be diverted to the specified number automatically:

- *All voice calls*
- *If out off reach*
- *If not answered*
- *If busy*
- *All data calls*

## **Speed dial**

This phone provides you with nine quick buttons. You can customize these buttons to corresponding number. In this way, you can enable the quick buttons in the standby mode. Press and hold one of the "2-9" keys in order to a speed dial. Key 1 is especially used as speed dial of the voice mail function. You can use it after setting a voice mailbox number.

**Note:** You must set the corresponding number for the button following the path "Setting/Phone setting/Speed dial" before. (Dial by GSM network)

## **Speed read messages**

When receiving a message, choose "Read" to view the details.

## **Speed view recent calls**

In the standby mode, press dial key to view recent calls. You can press the up and down-direction keys to view the calls and dial the selected number.

## **Connecting voice mailbox**

Your phone supports transferring incoming calls to voice mailbox, and then you will receive a note reminding you about the new voice mail. (Voice mailbox number should be set beforehand.)

## **Using earphone accessory**

When you insert the earphone into the earphone slot, the phone is automatically switched to the earphone pattern. Earphone is used as receiver and microphone. You should insert it correctly to ensure the normal use.

## **4 Instructions of input methods**

Note: the instructions base on the language of English.

Your phone provides some input methods for inputting text. It provides you with kinds of convenient input methods to work in other functions. Input methods contain: abc, ABC, eZiABC, eZiabc, 123 and symbol input method. Under the editing status, press "#" to switch between different input methods.

## Basic English letters input method

Choose abc/ABC input method, and press the number keys to input the letters. Press the key quickly to search the letter displaying on the keypad. For example, if you want to input "C", press "2" key three times quickly, and it can be finished just after the font turn black.

The corresponding functions or characters to the keys are shown in the table:

Key	Corresponding character/function
1	. , - ? ! '@ : # \$ / _ 1
2	ABCabc2
3	DEFdef3
4	GHIghi4
5	JKLjkl5
6	MNOmno6
7	PQRSpqrs7
8	TUVtuv8
9	WXYwxyz9
0	0 /space
*	Switch to symbol menu
#	Switch the input methods
Up and down direction keys	Move the cursor up or down
Left and right direction keys	Move the cursor left or right
Left soft key	OK/Option
Right soft key	Back/Clear
End call key	Turn to standby mode

## **The common operations of English input method**

"1~9" keys are used for inputting multi-character. Press the key quickly till the character appears.

When the cursor moved, you can input the next character. Press "#" to switch different input methods.

When you need to input a space, you may press "0" key once under the English input methods. Press right soft key to clear the last character or press and hold it to clear the whole text.

### **eZiABC/eZiabc input method**

When you use eZiABC/eZiabc input method to input a character or a word, press the corresponding key. Use the up or down key to choose the word, and confirm it by pressing right direction key or "OK" key. For example, to input a word "hello", you can press "4, 3, 5, 5, 6" by turns, and your phone will compose the word automatically. Press up or down key to choose the appropriate word, and then press "OK" key or right soft key to confirm it.

### **"123" numeric input**

"123" Numeric Input method is used for inputting numbers. Press "#" to switch to the method. You can press "0~9" key to input the number you need.

### **Symbol input**

Under the editing status, pressing "\*" to access the symbol menu. Use the direction keys to choose the symbol you need and press "OK" key to input it.

## 5 Using the menu

### Contacts

1000 entries can be stored in the phone. SIM/UIM card can also store the entries (The capacity depends on the cards). You can look up all entries by entering the phonebook. You can store 4 numbers at most for each entry in the phone, including mobile number, telephone number, office number and fax number. To access the phonebook, press right soft key under the standby status or choose "contact" under the main menu.

Enter the phonebook in standby mode; choose "select" to display the entries of all, phone, SIM card or UIM card.

Select an entry in phonebook and choose "Option". You can do the following operations:

- View: View the details of this entry.
- Call (G): Call this entry by SIM card (GSM network).
- Call (C): Call this entry by UIM card (CDMA network).
- IP call (G): Use IP number to call this entry by SIM card.
- IP call (C): Use IP number to call this entry by UIM card.
- Send vCard: Send the entry as a vCard by text message, multimedia message, Email to somebody or save to file.
- Send text message: Send a message to this entry.
- Edit: Edit the entry.
- Delete: Delete this entry from phonebook.
- Duplicate: You can make a duplicate of an entry in the phone or SIM/UIM card.
- Copy: Copy this entry to SIM card, UIM card or phone.
- Move: Move this entry to SIM card, UIM card or phone.

### Quick search

Enter the first letter of name; it will display the correlative entries.

## **Search number**

To search phone numbers by any four or more digits of the number. Press the left soft key and the screen will display the record you are searching for.

## **Search name**

Input the name you need, and then search for it in the phonebook till you get the best result.

## **Add new**

You can add a new entry to phone, SIM card or UIM card. Make sure the card is inserted in your phone when you want to store entries in card.

- To SIM: You can add an entry, including name and number to SIM card.
- To Phone: You can add an entry, including name, number, telephone number, company name, Email address, office number, fax number, birthday, picture, sound and caller group.
- To UIM: You can add an entry, including name and number to UIM card.

## **Copy all**

You can copy all the entries between SIM card, UIM card and phone.

## **Delete all**

- From SIM: Delete all the entries in SIM card.
- From phone: Delete all the entries in phone.
- From UIM: Delete all the entries in UIM.
- One by one: Delete the entries one by one in phonebook.

## **Caller group**

Your phone provides five caller groups. You can choose the ring tone and picture; add the group's member (only entries in the phone can be selected) and edit name.

## **Extra number**

You can set the owner numbers. The function is supported by SIM card only.

## **Setting**

- Memory status: Show memory status of phone, SIM card and UIM card.
- Preferred storage: Choose the preferred storage when saving phonebook entries.
- Fields: You can choose specific fields you need when adding new entries to the phone.

## **Import and export**

- Export: Export the phonebook entries to specific folder of any driver.
- Import: Import the entries from specific driver to the phone.

## **Call logs**

Your phone can record the missed calls, received calls and the dialed calls. It can also record the duration time and cost of the calls. If the phone is powered on and in the area of network, it could record the missed calls and the received calls when the network supports. Under the list of the missed calls, received calls and the dialed calls, you can see the time and date of the calls. You can also edit or delete the number in the list, or store the number into the phonebook.

## **Missed calls**

View the list of 20 recent missed calls (network service needed).

**Note:** When the phone displays the prompting message for a missed call, press "Read" to access the missed calls list. Select the number and dial the number by GSM or CDMA.

Enter the menu and press up and down direction keys to choose a number. You can:

- Delete: Delete the entry.
- Save: Save the selected number to the position you have selected.
- Call (G): Make a call by SIM card.
- Call (C): Make a call by UIM card.
- IP call (G): Use the IP number to call this phone number by SIM card.
- IP call (C): Use the IP number to call this phone number by UIM card.
- Edit: Edit the number and save it to the position you want.
- Send text message: Send text message to current number.
- Send media message: Send multimedia message to current number.

### **Dialed calls**

You can view 20 recent dialed numbers. After entering this menu then you can choose a number to make a call, send text message, send multimedia message, delete, save or edit it.

### **Received calls**

You can view 20 recent received numbers. After entering this menu, you can choose a number to make a call, send text message, send multimedia message, delete, save or edit it.

### **Delete logs**

You can delete all the call records, or only delete the numbers in the list of missed calls, dialed calls or received calls.

### **Call time**

- Last call: The duration of last call.
- Total sent: The total duration of all outgoing calls from when you reset the timer.

- Total received: The total duration of all incoming calls from when you reset the timer.
- Reset all: Reset the timers.

### **Call cost**

This function needs the supports of the network provider.

- Last call: Show the cost of last call.
- Total cost: Show the total cost of all calls from when you reset the call cost.
- Reset cost: Clear all call cost records. You need PIN2 code for this function.
- Max cost: Limit the max cost of calls. You need PIN2 code for this function.
- Price/unit: This function needs the support of the network. You need PIN2 code for this function.

***Note:** For more details, please inquire your network provider.*

### **Message counter**

View the numbers of text messages sent and received. You can also clear all the counters.

### **GPRS counter**

View the flow of data sent and received. You can also clear all the counter.

## **Messages**

### **Text message**

Text message function is a network service. You require to subscribe to your network operator.

Your phone have a function of sending/receiving text messages. A text message is sent to the message center of the network, then to the target user by the network. If the target user does not switch on his phone, the network will store the Text message temporarily. The deadline depends on the user's setting and the service operator.

Using text message, your phone is allowed to send and receive a chain of text message. Sending chain message may influence the expense of the message. In order to get more information about this, please consult the service provider.

If the text message box is full, it will have an icon glittery on the top of the screen. You need to delete some messages in the inbox.

If the party receives a text message, you will get a message received report if the text message report is set on.

**Note:** *The phone may give a prompt if the text message has already been sent. It means the text message has been sent to the information center. But it does not mean the receiver has received the text message. In order to get more information about this, please consult the network provider.*

### **New message**

You can create a text message in this menu.

Every text message has a capacity of 1224 characters, but in some areas (for example send by UIM card) the network only supports 160 characters of text message at most. If the message has more than 160 characters, it will be sent as two or more common text messages.

- Send (G): Send text message by SIM card.
- Send (C): Send text message by UIM card.
- Save and send (G): Send text message by SIM card and save it to outbox.
- Save and send (C): Send text message by UIM card and save it to outbox.
- Send to many (G): Send text message to others (up to 10 numbers) by SIM card.
- Send to many (C): Send text message to others (up to 5 numbers) by UIM card.
- Send by group (G): Send text message to all the members of one group by SIM card.
- Send by group (C): Send text message to all the members of one group by UIM card.
- Save: Save text message to draft.

- Use template: Insert common phrase in the text message. It provides you with 10 common phrases.
- Insert object: You can insert picture, animation, melody, sound etc. in the text message.

**Note:** UIM card doesn't support the function "Insert object".

- Input methods: Switch input methods you need.

## **Inbox**

When received a new text message, the screen will display  icon. Normally, if text message box is full, you can't receive new message except deleting the extra messages. Please delete the messages you don't need.

Choose "Inbox" then the screen will display the received text message.

When you read the text message of SIM card, you can do the operations as follows after choosing "Option":

- Reply: Reply to current text message.
- Delete: Delete current text message.
- Edit: Edit the text message.
- Forward: Forward the text message you are reading to others.
- Copy to phone (SIM): Copy the text message to phone (SIM).
- Move to phone (SIM): Move the text message to phone (SIM).
- Chat: You can chat with the party in chat room (About more information of setting please enter the menu "Chat")
- Use Number: Abstract all the numbers from the text message, and display it with a form of list .You can dial the number by SIM card or UIM card. It can be saved in phone, SIM card or UIM card.
- Use URL: Get the address of network (the beginning must be <http://> or WAP) concluded in the text message, and display it with a form of list.

Read the text messages in UIM card and choose "Option". You can:

- Reply: Reply to the current text message.
- Delete: Delete the current text message.
- Edit: Edit the text message.
- Forward: Forward the text message you are reading to others.
- Chat: You can chat with the other party in chat room.
- Use number: Abstract all the numbers from the text message, and display it with a form of list .You can dial the number by SIM card or UIM card. It can be saved in phone, SIM card or UIM card.
- Use URL: Get the address of network (the beginning must be <http://> or WAP) concluded in the text message, and display it with a form of list.

## **Outbox**

Choose "save and send (G)" or "save and send (C)" when sending text message. Message will be saved in outbox. You can send, edit, delete the text message, copy to phone (SIM), move to phone (SIM), copy all, move all, abstract the use number and use URL.

## **Drafts**

After editing a new text message, choose "Save". The message will be saved into draft box. If the message displays "No number", it means there is no target party to be sent. If the message isn't sent successful, it will be saved to the "Drafts".

## **Delete**

- Delete inbox: Delete all text messages stored in inbox.
- Delete outbox: Delete all text messages stored in outbox.
- Delete drafts: Delete all text messages stored in the draft.
- Delete all (G): Delete all text messages in SIM card.
- Delete all (C): Delete all text messages in UIM card.
- Delete all: Delete all the text messages.

## **Templates**

There are 10 common short phrases stored in the phone. You can edit or delete the common phrases. After deleting, the phrase will display empty.

## **Message settings**

Set parameters of the text message.

- Profile setting: Input message center number etc. before sending/receiving messages.

***Note:*** *Message center number is provided by the service provider.*

- sending setting:
  - Delivery report: Service provider informs you whether the text message is received or not and the received time.
  - Reply path: Send the route to the network. This function needs message center supports.
- Memory status: View memory status of the phone, SIM card and UIM card.
- Preferred storage: Save the text messages in the phone or in the SIM card.
- Pref. bearer: Prefer GPRS, Prefer GSM, GSM only. The original mode in the phone is Prefer GSM.

## **Media message (GSM supports only)**

You can send and receive multimedia message. Through multimedia message service, you can send picture, voice, and text message. When send multimedia message, the target user should have a phone which also have the function of receiving multimedia message.

***Note:*** *Only with the supports of the network provider can you use this function. Only with a phone that is compatible with multimedia message and Emails can your phone receive and display multimedia message. If you haven't insert SIM card, you can't use this function. Please consult with the local operator about the settings.*

## Write message

### **TO**

- Add number——Input phone number.
- Add Email——Input the address of Email.

### **Cc:** Copy to

- Add number——Input phone number.
- Add Email——Input the address of Email.

### **Bcc:** Blind carbon copy

- Add number——Input phone number.
- Add Email——Input the address of Email.

### **Subject:** Edit multimedia message subject by yourself.

### **Contents**

Edit multimedia message text. Choose “Option” or left soft key to enter:

- Done: Complete editing the multimedia message.
- Input method: Choose input method.
- Add image: Insert pictures.
- Add audio: Insert sounds
- Add video: Insert videos
- Add attachment: Insert accessories.
- Add slide before: Add a new page before current page.
- Add slide after: Add a new page after current page.

**Note:** If you add a new page before or after current page, you can see the menu: delete slide, previous slide or next slide.

- Add bookmark text: Add bookmark of WAP to multimedia message.
- Preview: Preview the edited effects.
- Sliding timing: Set the display time for each page. Default is five seconds. Max sliding timing: 60 seconds.

After finishing the multimedia message, choose "Done" to enter next menu:

- Send only: Send current multimedia message.
- Save and send: Send current multimedia message and save it to outbox.
- Save to drafts: Save multimedia message to drafts.
- Send options: Set validity period, delivery report on/off, read report on/off and priority.
- Exit: Exit multimedia message, the screen will prompt you to save it or not.

## **Inbox**

You can view multimedia message, and use the functions as below:

- View: View this multimedia message and store pictures, sound and accessories.
- Details: View the details of this multimedia message.
- Reply: Write multimedia message back to the sender.
- Reply to all: If the multimedia message is sent to many people including you, you can use this function to write multimedia message back to the same addressees.
- Forward: Transmit this multimedia message to others.
- Delete: Delete this multimedia message.
- Delete all: Delete all the multimedia messages in the inbox.
- Use number: Abstract the number from multimedia messages and save it to contacts or dial it.

## **Outbox**

View, send, and store multimedia message that is not sent successfully. View, details, forward, delete, delete all and use number.

## **Draft**

Store edited multimedia message. View, edit, use details, delete, delete all and properties, send.

## **Text templates**

There are five preset multimedia message. You can view and make new multimedia message from the sample.

## **Message setting**

You can set some parameters for the multimedia message in this menu.

- Compose: Set the creation mode, image resizing, auto signature on/off, signature text of multimedia message.
- Send
  - Validity period: Set the storage time and sending time in message service center. The options are: 1 hour, 12 hours, 1 day, 1 week and max.
  - Delivery report: Delivery report on/off.
  - Read report: Read report on/off.
  - Priority: The priority of sending multimedia message: normal, high, low.
  - Sliding timing: Set the display time for each page.
  - Delivery time: Immediate, in one hour, in 12 hours, in 24 hours.
- Retrieve
  - Home network: Delayed, immediate, rejected.
  - Roaming: As home, delayed, rejected.
  - Read report: Send, never send, on request.
  - Delivery report: On/off
- Filter
  - Anonymous: Allow, reject.
  - Advertisement: Allow, reject.

- Server profile  
You can consult local net provider about the settings.
- Memory status: View the memory of usage, total used and capacity available.

## Chat

The function needs the supports of text message service. Via the function, you can chat with others just like chatting in the network. It can save the text you have ever talked before. Set the chat room, then you can begin to chat.

- Chat Room Info: Set your nickname, party's number.
- Start New: Edit the new content

## Email

Only with the supports of the network provider can you user this function. It's convenient for you to use this function to send and receive Emails.

- Send and receive: Display sent and received Email. It shows the numbers of Email. You need to set the correlative items first.
- Write Email: Edit Email address, CC, subject, attachment, priority and the content of Email.
- Inbox: Display received Emails. You can do the operations of view, reply etc.
- Unsent: Save the Email that doesn't send.
- Sent: Save the Email that sent.
- Drafts: Save the draft or fail-sent Email.
- Delete all folder:
  - Inbox: Delete all the Email of inbox.
  - Unsent: Delete all the Email of unsent folder.
  - Sent: Delete all the Email in this folder.
  - Drafts: Delete all the Email of drafts.
  - Delete all folders: Delete all the Email of folders.

- Email profile: Set the parameters of Email transmission.
  - Profile setting: Set profile name, data account, protocol, check interval and download size.
  - Outgoing server: Set server, outgoing port, display name, Email address, username, and password.
  - Incoming server: Set server, incoming port, username, password, and copy on server.
  - Signature: Set auto signature on/off, signature image and signature text.

**Note:** Please consult the local net provider about the settings of Email.

## Voice mail server

Voice mail box is a net service. You need to apply to use this service. About more details, please inquire your service provider.

Edit: Edit or delete your voice mail box number. Press "OK" to store this number.

Connect to voice: Dial your voice mail number stored in the voice mail box number list. If you have two phone numbers, each number will have its own voice mail box number.

**Note:** In the standby mode, after setting voice mail box number, press and hold "1" key to dial voice mail box. (Supported by SIM card only)

## Broadcast message

This is a service that the network operator sends some service like weather forecast and traffic condition to all the GSM users in the specific area.

Receive mode: Turn on/off the receive messages function.

Read message: Only open receive messages function can you read the messages received.

Languages: Set the language of reading the messages.

Channel setting: Select, add, edit and delete channel number.

**Note:** If you open cell broadcast function, your phone will receive cell broadcast messages from GSM net.

## Settings

You can set the parameters of your phone when needed.

### Phone

- Language: set the displaying language, English, Indonesia, Chinese for chosen.
- Input methods: You can set a default input method according to your habit.
- Power on/off: Set the power on/off time.

**Note:** *To avoid abnormal accident happens, please make sure the "Power on/off" is off when you are in the area where phone is forbidden, for example the gas station.*

- Greeting text: you can enter a welcome note that displays on the screen when you switch on the phone.
- Speed dial: Set and edit speed dial number. If you set a speed dial number, press and hold "2-9" keys to dial the relevant numbers in standby mode. (Only supported by SIM card).
- Shortcuts: You can set and edit some shortcut functions. Select the shortcut menu and press "OK" to directly access the menu. Then select one shortcut function and press left soft key, you can:
  - Add: Add a new shortcut function.
  - Edit: Edit current shortcut function.
  - Delete: Delete current shortcut function.
  - Delete all: Delete all the options of menu.
  - Deactivate: Open and close the menu of the shortcut function.
  - Change order: Edit the order of current shortcut function in the list.

**Note:** *To use the menu, shortcut function must be set following the path "Settings//Phone// shortcuts". Press "OK" to access shortcut function in standby mode.*

- navigation key: You can define the shortcut functions of direction keys according to you needs. In standby mode,

press direction keys to directly access the function menu you set.

- Auto update of date and time: You can automatically update the time and date according to the current time zone. This function would not impact the alarm clock time. But this function may cause the coming alarm clock time expiration.
- Flight mode: if you activate the mode, the phone disconnects with GSM net but you can use other functions of the phone.
- Backlight: Set the brightness and display time of LCD backlight.

## Display

- Wallpaper: You can set the system pictures or the pictures and photos from the selected folder as wallpaper. Dynamic pictures are supported by this phone.
- Screen saver: Set "Screen Saver" on or off and select the show picture.
- Power on: Picture or video can be set as power on.
- Power off: Picture or video can be set as power off.

## Calls

- Caller ID

You can select network operator provided set by network, hide Id and send Id. The mobile phone's factory default status is set by network.

***Note:*** this function relates to network. Selecting "hide Id" may result that it does not able to dial. When this function is activated, please use after ensuring smooth call.

- Call waiting

It is used for activating or deactivating the call waiting function. You can also view whether the call waiting function is enabled by checking the status.

- Call diverts

Incoming call can be diverted to the specified number automatically.

- All voice calls
- If unreachable
- If no answer
- If busy
- All data calls

You can do the following operations of the above five call diverts:

Load: Set on after inputting the call divert number.

Cancel: Disable this function.

Check status: Check the status of Call Divert.

- Cancel all

- Call barring

It is used for setting the call barring mode for the phone.

- Dialed calls
  - ✧ All calls
  - ✧ International calls
  - ✧ International calls except to home: when this function is activated, only in-country local number can be dialed at abroad or dialing to the number in your county (that is, the country of belonged network provider)
- received calls
  - ✧ All calls: You can't receive all incoming calls.
  - ✧ When roaming: You can't receive any call when the phone is roaming.

The options of the above functions:

Load : Start call barring after inputting password.

Cancel: Cancel call barring.

Check status: Check the status of certain call barring function from the net.

- Cancel all: Disable Call Barring function. This function

needs the password provided by the operator.

- Change password: This function is used for changing Call Barring Password. You should input the former barring password before changing.
- Line switching: Switch between Line 1 and Line 2. Line 1 is default.

**Note:** Whether dialing a call is successful is related to local operator if you select Line 2.

- Minute reminder: To know the duration of your call, you can set off, ring once or periodic prompt during the conversation.
- Show call timer: Display the duration of your call during conversation.
- Auto redial: Open or close Auto Redial. Auto Redial can be switched off after your failure of dialing up to ten times.
- Closed user group: This function needs local operator's support. Please refer to the local operator for specific information.
- IP dial (G): You can set IP Number and dial by SIM card.
- IP dial (C): You can set IP Number and dial by UIM card.

### **Time and date**

- Set date / time: Set the current time and date. Press the left and right direction keys to move cursor. Press the up and down direction keys to select options and input time and date.
- Set format: Set the display format of system time (12 hours or 24 hours) and date (DD/MM/YYYY or YYYY/MM/DD).
- Show date/time: Set the display of date and time on/off.

### **Security**

- SIM lock: Set SIM card lock on or off (SIM Card PIN code).

- UIM lock: Set UIM card lock on or off (UIM card PIN code).
- Phone lock: Set the phone lock on or off. The password of phone lock contains 4-8 digits. "1234" is the default setting, which can be changed by the user.
- Info Lock: Set phonebook lock on or off. If you set the lock on, you have to input the password when you enter the phonebook. The initial password is 1234.
- Auto Keypad Lock: this function allows you lock /unlock mobile phone's keypad. You can set auto lock keypad's time: 5s, 30s, 60s, 5min. If you don't make any operations after the time you have set, the keypad will be locked automatically, please use left software key plus "\*" key to unlock your phone when needed. In standby mode, you can also use left software key plus "\*" key to make manual keypad lock.
- Fixed Dial: this function may need SIM card and network operator support. When this function is activated, you can only dial the numbers in the fixed dialing list; to activate fixed dial, you need to inputPIN2 code.
- Barred dial: activate or deactivate barring all or some calls. It needs SIM card's support
- Change password: If the Phone Lock is on, input the password will unlock your phone. The default password is "1234", which could be changed as you wish. SIM/UIM card lock is provided by the network operator. You can input the initial password and change it.

## **Networks**

The following functions need local operator's support.

- Network Selection:
  - New search: Search the available network.
  - Select network: Select the appointed network of the phone.
  - Selection mode: Select the network automatically or by yourself.
- Preferred Networks: Select the preferred operator. The network you are using is the default net. You could have the following operations:

- Add from list: Display the network list of PLMN.
- Create new: Add the network's priority.
- Change priority: Reset the priority of the network.
- Delete: Delete the preferred network.
- GPRS Connection: Switch between permanent connection and connection in case of need.

## **Equalizer**

Equalizer: Normal, bass, dance, classical, treble, party, pop, rock and restore factory default.

## **Restore factory**

Restore Factory: Restore some settings to default ones. The default password is "1234".

**Note:** *This function will restore the menus you have set to default status. It may bring you inconvenience. Please be careful to use it.*

## **Profiles**

You can customize profiles according to different circumstances. First, please set profile according to your demands. And then select and start one. Available profiles include general, meeting, outdoor, indoor and headset.

**Note:** *Insert headset to enter headset automatically, and this profile has no activation option.*

The following contents can be customized in every profile.

- Tone setup: Allows you to choose a ringing style. Your choices include the ring of incoming call, alarm, power on/off, message tone and keypad tone.
- Volume: Allows you to set the volume of the ringing tone and keypad tone.
- Alert type: Ring, vibrate only, vibrate and ring, vibrate then ring.
- Ringing type: Allows you to choose a ringing type. Your choices include single, repeat, ascending.

- Extra tone: Includes warning tone, error tone, net connecting tones and call connecting tones.
- Answer mode: If "Any key" is set on, you can press any key to answer the call.

**Note:** Press and hold "#" in standby mode to switch to silent pattern or to return.

## Multimedia

### Explorer

#### Open

Select one folder and press the "Option":

- Open: Open the selected folder.
- Create folder: Create a new folder in the selected folder.
- Rename: Rename the current folder.
- Delete: Delete the current folder.
- Sort: Sort and display the files in the folder by name, type, time and size.

**Note:** You would have different options according to different files.

#### Create a folder

You can use this function to create a new folder at a specified place.

#### Format

You can format all the data in the memory card. The system will create a default folder. Because the data can not be recovered after formatting, please use this function carefully.

### Camera

You can use camera to capture the scene you like. The camera lens is in the back of the phone, and the pictures are displayed in the viewer window. You can turn on the camera by pressing right side key for shortcut in standby mode.

If there isn't enough space in the memory card to save files, please delete some old photos or other files in order to release more memory space.

Explanations for the options of camera:

Option	Brief state
Album	View existing photos.
Camera setting	Continue shot: On, off. In previewing window the shortcut is "5" key. Shutter sound: Sound 1, sound 2, sound 3, off. EV: -4~+4 Banding: 50 Hz, 60 Hz Delay Timer: 5 sec, 10 sec, 15 sec, off. In previewing window the shortcut is "4" key.
Image setting	Photo size: 176×220, 80×60, 160×120, 320×240, 640×480 In previewing window the shortcut is "8" key. Photo quality: High, normal, low. In previewing window the shortcut is "7" key.
White balance	Auto, daylight, tungsten, fluorescent, cloud, incandescence.
Scene mode	In previewing window the shortcut is "2" key. Auto, night. In previewing window the shortcut is "6" key.
Effect setting	Set especially good effect. In previewing window the shortcut is "1" key.
Add frame	Off, frame 1, frame 2
Storage	Store photos in phone or memory card.
Restore default	Restore user's settings back to the original settings.

**Note:** Please conform to the relevant laws to use the camera and record function. Inappropriate use may infringe the owner's right.

## Image viewer

You can view, browse, send, rename, delete, sort and save all the pictures that you take.

Album options instruction:

Option name	Brief instruction
View	View selected pictures/photos.
Browse style	Two styles are provided: list style and matrix style
Forward	Send the pictures/photos by Email/ Multimedia message. Take the pictures/photos as wallpaper, screen saver, power on/off display, or save to contacts.
Rename	Rename selected pictures/photos.
Delete	Delete selected pictures/photos.
Delete all files	Delete all the pictures/photos.
Sort	The images can be sorted by name, type, time, size, or none.
Save to	The images can be saved in mobile or memory card.

### **Video recorder**

Enter the video recorder. Press “OK” key to begin. The recording time depends on the size of the memory card and phone storage status. Enter the following options to set kinescope:

Option	Brief instruction
To player	Play, forward, rename, delete, delete all files, sort, storage
Camcorder setting	To take the best video, you can set white balance, light fillings, night mode and the banding of the camera.
Video setting	Set the quality of video: high, normal, low
Effect setting	8 different specially good effects to be chosen.
Storage	Save files to phone memory or memory card.
Restore default	Restore to original settings.

## **Video player**

You can play, forward, rename, delete, sort and save your videos or films.

- Play: Play the specific video or film. Press volume key to adjust volume; press left or right direction key to control the playing speed; press "OK" key to let the playing pause; press "\*" to switch between full-screen and semi-screen during playing.
- Forward: Send video or film to Screen Saver, power on display or power off display. You can also send the files out by multimedia message and Email.
- Rename: Rename the video or film.
- Delete: Delete the selected file.
- Delete all files: Delete all the videos or films.
- Sort: Sort the videos or films by name, type, time, size or none.
- Storage: You can save the videos or films in the phone or memory card.

## **Photo artist**

- Auto resize

This function allows you to edit the images including changing the size automatically and cutting screen size.

Auto size adjustment options instruction

Option	Brief state
Save as	Save images in other files.
Add	Select a frame for the image.
Frame	
Add icon	Select an icon of the list for image.
Add text	Allows you to add words to the image and set the style of the words. You can use the direction keys to move the words.
Flip	Use direction keys to reverse the images.
Expand	Adjust the size of the canvas.
Canvas	
Help	How to use the above menu instruction.

- MainLCD Clip

You can move up and down the red frame by pressing up and down direction key (or number key 2, 8); move left and right the red frame by pressing left and right direction key (or number key 4, 6); press "\*" or "#" to adjust the cutting size.

### **MP3 player**

The phone supports the following music format: MP3, AMR, WAV, MID, IMY.

Choose "List" to access music list.

- Play: Play the current song.
- Detail: View the information of the song.
- Add to rings: Send the current song to the Profiles.
- Add: Add more songs to list. If you set the "List auto gen" on, the list will add the songs from appointed file. So if you want to add the songs from other files, please set "Auto list gen" off.
- Remove: Delete the song from list.
- Remove all: Delete all the songs in list.
- Setting: You can set the parameters of MP3 player.

In the player interface, you can use direction keys and left/right soft key to operate it. Use volume key to adjust the volume.

### **Sound recorder**

Two record formats are supported by this phone: WAV and AMR.

You can choose the formats from the setting of Options. The record can be stored in the phone or memory card. When you select the record already stored in the phone, you can:

- Record: Record new sound snippet.
- Play: Play the selected record.
- Append: Add new snippet to current record.(Only available for AMR)
- Rename: Rename the selected record.

- Delete: Delete the selected record.
- Delete all: Delete all the records.
- Setting: Allows you to select the position where to save the records, the phone or the memory card. You can also choose the format of the records, AMR or WAV.
- Forward: Allows you to send the records to profiles; send by multimedia message and Email.

### **Melody compose**

You can customize rings with different sounds of instruments and add the rings to user profile or music files.

Select the existing music and press the left function key:

- Play: Play the customized music you choose.
- Edit: Edit the selected customized music.
- Add: Create new customized music.
  
- Rename: Rename the selected customized music.
- Delete: Delete the selected customized music.
- Delete all files: Delete all the customized music.
- Forward: Send the customized ringing to profiles or send out by multimedia message, Email or EMS (enhance message service).

In the Ringing Edit Window, press left soft key:

- Play: Play the customized ringing.
- Play speed: Set the playing speed of customized ringing, including fast, normal and slow.
- Select instrument: You can choose ten kinds of musical instruments to play the ringing.
- Save: Save the customized ringing in the default folder.

## Organizer

### Alarm

With this function, you can set 5 alarms, every alarm clock including setting alert type, time, date, and the time of snooze.

The Alarm Clock is functional despite the phone is switched off. If you press "Stop", it will ask you whether to switch on the mobile. Press "No" to stop, press "Yes" to switch on the mobile and log in network.

### Calculator

With this function, you can do the operations of plus, minus, multiply and divide:

- Press the number keys to input the figures.
- Press direction keys to input "+, -, ×, /, M+, M-, MC, MR".
- Press "OK" key or left soft key to calculate the result.
- Press the right soft key to clear the figure or exit from the Calculator.

### To do list

With the Memo function you can use your phone to record the important events at any time. The operations on the Memo include browsing, creating, editing, deleting, deleting all and sending. If you have set an alarm clock prompt for the memory, the phone will ring and the prompt will be displayed at the time you set.

### Calendar

You can view the calendar for more details. This function can memorize your schedule and remind you by alarm.

View tasks: To see the schedule of the date. You can set time, date, text, alarm to the date. The schedule can be sent to files or sent by short messages and multimedia messages.

## Stopwatch

It provides timing function, including typical stopwatch and nWay stopwatch.

- Typical stopwatch:

Split timing: Choose "Split timing" then press "Start" to start timing. When you want to time separately, press "Split". It will be shown on the screen upon the runtime. Press "Stop" to end the stopwatch. Press "Resume" to go on timing and "Reset" to reset the stopwatch. Press "Back", the screen shows "Save" window then press "Yes" to save.

Lap timing: Choose "Lap timing" then press "Start" to start timing. Press "Stop" to end the stopwatch. For more details, please refer to the "Split timing".

View record: The phone will show the name list of time group or the list of last time. You can view the record you have saved. You can also delete the record stored in the phone.

- nWay stopwatch: On the same interface, press "up, down, left, right" direction key to select any stopwatch to make timing.

## Games

There are three games in the phone. Choose "Game Help" to see the specific operations in the games.

- Start Game: Start the game.
- Game level: you can set the level of the game, including easy, normal and hard
- Best grades: You can see the highest score of the game.
- Game help: View the specific operations of the game.
- Setting

You can set the background music on/off, sound effect on/off, game vibration on/off.

## Extra

- Unit converter

This function can be used for converting the weight, length, volume, temperature, velocity and surface.

- Currency converter

With this function you can exchange the rate according to your setting. This rate is saved in the phone till you change it. To use the currency converter, you should input the local currency, and then the screen will display the foreign currency automatically.

- World time

With this function, you can view the time of the main cities throughout the world.

- E-book reader

You can read the text documents in TXT and PDB formats. The documents are transferred from computer to mobile phone or E-book folder in T-Flash card by the USB cable. Find the folder to activate E-book or directly open E-book to read.

Choose the folder "E-book" in T-Flash card, you can:

- Open E-book: Open the selected E-book.
- Forward: Forward the E-book by multimedia message or Email.
- Detail: View more information of E-book.
- Rename: Rename the selected E-book.
- Copy: Copy the selected E-book to appointed folder.
- Move: Move the selected E-book to appointed folder
- Delete: Delete the selected E-book.
- Delete all files: Delete all the E-books.
- Sort: Sort the E-book by name, size, time, type or none.

In the E-book previewing window, chose "Option", you can:

- Find: Find the appointed word. It's different between inputting capital and lowercase when you select "Case sensitive" or "Case insensitive".
- Jump to: Jump to the appointed page.
- Go to bookmark: Go to the page you have set.
- Add bookmark: Add the current page as a new bookmark.
- Remove bookmark: Remove the selected bookmark.
- Book info: View the information of E-book.
- Settings: Set the parameter of E-book, including font style, font size, scroll mode, auto scroll on/off, scroll speed, full screen on/off and encoding mode. The default is ASCII [western windows]. If the language of the text is English, please choose this option.
- Apply global settings: If you enter the option "settings" of E-book to set the parameters, you need to perform this function to make the settings effectively.
- Help: Explain how to use the shortcut key of E-book.
- Close: Exit-book.

### **Phone info**

You can view the device information of your phone: IMEI (International Mobile Equipment Identity) and ESN (Electronic Serial Number).

### **Browser**

#### **WAP**

This function allows you to use various kinds of services on the Internet including weather forecast, news, finance, economic information and so on, which are provided by ISP (Information Service Provider). According to the services of the SIM card, there will be some new menu options. This function can not be used

without the support of SIM card ISP. More information please contact with the ISP.

- Homepage: on the each mode, one homepage address can be saved. When you use WAP, firstly entering the homepage in this mode.
- Refresh: Refresh the current page.
- Bookmarks: In the option menu, you can manage the bookmark in the following ways:
  - Go to: Go to the website.
  - Edit: Edit the selected bookmark and website.
  - Send: Send the bookmark by multimedia message or text message.
  - Delete: Delete the selected bookmark.
  - Delete all: Delete all the bookmarks.
  - Add bookmark: Add a bookmark.
- Recent page: You can view the records of the latest visited web pages.
- Enter address: Input the website address, and then open the web page.
- Set as homepage: Set a website as homepage.
- Save picture: Save a picture of website.
- Service inbox: You can receive service information sent by your ISP.
- Settings:
  - Edit profile: Edit home page, network account, user name and password.
  - Browser options: You can set waiting time and choose to show the images or not.
  - Service message setting: On or off.
  - Clear cache: Too much data in the cache will affect the network speed, you should clear cache.
  - Clear cookies: clear the cookies data.
  - Trusted certificates: if you want to log in website, you need to acquire the trusted certificates

- Exit: exit the website.

**Note:** only enter the WAP successfully can you see some menu above.

## **Data account**

- GSM data

You can edit the selected GSM accessing account which is set in the WAP option.

- GPRS

You can edit the selected GPRS accessing account which is set in the WAP option.

## **6 Appendix**

### **Appendix I Common fault diagnosis**

Trouble	Possible reasons
The phone cannot be switched on	1. Any power in battery? 2. Battery is installed properly?
Battery cannot be charged	1. Check if the charger is connected with the phone correctly. 2. Is the battery usable? The performance of the battery will degrade after used for several years.
Fail to register to the network	1. The signal is too weak, or there may be some radio interference round. View the signal indicator on the screen to see whether it is empty. 2. Is the SIM/UIM card installed properly,

	poorly contacted or damaged? If the SIM/UIM card is damaged, please ask your network operator for replacement.
Can not make a call	<ol style="list-style-type: none"> <li>1. Is the SIM/UIM card registered in the network? Check whether the screen displays signal indicator.</li> <li>2. Is the bar outgoing function enabled?</li> <li>3. If you hide the caller ID?</li> <li>4. Calling prohibited due to call charges not paid?</li> </ol>
Cannot answer a call	<ol style="list-style-type: none"> <li>1. Is the SIM/UIM card registered in the network?</li> <li>2. Incoming call prohibited due to call charges not paid?</li> <li>3. Is the "call divert" function enabled?</li> <li>4. Is the incoming calls barring function enabled?</li> </ol>
Unable to use some functions	Consult network operator about whether it supports these functions and whether subscription is required.
PIN locked	Input the PUK code provided with the SIM/UIM card to unlock or contact with your network operator.

## Appendix II Warnings and precautions

### Electronic Device

Switch your phone off near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic -control devices. If you are using an electronic medical device, consult the device manufacturer and confirm whether the radio wave affects the operation of this electronic device.

### Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR),

intensive care unit (ICU), or coronary care unit (CCU).

- Switch your phone off near medical devices.
- Observe any instructions wherever the use of mobile phones is prohibited.

## **Traffic Safety**

- Do not use your phone while driving. Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Observe the rules and regulations of airline companies. Switch your phone off before boarding airplane.

## **Operating Environment**

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as the induction cooker and microwave oven. Otherwise, circuit failure, fire, or explosion may result.
- Do not leave your phone, battery, or charger in a high-temperature place or use them in a place with flammable gas. Otherwise, malfunction of the products, fire, or explosion may result. The phone, battery, and charger are not water-resistant. Keep them dry. Otherwise, short-circuit and malfunction of the product or electric shock may result.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire or explosion may be resulted.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not place the phone in the area over the air bag or in the air bag deployment area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Do not use your phone that is being charged when there is

lightning strike. Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.

- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate at a power level higher than needed.

### **Emergency Call**

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

### **Battery**

If the battery fluid gets into eyes, do not rub them. Wash with clean water and seek medical assistance immediately.

If the battery fluid contacts skin or cloth, wash with clean water immediately to avoid irritation to the skin.

Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.

When install the battery on your phone, do not push the battery by force lest battery fluid leak out or the battery crack.

Do not connect two poles of the battery with metallic materials such as cables.

Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, over- heat, fire, or explosion may result.

If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion.

Dispose of the battery according to local laws or regulations.

### **Charger**

Use AC power as specified for the charger. Any violation of this rule may result in fire or malfunction of the charger.

Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.

Remove the dust on the power plug regularly. Do not use worn-out power cords. Otherwise, electric shock, short-circuiting of the charger or fire may result.

Do not put the charger near the container filled with liquid such as water. If the liquid comes into the charger, electrical leakage or other faults may result.

If the liquid such as water comes into the charger accidentally, remove the plug of the charger from the socket immediately.

Disconnect the charger from the socket before cleaning or maintaining it. Otherwise, electric shock or short-circuiting of the battery or charger may result.

Ensure the plug of the charger is properly inserted into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion.

Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord.

### **Using the USB Cable**

To use the USB cable, you need operate abiding strictly by the following rules. Otherwise, phone or PC may be damaged:

- To connect your phone and PC with the USB cable, connect to the phone at first, and then connect to the PC;
- In the process of communication between your phone and PC, it is strictly forbidden to plug or pull out the USB cable.
- To disconnect your phone and PC from the USB cable, disconnect from the PC at first, and then disconnect from the phone.

### **Appendix III Abbreviations and explanations**

CDMA	Code Division Multiple Access
GSM	Global System for Mobile Communication
SMS	Short Message Service

EMS	Enhance Message Service
MMS	Multimedia Message service
GPRS	General Packet Radio Service
ESN	Electronic Serial Number
UIM	User Identity Module
SIM	Subscriber Identity Module
PIN	Personal Identity Number. Usually refers to PIN1. Supplied together with SIM/UIM card. Used to unlock the SIM/UIM card.
PUK	Personal Unlock Code. Supplied together with SIM/UIM card. It is used to unlock the SIM/UIM card if you input wrong PIN code three times and SIM/UIM card is locked. You can also use it to modify PIN code.
MCC	Mobile Country Code
DTMF	dual-tone multi-frequency
Call waiting	A service provided by the network, which allows you to answer another incoming call without interrupting the active call, but it is different from Multiparty. You can only talk to one party while another party is held at the same time.
Call diverting	A service provided by the network, which allows you to divert an incoming call to a specified number in different circumstances. Normally divided into: divert all, divert if busy, divert if no answer and diver if not connected.
Divert all	All incoming calls will be diverted by the network unconditionally.
Divert if busy	Divert the incoming call while you are already on line.
Divert if no answer	The network will divert the incoming call if the phone rings or vibrates for a specific time and you haven't answered it.
Divert if not connected	The network will divert the incoming call when the network fails to find your phone (switched off or out of the service range).
Roaming	Refer to the phone not used in the range of its local registered network. It includes international and domestic roaming. In this manual it refers to international roaming only.