
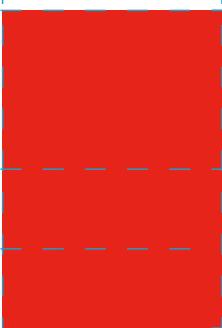


INSTRUCTION MANUAL

MICROWAVE OVEN

EM234A2EW

Please review this instruction manual before operating.

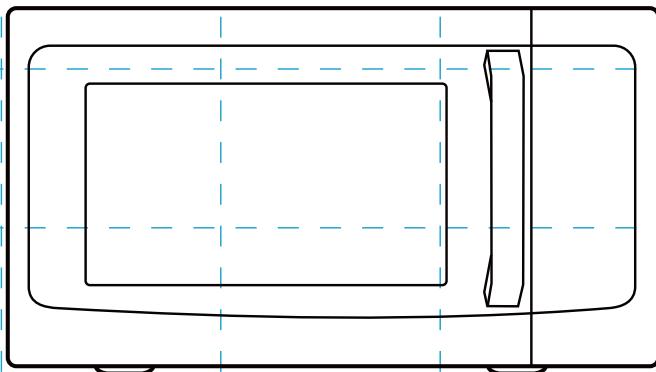

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
Grounding instructions.....	EN-07
Radio interference	EN-09
Utensils.....	EN-10
Materials you can use in microwave oven	EN-11
Materials can not be used in microwave oven	EN-13

PRODUCT SETTING

Names of microwave oven parts and accessories	EN-14
Opening the door	EN-15
Turntable installation	EN-16
Countertop installation	EN-17
Installation	EN-17

INSTRUCTION FOR USE

Before using for the first time	EN-18
Control panel and features	EN-19
Button function overview	EN-20
1. Setting the clock.....	EN-21
2. Setting the kitchen timer.....	EN-21
3. Microwave cooking	EN-22
4. Speedy cooking.....	EN-23
5. Defrost by weight.....	EN-23

6. Defrost by time	EN-24
7. Auto menu	EN-24
8. Sensor menu	EN-25
9. Multi-stage cooking	EN-26
10. Mute mode	EN-27
11. Eco function	EN-27
12. Lock function for children.....	EN-27
13. Inquiring function	EN-27

CLEANING AND MAINTENANCE

Cleaning.....	EN-28
Troubleshooting	EN-30
One year limited warranty	EN-32



BEFORE OPERATING THIS PRODUCT, READ,
UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
BE SURE TO SAVE THIS BOOKLIST FOR FUTURE
REFERENCE.


PRODUCT SAFETY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.

It is important not to defeat or tamper with the safety interlocks.

(b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

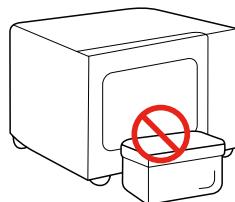

(c). Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the:

- (1). DOOR (bent)
- (2). HINGES AND LATCHES (broken or loosened)
- (3). DOOR SEALS AND SEALING SURFACES

(d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

SPECIFICATIONS

MODEL	EM234A2EW-PVHA0U
RATED VOLTAGE/FREQUENCY	120VAC 60Hz
RATED INPUT POWER(MICROWAVE)	1500 W
RATED OUTPUT POWER(MICROWAVE)	1200 W



All pictures in this manual are for illustrative purposes only; these may be slightly different from the purchased equipment, please refer to the actual product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

When using electrical appliances basic safety precautions should be followed, including the following. To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

! Read all instructions before using the appliance.

! Read and follow the specific:
"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 01.

! This appliance must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 07.


! Install or locate this appliance only in accordance with the provided installation instructions.

! HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO

USE THE MICROWAVE.
Use caution when removing hot items.

! When cleaning surfaces of door and oven that comes together on closing the door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.

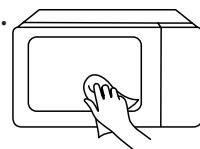

IMPORTANT SAFETY INSTRUCTIONS

! Keep cord away from heated surface.

! Liquids, such as water, coffee, or tea are able to overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.


THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A SPOON OR OTHER UTENSIL IS INSERTED INTO THE LIQUID.

To reduce the risk of injury to persons:

1. Do not overheat the liquid.
2. Stir the liquid both before and halfway through heating it.
3. Do not use straight-sided containers with narrow necks.
4. After heating, allow

the container to stand in the microwave oven for a short time before removing the container.

5. Use extreme care when inserting a spoon or other utensil into the container.

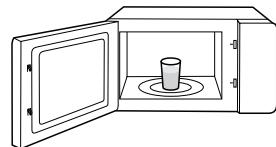

! This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.


! To reduce the risk of fire in the oven cavity:

1. Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.


IMPORTANT SAFETY INSTRUCTIONS

2. Remove wire twist-ties from paper or plastic bag before placing bag in oven.
3. If material inside of the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
4. Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.

 Some products such as whole eggs and sealed containers, for example, closed glass jars are able to explode and should not be heated in this oven.

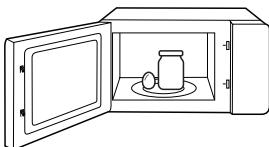

 Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.

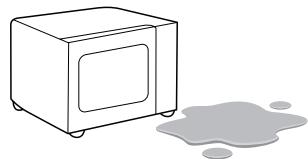

 Do not immerse cord or plug in water or any other liquid.



 Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.

IMPORTANT SAFETY INSTRUCTIONS

-  Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
-  Do not cover or block any openings on the appliance.

-  Do not let cord hang over edge of table or counter.

SAVE THESE INSTRUCTIONS

**HOUSEHOLD USE ONLY
(NOT FOR COMMERCIAL USE)**

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.



Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

GROUNDING INSTRUCTIONS



WARNING

Electric Shock Hazard:


Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
 - (1).Clean door and sealing surface of the oven.
 - (2).Reorient the receiving antenna of radio or television.
 - (3).Relocate the microwave oven with respect to the receiver.
 - (4).Move the microwave oven away from the receiver.
 - (5).Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - (1) Reorient or relocate the receiving antenna.
 - (2) Increase the separation between the equipment and receiver.
 - (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - (4) Consult the dealer or an experienced radio/TV technician for help.

**This device complies
with part 18 of the FCC
Rules.**

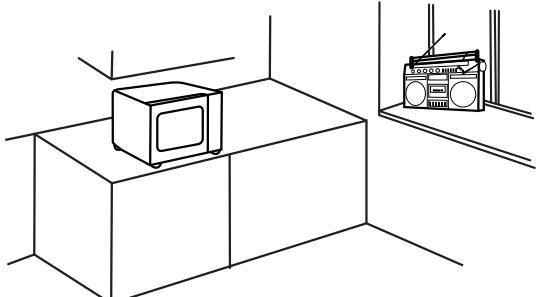

UTENSILS



CAUTION

Personal Injury Hazard:


Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "**Materials you can use in microwave oven.**" or "**Materials can not be used in microwave oven .**"

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

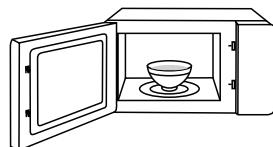

NOTE

KEEP THE CAVITY AND WAVEGUIDE AREA CLEAN

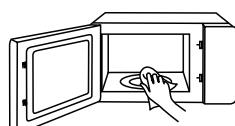

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. (For the model with turntable.)	
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.	
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.	
 Thermometers	Microwave-safe only (meat and candy thermometers).	
 Wax paper	Use as a cover to prevent splattering and retain moisture.	

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	


PRODUCT SETTING

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES

Remove the oven and all materials from the carton and oven cavity.



Instruction Manual

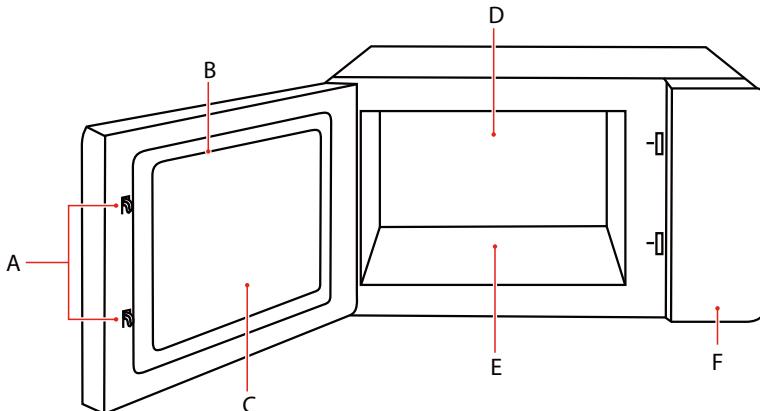

- A. Safety interlock system
- B. Door assembly
- C. Observation window


- D. Oven cavity
- E. Flat heating surface
- F. Control panel



In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

OPENING THE DOOR

Pull the release trigger upwards and then pull the handle to open the door.

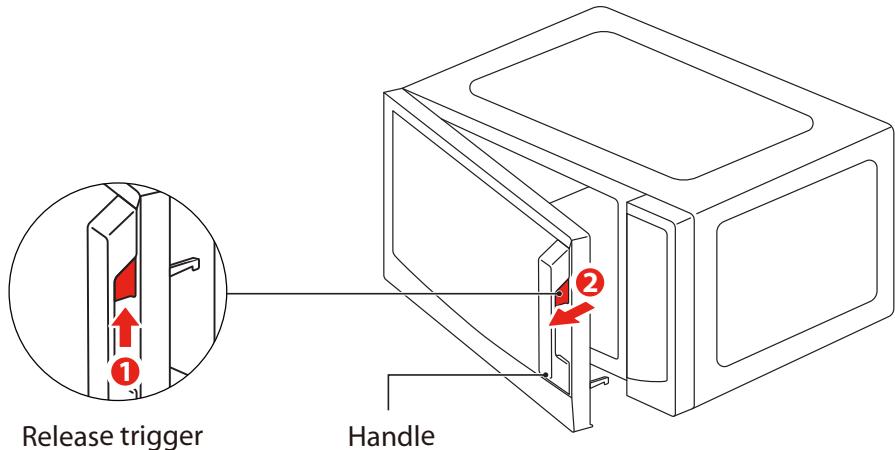

In case of any differences between the appliance and the pictures in this manual, the product shall prevail.

COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.


Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

- a. The minimum installation height is 36 inches.
- b. Leave a minimum clearance of 3.0 inches on each side, 3.0 inches on top and 1.0 inch in the rear.
- c. Do not remove the legs from the bottom of the oven.
- d. Blocking the intake and/or outlet openings can damage the oven.
- e. Operation of microwave oven may cause interference to your radio or TV reception.

Please place the oven as far away from radios and TV as possible.

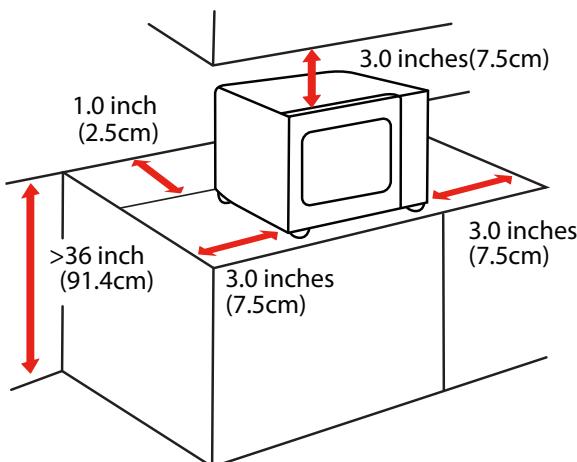


2. Plug the microwave oven into a standard household outlet. Be sure the voltage and the frequency are the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance.
- If installed near or over a heat source, the oven could be damaged and the warranty would be void.

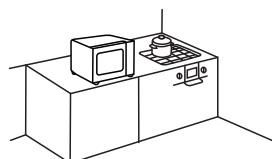

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME


It is normal that the oven may produce unpleasant odors when it is used for the first time.

This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY**" beforehand.

Before you can use your new appliance, you must clean the cooking compartment and accessories.

OPERATION

CONTROL PANEL AND FEATURES

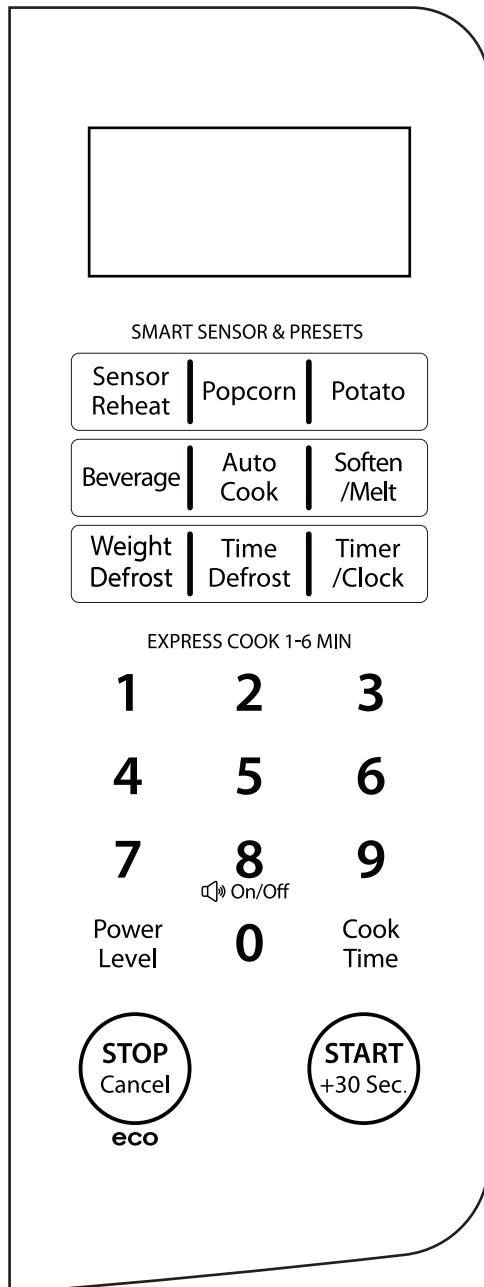

BUTTON FUNCTION OVERVIEW

Button	Function Description		
Sensor Reheat	Pizza	Potato	Auto menu and sensor menu
Popcorn	Beverage	Auto Cook	
Weight Defrost			Quickly defrost frozen foods based on the weight
Time Defrost			Quickly defrost frozen foods based on the time
Timer /Clock			Countdown timer / Set time of day
EXPRESS COOK 1-6 MIN			
1	2	3	Use the number keys to enter customized values/
4	5	6	Press the numbers “1-6” to start speedy cooking for 1 to 6 minutes/
7	8	9	Use the number “8” to enter the mute mode setting
□ On/Off			
0			
Power Level			Set power level for microwave operation
Cook Time			Enter the microwave cooking time setting
STOP Cancel eco			Pause active cooking status / Cancel current operation / Eco function / Lock function for children
START +30 Sec.			Start speedy cooking for 30 seconds / Confirm input / Start operation / Add 30 seconds

1. SETTING THE CLOCK

a Press **Timer /Clock** twice and then "00:00" will display.

Timer /Clock

b Press the number keys to enter the time.

Example: To set the clock to 12:10, please press "1, 2, 1, 0" in turn.

1 2 3

c Press **START** to confirm. The clock is set.
+30 Sec.

START
+30 Sec.



NOTE

- The clock is a 12-hour display.
- If the clock is not set, it will not work when powered.
- To reset the clock, please repeat step a to step c.

2. SETTING THE KITCHEN TIMER

a Press **Timer /Clock** once and then "00:00" will display.

Timer /Clock

b Press the number keys to set the desired time.

The maximum time value is "99:99".

1 2 3

c Press **START** to confirm. The timer starts counting down.
+30 Sec.

START
+30 Sec.



NOTE

- The kitchen timer is a timer.

3. MICROWAVE COOKING

The 11 power levels are available.

Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

Method 1:

a Press **Cook Time** once and then "00:00" will display.

Cook Time

b Press the number keys to set the cooking time.
The maximum time value is "99:99".

1 2 3

c Press **Power Level** once and then press the number keys to set the power level.
The 11 power levels are available.

Power Level

1 2 3

d Press **START** to start cooking.
+30 Sec.

START
+30 Sec.

Method 2:

a Press **Power Level** once and then press the number keys to set the power level.
The 11 power levels are available.

Power Level

1 2 3

b Press **Cook Time** once and then "00:00" will display.

Cook Time

c Press the number keys to set the cooking time.
The maximum time value is "99:99".

1 2 3

d Press **START** to start cooking.
+30 Sec.

START
+30 Sec.

4. SPEEDY COOKING

a In standby mode, press **START** +30 Sec. once to cook food at 100% power level for 30 seconds.

Each press on the same key can increase 30 seconds and the maximum time value is "99:99".

START
+30 Sec.

b In standby mode, pressing the number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press **START** +30 Sec. to increase the cooking time. The maximum time value is "99:99".

1 2 3

START
+30 Sec.

c In the microwave cooking and defrosting by time state, each more press on **START** +30 Sec. can increase the cooking time by 30 seconds (except the defrosting by weight, auto menu, and sensor menu).

START
+30 Sec.

5. DEFROST BY WEIGHT

a Press **Weight Defrost** repeatedly to choose the type of the food, and then "dEF1" to "dEF5" will display.

Weight
Defrost

b Press the number keys to set the weight of the food.

1 2 3

c Press **START** +30 Sec. to start defrosting.

START
+30 Sec.

LED DISPLAY	FOOD	WEIGHT
dEF1	Meat	4~70 Oz
dEF2	Chicken	4~70 Oz
dEF3	Fish	4~32 Oz
dEF4	Vegetable	4~32 Oz
dEF5	Bread	4~24 Oz



• The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

6. DEFROST BY TIME

a Press **Time Defrost** once and then "00:00" will display.

Time Defrost

b Press the number keys to set the desired defrosting time.
The maximum time value is "99:99".

1 2 3

c Press **START** to start defrosting.
+30 Sec.

START
+30 Sec.



NOTE

- The defrost power is PL3 and it cannot be changed.
- The buzzer will sound to remind you to turn the food over during defrosting.
If no operation, the oven will continue working.

7. AUTO MENU

For "potato", "popcorn", and "beverage":

a First press the corresponding menu key once, the default weight will display.

Potato Popcorn Beverage

b Press the corresponding menu key repeatedly or press the corresponding number key to set the weight of the food.

Potato Popcorn Beverage

or

1 2 3

Example: Press Popcorn twice or press "2" and then "3.2Oz" displays.

c Press **START** to start cooking.
+30 Sec.

START
+30 Sec.

For "Bacon":

a Press **Auto Cook** six times and then "AC-6" displays.

Auto Cook

b Press **START** to confirm.
+30 Sec.

START
+30 Sec.

c Press the corresponding number key to set the weight of the food.

1 2 3

d Press **START** to start cooking.
+30 Sec.

START
+30 Sec.

Auto Menu Chart

Menu	Number Key	Weight	Display	Power
Potato	1	1 Potato	1	PL10
	2	2 Potatoes	2	
	3	3 Potatoes	3	
	4	4 Potatoes	4	
Popcorn	1	2.75 Oz	2.75 Oz	PL10
	2	3.2 Oz	3.2 Oz	
Beverage	1	1 Cup (120ml)	1	PL10
	2	2 Cups (240ml)	2	
	3	3 Cups (360ml)	3	
Bacon	1	1 Slice	1	PL10
	2	2 Slices	2	
	3	3 Slices	3	
	4	4 Slices	4	
	5	5 Slices	5	
	6	6 Slices	6	

8. SENSOR MENU

Sensor cook allows you to cook many of your favorite foods without selecting a cooking time and power level. The microwave oven automatically determines the required cooking time for each food item. And the sensor menus will cook with microwave power.

For "Sensor Reheat" and "Pizza":

a Press the corresponding sensor menu key once.
Example: Press **Sensor Reheat** once and then "SC-1" displays.

Sensor Reheat

b Press **START** to start sensing.
+30 Sec.
When the sensing is complete, the calculated cooking time will start to count down.

START
+30 Sec.

For "Auto Cook":

a Press **Auto Cook** repeatedly to choose the type of the food, and then "AC-1" to "AC-5" will display.

Auto Cook

b Press **START** to start sensing.
+30 Sec.
When the sensing is complete, the calculated cooking time will start to count down.

START
+30 Sec.



- Do not open the oven door during the sensing process, or the program will be cancelled.

Sensor Menu Chart

Menu	Display	Weight	Power
Sensor Reheat	SC-1	8~16 Oz	PL10
Pizza	SC-2	6~12 Oz	PL10
Frozen Vegetable	AC-1	6~16 Oz	PL10/PL0
Fresh Vegetable	AC-2	4~16 Oz	PL10/PL0
Oatmeal	AC-3	1~4 Servings	PL10/PL5
Pasta	AC-4	1.75~5.5 Oz	PL10/PL8
Frozen Entrée	AC-5	8~32 Oz	PL10/PL8

9. MULTI-STAGE COOKING

Example: Defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes.

a Press **Time Defrost** once and then "00:00" will display.

Time
Defrost

b Press "5", "0", and "0" to set the desired defrosting time to 5 minutes.

5 0 0

c Press **Cook Time** once and then "00:00" will display.

Cook
Time

d Press "7", "0", and "0" to set the cooking time to 7 minutes.

7 0 0

e Press **Power Level** once and then press the number key **8** to set the power level to PL8.

Power
Level

8
On/Off

f Press **START +30 Sec.** to start cooking.

START
+30 Sec.



- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work automatically in the first stage.
- The speedy cooking, auto menu, and sensor menu cannot be set as one of the multi-stage.

10. MUTE MODE

a To activate the mute mode:

In standby mode, press and hold  8  for three seconds. A beep will sound and "OFF" will display. When you press the key, it does not make a sound.



b To deactivate the mute mode:

In mute mode, press and hold  8  for three seconds. A beep will sound and "On" will display..



11. ECO FUNCTION

a To enter ECO mode:

In standby mode with the oven door closed, if the clock is not set, the screen will turn off after pressing    or after 5 minutes of no operation; if the clock is set, the screen will only turn off when    is pressed.



b To cancel ECO mode:

In ECO mode, pressing any key or opening the door will cancel it.

12. LOCK FUNCTION FOR CHILDREN

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

a To activate the lock:

In standby mode, press and hold    for three seconds. A beep sounds and locked icon will display.



b To deactivate the lock:

In the locked state, press and hold    for three seconds. A beep sounds.



13. INQUIRING FUNCTION

a If the clock has been set, the current time will display for three seconds by pressing   in the cooking state.



b In the microwave cooking state, press   to inquire about the power level. It will display for three seconds.



CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. Here are the instructions on how to properly care for the microwave oven.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, see the information in the table. Wash new sponge or cloth thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

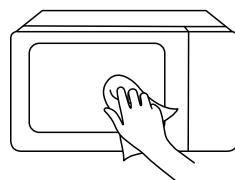

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

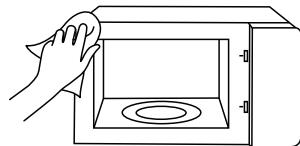

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:

Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

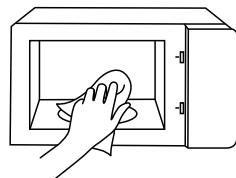

DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

Troubleshooting

Before calling for service

Malfunctions can occur in all electrical appliances. This does not necessarily mean there is a defect in the appliance. For this reason, please check the tables to see if you can correct the malfunction. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary repair costs. If you cannot solve it by yourself, please contact your nearest brand authorized service center.

WARNING-Risk of injury!

Improper repairs are dangerous

Repairs to the appliance should only be carried out by professional technician.

If the appliance is defective, call Customer Service.

Never try to repair a defective or suspected defective appliance by yourself.

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
The appliance is not working.	The mains plug of the power cord is not plugged in.	Unplug, then plug again tightly.
	There has been a power cut.	Check whether the lighting in your kitchen or other appliances are working.
	The door is not fully closed.	Check whether food remains or foreign material are trapped in the door, and make sure the door is properly closed.
No heating	The door is not closed well.	Make sure the door is properly closed.
Noise	Microwave ovens make noise while working, but if the noise becomes unusually loud or unusual, it may be due to the turntable was not placed in the correct position. (For the model with turntable.)	Place the turntable in the correct position.

Troubleshooting

COMMON PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
Improper defrosting	The microwave power setting is set to lower. The food is colder than usual.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned over or stirred.	Turn over or stir the food.
Unevenly cooked foods; Undercooked foods	The microwave power setting is set to lower.	-
	Materials to be avoided were used.	Use microwave-safe cookware only.
	The food is not defrosted completely.	Completely defrost food.
	The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
	The food is not turned or stirred.	Turn or stir the food from time to time during cooking.
Overcooked foods	The microwave power setting is set to higher. The cooking time, and power level is not suitable.	Use correct the cooking time, and power level.
The microwave is sparking, and arcing occurs.	Materials to be avoided were used.	Use microwave-safe cookware only.
	The oven is operated with no food in it.	It is forbidden to run the oven without any food inside. It is very dangerous.
	Spilled food remains in the cavity.	Clean the cavity with a wet towel.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

ONE YEAR LIMITED WARRANTY

This product carries a warranty stating that it will be free from defects in material and workmanship for a period of one year from the date of purchase. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep your original sales receipt.

IMPORTANT:

1. This warranty does not cover damages resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.)
2. This warranty is void if this product is ever used for other than private household purposes.
3. This warranty is void if this product is ever used outside of Canada.

If service is required during the warranty period, properly pack your unit. We recommend using the original carton and packing materials.

If additional assistance is needed, please contact customer assistance at:

Midea America (Canada) Corp.
Markham, ON L3R 8V2
1-855-238-5607

Midea America (Canada) Corp. expressly disclaims all responsibility for consequential damages or incidental losses caused by use of the appliance. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

The serial number can be found on the back cabinet. We suggest that you record the serial number of your unit in the space below for future reference

Model Number : _____

Serial Number : _____

Product registration is not mandatory. Failure to complete and return the card or form does not diminish the consumer's warranty rights.

SAVE THIS FOR YOUR RECORDS

Made in China

#DetailsMatter