

**MICROWAVE OVEN  
INSTRUCTION MANUAL  
EC9P032SV-SV**

**TOSHIBA**

A solid red rectangular block is positioned in the bottom right corner of the page, partially overlapping the white background.

# CONTENTS

## PRODUCT SAFETY

---

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO  
EXCESSIVE MICROWAVE ENERGY .....EN-3  
IMPORTANT SAFETY INSTRUCTIONS .....EN-4  
MATERIALS YOU CAN USE IN MICROWAVE OVEN .....EN-9  
MATERIALS TO BE AVOIDED IN MICROWAVE OVEN.....EN-10

## PRODUCT INTRODUCTION

---

SETTING UP YOUR OVEN.....EN-11

## INSTRUCTION FOR USE

---

OPERATION INSTRUCTIONS.....EN-14

## MAINTENANCE

---

TROUBLE SHOOTING.....EN-23



**NOTE**

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE

# PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

---

- (a). Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allows soil or cleaner residue to accumulate on sealing surfaces.
- (c). Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
  - (1). DOOR (bent)
  - (2). HINGES AND LATCHES (broken or loosened)
  - (3). DOOR SEALS AND SEALING SURFACES
- (d). The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

## SPECIFICATIONS

Model:	EC9P032SV-SV
Rated Voltage:	120V~ 60Hz
Rated Input Power (Microwave):	1400W
Rated Output Power (Microwave):	900W
Rated Output Power (Grill):	1000W
Rated Output Power (Convection):	1800W

# IMPORTANT SAFETY INSTRUCTIONS

---



When using electrical appliances basic safety precautions should be followed, including the following:

**WARNING** - To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Read all instructions before using the appliance.
- Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**" found on page 3.
- This appliance must be grounded. Connect only to properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 6.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers - for example, closed glass jars - are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
- Do not immerse cord or plug in water.
- Keep cord away from heated surface.
- Do not let cord hang over edge of table or counter.
- When cleaning surfaces of door and oven that comes together on closing the

# IMPORTANT SAFETY INSTRUCTIONS

---



door, use only mild, nonabrasive soaps, or detergent applied with a sponge or soft cloth.

- To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties from paper or plastic bag before placing bag in oven.
  - If material inside of the oven ignite, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:
  - Do not overheat the liquid.
  - Stir the liquid both before and halfway through heating it.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when inserting a spoon or other utensil into the container.
- Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- Do not use paper products when appliance is operated in the toaster mode.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover racks or any other part of the oven with metal foil. This will cause overheating of the oven.

# GROUNDING INSTRUCTIONS



This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING** - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

## **DANGER**

### **Electric Shock Hazard**



Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## **WARNING**

### **Electric Shock Hazard**



Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use.
3. If a long cord or extension cord is used:
  - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2). The extension cord must be a grounding-type 3-wire cord.
  - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

## RADIO INTERFERENCE

---

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - (1). Clean door and sealing surface of the oven
  - (2). Reorient the receiving antenna of radio or television.
  - (3). Relocate the microwave oven with respect to the receiver.
  - (4). Move the microwave oven away from the receiver.
  - (5). Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.

**This device complies with part 18 of the FCC Rules.**

# UTENSILS

---

**CAUTION****Personal Injury Hazard**

Tightly-closed utensils could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

**Utensil Test:**

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.



## MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	✓
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	✓
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	✓
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	✓
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	✓
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	✓
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	✓
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	✓
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.	✓
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.	✓
Thermometers	Microwave-safe only (meat and candy thermometers).	✓
Wax paper	Use as a cover to prevent splattering and retain moisture.	✓

## MATERIALS TO BE AVOIDED IN MICROWAVE OVEN

---

UTENSILS	REMARKS	
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	✗
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	✗
Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	✗
Metal twist ties	May cause arcing and could cause a fire in the oven.	✗
Paper bags	May cause a fire in the oven.	✗
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	✗
Wood	Wood will dry out when used in the microwave oven and may split or crack.	✗

 
Turntable Ring Assembly

## **SETTING UP YOUR OVEN**


### **NAMES OF OVEN PARTS AND ACCESSORIES**

Remove the oven and all materials from the carton and oven cavity.  
Your oven comes with the following accessories:

- This illustration is for reference only. Some accessories are available only with certain models, depending on the appliance model, individual details may differ.

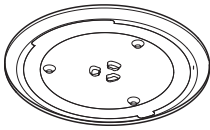


Glass Tray

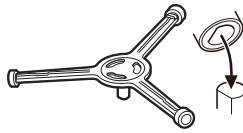 


Turntable Ring Assembly



 
Instruction Manual

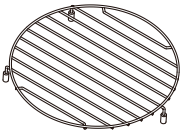

 
Lower Wire Rack( For the microwave and for baking and roasting in the oven.)

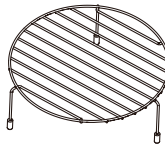

 Higher Wire Rack( For grilling, e.g. steaks, sausages and for toasting bread.As a support for shallow dishes.)

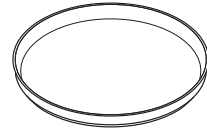

 Bake Tray (Cannot be used in conjunction with microwave function and can be placed on the bake rack)

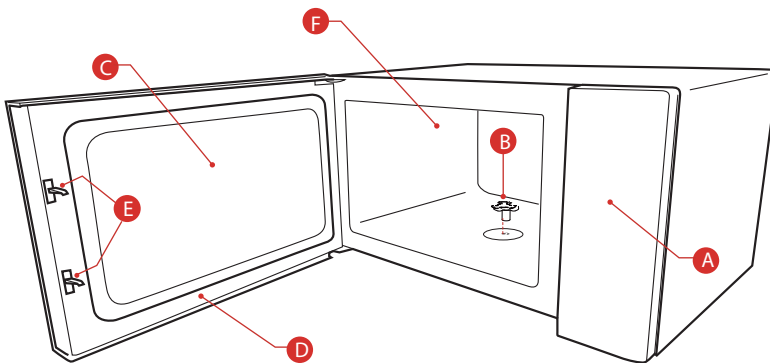


- A) Control panel
- B) Turntable shaft
- C) Observation window

- D) Door assembly
- E) Safety interlock system
- F) Oven cavity

## SETTING UP YOUR OVEN
 
### TURNTABLE INSTALLATION


Cleaning the cooking compartment and putting the turntable in place. For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

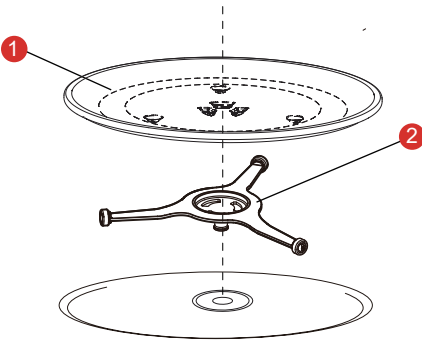

- 1) Glass Tray
- 2) Turntable Ring Assembly

How to put the turntable in place:

 1. Place the turntable ring assembly ③ into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assembly ③. Fit the raised, curved lines in the center of the glass tray bottom between the three spokes of the shaft. Make sure that the glass tray ① engages in the turntable shaft ② in the centre of the cooking compartment floor. The rollers on the ③ should fit inside the turntable bottom ridge.

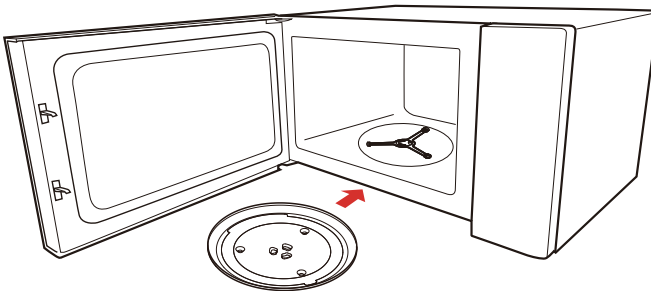

#### Note

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

## SETTING UP YOUR OVEN

 
### COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the light brown Mica cover that is attached to the oven cavity to protect the magnetron.

### INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

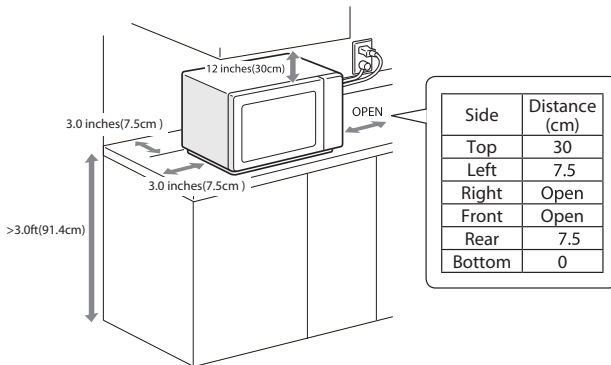

A minimum clearance of 3.0 inches (7.5cm) is required between the oven and any adjacent walls. One side must be open. The minimum installation height is 3.0ft (91.4cm).

- (1) Leave a minimum clearance of 12 inches (30cm) above the oven.
- (2) Do not remove the legs from the bottom of the oven.
- (3) Blocking the intake and/or outlet openings can damage the oven.
- (4) Place the oven as far away from radios and TV as possible.


Operation of microwave oven may cause interference to your radio or TV reception.

Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.

**WARNING:** Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

## OPERATION INSTRUCTIONS
 
### CONTROL PANEL

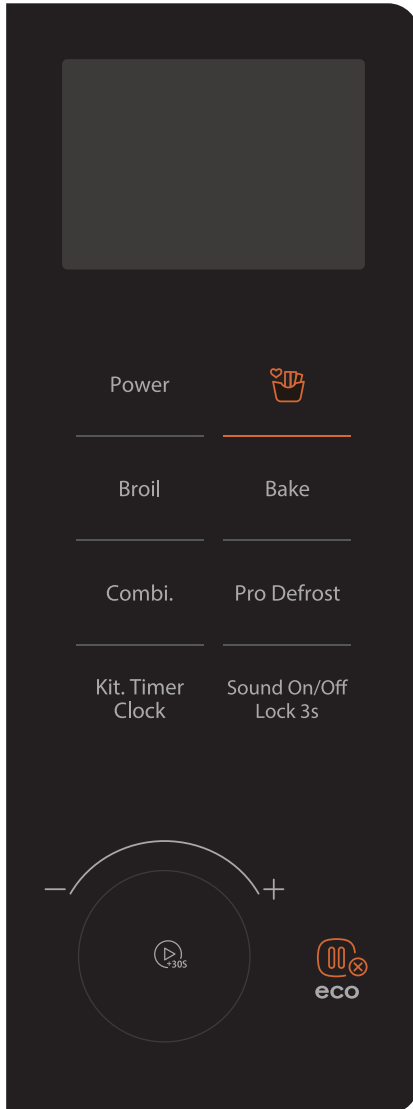

# OPERATION INSTRUCTIONS

This microwave oven uses modern electronic control to adjust cooking parameters to meet your needs better for cooking.

## 1. CLOCK SETTING

- 1 In waiting state, press "Kit.Timer/Clock" twice,  
The hour figures will flash.



- 2 Turn parameter knob to set the hour  
figures. The time should be within 1-12.



- 3 Press "Kit.Timer/Clock" to confirm, The  
minute figures will flash.



- 4 Turn parameter knob to set the minute  
figures. The time should be within 0-59.



- 3 Press "▶ 305" to confirm .



### NOTE

- If the entered number is not within the range of 1:00-12:59, the setting is invalid.
- To reset the clock, please repeat step 1 to step 3.

## OPERATION INSTRUCTIONS

### 2. MICROWAVE COOKING

Microwave Power Chart

Level	10	9	8	7	6	5	4	3	2	1
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1

 
- 1 Press the "Power" key once,  
"P100" displays.



- 2 Turn parameter knob or press "Power" key repeatedly to set the power level .The 10 power levels are available.



- 3 Press "" to confirm .

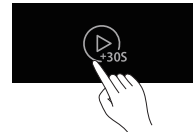

- 4 Turn parameter knob to set the cook time.



5




**NOTE** • Each one more press on "" can increase the time by 30 seconds.




## OPERATION INSTRUCTIONS

 
### 3. KITCHEN TIMER SETTING

- 1 In waiting state, press " Kit.Timer/Clock " once, "00:00" displays.



 - 2 Turn parameter knob to set the desired time. The maximum time value is "95:00"



- 3 Press "  " to confirm. The timer starts counting down.



**NOTE** • During kitchen timer, any program cannot be set.

## OPERATION INSTRUCTIONS

### 7. HOMEFRY MENU

- 1 In waiting state, Press the "Homefry" key, "H01" will flash.



- 2 Turn parameter knob to set the menu.



- 3 Press "▶30S" to start cooking.



### HOMEFRY MENU CHART

Menu	Display
Frozen French Fries	H01
Frozen onion Rings	H02
Frozen chicken nuggets	H03
Fresh chicken wings	H04
Frozen chicken legs	H05
Escalope	H06
Frozen Shrimps	H07
Fish Sticks	H08
Spring Rolls	H09
Mozzarella Sticks	H10

- NOTE**
- The buzzer will sound twice when 2/3 of the time has passed to remind you of turning over the food.

## OPERATION INSTRUCTIONS

---

### 6. AUTO MENU (A01-A07, A10)

- 1 Turn parameter knob right, "A01"~"A10" will display in order.



- 2 Press "▶305" to confirm the menu.



- 3 Turn parameter knob to set the weight.



- 4 Press "▶305" to start cooking.



### A08-A09

- 1 Repeat step 1 to step 3 above.

- 2 Press "▶305" to start preheating. When preheating is completed, the oven will beep **twice**. Open and then Close the oven door.



- 2 Press "▶305" to start cooking.



## OPERATION INSTRUCTIONS

### 2. COMBINATION COOKING

Instructions	Display	Microwave	Grill	Convection
1	C-1	●		●
2	C-2	●	●	

 
- 1 Press the "Combi" key once, "C-1" will display.



- 2 Turn parameter knob right or press the "Combi" key repeatedly, "C-2" will display.




- 3 Press "" to confirm.

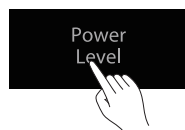

- 4 Turn parameter knob to set the time.



- 5 Press "" to start cooking.




**NOTE** • Each one more press on "" can increase the time by 30 seconds.


# OPERATION INSTRUCTIONS

## 9. LOCK FUNCTION FOR CHILDREN

You can use this function to prevent children from accidentally turning the oven on.


- 1 To activate the lock: In waiting state, **press** and hold "  " for three seconds. A long beep sounds and the locked icon will display.



- 2 To deactivate the lock: In locked state, **press** and hold "  " for three seconds. A long beep sounds.




## 10. SPEED COOKING

- 1 In waiting state, **press** "  " to cook food with 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "95:00".



- 1 In waiting state, Turn parameter knob to set the cook time.




- 2 Press "  " to start cooking with 100% power level directly.



## OPERATION INSTRUCTIONS

---

### 12. ECO FUNCTION

- 1** To enter ECO mode:  
In waiting state, **press** "  ". The screen will turn off.



- 2** To cancel ECO mode:  
In ECO mode, press any key to wake up the screen.



### 13. INQUIRING FUNCTION

- 1** If the clock has been set, the current time will display for three seconds by **pressing** " Clock " in the cooking state.




- 2** In the microwave cooking state, **press** " Power level " to inquire the power level. It will display for three seconds.



## OPERATION INSTRUCTIONS


### 2. GRILL COOKING

- 1 Press the "Broil" key once, then press "" to confirm, "G-1" will display.




- 2 Turn parameter knob to set the time.



- 3 Press "" to start cooking.



#### NOTES

- The buzzer will sound to remind you of turning over the food when half of the time has passed.
- Each one more press on "" can increase the time by 30 seconds.

# OPERATION INSTRUCTIONS

## 2. CONVECTION COOKING WITH PREHEAT FUNCTION

 
- 1 Press the " Bake " key once, the screen will display "350F".




- 2 Turn parameter knob or **press** the " Bake " key repeatedly, 10 temperatures will display.



- 3 Press "  " to confirm .

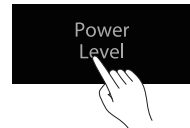


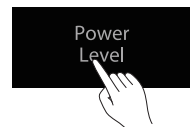 
- 4 Press "  " again to start preheating .  
When preheating is completed, the oven will beep **twice**. Open the door and place food in the oven. Close the oven door.



- 5 Turn parameter knob to set the cook time.



- 6 Press "  " to start cooking.





# OPERATION INSTRUCTIONS

## 2. CONVECTION COOKING WITHOUT PREHEAT FUNCTION

TEMP	100	150	250	275	300	325	350	375	400	425
Display	100F	150F	250F	275F	300F	325F	350F	375F	400F	425F

- 1 Press the " Bake " key once, the screen will display "350F".



- 2 Turn parameter knob or press the " Bake " key repeatedly, 10 temperatures will display.




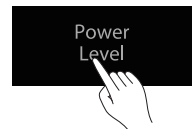 
- 3 Press "  " to confirm .



- 5 Turn parameter knob to set the cook time.



- 6 Press "  " to start cooking.



# OPERATION INSTRUCTIONS

## 2. CONVECTION COOKING WITHOUT PREHEAT FUNCTION

1 Press the " Bake " key once, the screen will display "350F".



2 Turn parameter knob or press the " Bake " key repeatedly, 10 temperatures will display.




3 Press "  " to confirm .



5 Turn parameter knob to set the cook time.



6 Press "  " to start cooking.



## **TROUBLE SHOOTING**

Check your problem by using the chart below and try the solutions for each problem.

<b>TROUBLE</b>	<b>Possible Cause</b>	<b>Possible Remedy</b>
Oven will not start	<ul style="list-style-type: none"><li>a. Electrical cord for oven is not plugged in.</li><li>b. Door is open.</li><li>c. Wrong operation is set.</li></ul>	<ul style="list-style-type: none"><li>a. Plug into the outlet.</li><li>b. Close the door and try again.</li><li>c. Check instructions</li></ul>
Arcing or sparking	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. The oven is operated when empty.</li><li>c. Spilled food remains in the cavity.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Do not operate with oven empty.</li><li>c. Clean cavity with wet towel.</li></ul>
Unevenly cooked foods	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Food is not defrosted completely.</li><li>c. Cooking time, power level is not suitable.</li><li>d. Food is not turned or stirred.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Completely defrost food.</li><li>c. Use correct cooking time, power level.</li><li>d. Turn or stir food.</li></ul>
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Food is not defrosted completely.</li><li>c. Oven ventilation ports are restricted.</li><li>d. Cooking time, power level is not suitable.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Completely defrost food.</li><li>c. Check to see that oven ventilation ports are not restricted.</li><li>d. Use correct cooking time, power level</li></ul>
Improper defrosting	<ul style="list-style-type: none"><li>a. Materials to be avoided in microwave oven were used.</li><li>b. Cooking time, power level is not suitable.</li><li>c. Food is not turned or stirred.</li></ul>	<ul style="list-style-type: none"><li>a. Use microwave-safe cookware only.</li><li>b. Use correct cooking time, power level.</li><li>c. Turn or stir food</li></ul>
Sensor cooked foods not properly cooked	<ul style="list-style-type: none"><li>a. Cover or lid on food not vented.</li><li>b. Door opened before sensor-detected cooking time appears in display.</li></ul>	<ul style="list-style-type: none"><li>a. Cover or lid over food must contain vent hole for escaping steam.</li><li>b. Do not open door to stir or turn food before sensor-detected cooking time appears in display.</li></ul>