



1. Accessory list

Power adapter.....	1 pc
User's manual.....	1 pc
USB cable.....	1 pc
Certificates.....	1 pc
Warranty card.....	1 pc


2. Mainframe introduction

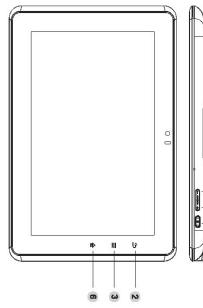

 3. Interface introduction



4. Peripheral Connection

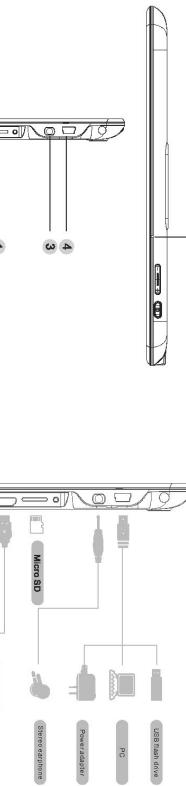

① Micro SD: insert Micro SD card;

② MIC: can do record and chat on line by third-party software;

③ Earphone: connect to earphone to output stereo;

④ USB OTG: A, connect to PC to transfer data;

B, connect to USB flash drive, HDD or others through USB Host Cable; (External power is needed);

C, connect to USB power adapter or PC to charge the device;

⑤ HDMI: HD output; can connect to TV, monitor or other similar devices with HDMI input interface;

⑥ Reset: To reset the machine; if system hangs or has delayed reaction, you can insert a Spike into the aperture to forcibly turn off.

6. Battery management and charging

A. In the first use of the device, it should charge the device for 5-6 hours to make sure the battery has been fully charged.


B. Connect the Power adapter to the device by USB cable; then let power adapter connect to power socket; the battery icon on desktop displays as ; and green bar is rolling, which means the device is charging. Don't unplug the charge in charging. After fully charged, the battery icon on desktop displays as , and the green bar stops rolling. Note: lithium battery doesn't need to discharge or charge it after battery runs out, you can charge it when the battery has not run out.

Note: lithium battery doesn't need to discharge or charge it after battery runs out, you can charge it when the battery has not run out.



5. Turn on/off

Turn on and unlock the screen: in Power off state, long press "POWER" button to enter Android system. Boot screen; after enter the desktop, touch and drag the icon to unlock, as shown in figure below:

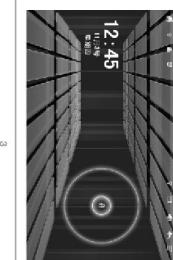

3

4

5

6

1

2

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132

133

134

135

136

137

138

139

140

141

142

143

144

145

146

147

148

149

150

151

152

153

154

155

156

157

158

159

160

161

162

163

164

165

166

167

168

169

170

171

172

173

174

175

176

177

178

179

180

181

182

183

184

185

186

187

188

189

190

191

192

193

194

195

196

197

198

199

200

201

202

203

204

205

206

207

208

209

210

211

212

213

214

215

216

217

218

219

220

221

222

223

224

225

226

227

228

229

230

231

232

233

234

235

236

237

238

239

240

241

242

243

244

245

246

247

248

249

250

251

252

253

254