


User manual

1 . Functional schematic diagram

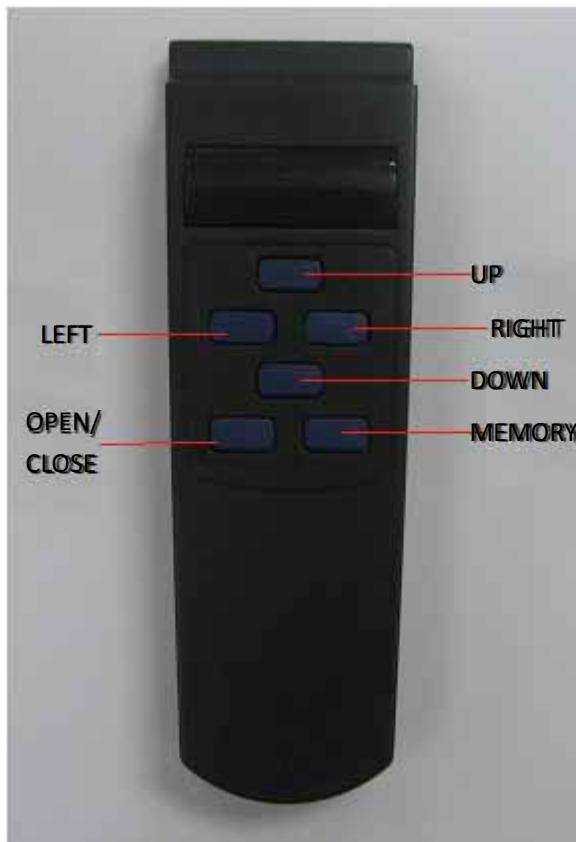

2. Instructions

- 1) Press the button “OPEN” on the remote, the TV Mount will extend and stop.
- 2) Press the button “LEFT,RIGHT,DOWN” to adjust the angle that you want.
- 3) Hold the button “MEMORY” long time and adjust the angle you want, then press the button “MEMORY” again, the red light turn off and this angle is saved.
- 4) Press the button “OPEN” again, the TV Mount will turn back to midpoint automatically, then contraction, return and turn off; if you want to turn on again, press the button “MEMORY” only, then the TV Mount will restore the angle that you saved before turn off.

FCC ID: VII-MCLSMM-T

IMPORTANT REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules:

Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

WARNING:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipments.