


CE4K01

DVD/VCD/CD/MP3/USB/SD PLAYER,
WITH FM/AM TUNER
GPS & BLUETOOTH & DVR


Safety Precautions

Thank you for purchasing this product. Please read through these operating instructions so you will know how to operate your model properly. After you've finished reading the instructions, keep this manual in a safe place for future reference.

Only connect the unit to a 12-volt power supply with negative grounding.

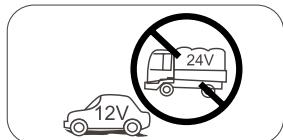


Never install this unit where the operation & condition for safety driving is restrained.

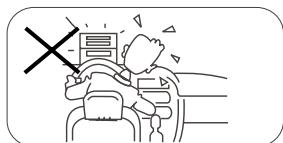


Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident except for using rear view video camera.




Never expose this unit, amplifier, and speakers to moisture or water to prevent electric sparks or fire.

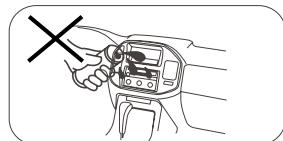

Please don't change the fuse on the power cord without professional guidance, using improper fuse may cause damage to this unit or even cause fire.

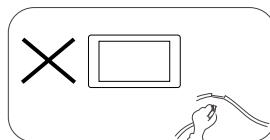

Please contact your nearest dealer if one of the following symptoms is experienced:

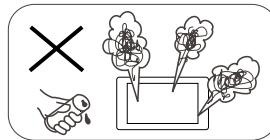


- (a). Water or other objects enters the unit.
- (b). There is smoke.
- (c). Peculiar smell.

To ensure safe driving, please adjust the volume to a safe and comfort level in case of emergency situations.

Safety Precautions

1. Never disassemble or adjust the unit without any professional guidance.
For details, please consult any professional car shop / dealer for inquiry.
2. If the front panel or TFT monitor is dirty, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in scratching or decoloration to the monitor.
3. If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
4. If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
5. Using the car heater in low temperature environment may result in moisture inside the unit, DO NOT use the unit in this situation. Eject the disc and wipe off the moisture on the disc. If the unit still doesn't work after a few hours, please contact the service center.
6. Do not impact the LCD monitor which could cause damage.
7. To prevent damage to the screen, avoid touching it with sharp objects.
8. To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used.
However, some illustrations are different from the actual images displayed on the screen.
9. Operate the unit correctly according to this manual to prevent unnecessary problem. The guarantee won't be valid if the problem is caused by inappropriate operation.

Expanding Systems

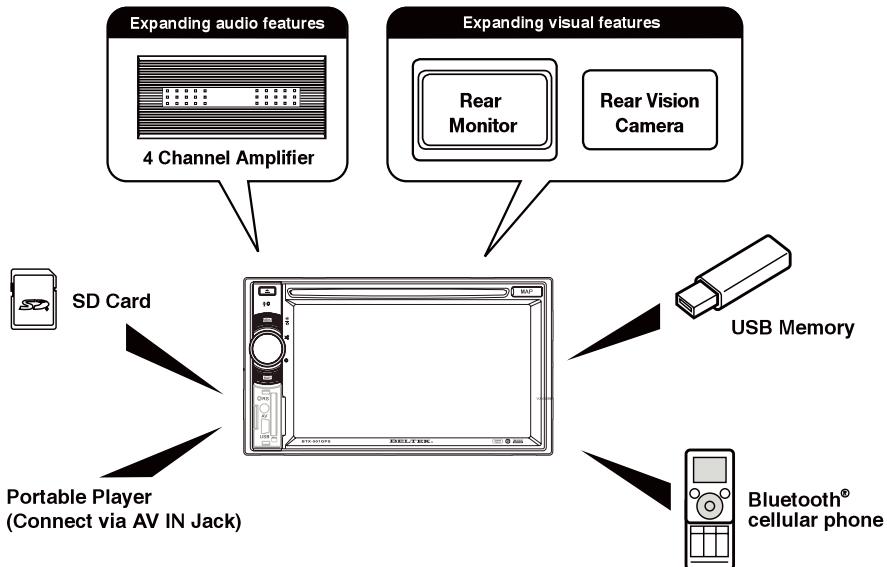

Note:

The items listed outside of the frame are the commercial products generally sold.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Contents

| | |
|------------------------------------|----|
| Safety Precautions | 1 |
| Before Using | 4 |
| Front Panel | 4 |
| Remote Control | 5 |
| Notes on Remote Control Usage | 6 |
| Uninstall Battery | 6 |
| Install Battery | 6 |
| Basic Operations | 7 |
| Parking Brake Inhibit | 7 |
| Mute | 7 |
| Power On / Off | 7 |
| Audible Beep Confirmation | 7 |
| Playing Source Selection | 7 |
| Volume Adjustment | 7 |
| EQ Menu | 7 |
| Select Preset Equalizer | 8 |
| Adjust EQ Parameters | 8 |
| Adjust Fader/Balance | 8 |
| Basic Operations | 9 |
| Set Date /Time | 9 |
| Set Date | 9 |
| Set Clock Mode | 9 |
| Set Time | 9 |
| Set Desk Timer | 9 |
| Set Power Off Timer | 9 |
| Radio Mode | 10 |
| Tuner TFT Display | 10 |
| Select Radio as Playing Source | 10 |
| Select One Radio Band | 10 |
| Tune | 10 |
| Preset Station | 11 |
| Local Seeking | 11 |
| EQ Selection | 11 |
| RDS Basics | 11 |
| Adjust RDS Settings | 11 |
| RDS (Radio Data System) | 12 |
| AF Function | 12 |
| EON (Enhanced Other Networks) | 12 |
| TA Function | 12 |
| CT (Clock Time) | 12 |
| PTY Function | 12 |
| Playback Mode | 13 |
| Load a Disc | 13 |
| Eject a Disc | 13 |
| Touch Screen Controls | 13 |
| Controlling Playback | 13 |
| Connect a USB Device | 13 |
| Remove a USB Device | 13 |
| Insert a SD/MMC Card | 13 |
| Remove a SD/MMC Card | 13 |
| Play/Pause | 14 |
| Previous/Next | 14 |
| Search for a Folder | 14 |
| Repeat | 14 |
| Repeat A-B | 15 |
| Shuffle (Random) Play | 15 |
| Select Audio Mode | 15 |
| Select Subtitle Language | 15 |
| Change View Angle | 15 |
| Video Setup | 16 |
| Playback Information | 16 |
| Direct Track Entry | 16 |
| Rotate Pictures | 16 |
| Zoom | 16 |
| Bluetooth Mode | 17 |
| Pair the Bluetooth-enabled Devices | 17 |
| Disconnect Bluetooth Device | 17 |
| Make a Call | 17 |
| Answer an Incoming Call | 18 |
| Adjust Bluetooth Settings | 18 |
| Recorder | 19 |
| DVR(Digital video recorder) | 19 |
| Quick instruction | 19 |
| Indicator status table | 19 |
| Cautions of installation | 19 |
| How to export the video file | 19 |
| Settings | 19 |
| DVR Operations | 20 |
| DVR main menu | 20 |
| Settings | 21 |
| Display System | 21 |
| Adjust General Settings | 21 |
| Calibration | 21 |
| Adjust Time Settings | 21 |
| Adjust Sound Settings | 22 |
| Adjust Video Settings | 22 |
| Adjust Disc Rating | 22 |
| Adjust Volume Settings | 23 |
| Adjust Reset Settings | 23 |
| Other Modes | 24 |
| Listen to Other Devices | 24 |
| Reset | 24 |
| Replace a Fuse | 24 |
| GPS | 24 |
| TV(optional) | 24 |
| Specifications | 25 |
| Troubleshooting | 27 |
| Installation | 28 |
| Wire Connections | 30 |

Before Using

Front Panel

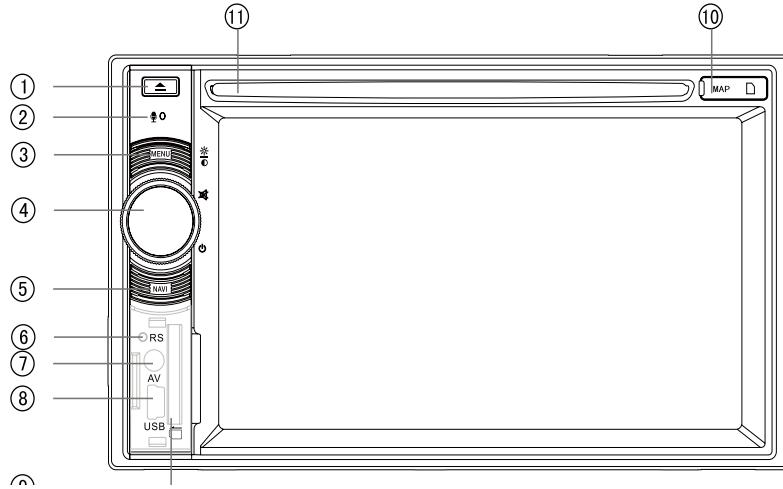

Notice:

The graphic in this manual is for reference only, and may be different from the actual unit. Reference to actual unit is suggested.

1. [EJECT] Button

Press to eject a disc.

2. Internal Microphone

Internal microphone for Bluetooth calls.

3. [MENU] Button

Press to switch between the main menu and current source.

Press and hold to enter brightness adjustment mode, then rotate the knob to adjust.

4. [VOL/UNMUTE] Knob

Rotate to adjust the volume.

Press momentarily to activate the MUTE function. Press again to resume normal listening.

Press to turn the unit ON. Press and hold to turn the unit OFF.

5. Navigation

Press to switch to navigation mode.

6. Reset Button

Press to reset system settings to factory default (except password and parental lock settings).

7. A/V Input

Accepts a 3.5mm jack through which signals from various audio/video devices can be applied to the unit.

8. USB Connector

Connect a USB device for playback of music/video files.

9. SD Interface Connector

Insert an SD card for playback of music/video files.


10. Map Slot

The Mini SD card is used for the Navigation Map only, not for music or other files. This may be used for firmware updates if required.

11. Disc slot

Before Using

Remote Control

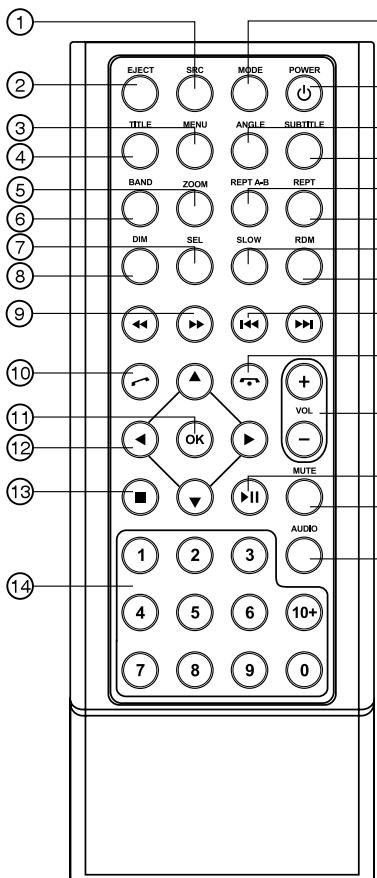


1. Select playing mode
2. Eject the disc
3. Enter the main menu of the disc
4. Enter the title menu of the disc
5. Zoom in /out on an image
6. Select radio band
7. EQ setting
8. Dimmer adjustment
9. Fast reverse/forward playback
10. Dial/Receive call
11. Enter
12. Menu cursor
13. Stop/Return
14. Digit area
15. Enter Source Menu
16. Power on/off
17. Playback disc in different angle for a scene
18. DVD language selection for subtitle
19. Setup to repeat playback from time frame A to time frame B
20. Repeat playback of current chapter
21. Slow playback
22. Play all chapter in random order
23. - Radio tune
 - Track skip / seek
24. Hang up
25. Increase/Decrease volume
26. Pause playback/Start playback
27. Toggle on/off audio output
28. Change the audio language for disc playback

Notes on Remote Control Usage

1. Aim the remote control at the remote sensor on the unit.
2. Replace the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
3. DO NOT store the remote control in direct sunlight or in high temperature environment, or it may not function properly.
4. The battery can work for 6 months under normal condition. If the remote control won't work, please change the battery.
5. Use "button shaped" lithium battery "CR2025" (3V) only.
6. DO NOT recharge, disassemble, heat or expose the battery in fire.
7. Insert the battery in proper direction according to the (+) and (-) poles.
8. Store the battery in a place where children cannot reach to avoid the risk of accident.


Uninstall Battery

Slide out the battery compartment tray at the bottom on the back of the remote control.

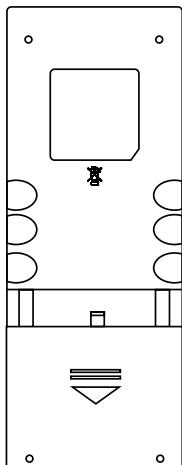

Install Battery

Use button-shaped lithium battery CR2025 (3V) only. Insert the battery to the battery tray with proper direction according to the (+) and (-) poles.

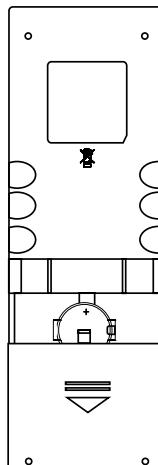

Parking Brake Inhibit

- When the "BRAKE" cable is connected to the brake switch, the display on the TFT monitor will display video only when the vehicle is applied.
- Parking brake function is overridden when the video source is set to REVERSE.
- When the parking brake inhibit is active, the front monitor displays "WARNING Do not watch video while driving!", preventing the driver from watching content while driving. Rear video screens are not affected.

Mute

Press [VOL/] knob or the [MUTE] button on remote control to mute the volume from the unit. Press again to restore the volume. [] is displayed on the LCD. Adjusting the volume or using any of the audio setup features cancels the mute function.

Power On / Off

Press the [VOL/] knob on the unit (or the [POWER] button on the remote control) to turn the unit on. The current mode status appears in the LCD.

Press and hold the [VOL/] knob to power off the unit.

Audible Beep Confirmation

An audible beep tone confirms each function selection. The Beep tone can be disabled through the Setup menu.

Playing Source Selection

Press the [MENU] button on the front panel or the [SRC] button on the remote to change between available playing sources. The playing mode is displayed on the screen.

1. Date and Time display. Double click to switch to Clock mode.
2. Function icons
3. 1/2 or 2/2: Touch this page button to view the first or second page of on-screen buttons. You also can drag left or right on the blank area to switch the pages.
4. Touch repeatedly to change wall papers.
5. Touch for quick access to Equalizer level settings.



Volume Adjustment

To increase or decrease the volume level, turn the [VOL/] knob on the front panel or press the [VOL+] / [VOL] button on the remote control. The volume ranges from "0" to "39". The LCD or TFT screen displays the volume level for 3 seconds.

EQ Menu

The Audio Control feature allows you to easily adjust your audio system to meet the acoustical characteristics of your vehicle, which vary depending on the type of vehicle and its measurements. Proper setting of the Fader and Balance boosts the effects of the cabin equalizer.

Basic Operations

Select Preset Equalizer

1. Enter the EQ setup mode

Touch the [] icon in the user interface and the EQ setup interface will display on the screen.

2. Select EQ mode

- [User] · [Rock]
- [Flat] · [Class]
- [Pop] · [Jazz]
- [Techno] · [Optimal]

Adjust EQ Parameters

To adjust EQ parameters, touch and drag the parameters adjustment bar.

Touch [] / [] or drag [] to adjust the parameters.

[User]: Set the desired audio effect.

- [BAS] bass range: -7 to +7
- [MID] middle range: -7 to +7
- [TRE] treble range: -7 to +7
- [LPH] low pass filter range: 60, 80, 100, 200
- [MPF] middle pass filter range: 0.5K, 1K, 1.5K, 2.5K
- [HPF] high pass filter range: 10K, 12.5K, 15K, 17.5K

[LOUD: On/Off]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

[RESET]: Cancel the equalizer function settings.



Adjust Fader/Balance

You can adjust front/back/left/right balance of the speaker and the subwoofer volume to get larrying listening effect according to the surroundings and your interest.

1. Enter the EQ setup mode

Touch the [] icon in the user interface and the EQ setup interface will display on the screen.

2. Adjust subwoofer volume

Touch [] / [] or drag [] to adjust subwoofer volume from 0 to 38.

3. Adjust fader / balance value

Touch [] / [] / [] / [] to adjust fader / balance value

- []: Front speaker, fader range: 7 to 7.
- []: Rear speaker, fader range: 7 to 7.
- []: Left speaker, balance range: 7 to 7.
- []: Right speaker, balance range: 7 to 7.

Notes:

1. The parameters of the EQ modes has been preset and you can not change them besides 'User'.
3. The EQ mode will change to 'User' automatically when you adjust the frequency value under the modes besides 'User'.
4. The value of Sub is independent of EQ mode and can be adjusted solely.

Basic Operations

Set Date /Time

1. Touch [].
2. Touch [Time].
The date/time setup menu is displayed.



Set Date

1. Touch [Date].
2. Touch the date information on the screen .
A submenu is displayed.
3. Touch [] or [] to set year, month and day.

Set Clock Mode

1. Touch [Clock mode].
2. Touch [12H] or [24H] to switch clock mode.

Set Time

1. Touch [Time].
2. Touch the time on the screen, a submenu is displayed.
3. Touch [] or [] to set hour and minute.

Set Desk Timer

1. Touch [Desk Timer].
2. Touch [Simulate Timer] or [Numeral Timer] .

Set Power Off Timer

1. Touch [Power Off Timer].
2. Touch [On] or [Off] to select whether timer displays after power off.

Tuner TFT Display

1. Touch to view the SOURCE MENU and select a new playback source
2. Distant signal broadcasting indicator
3. Current radio band indicator
4. Clock
5. Broadcaster information stored at the preset
6. Touch to view more on-screen buttons
7. Touch to seek backward
8. Scan preset stations
9. Touch to seek forward
10. Touch to change between AM/FM bands
11. Current radio information
12. RDS setting options
13. Current band preset radio stations
14. Touch to change between Local and Distance
15. Enter frequency directly
16. Touch for quick access to Equalizer level settings



Select Radio as Playing Source

Open the Source Menu and then touch [Radio].

Select One Radio Band

Press the [BAND] key on remote control or touch the [] icon on the user interface to select one radio band among FM1, FM2, FM3, AM1 and AM2.

Tune

Auto Tuning

Press the [] / [] key on the remote control briefly or hold [] / [] icon on the user interface more than 1 second to seek a higher / lower station.

To stop searching, repeat the operation above or press other keys having radio functions.

Note:

When a station is received, searching stops and the station is played.

Manual Tuning

Method 1:

During manual tuning, the frequency will be changed in steps.

Press the [] or [] key on remote control or touch the [] / [] icon on the user interface to tune in a higher / lower station.

Method 2:

1. Touch the numeric keypad icon []. Numeric keyboard is displayed, touch number to input frequency.
2. Touch [] to delete the input number step by step.
3. Touch [OK] to enter.

Radio Mode

Preset Station

The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; hence the unit can store 30 stations in total.



Intro/Scan

Press the [] icon to intro. Each stored station will play for 5 seconds automatically.

Hold down the [] icon to scan. Only stations with sufficient signal strength will be detected and stored in the memory. After scanning, P1 will play automatically.

Manual Store

1. Tune to a station.
2. Touch [] to display the 2nd menu.
3. Touch [].
4. Touch one of the channels P1 to P6 to save the select band.



Tune to a Preset Station

1. Touch [Radio].
2. Select a band (if needed).
3. Touch one of the preset channels (P1 to P6) on the screen.

Local Seeking

Touch the [] icon and choose the Radio Local or Distance.

When the [] icon turns bright, only stations with sufficient signal strength will be detected.

EQ Selection

Press the [] icon and enter the EQ setup.

RDS Basics

RDS transmits data to the radio which displays information such as station identification, song artist, and song title.

RDS service availability varies with areas. Please understand if RDS service is not available in your area, the following service is not available.



Adjust RDS Settings

1. In Radio menu, touch [].
The option menu is displayed.
2. Touch on the selected option to change the setting.
 - [TA]: To turn on or off "TA" function.
 - [AF]: To turn on or off "AF" function.
 - [PTY]: To show PTY list.



RDS (Radio Data System)

The unit provides basic functions of RDS.

RDS service availability varies with areas. Please understand if RDS service is not available in your area, the following service is not available.

AF Function

Alternative Frequencies Lists are used for the same program service and used in conjunction with the PI code (Program Identification code) to assist automatic tuning.

Using this information, a radio can automatically search out another station that is playing the same material. This is useful when the station you are listening to is fading out.

Note:

- During auto switching radio frequency, some interference could be heard.
- Turning off AF function can settle this problem.

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are enhanced.

TA: Traffic information can be received from the current station or stations in other network.

AF: The frequency list of preset RDS stations is updated by EON data. EON enables the radio to make fuller use of RDS information. It constantly updates the AF list of preset stations, including the one that currently tuned into. If you preset a station around the area at your home, you will later be able to receive the same station at an alternative frequency, or any other station serving the same program, EON also keeps track of locally available TP stations for quick reception.

TA Function

The TA (Traffic Announcement flag) function lets the unit receive traffic announcements automatically no matter what media source is playing back. The TA function can be activated by a TP (Traffic Program) station broadcasting traffic information.

When TA is activated and a traffic announcement is received, the current playing source will be overridden by the traffic announcement if the current radio band is FM, indicating that the unit is waiting for traffic announcements.

The unit returns to the original source after the traffic announcement has been received.

CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

PTY Function

PTY is the abbreviation for Program Type which is a code defining the type of program being broadcast (e.g. News or Rock).

Then PTY options will display on the screen. To view more PTY options, touch the scroll bar and arrows on the screen.

When one PTY option is touched (e.g. News), auto search for next available PTY by increasing tuning frequency until the PTY of the next station matches the current. If no matched PTY has been found, the unit will return to the original radio frequency.

Playback Mode

Load a Disc

You can play video, audio or images stored on the following discs:

- DVD Video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW

Note:

Ensure that the disc contains playable content.


Eject a Disc

Press the [Δ] key on the front panel or remote control to eject the disc. When the disc is ejected, the unit switches to the previous source.

Touch Screen Controls

The touch key areas for DVD playback are outlined below:

- A: Return to the main menu
- B: Play the video and display playback information
- C: Display onscreen control menu
- D: Time display

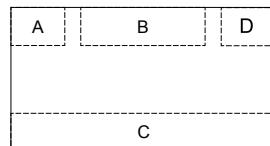

Controlling Playback

To access the on-screen controls, touch the screen except upper left corner, and touch again to cancel display. Touch [$\cdots\cdots$] to view all function icons.



Connect a USB Device

1. Open the USB door.
2. Insert the small end of the USB cable to the 3.5 jack and USB socket, then connect the other end of the cable to your USB device.



Remove a USB Device

1. Select other source on the main menu.
2. Remove the USB device.

Insert a SD/MMC Card

1. Open SD/MMC card cover.
2. Insert the SD/MMC card into the SD/MMC card slot.
Play starts automatically.

Remove a SD/MMC Card

1. Select other source on the main menu.
2. Press the card unit you hear a click sound.
3. Remove the SD or MMC card.

Playback Mode

Play/Pause

1. Once a disc, USB or SD/MMC card is inserted, play starts automatically.
For DVD movie, if a menu appears, press [▶] to start play.
2. To pause, touch [II].
To resume play, touch [▶].
3. Skip to previous / next track / chapter, press [◀◀] / [▶▶] key.



Previous/Next

Touch [◀◀] / [▶▶] key on the screen to skip to previous / next track / chapter.



Search for a Folder

For Video Files

1. Touch [] to display all available video folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.



For Audio Files

1. Touch [] to display all available audio folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

For Picture Files

1. Touch [] to display all available picture folders.
2. Touch a folder, then touch the desired file.
3. Touch the file again to start play.

Repeat

For DVD/VCD movie disc:

1. Touch bottom half of the screen to display menu on the screen, if necessary.
2. Touch [••••] to display the 2nd menu.
3. Touch [⇛] repeatedly to select:

DVD

[⇛] Repeat chapter: Play the current chapter repeatedly.

[⇛] Repeat title: Play all chapters in the title repeatedly.

[⇛] Repeat off: Play all in the all repeatedly.

Repeat off: Cancel repeat play.

VCD

[⇛] Repeat single: Play the current single repeatedly.

[⇛] Repeat all: Play all in the all repeatedly.

Repeat off: Cancel repeat play.

Playback Mode

For CD/MP3/WMA files:

1. Touch anywhere except the upper left corner to display menu on the screen, if necessary.
2. Touch [] repeatedly:
 - [] Repeat single: Play the current single repeatedly.
 - [] Repeat all: Play all in the all repeatedly.
 - [] Repeat folder: Play all in the current folder.
 - [] Repeat off: Cancel repeat play.

Repeat A-B

You can repeat a specific of video file (repeat A-B).

1. Touch the screen to display control menu, if necessary.
2. Touch [] to display the 2nd menu, if necessary.
3. Touch [A-B] repeatedly to mark:
 - Repeat A-: the start of the section to repeat.
 - Repeat A-B: the end of the section to repeat.
 - The selected section plays repeatedly.
4. To exit A-B repeat mode, touch A-B repeatedly, [Repeat A-B off] is displayed.

Shuffle (Random) Play

You can play audio tracks/files in random order.

1. Touch the screen to display control menu, if necessary.
2. Touch [] to display the 2nd menu, if necessary.
3. Touch [] on the screen remote control repeatedly to turn random play on or off.

Select Audio Mode

When you play VCDs, you can select an audio mode (R/L/Stereo).

1. During play, touch bottom half of the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
 - Touch [] repeatedly until the audio mode is selected.

Select Subtitle Language

For DVD or Divx discs that contain two or more subtitle languages.

1. During play, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] repeatedly to select a language.
 - The selected language is displayed.

Change View Angle

Some DVDs contain alternate scenes, such as scenes recorded from different camera angles.

For such DVDs, you can select from the available alternate scenes.

1. During play, touch of the screen to display menu on the screen, if necessary.
2. Press [Angle] repeatedly on the remote control.
 - The view angle is changed.

Playback Mode

Video Setup

Touch [] to access video setup mode, touch [] or [] to set the desired effect.

You may set the brightness, contrast, saturation, and HUE of the video output from 0 to 16.



[] Brightness: range for 0 to 16.

[] Contrast: range for 0 to 16.

[] Saturation: range for 0 to 16.

[] HUE: range for 0 to 16.

Playback Information

Touch the screen when playing back DVD and VCD discs and the playback information will be displayed on the top area of the TFT.

For DVD

1. Disc type.
2. DVD Title information. "1/8" indicates that this DVD has 8 titles and the title playing back now is the first title.
3. DVD Chapter information. "5/12" indicates that current title has 12 chapters and the chapter playing back now is the fifth chapter.



For VCD

1. Disc type.
2. VCD Track information. "1/8" indicates that this VCD has 8 tracks and the track playing back now is the first title.



Elapsed Time

1. Elapsed time of the current track.
2. Total time of the current track.



Direct Track Entry

To select a track directly, touch the [] icon on screen control to display the direct entry menu. Enter the desired track using the on-screen number pad. Press [OK] to the selected track.



Rotate Pictures

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] repeatedly to rotate the picture.

Zoom

You can zoom in pictures for a close view.

1. When you view pictures, touch the screen to display menu on the screen, if necessary.
2. Touch [] to display the 2nd menu.
3. Touch [] repeatedly to zoom in or out the picture.

Bluetooth Mode

You can make or receive phone calls with Bluetooth-enabled phones through the unit. You can also listen to music from a Bluetooth-enabled device.

Pair the Bluetooth-enabled Devices

To connect your Bluetooth device to the unit, you need to pair the device to the unit. Pairing needs only to be done once. You can pair up to five devices. You also can search for Bluetooth devices by mobile phone.

1. Turn on the Bluetooth function on the device.
2. Touch [+] to search for Bluetooth device with the device.
3. Select the Bluetooth device ID in the pairing list.
4. Touch [Link].
5. Enter default password "0000".

Tip:

- The operational range between this unit and a Bluetooth device is approximately 5 meters .
- Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
- Compatibility with all Bluetooth device is not guaranteed.
- Any obstacle between this unit and a Bluetooth device can reduce the operational range.
- Keep this unit away from any other electronic device that may cause interference.



Disconnect Bluetooth Device

To disconnect one device, touch [].

Tip

- The device will also be disconnected when the device is moved beyond the operational range.
 - If you want to reconnect the device to the unit, place it within the operational range.
 - If you do not want to reconnect the device to the unit automatically, touch[], then set [Auto Connect] to [Off].
- For details, see the "Adjust Bluetooth Settings" section.

Make a Call

1. Select Bluetooth function in the home menu.
2. Pair the phone with the unit.
3. Search for phone number from the following list:
 - []: Phone Book
 - []: Call Log
 - [Missed calls]
 - [Received calls]
 - [Dialed calls]

Or touch the number pad directly.



Bluetooth Mode

Answer an Incoming Call

By default, all incoming calls are received automatically.

1. If there is an incoming call, the screen will appear "Incoming".
2. You may touch the screen to select [Hang up] or [Answer].

Speak into the Bluetooth microphone.

- []: Touch to mute the microphone audio from the unit.
Touch the icon again to restore the microphone audio from the unit.
- []: Touch to access the direct dial screen.
- []: Touch to transfer a call back to the mobile phone.

Tip

- You can select to receive calls manually by set [Auto Answer] to [Off] status.



Adjust Bluetooth Settings

1. In Bluetooth menu, touch [].

The option menu is displayed.

2. Touch on the selected option to change the setting.
 - [BT]: To turn on or off "Bluetooth" function.
 - [Auto Connect]: To turn on or off "Auto connect" function.
 - [Auto Answer]: To turn on or off "Auto answer" function.
 - [Pair Password]: To set paring code.
 - [Phone Book]: To synchronize phone book, touch [Download] on the sub-menu popped out.

Phonebook sync may take several minutes to load on initial setup.

Music Mode

A2DP

A2DP is short for Advanced Audio Distribution Profile. The mobile phones supporting this function can transmit stereo audio, whereas the ones not supporting this function can transmit mono audio only.

AVRCP

AVRCP is short for Audio/Video Remote Control Profile. The mobile phones supporting this function can control the playback of a Bluetooth audio player.

In the mode of the music player working, if you want to make a phone call, you can press the number keys on the mobile phone. At the same time the music player will stop. The TFT screen will appear "Send Dail", after the call received, the voice will be transferred to the unit. When the call ends, the screen will appear music playing menu.

If there is an incoming phone call, the music player will stop, and the screen will appear "Incoming Call". When the call ends, the screen will appear music playing menu.




Recorder

DVR(Digital video recorder)

Connect car recorder (iReg 4000HD) to the unit. Referring to "Device Connections". After connection, user can control the car recorder through DVD screen.

To access the Recorder menu, touch [DVR] icon on the main menu.

Quick instruction

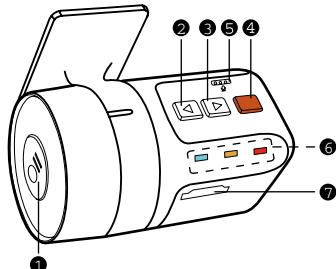

1. Video record/Power
2. Voice record/System
3. File browse/Time setting
4. Emergency backup
5. Mic
6. LED
7. Micro SD Card slot

Indicator status table


| Power | Mute | Record | Function |
|-------|--------|--------|---|
| Red | White | White | Power Indicator |
| Red | Yellow | White | Mute Off Indicator |
| Red | Yellow | Blue | Record(Mute) |
| Red | White | Blue | Record(Voice) |
| Red | Yellow | Blue | Mute indicator flash indicating the begining of the emergency backup |

Color indicates On, White indicates Off, Slash indicates Flash.

Cautions of installation

1. Install the car recorder on a dry, clean and safety position by the 3M double-sided tape.
2. Installation temperature range is 15~40°C .
3. If you need to re-install the recorder, replace the 3M double-sided tape by a new one.

How to export the video file

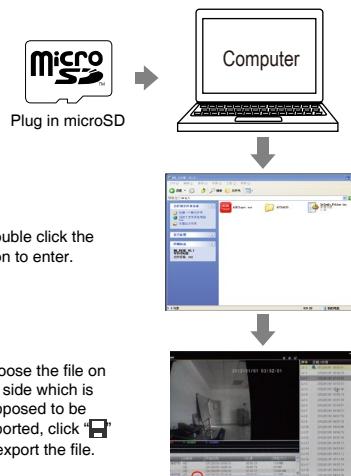

Double click the icon to enter.

Choose the file on left side which is supposed to be exported, click 'Export' to export the file.

CAUTION:

When reading the micro SD card on PC, in the case the Anti-virus softwares remind suspicious file or virus files of "ADRPlayer", please click NO on the pop-up window of choice of delete file. In case ADRPlayer was deleted carefully, enter folder of "APPLAYER", copy PLAYER.BIN to the root directory of TF card, rename to PLAYER.EXE for use.

Settings

• TIME SETTING

1. Press "⑧" to pause record.
2. Long press 5 seconds to enter time setting menu.
3. Press "■" to switch year, month, day, hour, minute, second option.
4. Press "◀" or "▶" to switch the current option.
5. After setup, long press 5 seconds "▶" to exit time setting menu.

• PAL/NTSC SWITCH

Press "⑧" to stop record, blue LED off light. Long press 5 second "◀" to switch PAL/NTSC.

DVR Operations



- ① System time display
- ② Recording time display
- ③ Open SOURCE MENU
- ④ Turn on or off the recording
- ⑤ Press to silence the audio volume
- ⑥ Next page
- ⑦ Enter the settings main menu

- ⑧ Return to the previous page
- ⑨ previous recording file
- ⑩ Play/pause recording file
- ⑪ Next recording file
- ⑫ Skip to the previous
- ⑬ Skip to the next
- ⑭ Enter

DVR main menu

1. Touch [].
2. Touch [] or [] to highlight a setting.
3. Touch [] to display an option, then touch [] or [] to a select.
4. Touch [] to confirm.
5. Touch [] of the screen to exit.

• Recording quality

Touch [Recording quality] to select the desired recording quality.

• Frame rate

Touch [Frame rate] to select the desired frame rate.

• Time setup

Touch [Time setup] to set the time.

• Auto-off time

Touch [Auto-off time] to set the auto-off time.

• G-SENSOR sensitivity

Touch [G-SENSOR sensitivity] to select the desired G-SENSOR sensitivity.

• Light frequency

Touch [Light frequency] to select the desired light frequency.

• Language

Touch [Language] to select the desired language.

• Format

Touch [Format] to select the desired format.

• Default setting

Touch [Default setting], touch [] or [] to select [YES] or [NO].
select [YES] , the DVR will default setting.

Settings

Display System

1. Touch the upper left corner to display main menu.
2. Touch [Settings].
The settings menu is displayed.


Adjust General Settings

1. Touch [General], if necessary.
2. Touch to select a setting.
3. Touch on the option to display/select an option.
4. Touch blank area of the screen to exit.

| General settings | Options | Description |
|------------------|------------------------------------|---|
| Language | Select on-screen display language. | |
| Radio Area | Europe | Select one that matches your location. |
| | America | |
| | America4 | |
| | East Europe | |
| | Australia | |
| | China | |
| Beep | On | Turn on the beep sound. Each time you press a button, the unit beeps. |
| | Off | Turn off the beep sound. |
| Key colour | Adjust | You can select the color of the key. |
| Calibration | Ok | Calibrate the touch screen. |
| Wallpaper | Ok | You can select a wall paper. |
| Gps Path Setup | | |

Calibration

- When the touch operation is not sensitive or valid, you should calibrate the touch screen through calibration setting function. Adjust the response positions of the touch panel as follows:
1. Press the [Calibration] option on the setup menu to enter.
 2. Touch [Start] to enter.
 3. Press and hold the center of [+] for 2 seconds, the [+] will move automatically.
 4. Aim at center of [+], follow the path as shown of the figure, after steps from 1 to 5, the system will exit calibrating automatically.

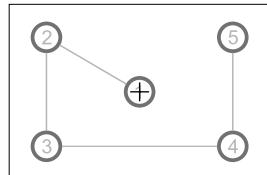

Adjust Time Settings

1. Touch [Time].
2. Touch an option repeatedly to select.
3. Touch blank area of the screen to exit.

| Time settings | Options | Description |
|----------------|---|--|
| Date | Year/ Month/Day | Touch [▲] or [▼] to set year, month and day. |
| Time Mode | 12H/24H | Touch [12H] or [24H] to switch time mode. |
| Time | Touch [▲] or [▼] | to set hour and minute. |
| Desk Timer | Touch to select [Simulate Timer] or [Numeral Timer]. | |
| Power Off Time | On/Off | Touch to select whether the time displays after power off. |

Settings

Adjust Sound Settings

1. Touch [Sound].
2. Touch an option repeatedly to select.
3. Touch blank area of the screen to exit.

| Sound settings | Options | Description |
|-------------------|---------|--|
| Sub Woofer Filter | Flat | Touch to select a crossover frequency. |
| | 80Hz | |
| | 120Hz | |
| | 160Hz | |
| Loud | On/Off | When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies. |
| Reverse Mute | On/Off | Turn on/off the reverse sound. |

Adjust Video Settings

1. Touch [Video].
2. Touch an option repeatedly to select.
3. Touch blank area of the screen to exit.

| Video settings | Options | Description |
|------------------|------------|--|
| Backview Mirror | Normal | When you drive in reverse, the rear view displayed in normally. |
| | Mirror | When you drive in reverse, the rear view is displayed in mirror. |
| Brightness Setup | Night | Touch to select the desired brightness setting. |
| | Dark | |
| | Normal | |
| | Brightness | |
| Parking | On / Off | Enable video / disable video. |

When in Park “On” mode, the screen will display “WARNING” [if you play the video disc]. The above warning screen will prevent the driver watching images.

Adjust Disc Rating

1. Touch [Disc].
2. Touch an option repeatedly to select.
3. Touch blank area of the screen to exit.

| DVD rating | Options | Description |
|--------------|---|--|
| Set password | Set password to restrict the play of discs. The default password is 0000. | |
| Rating level | Kid safe | Acceptable for children. |
| | G | Acceptable for general viewers. |
| | PG | Parental guidance suggested. |
| | PG-13 | Unsuitable for children under age 13. |
| | PG-R | Recommend parents to restrict children under 17 to view. |
| | R | Restricted recommend parents to guide children under 17 to view. |
| | NC-17 | Unsuitable for children under age 17. |
| | Adult | Acceptable for adults only. |
| DVD Audio | Select DVD audio language. Options available are depend on DVD disc. | |
| DVD Subtitle | Select DVD subtitle language. Options available are depend on DVD disc. | |
| DVD Menu | Select DVD menu language. Options available are depend on DVD disc. | |
| Aspect Ratio | Touch to select display ratio: [4:3 PS], [4:3 LB], or [16:9]. | |

Adjust Volume Settings

You can set different volume for different modes.

1. Touch [Volume].
The volume setting sub-menu is displayed.

2. Touch on a source.

- [Media]
- [Radio]
- [Bluetooth]
- [AV-IN1]
- [AV-IN2]

3. Touch [▲] or [▼] to assign value: 0 to 12.

When switches to the source, the volume increases automatically.

4. Touch blank area of the screen to exit.

Adjust Reset Settings

1. Touch [Reset].
2. Touch an option repeatedly to select.
3. Touch blank area of the screen to exit.

| Language settings | Description |
|-------------------|---------------------------------------|
| Reset Factory | |
| Reset Volume | Touch to restore to default settings. |
| Reset Video | |

Listen to Other Devices

You can connect an external audio/video device to the unit.

1. Connect the external device with the supplied AV cable.
2. Touch the upper left corner to display the main menu.
3. Touch [AV-IN 1] = Front input
[AV-IN 2] = Rear input


Reset

When the unit hangs up, you can reset it.

Press [RESET] with a ball-point pen or similar tool.

Tip

When the unit has been reset, all the settings will return to default settings.

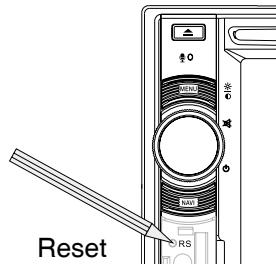

Replace a Fuse

If there is no power, the fuse may be damaged and need to be replaced.

1. Take out the unit from dashboard.
2. Check the electric connection.
3. Buy a fuse that matches the amperage of the damaged fuse.
4. Replace the fuse while the unit's power is disconnected.

GPS

1. Touch the upper left corner to display home menu.
2. Touch [Navigation], the navigation menu will display.
3. Refer to the map manual to operate the navigation tool.

Steering Wheel Control Programming

1. Touch the upper left corner to display home menu.
2. Touch [SWC], the SWC menu will display.
3. Press each individual steering wheel control button for each corresponding function.
4. Once the final steering wheel control button is programmed, the functions are saved and the programming will end.
5. Touch [Reset] to reset the programming.



TV(optional)

Touch [DVB-T] in the main menu to switch to TV mode, and touch the center of the screen to show control buttons.

Specifications

General

| | |
|-------------------------------|---------------------------|
| Reference Supply Voltage..... | 12V(DC) |
| Operating Voltage Range..... | 10.5 - 15.8V(DC) |
| Max Operating Current..... | 15A |
| Grounding System..... | Car Battery Negative Pole |
| Dimensions(WXHxD)..... | 178X101.5X169mm |
| Weight(main unit) | 1.9kg |

FM

| | |
|---|-----------------|
| Signal Noise Ratio | ≥55dB |
| Residual Noise Sensitivity (S/N=30dB) | 18dB μ V |
| Frequency Response (±3dB) | 20Hz~12.5KHz |
| Station Seeking Level..... | 20~28dB μ V |
| Distortion | ≤1.0% |
| Stereo Separation (1KHz) | ≥25dB |
| Antenna Impedance | 75Ω |

AM

| | |
|---|--------------|
| Residual Noise Sensitivity (S/N=20dB) | 30dB μ V |
| Selectivity (±9KHz) | ≥50dB |

LCD

| | |
|--------------------------|----------------------|
| Screen size..... | 6.2 inches(16:9) |
| Display resolution | 800X480dots |
| Contrast radio | 400 |
| Brightness..... | 280cd/m ² |

DVD Player

| | |
|---------------------------------|------------|
| Signal / Noise Ratio | 80dB |
| Dynamic Range | 80dB |
| Distortion (line out) | ≤0.1% |
| Frequency Response (±3dB) | 20Hz~20KHz |
| Maximum Output Power | 4x45W |
| Load Impedance..... | 4Ω |

AUX IN

| | |
|---------------------------------|------------|
| Distortion | ≤0.5% |
| Frequency Response (±3dB) | 20Hz~20KHz |
| Audio Input Level..... | 1Vrms |

Audio

| | |
|-----------------------------|------------|
| Audio Output Impedance..... | 100Ω |
| Audio Output Level..... | 4Vrms(Max) |

Video

| | |
|---------------------------------------|----------|
| Normal Video Input Level (CVBS) | 1.0±0.2V |
| Video Input Impedance..... | 75Ω |
| Video Output Impedance..... | 75Ω |
| Video Output Level..... | 1.0±0.2V |

Environment

| | |
|-----------------------------|---------------|
| Operating Temperature | -10°C ~ +60°C |
| Storing Temperature..... | -20°C ~ +70°C |
| Operating Humidity..... | 45%~80%RH |
| Storing Humidity | 30%~90%RH |

Notice:

When the unit is operated extremely, such as operated with maximum power output for a long time, or the temperature is over 70°C, it will enter heat protection mode, the volume will be lower automatically. This is normal.

Specifications

Supported Formats:

- USB or memory file format: FAT16, FAT32
- Mp3 bit rate(date rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8(maximum length:128 bytes)

Unsupported Formates:

- Empty albums:an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example,Word documents(.doc) or Mp3 files with extension.dlf are ignored and not played.
- AAC,WMV,PCM audio files
- DRM protected WMA files(.wav,.m4a,.m4p,.mp4,.aac)
- WMA files in Lossless format

Supported MP3 Disc Format:

- ISO9660,Joliet
- Maximum title number: 512(depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32kHz,44.1kHz,48kHz
- Supported Bit-rates: 32-320Kbps and variable bit rate

Supported Video Formats:

- DVD
- MP4
- Xvid (optional)

Region Code

According to DVD sale region, the whole world is divided into six regions. A DVD disc can be played back only when its region code is compatible with that of the player in use.

Region 1: USA, Canada, East Pacific Ocean Islands;

Region 2: Japan, West Europe, North Europe, Egypt, South Africa, Middle East;

Region 3: Taiwan of China, Hong Kong of China, South Korea, Thailand, Indonesia, South East Asia;

Region 4: Australia, New Zealand, Mid & south America, South Pacific Ocean Islands/Oceania;

Region 5: Russia, Mongolia, India, Middle Asia, East Europe, North Korea, North Africa, North West Asia;

Region 6: Chinese Mainland.

Cautions of Disc Using

1. DO NOT use irregular shaped disc.

2. Disc Cleaning

Use a dry, soft cloth to wipe the disc from center to edge, only neutral detergent can be used.

3. When playing a new disc

New disc may have some rough spots around the inner and outer edges. If such a disc is used, remove these rough spots with a pencil or ball-point pen, etc.

Troubleshooting

What appears to be trouble is not always serious. Please check the following points before calling a service center.

| Problem | Cause | Corrective action |
|--|--|---|
| General | | |
| Unit can not power on | Unit fuse blown. | Install new fuse with correct rating. |
| | Car battery fuse blown. | Install new fuse with correct rating. |
| | Illegal operation | Reset the unit. |
| Remote control does not work | Battery depleted. | Change the battery. |
| | Battery installed incorrectly. | Install the battery correctly. |
| No/low audio output | Improper audio output connection. | Check wiring and correct. |
| | Volume set too low. | Increase volume level. |
| | Speakers damaged. | Replace speakers. |
| | Heavily biased volume balance. | Adjust the channel balance to center position. |
| | Speaker wiring is in contact with metal part of car. | Insulate all speaker wiring connections. |
| Poor sound quality or distortion | Piratic disc is in use. | Use original disc. |
| | Speaker power rating does not match unit. | Replace speakers. |
| | Wrong connections. | Check wiring and correct. |
| | Speaker is shorted. | Check wiring and correct. |
| Unit resets itself when engine is off | Incorrect connection between ACC and BATT. | Check wiring and correct. |
| TFT monitor | | |
| Warning information is shown at all times | Parking break wiring is not correct. | Check wiring and correct. |
| Flashing image or interference appears on screen | The color system of DVD disc does not match the monitor. | Adjust the color system of the DVD disc playing back or the monitor in use. |
| | Piratic disc is in use. | Use original disc. |
| | Video cable damaged. | Replace cables. |
| | Improper video signal connections. | Check wiring and correct. |
| | | |
| Disc playback | | |
| Cannot insert disc | A disc inside the unit already. | Eject current disc and insert new one. |
| Disc does not play back | Disc is warped or scratched. | Use disc in good condition. |
| | Disc is dirty or wet. | Clean disc with soft cloth. |
| | Incompatible disc is used. | Use compatible disc. |
| | Disc is inserted upside down. | Insert disc with label side up. |
| | Disc region code is not compatible with unit. | Use disc with proper region code. |
| | | |
| PBC cannot be used during VCD playback | PBC is not available on the disc. | Use disc with PBC available. |
| Repeat or search function is invalid during VCD playback | PBC is on. | Turn PBC off. |
| Error messages | | |
| No disc | Disc is dirty. | Clean disc with soft cloth. |
| | Disc is upside down. | Insert disc with label side up. |
| | No disc inside. | Insert disc. |
| Bad disc | Disc is dirty. | Clean disc with soft cloth. |
| | Disc is upside down. | Insert disc with label side up. |
| Unknown disc | Disc format is not compatible with this unit. | Use disc with compatible format. |
| Region Error | DVD region code is not compatible with this unit. | Use disc with compatible region code. |

Disconnecting the Battery

To prevent a short circuit, be sure to turn off the ignition and remove the negative (-) battery cable prior to installation.

Note:

If the unit is to be installed in a car equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If the cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution during installation to avoid causing a short circuit.

Remove Transport Screws

WARNING! Remove these two transport screws before installation. Otherwise, the DVD player will not work.

Replacing the Fuse

When replacing the fuse, use a new 15A replacement fuse. Using a fuse with an improper rating could damage the unit and cause a fire.

What's in the Box

- | | |
|--------------------------------|---------------------------|
| 1. GPS Antenna | 7. Speaker Output Harness |
| 2. Double DIN Sleeve | 8. Power Input Harness |
| 3. Remote Control with Battery | 9. AV Input Harness |
| 4. Custom Cosmetic Trim Ring | 10. USB Wire |
| 5. Touch Pen | 11. Rubber Buffer |
| 6. Mounting Screws | |

Installation Using Half-Sleeve

1. Install half-sleeve in the dashboard.

a. Install adapter if necessary (optional).

b. Install half-sleeve into adapter or dashboard (use only the supplied screws). Do not force the sleeve into the opening or cause it to bend or bow.

WARNING! Only connect the unit to a 12-volt power supply with proper grounding.

c. Locate the series of bend-tabs along the top, bottom and sides of the mounting sleeve. With the sleeve fully inserted into the dashboard opening, bend as many of the tabs outward as necessary so that the sleeve is firmly secured to the dashboard.

2. Use the M5 x 6 screws (provided) to install the mounting brackets to each side of the radio using the holes indicated in the diagram. **DO NOT USE OTHER SCREWS.**

3. Place the radio in front of the dashboard opening so the wiring can be brought through the mounting sleeve.

4. Complete wiring as illustrated in the wiring diagram. Once the wiring is complete, reconnect the battery negative terminal. If there is no ACC available, connect the ACC lead to the power supply with a switch.

CAUTION! Be careful not to damage the car wiring.

5. After completing the wiring connections, turn the unit on to confirm operation (ignition switch must be on). If unit does not operate, recheck all wiring until problem is corrected. Once proper operation is achieved, turn off the ignition switch and proceed with final mounting of the chassis.

a. Connect wiring adapter to existing wiring harness.

b. Connect antenna lead.

c. Carefully slide the radio into the half-sleeve, making sure it is right-side-up. Use the supplied screws to attach the radio to the half sleeve.


Using the Cosmetic Trim Ring

One cosmetic trim rings is packaged with the head unit for installation flexibility. This unit will fit into most import dashes with little or no modification to the dash board/cavity. Some US domestic vehicle dashes will accept a Double-DIN chassis, but there is usually a small gap between the radio and dash piece after installation is complete. In this case, use the trim ring to conceal any gaps that may be present.


Note:

For proper operation of the CD/DVD player, the chassis must be mounted within 30° of horizontal. Make sure the unit is mounted within this limitation.


①

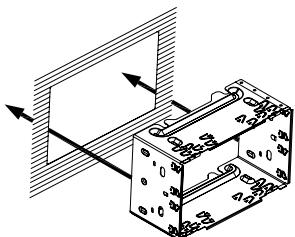


④

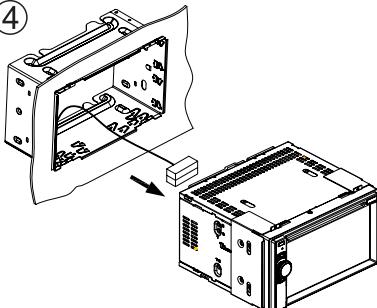


②

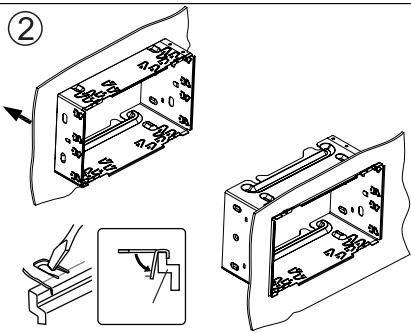


⑤

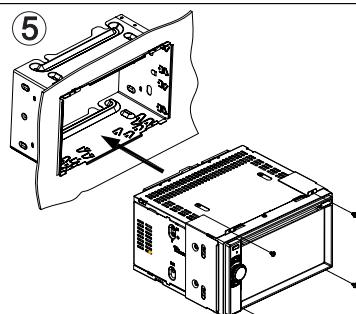

③

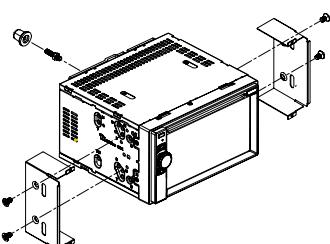

⑥

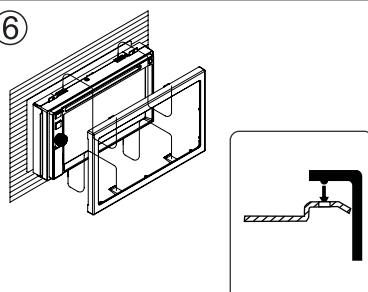

Wire Connections

