



# VX6020

## Owner's Manual



**160** watts peak  
40W x 4



**VX6020**

---





# VX6020



iPod® Control "iPod" is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. Expanding Systems iPodVTR etc. Bluetooth® is a trade mark of Bluetooth Special Interest Group (SIG) Inc.



Navmate



NAVIGATION

## CONTENTS

FEATURES	5
CONTROLS AND INDICATORS	8
REMOTE CONTROL	10
EXTERNAL DEVICES	14
QUICK START	16
EQUALIZER CONTROLS MENU	20
SYSTEM SETTINGS	22
DISC OPERATION	30
RADIO TUNER OPERATION	40
iPod®/iPhone® OPERATION	46
USB AND SD CARD CONTROLS	50
AV-In1/AV-In2 CONTROLS	55
BLUETOOTH OPERATION	56
NAVIGATION QUICK START GUIDE	64
STEERING WHEEL CONTROL (SWC) OPERATION	68
REAR CAMERA OPERATION	69
TROUBLESHOOTING	70
DISC ERROR MESSAGES	73
CARE AND MAINTENANCE	74
SPECIFICATIONS	76



**VX6020**

### **FCC Statement**

1. This device complies with Part 15 of the FCC Rules.  
Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference.
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 centimeters between the radiator and your body.





# VX6020



## FEATURES

Congratulations on the purchase of the In-Dash Navigation Radio. Please read the instruction manual for this product before using. The documentation provided will allow the user to fully enjoy all the features of your new Jensen VX6020 Mobile Multimedia Receiver. Please read all of the instructions before beginning the installation and save this manual for future reference. We recommend having your Jensen VX6020 installed by a reputable installation shop.

### DVD

- Audio Equalizer
- Next Chapter and Previous Chapter
- Play/Pause
- Track Direct Entry
- Disc Menu
- Selection Repeat / Track Repeat
- Disc Audio
- Disc Language
- Pic Control

### CD / MP3 / WMA

- CD-Text Compatible
- ID3 Tag Compatible
- Directory Search (MP3 / WMA Only)
- Burn up to 1500 MP3 and WMA Files onto a DVD+R / RW
- Audible Forward / Reverse Track Search (CD-DA Only)
- Random, Repeat and Intro
- Play, Pause, Stop, Next Track and Previous Track

### AM-FM

- USA, China, Japan, Europe, Europe (LW) and Orient (OIRT)
- 30 Station Presets (18 FM / 12 AM)
- Auto Stereo / Mono
- Local / Distance
- Auto Store / Preview Scan

### iPod®/iPhone®

- iPod®/iPhone® via USB
- High Speed Direct Connect Interface to Access iPod® Playlists, Artists, Albums and Songs. Play music and view video/photo\* files from your iPod®. \*Video/photo playback requires jLink-USB iPod® interface cable (sold separately).
- Power Management Charges iPod® while Connected



**VX6020**

## ***Chassis***

- 2.0 DIN (Import / ISO-DIN Mountable)
- Fixed Front Panel
- 6.2" High Definition TFT LCD
- 1,152,000 Sub Pixels (800 x 3 X 480)
- Beep Tone Confirmation (ON-OFF Option)

## ***General***

- Navigation is built in - IGO Primo
- Built-In Bluetooth® providing Hands-Free operation for safety and convenience and A2DP for streaming music from your smartphone or other Bluetooth® device.
- One Composite Video Output for Additional Screens
- Front Panel Audio/Video Input
- Ten-Band Tone Equalizer
- Rear Panel Audio/Video RCA Input
- Rear Subwoofer Line Output
- Rear Camera Input
- Touch Screen Calibration Mode
- Rotary Encoder Audio Control

## ***REAR CAMERA***

The VX6020 is "camera ready." Before accessing any camera features, you must purchase and install a rear video camera.





# VX6020



***WARNING! Never install this unit where operation and viewing could interfere with safe driving conditions.***

***WARNING! To reduce the risk of a traffic accident (except when using for rear view video camera) never use the video display function while driving the vehicle. This is a violation of federal law.***

***WARNING! Never disassemble or adjust the unit.***

***WARNING! To prevent injury from shock or fire, never expose this unit to moisture or water.***

***WARNING! Never use irregular discs.***

***WARNING! To prevent damage to the mechanism inside this unit, avoid impact to the unit's monitor.***

***WARNING! Using an improper fuse may cause damage to the unit and result in fire.***





VX6020

## CONTROLS AND INDICATORS

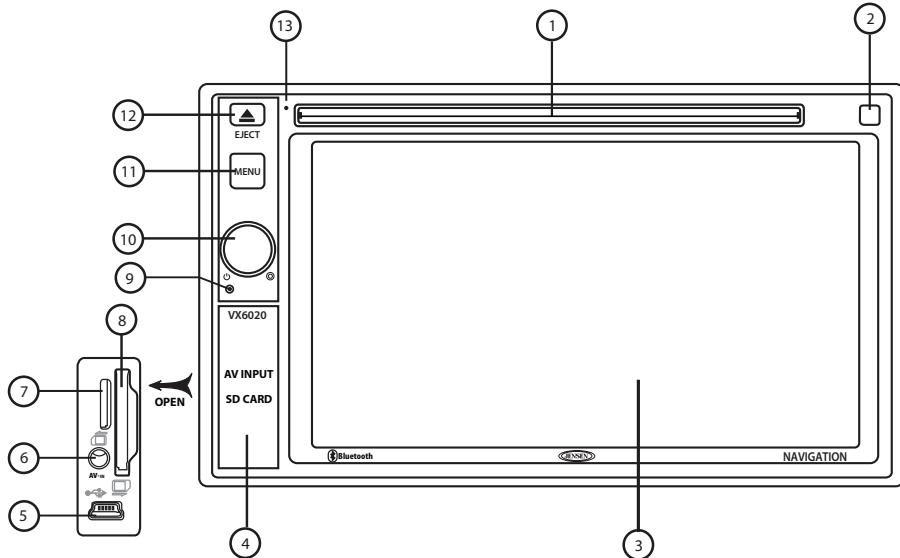


Figure 2. VX6020 Controls and Indicators

1. **DISC Slot:** Accepts DVD/CD/MP3 discs. If the unit is turned on, playback begins when a disc is inserted.
2. **REMOTE SENSOR:** Used to receive command signals from the remote control.
3. **LCD Screen and Touch Screen:** Touch icons on this screen to access menus or control functions.
4. **INTERFACE COVER:** Covers the Micro SD/ SD/ Mini USB slots and AV Input Connector.
5. **MINI USB SLOT:** Used to connect iPod / MP3 player connection adapter.
6. **AV INPUT CONNECTOR:** This connector accepts a 3.5 mm jack through which signals from various audio/video devices can be applied to the unit.
7. **MICRO SD CARD SLOT:** Used to insert the Micro SD Card for the Navigation Map (or firmware updates if required) only, not for music or other files.
8. **SD CARD SLOT:** Used for inserting SD Cards containing photos, audio and video for playback.



# VX6020

---




9. **RESET Button:** Press this button to reset the system settings (except password and parental lock settings) and to correct a system halt or other illegal operation. Use the tip of a pen to press the Reset button.
10. **ROTARY KNOB (Ø) Power ON/OFF, Volume, and Mute Control:** Press the knob to turn the unit ON. Press and hold the knob for 2 seconds to turn the unit OFF. Rotate the knob to adjust the volume from 0 to 50. Press the knob momentarily to mute the audio. Press the knob again to restore the audio.
11. **MENU Button:** Press this button to access the Main touch screen menu. Press and hold to switch to Navigation screen.
12. **Eject (Δ) Button:** Press this button to eject a DVD/CD/MP3 disc. Disc play is stopped, the disc is ejected and the unit will change to radio operation. If the disc is not removed from the unit and the button is pressed again, the disc will be re-loaded. If the disc is not removed from the disc slot within 10 seconds of being ejected, it will be automatically reloaded to prevent it from being accidentally damaged.
13. **MICROPHONE:** Used for Bluetooth® communication.



# VX6020

## REMOTE CONTROL

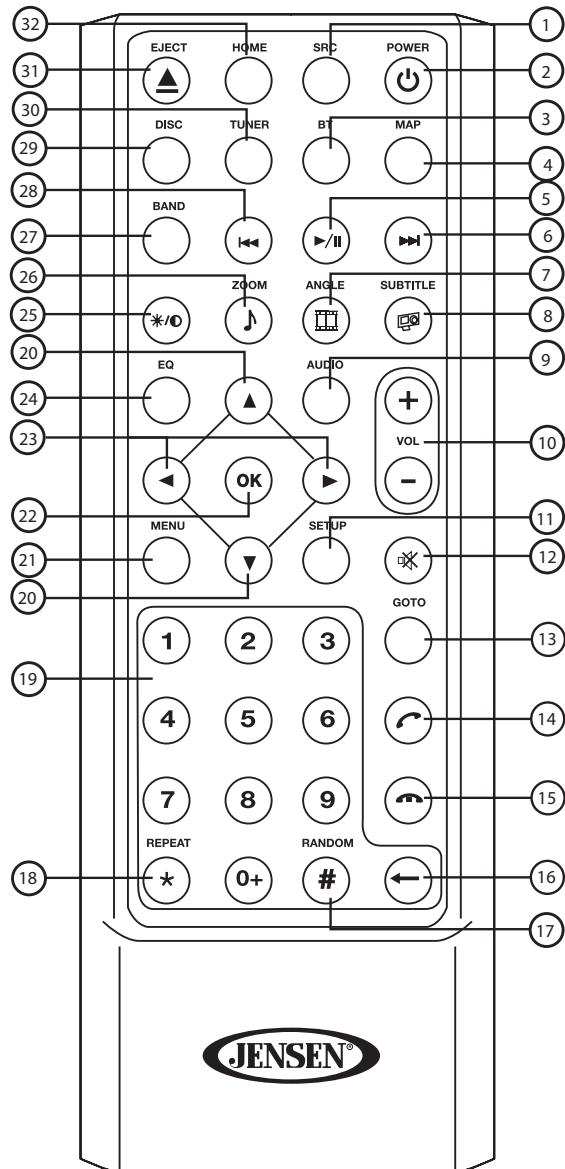

**Figure 2. VX6020 Remote Control**



## Remote Control Functional Description

1. **SOURCE (SRC) Button:** Press this button to switch between and select available sources. (Radio/Disc/SDHC/USB/Bluetooth/AV-IN1/AV-IN2/Navigation/iPod)
2. **POWER Button (  ):** Press this button to turn the unit ON and OFF.
3. **BLUETOOTH (BT) Button:** Press this button to enter the Bluetooth feature.
4. **MAP Button:** Press this button to enter the Navigation feature. Press again to return to previous source.
5. **PLAY / PAUSE (  ) Button:** Press this button to pause the playback of a disc. Press this button again to resume normal playback.
6. **NEXT FORWARD (  ) Button** – Press this button to skip to the next chapter, track or song during playback of a disc. Press this button while in Radio mode to search available radio station by increasing tuning frequency. Press this button while in iPod mode to pause playback/starts playback of a music file.
7. **ANGLE Button (  ):** Press to display and select different camera angles in DVD mode. Each time the button is pressed, the angle changes.  
**NOTE:** *The numbers of angles vary from disc to disc. Not all discs contain this option.*
8. **SUBTITLE Button (  ):** Press to display and select the subtitle language in DVD mode. Each time the button is pressed, the subtitle language changes.  
**NOTE:** *The type and number of languages for subtitles vary from disc to disc.*
9. **AUDIO Button:** Press to display and select the audio language in DVD mode. Each time the button is pressed, the language changes.  
**NOTE:** *The languages for audio vary from disc to disc.*
10. **VOLUME Button (VOL + and -):** Press these buttons to increase or decrease the playback volume.
11. **SETUP Button:** Press to this button to enter the system settings menu.
12. **MUTE Button (  ):** Press this button to turn the audio output ON and OFF.
13. **GOTO Button:** Press this button to open direct entry search screen during the playback of a disc.
14. **ANSWER INCOMING PHONE CALL Button (  ):** Press this button to answer an incoming Bluetooth phone call.



VX6020

15. **DISCONNECT ACTIVE PHONE CALL** **Button (****):** Press this button to disconnect an active Bluetooth phone call.
16. **BACKSPACE** **Button (****):** Press this button to correct invalid number entries when entering passwords, track/chapter selections or phone numbers using the remote control.
17. **RANDOM** **Button (****):** Press this button to play tracks or chapters in random order while playing a disc.
18. **REPEAT** **Button (****):** Press this button to repeat the playback of a current track. Allows the user to repeat a selected Title, Chapter or Track of a DVD, CD or MP3.
19. **NUMBER Buttons (0-9):** Press these buttons to directly access chapters and tracks, dialing phone numbers, or entering passwords.
20. **UP (****) / DOWN (****) Buttons** – Press these buttons to scroll upward and downward, respectively, in menu options.
21. **MENU** **Button:** – Press this button to access the root menu of a DVD or CD during playback. The disc will return to normal playback and the root menu will disappear if no selection is made within 10 seconds. This button is also used to select photo mode of an MP3 player.
22. **ENTER** **Button (OK):** Press this button to implement a selected setting or accept an option.
23. **LEFT (****) / RIGHT (****) Buttons:** – Press these buttons to shift left and right, respectively, in the menu options
24. **EQUALIZER** **Button (EQ):** Press this button to accesses the equalizer menu in all audio playback modes.
25. **SCREEN BACKLIGHT ADJUST** **BUTTON (****0):** Press this button to adjust the screen backlighting level between low, medium and bright.
26. **ZOOM** **Button (****): (FOR VIEWING IMAGE FILES)**

#### **DISC images -**

##### Press ZOOM button

Once  
2 times  
3 times  
4 times

##### CD Player Performs

Enlarge the picture 125% of the original size  
Enlarge the picture 150% of the original size  
Enlarge the picture 200% of the original size  
Picture is returned to original size



# VX6020



## **SD Card images -**

### **Press ZOOM button**

Once  
2 times  
3 times  
4 times

### **SD Card Player Performs**

Enlarge the picture 100% of the original size  
Enlarge the picture 200% of the original size  
Enlarge the picture 300% of the original size  
Picture is returned to original size

**27. BAND Button:** Press this button to scroll though preset stations.

**28. PREVIOUS (I◀◀) Button** – Press this button to go back to the previous chapter, track or song during playback of a disc. Press this button while in Radio mode to search available radio station by increasing tuning frequency. Press this button while in iPod mode to pause playback/starts playback of a music file.

**29. DISC Button:** Press this button to enter Disc mode radio mode and scroll though prset stations.

**30. TUNER:** Press this button to enter Radio mode.

**31. EJECT Button (▲):** Press this button to eject a DVD/CD/MP3 disc. Disc play is stopped, the disc is ejected and the unit will change to radio operation. If the disc is not removed from the unit and the button is pressed again, the disc will be re-loaded. If the disc is not removed from the disc slot within 10 seconds of being ejected, it will be automatically reloaded to prevent it from being accidentally damaged.

**32. HOME Button:** Press this button to return to the source menu.



**VX6020**

## EXTERNAL DEVICES

### Connecting External Devices

External devices, including a game console, camcorder, navigation unit, iPod®, Zune®, etc. can be connected to this unit using its front A/V input 3.5mm jack (AV-In1), the rear RCA inputs (AV-In2), or the Mini USB input using the supplied USB-A to Mini USB Adapter.


You cannot directly control external devices connected to the A/V INPUTs using the front panel controls or this unit's remote control.

#### AV-In1

AV-In1 is used for playback of audio/video from an external device connected to the unit through a 3.5mm jack. The unit can increase or decrease the volume of the connected device all other controls are done on the connected device. Select "AV-In 1" mode to access auxiliary devices.

#### AV-In2

AV-In2 is used for playback of audio/video from an external device connected through RCA connectors located on the back of the unit (see VX6020 Installation Guide). The unit can increase or decrease the volume of the connected device all other controls are done on the connected device. Select "AV-In2" mode to access auxiliary devices. .

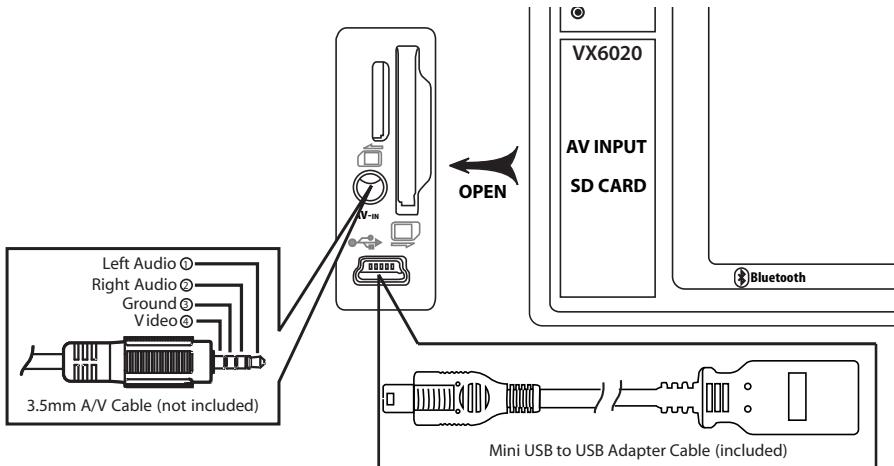

**Figure 3. VX6020 Connecting External Devices**



# VX6020



## Mini USB to USB Adapter Cable

The unit is supplied with a Mini USB to USB Adapter Cable which can accept signals from various audio/video devices through a USB connection. The Mini USB to USB Adapter Cable is installed directly into the front panel of the unit.

**NOTE: When connecting an iPod®/iPhone® the user must use the iPod/iPhone adapter cable that comes with the iPod®/iPhone® or is available separately.**

**NOTE: When connecting an iPod®/iPhone® to the Mini USB to USB Adapter Cable, the user must also insert the device's 3.5 mm jack into the A/V input connector for video playback.**



**Figure 4. Mini USB to USB Adapter Cable**

**NOTE: If the vehicle is equipped with steering wheel controls for the audio system, the controls may function differently than described in the vehicle owners manual. The Jensen In-Dash Navigation Radio system may function differently than the OEM radio due to added features and functions that the OEM radio did not support. This is normal operation.**



**VX6020**

## QUICK START GUIDE

### Turning the Unit ON or OFF

Press the front panel Power/Volume/Mute control knob to turn the unit ON. To turn the unit OFF, press and hold the front panel Power/Volume/Mute control knob for 2 seconds.


### Selecting an Audio/Video Source, Bluetooth, Navigation Steering Wheel Controls or Backup Camera

To access an Audio/Video source:

1. Press the front panel MENU button or touch the SRC icon to view the Main Menu Screen.



**Screen 1**

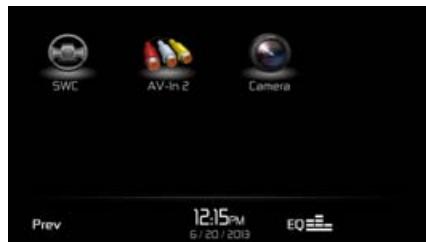

**Screen 2**

**Figure 5. VX6020 Main Menu Screen**

2. Touch the desired source icon on one of the two main menu screens. Screen 1 of 2: Disc, Radio, USB, AV-IN1, Bluetooth (BT), Navigation, or SDHC. Touch Next at the bottom of the screen to access Screen 2 of 2: Steering Wheel Control (SWC), AV-IN2, or Camera.



## System Settings

To access and adjust system settings:

1. Press the MENU button on the front panel to view the Main Menu Screen.
2. Touch the Settings (  ) icon on the Main Menu screen to enter the SETTINGS MENU. Sub-menus where adjustments can be made will appear highlighted in green. (*See System Settings Menu*)

## Volume Adjustment

To increase or decrease the volume level, rotate the front panel Power/Volume/Mute control knob. The unit's front panel screen will display the volume level for 3 seconds. The volume level ranges from 0 to 50 (a beep sounds, indicating that the adjustment limit has been reached).

Navigation and Bluetooth volume can be adjusted independently of the radio volume by rotating the Power/Volume/Mute control knob. The navigation must be talking, Bluetooth must be in a call when making the volume adjustment. When exiting Navigation or Bluetooth the volume will return to the previous source volume level.

## Audible Beep Confirmation

An audible beep tone confirms each function selection. The beep tone can be disabled through the Setup menu.

## Muting the Audio

Press the front panel Power/Volume/Mute control knob to mute the audio from the unit. Mute icon is displayed on the LCD screen. Press the Power/Volume/Mute control knob again to restore the audio volume to its previous level. Adjusting the volume or using any of the audio setup features cancels the mute function.

## Equalizer Controls

**Equalizer (EQ):** Adjustment can be made after entering one of the audio/video sources (Disc, Radio, USB, AV-IN1, SDHC or AV-IN2). Touch the Equalizer (EQ) icon to view the Equalizer Control Screen to select a desired audio preset level (Optimal / Classic / Rock / Jazz / Techno / Pop or Flat), make adjustments to the audio Balance and Fade levels or to turn the Loudness option ON or OFF. Touch SRC icon to return to the current source.

(*See Equalizer Control Menu*)

## Playing a Disc

To begin playback of an Audio/Video Disc:

1. Press the front panel Power/Volume/Mute control knob to turn the unit ON.
2. Insert a disc with the label side facing UP and playback will begin automatically. (*See Disc Operation Menu*)



**VX6020**

## **Resetting the System**

**Soft Reset** - To correct a system halt or other illegal operation, use the tip of a pen to press and release the reset button located just below the front panel control knob.



**[RESET] Button**

**Figure 6. System Reset Button**

For a Hard Reset- Touch the System Reset Icon on the Third Settings Screen.

After a system reset, the unit restores all factory default settings.

**NOTE: If the unit is reset while a DVD is playing, the unit will return to Main Menu once the reset is complete.**

## **Image/Display Settings**

### **Video Output Modes**

The table below shows the video output mode for each playing source.

Playing Source	Video Output Modes
AM/FM TUNER	YCbCr Mode
DVD	YCbCr Mode
AUX IN	CVBS* Mode

\*CVBS – Composite Video Baseband Signal

## **Parking Brake Inhibit**

When the green wire with the white stripe “Parking” wire is connected to the vehicle Parking Brake circuit, the front TFT monitor will display video when the Parking Brake is engaged. (When the green wire with the white stripe is grounded via the Parking Brake circuit, video will be displayed.)



**VX6020**

---



**This page intentionally left blank**



VX6020

## EQUALIZER CONTROL MENU

### Adjusting Equalizer Controls

The Equalizer adjustment screen allows the user to easily adjust the audio system to meet the acoustical characteristics of the vehicle. The acoustical characteristics vary depending on the type of vehicle and measurements. **For example:** proper setting of the audio controls can improve the speakers frequency response to compensate for cabin.

The Balance/Fade levels and Loudness ON/OFF option of a selected audio/video source (Disc, Radio, USB, AV-IN1, SDHC or AV-IN2) is also adjusted through the Equalizer adjustment screen.

#### **Equalizer (EQ) (10 Band)**

1. Touch the Equalizer (EQ) icon to view and select a desired acoustical preset level (Optimal / Classic / Rock / Jazz / Techno / Pop or Flat) **NOTE: The equalizer will automatically change to "USER" when individual audio functions are adjusted.**



**Figure 7. Equalizer Adjustment Screen**

2. Select a desired frequency range slide bar to be adjusted (31.5, 62, 125, 250, 500, 1K, 2K, 4K, 8K or 16K).
3. Touch and move the slide bar UP or Down to adjust the frequency sound level settings from 0 to +20.

#### **User Setting**

Touch the User icon to customize each of equalizers 10 band frequencies from 0 to +20.

#### **Flat Setting**

Touch the Flat icon to set the equalizers 10 band frequencies to the midpoint (+10).





# VX6020



## Loud Setting

Touch the Loud icon to turn the loud option ON or OFF. The loud option automatically alters the frequency response curve of audio to make it sound more natural when played at a lower volume level.

To exit the Equalizer menu touch SRC icon to return to the current source.

## Fade-Balance

Balance-Touch the **FAD-BAL** icon on the left side of the equalizer screen to display the balance/fader screen.



**Figure 8. Fade-Balance Adjustment Screen**

**Balance**- This feature is used to balance the audio output levels between the left and right side of the vehicle. Touch the  $\blacktriangleleft$  or  $\triangleright$  icons to change the balance control settings -18 (Left) to +18 (Right). The setting can also be changed by touching screen within the grid to move the green sphere.

**Fade**- This feature is used to fade the audio output levels between the front and rear of the vehicle. Touch the  $\blacktriangle$  or  $\blacktriangledown$  icons to change the fade control settings -20 (Rear) to +20 (Front). The setting can also be changed by touching screen within the grid to move the green sphere.

**Sub (Subwoofer)**- This feature is used to reduces or increases the subwoofer sound level. Touch the slide bar  $\blacktriangle$  or  $\blacktriangledown$  icons to adjust the settings.

To exit the balance-fader touch the **SRC** icon on the top left corner of the screen.



VX6020

## SYSTEM SETTINGS

To access System Settings, touch the icon on the Main Menu screen. There are eight System Settings Sub-menus that are used to adjust the performance of each option of the VX6020. Touch a desired Sub-Menu (General, Video, Sound, Time, Language, Bluetooth, DVD or Volume) and the Sub-menu will appear highlighted in green. The features available for adjustment will appear on the screen.



Figure 9. System Settings Screens

### Adjusting a Sub-Menu Feature

1. Touch the Sub-Menu feature to be adjusted.
2. Touch the or icon to view the previous or next feature page, if applicable. An options list appears on the right.
3. Touch the desired feature option once to make selection then touch again to confirm selection.

### General Sub-menu Features

#### Radio Region- USA, China, Japan, Europe, Europe (LW) and Orient (OIRT)

USA frequencies:

- AM Frequency Spacing - 10 kHz
- AM Frequency Band - 530 kHz ~ 1720 kHz
- FM Frequency Spacing - 200 kHz
- FM Frequency Band - 87.5 MHz ~ 107.9 MHz

**Radio Range-** Touch the Distance or Local to increases or decreases radio tuning sensitivity to receive local or distant stations.

**TFT Standby-** Touch OFF, 10s or 20s to set the unit's front panel TFT LCD screen to stay ON continuously or to blackout the screen after 10 or 20 seconds.

**Dimmer Mode-** Touch Night, Day, Normal or Brightness to set the unit's front panel TFT LCD screen to be adjusted for day and night conditions.

**Beep-** Touch OFF or ON to turn the selection confirmation beep ON or OFF.





**Calibration-** The Touch Screen Calibration adjustment is used to set the parameters of the touch screen to ensure that when the screen is touched, it corresponds to the feature desired.

**NOTE:** *Never use a pen or sharp object to calibrate the touch screen as this will damage the panel.*

1. Touch the Calibrate icon and the first screen will appear with instructions.
2. Follow the instructions on the screen touching and momentarily holding finger or a stylus to the center of the target for 2 seconds. Repeat as the target moves to each corner of the screen and finally to the center.



**Figure 10. Calibration Screen**

3. The second screen will appear:



**Figure 11. Audio Sub-Menu Screen**

4. If the screen is touched, the new calibration parameters will be accepted. If the screen is not touched within thirty seconds, the new parameters will be disregarded.



VX6020

## Audio Sub-menu Features

The Audio Sub-menu is used to turn the Subwoofer output ON or OFF and to select a Subwoofer crossover frequency.



Figure 12. Audio Sub-Menu Screen

**Subwoofer**- Touch ON or OFF to turn the subwoofer output ON or OFF.

**Subwoofer Crossover**- Touch a crossover frequency (80Hz, 120Hz or 160Hz) to set a cut-off frequency for the subwoofer's LPF (low-pass filter).

## Time Sub-menu Features

Clock appears in the top right corner of the screen during certain operations.

**NOTE:** *The AM/PM indication will change as you continue to adjust the hour past 12.*



Figure 13. Time Sub-Menu Screen

**Date**- Touch the Date icon and use the ▲ or ▼ icons to set the day, month, and year (see figure 13). After setting the date, touch Save. The date will appear to the right of the Date option.

**Clock Mode**- Touch 12Hr to set the clock display to 12 hour time intervals using AM and PM. Touch 24Hr to set the clock display to a 24 hour time interval (or military time).





**Time**- Touch the Time icon and use the ▲ or ▼ icons to set the hour, minute, and either AM or PM (see Figure 14). After setting the time, touch Save. The time will appear to the right of the Date option.



Date Settings

Time Settings

Figure 14. Date and Time Setting Screens

## Language Sub-menu Features

If a DVD supports more than one Subtitle or Audio language, all the languages are available for selection during playback. If the selected language is not supported by the DVD, then the default language is used.



Figure 15. Language Sub-Menu Screen

**On Screen Display (OSD)**-Touch English, Spanish, or French to select the language for the OSD Display.

**DVD Audio**-If available, this feature allows the user to select one of the languages contained on the disc for the DVD audio.

**DVD Subtitle**-If available, this feature allows the user to select one of the languages contained on the disc for the DVD subtitles.

**Disc Menu**-Allows the user to select one of the languages contained on the disc menu.



VX6020

### Bluetooth Sub-menu Features

The Bluetooth audio capabilities can be used for wireless phones hands free applications. Before attempting to use the Bluetooth functions on this unit, please make sure the wireless phone to be connected supports Bluetooth functions.



Figure 16. Bluetooth Pairing Code Screen 2

**Bluetooth**- Touch ON or OFF to turn the Bluetooth function ON or OFF.

**Auto-Connect**-Touch ON or OFF to turn the Bluetooth Auto-Connect function ON or OFF.


**Auto-Answer**-Touch ON or OFF to turn the Bluetooth Auto-Answer function ON or OFF.

**Pairing Code**- This feature allows the user to create a unique 4 digit code for pairing Bluetooth devices to the unit.

1. Touch the Paring Code icon and the Pairing Code entry screen will appear.
2. Use the keyboard enter a unique 4 digit Pairing Code. **NOTE: If a wrong digit is entered touching the green arrow will remove the number.**
3. Touch OK to confirm 4 digit code.



Pairing Code Entry Screen

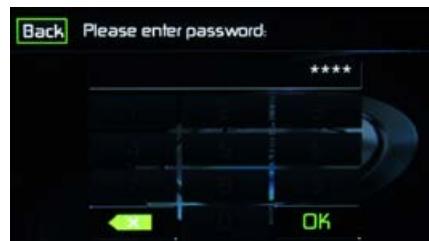

Pairing Code Confirmation Screen

Figure 17. Pairing Code Screens



# VX6020



## DVD Sub-menu Features


The DVD system has a built-in parental lock feature to prevent unauthorized persons from viewing restricted disc content. By default, the rating system is unlocked. Once set up, the parental lock is released only by entering the correct password. Once the password is entered, rating is available for setup.




Figure 18. DVD Sub-Menu Screen

**Set Password-** This feature allows the user to create a unique 4-digit password to activate or deactivate the "Rating" option.

1. Touch the Set Password Code icon and the Password entry screen will appear.
2. Use the keyboard enter a unique 4 digit Password. **NOTE: If a wrong digit is entered touching the green arrow will remove the number.**
3. Touch OK to confirm 4 digit Password.

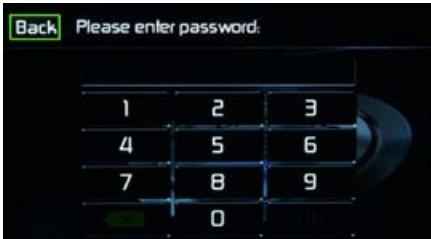

Password Entry Screen

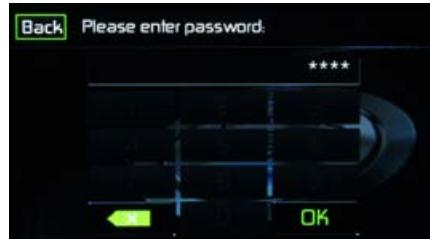

Password Confirmation Screen

Figure 19. DVD Password Screens

**Rating Level-** Select the appropriate rating level for the intended viewing audience. (Kid Safe, G, PG, PG-13, PG-r, R, Nc-17, and Adult). The user may override higher ratings by using the password.

**DRC-** This feature allows the user to turn the Dynamic Range Control ON for better playback for low volumes or OFF.



VX6020

**Load Factory**- This feature allows the user to "Reset" to restore the factory default settings (Rating system only).

To reset the password, access the "RATING" menu and enter the current password. Once the correct password is entered, you can access the "Password" field and enter a new one.

**NOTE:** Record the password and keep it in a safe place for future reference. The rating for each disc is marked on the disc, disc packing, or documentation. If the rating is not available on the disc, the parental lock feature is unavailable. Some discs restrict only portions of the disc, allowing the appropriate content will play. For details, please refer to the disc description.

### Volume Sub-menu Features

The Volume Sub-menu allows the user to increase or decrease the relative volume of the audio output of each source individually.



Volume Sub-Menu Screen 1



Volume Sub-Menu Screen 2

Figure 20. Volume Sub-Menu Screens.

**DVD**- Touch the DVD icon to enter the setting then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**USB**- Touch the USB icon to enter the setting of the connected device then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**SDHC**- Touch the SDHC icon to enter the setting then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**Radio**-Touch the Radio icon to enter the setting then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**Bluetooth**- Touch the Bluetooth icon to enter the setting of the connected device then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.





# VX6020



**AV-In1-** Touch the AV-In1 icon to enter the setting of the connected device then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**AV-In2-** Touch the AV-In2 icon to enter the setting of the connected device then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**Navigation-** Touch the Navigation icon to enter the setting then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

**iPod**-Touch the iPod icon to enter the setting then use the ▲ or ▼ icons to increase or decrease the relative volume level between -6 to +6.

The default relative volume level setting for all available sources is "0".

## Version Sub-menu Features

The Version Sub-menu is used to identify the model and resident operating system as well as the hardware and software versions.



Version Sub-Menu Screen 1

Version Sub-Menu Screen 2

Figure 21. Version Sub-Menu Screens 1 and 2.

## Exiting the System Setup Menu

To exit setup mode and resume normal playback, touch the SRC icon on the screen.



VX6020

## DISC OPERATION

### Compatible Audio Discs Types

This system will play the following types of discs:

- DVD - DVD's that contain audio and/or video.
- Audio discs - Audio CDs that contain audio, video and image files.
- MP3 discs - A disc that contains audio, video and image files (for example, a CD-R with downloaded MP3 files). MP3 discs can hold a maximum of 500 songs/folders per disc.

**NOTE: This unit is designed to play pre-recorded (original) CD/DVD's. Some burned CD/DVD's may not play due to different recording formats and speeds.**

### DVD Operation

#### DVD Main Menu

**NOTE: When properly installed, DVD video cannot be displayed on the main TFT screen unless the parking brake is applied. If you attempt to play a DVD while the vehicle is moving, the TFT screen displays:**

**Warning!!!**

It is illegal to view video  
while driving or operating  
a motor vehicle. Set parking  
brake to view video.

From the Main Menu Screen touch the DISC Icon or insert a disc into the disc slot, label side up. Playback begins when a disc is inserted correctly.



**Figure 22. DVD Main Menu**

**SRC Icon-** Touch this icon to return to the Main Menu Screen.

**Title/Chapter Information-** The title/chapter information displayed is the current number of the track playing, the total number of tracks on the disc, the current chapter playing and the total number of chapters on the disc.





# VX6020



**Time Display**- This indicator displays the time as entered by the user in the Settings Menu.

**Chapter Elapsed Playback Time**- The elapsed playback time of chapter is displayed on the screen.

**Total Playback Time**- The total playback time of disc is displayed on the screen.

**More ( ▲/▼ )**- Touch the ▲/▼ icons to display the next or previous page of the Disc menu.

**EQ - Equalizer**- Touch this icon to access the Equalizer Control Menu (see "Adjusting Equalizer Controls").

**◀◀ Previous**-Touch this icon to play the previous track.

**▶/⏸ Play/Pause**-Touch this icon to begin disc playback. Touch this icon again to pause disc playback.

**▶▶ Next**- Touch this icon to play the next track.

**Direct Entry**-Touch this icon to display the Direct Entry Screen.

**Menu**- Touch this icon to view the DVD root menu.

**A-B**- Touch to repeat a specific portion from point A to point B of the disc. During playback touch A-B to set the starting point A. Touch A-B a second time to set the ending point B. The player will repeatedly play the part between Point A and Point B. Touch A-B a third time to cancel A-B repeat and resume playback.

**Audio**- Touch this icon to select an audio language for DVD playback. The audio language selection depends on the languages contained on the disc.

**Language**- Touch this icon to select a subtitle language for DVD playback. The subtitle language selection depends on the languages contained on the disc.

**🔁 Repeat**- Touch this icon during playback to repeat the current chapter. The icon on the screen will light and small letter C will appear below the icon and the chapter will repeat. Touch this icon a second time to repeat the current title. The icon on the TFT LCD screen will light and small letter T will appear below the icon and the title track will repeat. Touch the icon a third time to repeat the title and chapter. The icon on the main TFT LCD screen will light and small letter A will appear below the icon and the title and chapter will repeat. Touch the icon again the repeat function will be cancelled. The icon on the main TFT LCD screen will dim and playback of the remainder of the disc will resume.



VX6020

**PIC-** When the PIC icon is touched the picture adjust screen appears. Touch this icon during playback to adjust the color brightness, contrast, saturation and hue. The levels can be adjusted to suit the users preferences. The adjustments are accomplished by touching the + or - icons to decrease or increase the desired setting. The settings have range of 1 to 20.

**NOTE:** *The Picture Adjustment Screen will turn OFF automatically if no adjustment is made within five seconds or if any other part of the screen is touched icon is touched.*



Figure 23. DVD Picture Adjust Screen

### Direct Entry

When the Direct Entry icon is touched the Direct Entry Screen appears. The user can manually select a title or a chapter. By touching ▼ icon. The user can select a chapter or title. The title or chapter can be selected by touching the corresponding number for a title or chapter. After entering the numbers, touch the OK icon. If a wrong digit is entered touching the green arrow will remove the number. After touching OK, playback will begin.



Figure 24. DVD Chapter and Title Direct Entry Screen

### Inserting a Disc

Upon inserting a DVD disc, DVD mode is entered and disc play begins. A disc cannot be inserted if there is already a disc in the unit or if the power is off.

**NOTE:** *If Parental Lock (Rating) is activated and the disc inserted is not authorized, the 4-digit code must be entered and/or the disc must be authorized (see "Rating Sub-menu Features").*

**NOTE:** *DVD-R and DVD-RW will not play unless the recording session is finalized and the DVD is closed.*



# VX6020



**Ejecting a Disc-** Touch **▲** on the front of the unit to eject the disc. The unit automatically reverts to Tuner mode. You may eject a disc with the unit powered off. The unit will remain off after the disc is ejected.

**Resetting the Loading Mechanism-** If the disc loads abnormally or an abnormal core mechanism operation occurs, touch and hold **▲** to reset the loading mechanism. Normal operation resumes.

**Accessing DVD Mode-** To switch to DVD mode when a disc is already inserted, touch **SRC** on the TFT LCD screen to access the source menu. Touch the disc icon.

## ***Viewing an Alternate Picture Angle (DVD Only)***

Some DVDs contain scenes that have been shot simultaneously from different angles. For discs recorded with multiple angles, touch Angle on the second page of DVD on-screen controls to toggle available angles of the on-screen image.

## ***Multi-Language Discs (DVD Only)***

**Changing Audio Language-** If you are watching a disc recorded in multiple languages, touch **AUDIO** on the TFT LCD screen to choose a language. Each time the icon is touched the language will change.

**Changing Subtitle Language-** If you are watching a disc recorded in multiple languages with subtitles, touch **Language** on the TFT LCD screen to choose the language that you would like the subtitles to appear.

## ***Playback Information***

During DVD and VCD playback, touch the TFT LCD screen to display playback information on the screen, including the current playback time.

### **DVD Playback Information**

- DVD Video – Format of current disc.
- Time 00:01:30/00:36:10 – Indicates the playback time of the current track.
- Title 5/08 – Indicates the fifth of 8 titles on the DVD is currently playing.
- Chapter 2/16 – Indicates that the second of 16 chapters on the DVD is currently playing.

### **VCD Playback Information**

- VCD2.0 – Format of current disc.
- Time 00:01:30/00:36:10 – Indicates the playback time of the current track.

**VX6020**

## General Disc Information

### Disc Properties

Symbol	12cm Disc Properties	Max Play Time
	Single side single layer (DVD-5)	(MPEG 2 Method)
	Single side double layer (DVD-9)	133 minutes
	Double side single layer (DVD-10)	242 minutes
	Double side double layer (DVD-18)	484 minutes
	Single side single layer (VCD)	(MPEG 1 Method)
		74 minutes
	Single side single layer	74 minutes

### Disc Symbols

Symbol	Meaning
	Number of voice languages recorded. The number inside the icon indicates the number languages on the disc (maximum of 8).
	Number of subtitle languages available on the disc (maximum of 32).
	Number of angles provided (maximum of 9).
	Aspect ratios available. "LB" stands for Letter Box and "PS" stands for Pan/Scan. In the example on the left, the 16:9 video can be converted to Letter Box video.
	Indicates the region code where the disc can be played. <ul style="list-style-type: none"><li>Region 1: USA, Canada, East Pacific Ocean Islands</li><li>Region 2: Japan, Western Europe, Northern Europe, Egypt, South Africa, Middle East</li><li>Region 3: Taiwan, Hong Kong, South Korea, Thailand, Indonesia, South-East Asia</li><li>Region 4: Australia, New Zealand, Middle and South America, South Pacific Ocean Islands/Oceania</li><li>Region 5: Russia, Mongolia, India, Middle Asia, Eastern Europe, North Korea, North Africa, North-West Asia</li><li>Region 6: Mainland China</li><li>ALL: All regions</li></ul>




# VX6020



## CD OPERATION

### CD Main Menu

From the Main Menu Screen touch the DISC icon or insert a CD into the disc slot, label side up. Playback begins in CD mode when a disc is inserted correctly.

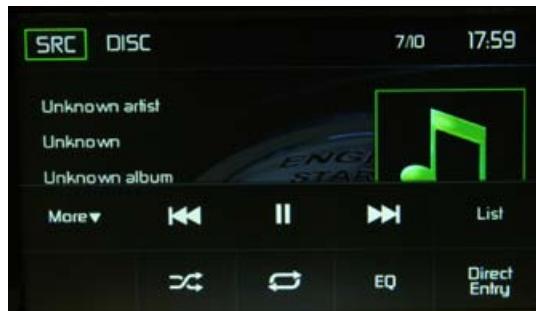

**Figure 25. CD Main Menu**

**SRC Icon-** Touch this icon to return to the Main Menu Screen.

**DISC-** Displays the current source.

**Track Number-** Lists the current track playing and the total number of tracks contained on the disc.

**Time Display-** This indicator displays the time as entered by the user in the Settings Menu.

**CD Disc Information Display-** Displays the artist, the title of the track and the title of the album.

**More ( ▲/▼ )-** Touch the ▲/▼ icons to display the next or previous page of the Disc menu.

**◀◀ Previous-** Touch this icon to play the previous track.

**▶/II Play/Pause-** Touch this icon to begin disc playback. Touch this icon again to pause disc playback.

**▶▶ Next-** Touch this icon to play the next track.

**List-** Touch this icon to access the list of tracks contained on the disc. Touch a desired track icon twice and the track will begin playing.

**▷◁ Shuffle-** Touch this icon to play tracks in the directory in a random order. The icon will light on the main CD screen.



VX6020

**Repeat**- Touch this icon to repeat playback of the current track. The icon on the TFT LCD screen will light and small number 1 will appear below the icon and the track will repeat. Touch this icon a second time and the album will repeat. The icon on the TFT LCD screen will light and small letter a will appear below the icon and the album will repeat. Touch the icon again the repeat function will be cancelled. The icon on the TFT LCD screen will dim and playback of the remainder of the disc will resume.

**EQ - Equalizer**- Touch this icon to access the Equalizer Control Menu (see "Adjusting Equalizer Controls").

**Direct Entry**- Touch this icon to the display the Direct Entry Screen.

**Track Elapsed Playback Time**-The elapsed playback time of track is displayed on the on the TFT LCD screen.

**Track Total Playback Time**-The total playback time of track is displayed on the main CD screen.

### CD List

Touching the List icon will display the CD List Screen. The CD List Screen illustrates the contents of a CD disc. The contents are divided into folders and various file types. The file types are audio tracks, Audio Video Interleave (AVI) files, and image files such as JPEGS. AVI files is a format designed to store both audio and video data for simultaneous playback. Touching the icon will display the files present on the disc.



Figure 26. CD List Screen

**(♪) Audio Files**- Touch the audio file icon to display the audio files. Touch the audio file icon to select a track. Touch the audio file icon again to confirm and playback will begin.

**(■) Video Files**-Touch the video file icon to display the video files. Touch the video file icon to select a video file. Touch the video file icon again to confirm and playback will begin.





**()** **Image Files (JPEG etc)**- Touch the image icon to display a folder or individual JPEG files. Touch the image icon to select a folder or an individual JPEG file. In the case of a JPEG folder touch the folder icon twice and the contents of the folder will be displayed. Touch the JPEG image icon to select and view an individual JPEG file.

**()** **Folders**- Touch the icon to display the folder/file hierarchy. Touch the folder icon twice and the contents of the folder will be displayed. Touch the file's icon to select a file. Touch the icon again to confirm and open the file.

## Track Direct Entry

When the Direct Entry icon is touched the Direct Entry Screen appears. The user can manually select a track by touching the corresponding number. After entering the track numbers touch the OK icon. If a wrong digit is entered touching the green arrow will remove the number. After touching OK playback will begin.



Figure 27. CD Track Direct Entry Screen

## Controlling Playback

**Inserting a Disc**- Upon inserting a CD, disc play begins. You cannot insert a disc if there is already a disc in the unit or if the power is off.

**Ejecting a Disc**- Press the on the front of the unit to eject the disc. The unit automatically reverts to Tuner mode. You may eject a disc with the unit powered off. The unit will remain off after the disc is ejected.

**Resetting the Loading Mechanism**-If the disc loads abnormally or an abnormal core mechanism operation occurs, press and hold the to reset the loading mechanism. Normal operation resumes.

**Pausing Playback**- Touch the Play/Pause () icon to suspend or resume disc play.

**Moving Through Tracks**- Touch the Next () icon to advance to the next track on the disc. Touch the Previous () icon to move to the previous track.



VX6020

**Repeat Playback**- Touch the  icon to alter repeat mode according to the following:

- CD-DA: Repeat Track > Repeat Album > Repeat Off
- CD-R/RW: Repeat Track > Repeat Album > Repeat Off

**Random Play Select**-Touch the Random () icon to play the tracks on the disc in a random, shuffled order. Touch the Random () icon again to cancel Random Play mode.

**NOTE: CD-R and CD-RW will not play unless the recording session is finalized.**

## MP3/WMA OPERATION

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. Insert a MP3 Disc into the disc slot, label side up. Playback begins in MP3 mode when a disc is inserted correctly. The unit plays the songs in the order they were burned on to the disc. The unit will play a MP3 disc with up to 500 songs and/or 200 different folders. The menu for playing audio MP3 music files is the same as previously described for CD discs.

### ***Media and File Requirements***

This player allows you to play back MP3 and WMA files recorded onto CD-R/RWs, DVD+R/RWs, and DVD-R/RWs. For CD-RW discs, please make sure it is formatted using the full method and not the quick method to prevent illegal disc operation.

For the greatest file capacity, Dual Layer DVD's can be used when burning music to a disc.

### ***MP3 Format Compatibility***

The file naming formats listed below are compatible with this unit:

- ISO 9660 – file name: 12 characters, file extension: 3 characters
- ISO 9660 – file name: 31 characters, file extension: 3 characters
- Joliet – 64 characters

If the file or folder name does not conform to ISO 9660 file system standards, it may not be displayed or played back correctly. Use the following settings when compressing audio data for your MP3 disc:

- Transfer Bit Rate: 128kbps
- Sampling Frequency: 48kHz

When recording MP3 up to the maximum disc capacity, disable additional writing. For recording on an empty disc up to maximum disc capacity, use the "Disc at once" setting.



# VX6020



## **MP3 Playing Order**

When selected for play, files and folders are accessed in the order they were written by the CD writer. As a result, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA files are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99".

## **Controlling Playback**

**Inserting a Disc-** Upon inserting a MP3/WMA disc, disc play begins. You cannot insert a disc if there is already a disc in the unit or if the power is off.

**Ejecting a Disc-** Press the **▲** icon on the front of the unit to eject the disc. The unit automatically reverts to Tuner mode. You may eject a disc with the unit powered off. The unit will remain off after the disc is ejected.

**Resetting the Loading Mechanism-** If the disc loads abnormally or an abnormal core mechanism operation occurs, press and hold the **▲** icon to reset the loading mechanism. Normal operation resumes.

**Playing MP3/WMA Files-** After inserting a MP3/WMA disc, files will play in the sequence of the "Root" directory.

**NOTE:** *When burning MP3 / WMA files onto a DVD disc, use the 2X or 4X burning option, if available. This slower burning speed will help eliminate buffer errors and increase disc reading reliability. Also, use folders when burning large numbers of songs / files to a disc for easy music navigation. Select the "Disc at Once" option and close your disc.*

**NOTE:** *CD-R and CD-RW will not play unless the recording session is finalized.*

**Pausing Playback-** Touch the Play/Pause (**▶■**) icon to suspend or resume playback.

**Moving Through Tracks-** Touch the Next (**▶▶**) icon to advance to the next track  
Touch the Previous (**◀◀**) icon to move to the previous track on the MP3 disc.

**Repeat Playback-** Touch the Repeat (**🔁**) icon to alter repeat mode as follows:  
Repeat Single > Repeat Folder > Repeat All > Repeat Off.

**Random Play Select-** Touch the Random (**🔀**) icon to play the tracks on the MP3 disc device in a random, shuffled order. Touch the Random (**🔀**) icon again to cancel Random Play mode.



VX6020

## RADIO TUNER OPERATION

### Radio Tuner TFT Display

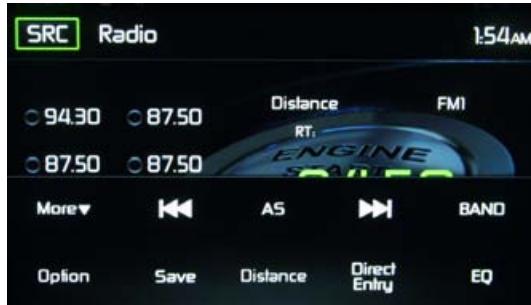


Figure 28. Radio Tuner TFT Display Screen

**SRC:** Touch to view the SOURCE MENU and select a new playback source.

**Radio:** Displays the current source.

**Time Display-** This indicator displays the time as entered by the user in the Settings Menu.

**Preset List-** Provides a display of the preset frequencies. Touch to recall a preset station. The radio can store 6 FM1, 6 FM2, 6 FM3, 6 AM1 and 6 AM2 frequency presets.

**Local/Distance-** Displays the local distant setting.

**Stereo-** Displays stereo radio signal reception.

**FM1-** Displays the current preset frequency band .

**P 1 through P6-** Displays the current preset frequency within the preset frequency band that currently playing.

**107.7 MHz:-** Displays the radio station frequency that is currently playing.

**More ( ▲/▼ )-** Touch the ▲/▼ icons to display the next or previous page of the Disc menu.

**◀◀ Previous/Manual Seek-** Touch this icon to momentarily seek the previous available radio station or touch and hold to manually tune the radio in 200KHz increments. Default mode is resumed after 10 seconds of inactivity.



# VX6020



## AS:

Touch to automatically search and store all strong stations.

**▶| Next/Manual Seek-** Touch this icon to momentarily seek the next available radio station or touch and hold to manually tune the radio in 200KHz increments. Default mode is resumed after 10 seconds of inactivity.

**Band-** Touch to change between AM/FM bands.

**Option-** Touch to activate the Clock Time, RDS and program type (PTY) related search function.

**Save-** Touch this icon to save a radio station frequency in one or all six preset stations on FM band 1,2,3 or AM band 1 and 2.

**Local/Distance-** Touch to select and activate local and distant station reception. When the Local function is on, only radio stations with a strong local radio signal are played.

**Direct Entry-** Touch this icon to the display the Direct Entry Screen.

**EQ - Equalizer-** Touch this icon to access the Equalizer Control Menu (see "Adjusting Equalizer Controls").

## Option

Touching the Options icon will display the following RDS, CT and PTY functions on the Tuner TFT LCD display screen.



**Figure 29. Radio Tuner Option Screen**

**CT/RDS-** (Clock Time, RDS feature) When enabled the radio system clock is synchronized with broadcasters time signal setting the clock automatically. In some regions where daylight savings time is not adhered to, the system clock will be off by 1 hour. In these cases, set CT to OFF and manually set the clock.

**VX6020**

**PTY**- This function displays the program category of the current station such as category (news, sports, talk etc.) Use the scroll bar to select various categories. Touching the Back icon returns the user to main tuner screen.



**Figure 30. PTY Screen**

There are 27 categories in the PTY function.

1. None	8. Adult Hits	15. Jazz	22. Personality
2. News	9. Soft Rock	16. Classic	23. Public
3. Info	10. Top 40	17. RGB	24. College
4. Sports	11. Country	18. Soft RGB	25. Weather
5. Talk	12. Oldies	19. Language	26. Test
6. Rock	13. Soft	20. Religious Music	27. Alert
7. Classic Rock	14. Nostalgia	21. Religious Talk	

## Direct Entry Tuning

When the Direct Entry icon is touched the Direct Entry Screen appears. The user can enter the desired radio station frequency using the on-screen number pad. After entering the radio station frequency touch the OK icon. If a wrong digit is entered touching the green arrow will remove the number. After touching OK the radio will tune to the entered station playback will begin.



**Figure 31. Radio Direct Entry Screen**



## Using Preset Stations

Six numbered preset icons store and recall stations for each band. All six stored stations (P1 through P6) for the current band appear on the screen.

### ***Storing a Station***

1. Select a band (if needed), then tune to a desired radio station frequency.
2. Touch the on-screen Save icon. The following screen will appear.



**Figure 32. Preset Save Screen**

3. Touch the preset number in which you would like to store the current station. The station frequency is displayed at the top of the menu. The preset number will appear highlighted. The station frequency will be stored in the highlighted preset. The station will be displayed Tuner TFT LCD screen. Station can also be stored by touching and holding the preset icon to store the station currently tuned as a preset.

## Recalling a Station

1. Select a preset band (if needed).
2. Touch an on-screen preset icons (P1 through P6) to select the corresponding stored station.



**Figure 33. Preset Station Screen**



**VX6020**

## **Auto Store (AS)**

To select six strong stations and store them in the current band. This feature is most useful when travelling in an area where you are not familiar with the local stations.

1. Select a band (if needed).
2. Touch the AS icon to activate the Auto Store function. FM Band 1 will be filled first, then Band 2, Band 3 will be filled if enough stations are detected. The AM Bands function in a similar manner. As new stations are found they will replace stations already stored in that band.

**NOTE: If stations have already been set as favorites, activating the Auto-Store feature will erase those stations and enter the new strong stations.**

## **Local/Distance Radio Station Seeking**

When the Local function is on, only radio stations with a strong local radio signal are played. To activate the Local function in the AM/FM tuner mode, touch the More on the Tuner TFT LCD screen. The Local/Distance icon is revealed. Touch Local or Distance to turn the local/distance function on or off. When the Local or Distance function is active, the Local or Distance indicator at the top of the screen is illuminated.



# VX6020

---



This page intentionally left blank



VX6020

## iPod®/iPhone® CONTROLS

### Accessing iPod® Mode

The user can control an iPod®/iPhone® using the touch screen to access, albums, songs, videos, etc.

**NOTE: For basic connectivity, the iPod®/iPhone® must be connected to the unit using the iPod®/iPhone® adapter cable that came with the iPod/iPhone (also available separately). For iPod®/iPhone® video playback, use an adapter cable equipped with a USB connector and a 3.5 mm AV jack. Be sure your iPod®/iPhone® has the latest Apple firmware installed to avoid connectivity issues.**

The unit will automatically switch to iPod® mode when an iPod®, iPod® touch or iPhone® is plugged into the front panel mini USB connector. Also the iPod® can be accessed from the Main Menu Screen by touching the iPod® icon (only available when an iPod® or iPhone® is connected to the front panel mini USB connector)

### iPod®/iPhone® Main Menu



Figure 34. iPod®/iPhone® Main Menu

**SRC Icon-** Touch this icon to return to the Main Menu Screen.

**iPod-** Displays the current source.

**Track Number-** Lists the current audio track playing and the total number of audio tracks in audio mode. Lists the current video folder and the total number of video folders in video mode.

**Time Display-** This indicator displays the time as entered by the user in the Settings Menu.

**More ( ▲/▼ )-** Touch the ▲/▼ icons to display the next or previous page of the iPod® menu.





# VX6020



◀◀ **Previous**- Touch this icon to play the previous track.

▶/II **Play/Pause**- Touch this icon to begin playback. Touch this icon again to pause playback.

▶▶ **Next**- Touch this icon to play the next track.

**List**- Touch this icon to access the list of audio and video files contained on the iPod®. Touch a folder icon and the contents of the folder will be displayed. Touch a desired track icon twice and the track will begin playing.

🔀 **Shuffle**- Touch this icon to play audio or video tracks in a random order. The icon will light on the main TFT LCD screen.

🔁 **Repeat**- In audio mode touch this icon to repeat playback of the current audio track. The icon on the main TFT LCD screen will light and a small letter A will appear below the icon and the all the audio tracks will repeat. Touch this icon again and single track will repeat. The icon on the TFT LCD screen will light and small number 1 will appear below the icon. Touch the icon again the repeat function will be cancelled. The icon on the main TFT LCD screen will dim and playback of the remainder of the tracks will resume.

**EQ - Equalizer**- Touch this icon to access the Equalizer Control Menu (see "Adjusting Equalizer Controls").

**Direct Entry**- Touch this icon to the display the Direct Entry Screen.

## iPod® List

Touching the List icon will display the iPod® List Screen. The iPod® List Screen illustrates the audio and video files present in the iPod®. The contents are divided into folders and various file types. The file types consist of audio and video files. Touching the folder icon will display the files present in the folder.



Figure 35. iPod®/iPhone® List Screen



VX6020

**()****Audio Files**- Touch the audio file icon to display the audio files. Touch the audio file icon to select a track. Touch the audio file icon again to confirm and playback will begin.

**()****Video Files**- Touch the video file icon to display the video files. Touch the video file icon to select a video file. Touch the video file icon again to confirm and playback will begin.

**()****Image Files (JPEG etc)**- Image files are selected and controlled by the iPod®. Touch the image icon and the following message will appear:

***Use the iPod® to control/select photos.***

***Touch screen to return to the menu.***

**()****Folders**- Touch the icon to display the folder/file hierarchy. Touch the folder icon and the contents of the folder will be displayed. Touch the file's icon to select a file. Touch the icon again to confirm and open the file.

## Controlling Playback

### Direct Entry

When the Direct Entry icon is touched the Direct Entry Screen appears. The user can manually select a track by touching the corresponding number. After entering the track numbers touch the OK icon. If a wrong digit is entered touching the green arrow will remove the number. After touching OK playback will begin.



Figure 36. iPod®/iPhone® Track Direct Entry Screen

### Moving Through Tracks

Touch the Next ( ) icon to advance to the next track on the iPod®.

Touch the Previous ( ) icon to move to the previous track on the iPod®.

### Pausing Playback

Touch the Play/Pause ( ) icon to suspend or resume playback.





# VX6020



**PIC-** When the PIC icon is touched the picture adjust screen appears. Touch this icon during playback to adjust the color brightness, contrast, saturation and hue. The levels can be adjusted to suit the users preferences. The adjustments are accomplished by touching the + or - icons to decrease or increase the desired setting. The settings have range of 1 to 20.

**NOTE:** *The Picture Adjustment Screen will turn OFF automatically if no adjustment is made within five seconds or if any other part of the screen is touched.*



Figure 37. iPod®/iPhone® DVD Picture Adjust Screen



VX6020

## USB AND SD CARD CONTROLS

### Inserting a USB or SD Card Device

#### USB Device

When using a USB memory device, a USB cable adapter is required. The adapter cable will accept a USB device on one end and connect to unit's Mini USB connector on the front panel of the unit.



Figure 38. Mini USB to USB Adapter Cable

**NOTE:** For iPod®/iPhone® video playback, use an adapter cable equipped with a USB connector and a 3.5 mm AV jack. For basic connectivity, the iPod®/iPhone® must be connected to the unit using the iPod®/iPhone® adapter cable that came with the iPod/iPhone (also available separately) and a adapter cable to connect to the unit's mini USB connector. Be sure your iPod®/iPhone® has the latest Apple firmware installed to avoid connectivity issues. The USB/SD ports will recognize most USB/SD flash memory devices and portable hard drives. The unit supports up to 32GB SD cards however SD cards larger than 32GB may not be recognized. Portable hard drives (hard drives must be formatted to FAT32 and NTFS is not supported).

#### SD Device

SD cards are inserted into the SD card slot until a click is heard. The click will ensure that the card is securely inserted to the unit. The unit will read the audio/video files on USB/SD devices automatically.

1. Locate the USB/SD connector on the front of the radio.

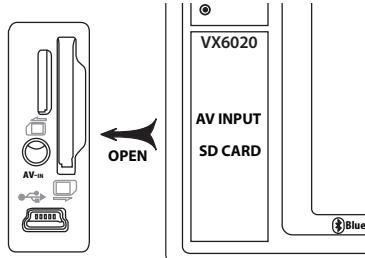


Figure 39. USB and SD Connector Location

2. Lift the protective cover to reveal the mini USB connector and SD card slot.
3. Insert the USB/SD device into the mini USB/SD connectors.

To remove the USB or SD device, touch the SRC icon or use the SOURCE MENU to switch to another mode, and then remove the USB or SD device from the connector.





# VX6020



## USB and SD Operation

### SDHC and USB Main Menu



**Figure 40. SDHC and USB Main Menu**

**SRC Icon**- Touch this icon to return to the Main Menu Screen.

**iPod**- Displays the current source.

**Track Number**- Lists the current audio track playing and the total number of audio tracks in audio mode. Lists the current video folder and the total number of video folders in video mode.

**Time Display**- This indicator displays the time as entered by the user in the Settings Menu.

**More ( ▲/▼ )**- Touch the ▲/▼ icons to display the next or previous page of the SD/USB menu.

**◀◀ Previous**- Touch this icon to play the previous track.

**▶/II Play/Pause**- Touch this icon to begin playback. Touch this icon again to pause playback.

**▶▶ Next**-Touch this icon to play the next track.

**List**- Touch this icon to access the list of audio and video files contained on the iPod®. Touch a folder icon and the contents of the folder will be displayed. Touch a desired track icon twice and the track will begin playing.

**▷◁ Shuffle**- Touch this icon to play audio or video tracks in a random order. The icon will light on the main TFT LCD screen.



VX6020

**(-repeat)** **Repeat**- In audio mode touch this icon to repeat playback of the current audio track. The icon on the main TFT LCD screen will light and a small letter A will appear below the icon and the all the audio tracks will repeat. Touch this icon again and single track will repeat. The icon on the TFT LCD screen will light and small number 1 will appear below the icon. Touch the icon again the repeat function will be cancelled. The icon on the main TFT LCD screen will dim and playback of the remainder of the tracks will resume.

In video mode touch this icon during playback to repeat the current track. The icon on the main TFT LCD screen will light and small number 1 will appear below the icon and the track will repeat. Touch the icon again to repeat all the tracks will repeat. The icon on the main TFT LCD screen will light and small letter A will appear below the icon and all the tracks will repeat. Touch the icon again the repeat function will be cancelled. The icon on the main TFT LCD screen will dim and playback of the remainder of the tracks will resume.

**(EQ) Equalizer**- Touch this icon to access the Equalizer Control Menu (see "Adjusting Equalizer Controls").

**Direct Entry**- Touch this icon to the display the Direct Entry Screen.

### **SDHC and USB List**

Touching the List icon will display the SD/USB List Screen. The SD/USB List Screen illustrates the audio and video files present in the SD/USB. The contents are divided into folders and various file types. The file types consist of audio and video files. Touching the folder icon will display the files present in the folder.



**Figure 41. SDHC and USB List Screens**

**(audio file icon) Audio Files**- Touch the audio file icon to display the audio files. Touch the audio file icon to select a track. Touch the audio file icon again to confirm and playback will begin.

**(video file icon) Video Files**- Touch the video file icon to display the video files. Touch the video file icon to select a video file. Touch the video file icon again to confirm and playback will begin.



**()****Image Files (JPEG etc)**- Touch the image icon and the following message will appear:

***Use the SD/USB to control/select photos. Touch screen to return to the menu.***

**()****Folders**- Touch the icon to display the folder/file hierarchy. Touch the folder icon and the contents of the folder will be displayed. Touch the file's icon to select a file. Touch the icon again to confirm and open the file.

### **Direct Entry**

When the Direct Entry icon is touched the Direct Entry Screen appears. The user can manually select a track by touching the corresponding number. After entering the track numbers touch the OK icon. If a wrong digit is entered touching the green arrow will remove the number. After touching OK playback will begin.



**Figure 42. SDHC and USB Track Direct Entry Screen**

### **Moving Through Tracks**

Touch the Next (▶) icon to advance to the next track on the SD/USB.

Touch the Previous (◀) icon to move to the previous track on the SD/USB.

### **Pausing Playback**

Touch the Play/Pause (▶||) icon to suspend or resume playback.



**VX6020**

**PIC-** When the PIC icon is touched the picture adjust screen appears. Touch this icon during playback to adjust the color brightness, contrast, saturation and hue. The levels can be adjusted to suit the users preferences. The adjustments are accomplished by touching the + or - icons to decrease or increase the desired setting. The settings have range of 1 to 20.



**Figure 43. SDHC and USB Picture Adjust Screen**

**NOTE:** *The Picture Adjustment Screen will turn OFF automatically if no adjustment is made within five seconds or if any other part of the screen is touched.*



# VX6020



## AV-In1/AV-In2 CONTROLS

### AV-In1

AV-In1 is used for playback of audio/video from an external device connected to the unit through a 3.5mm jack located on the front panel. The unit can increase or decrease the volume of the connected device. All other controls are done on the connected device.



Figure 44. AV-In1 Screen (No Signal)

### AV-In2

AV-In2 is used for playback of audio/video from an external device connected through RCA connectors located on the back of the unit. The unit can increase or decrease the volume of the connected device. All other controls are done on the connected device.



Figure 45. AV-In2 Screen (No Signal)

**NOTE:** *Audio/Video device must be connected to the unit using an audio/video adapter cable that is available separately.*

**NOTE:** *The unit can not directly control external devices connected to the Media Link. Please refer to the owner's manual that came with the external device for instructions.*

**NOTE:** *Video will only play when the vehicle parking brake is engaged. This is designed to meet FMVSS standards and laws. The brake must be connected for this feature to operate.*



VX6020

## BLUETOOTH OPERATION

Bluetooth® was launched by a special interest group (SIG) comprised of Ericsson Inc., Intel Corp., Nokia Corp., Toshiba and IBM in 1998, and it is currently developed by nearly 2,000 companies worldwide. The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by Audiovox Corporation is under license. Other trademarks and trade names are those of their respective owners.

Bluetooth® technology has the capability to wirelessly synchronize and transfer data among devices. The Bluetooth® audio capabilities can be used for mobile phones hands free applications. Bluetooth® has many profiles and the unit is compatible with most Bluetooth® enabled mobile phones. Before attempting to use the Bluetooth® functions on the unit, please make sure your mobile phone supports Bluetooth® functions.

**NOTE:** *The line-of-sight distance between this unit and your mobile phone must be 8 feet (2.4 meters) or less for sending and receiving voice and data via Bluetooth® wireless technology.*

Please make sure your mobile phone supports Bluetooth® functions (Headset or Handsfree profiles or both). Adhere to the following guidelines for successful operation.

- Before using Bluetooth® functions, you must pair your mobile phone to the VX6020 unit (see "Pairing the Bluetooth® System with Your Mobile Phone and Unit"). To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.
- Try to perform pairing within a few minutes of the mobile phone being turned on.
- Once the unit has been paired with the mobile phone, the unit's model number, "VX6020", will be displayed on the mobile phone.
- To achieve the best performance, always keep the mobile phone within 10 feet (3 meters) of the unit.
- Always keep a clear path between the mobile phone and the unit. Never place a metal object or any other obstacle between the mobile phone and the unit.
- Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the VX6020.
- Before accepting or making a call, make sure your mobile phone's "Bluetooth® function" is turned on.
- To ensure the best conversation quality/performance, stay within 3 feet (1 meter) of the units microphone (see figure 2.) when talking.
- To manually disconnect the mobile phone from the unit, touch the "Chain Link" icon on the Bluetooth® user interface (next to the mobile phone name) and the Bluetooth® device will be "disconnected", but still paired.





# VX6020



## Bluetooth User Interface

The on-screen icons and information for Bluetooth® functions are outlined below.



**Figure 46. Bluetooth User Interface Screen**

**SRC Icon**- Touch this icon to return to the Main Menu Screen.

**Bluetooth**- Displays the current source.

**LGVX9200**- Indicates the device that is paired with the unit.

()- Indicates whether the unit is connected with a Bluetooth® device. Touch to connect to a Bluetooth® device.

()- Touch to disconnect from a Bluetooth® device.

**VX6020 Device Name:** Provides the name that will appear on the Bluetooth® device.

**Scan**- Touch the icon to search for Bluetooth® devices.

**Options**- Touch to display the Bluetooth® options page.



VX6020

## Hands Free Profile (HFP)

To use a mobile phone with this unit, it is necessary to first establish a connection using Bluetooth® wireless technology. The connection is normally established using Hands Free Profile (HFP), which gives you full control of functions available on the mobile phone source. However, depending on your mobile phone, the connection may be made using Head Set Profile (HSP), making some functions unavailable. This is a limitation of your mobile phone, not the VX6020.

Since there are a number of Bluetooth® mobile phone implementations available on the market, operations with your Bluetooth® mobile phone using this unit vary greatly.

Please refer to the instruction manual that came with your Bluetooth® mobile phone along with this manual while operating your mobile phone with this unit.

## Pairing the Your Mobile Phone with the Unit

Your mobile phone can initiate a search for new devices and pair to the unit. The following paragraphs describes the pairing process.

**NOTE: The following procedures are generic. Procedures for pairing mobile phones may vary slightly from mobile phone manufacturer to mobile phone manufacturer.**

1. Touch the MENU on the front panel to access the source menu.
2. Touch the BT icon on the source menu and the Bluetooth® user interface screen will appear.
3. Touch the Options icon and the following screen will appear:



**Figure 47. Bluetooth Option Menu**

4. On the Options submenu set the Bluetooth function to ON.
5. On the Options submenu set the Auto Connect function to ON.
6. Set the mobile phone Bluetooth® discover mode to ON.

**NOTE: Some discovery modes have a time limit usually a minute before they are automatically turned OFF.**

7. Touch the "Scan" icon on the unit's Bluetooth® user interface screen. Available devices will appear with the "Pair" icon next to it.
8. Touch the "Pair" icon on the unit's Bluetooth® user interface screen.





9. A prompt to pair or bond should appear on your mobile phone. Accept the request and initiate the process.

**NOTE: Some mobile phones require a "pass key" or pairing code to connect. If your phone requires a pass key or pairing code, you will need to enter this number. The default pairing code for many mobile phones is "0000". The default code for the unit is "1234".**

10. A prompt to enter a PIN number or passkey for the unit should appear. The default passkey for the unit is "1234".

11. At this point a prompt stating pairing successful should appear. Another prompt should appear asking connect to the unit, Yes or NO. Touch Yes. The mobile phone and the unit should connect. The mobile phone should display a message similar to "Device Connected" and the mobile phone and the unit are now connected. VX6020 will appear on the mobile phone list of devices.

## Managing Incoming Calls

When connected to a Bluetooth® mobile phone, the unit will mute audio output, pause CD play, and change to the Bluetooth® screen below when a call is received. The incoming phone number or assigned name for that number will appear on the screen. An audible tone will sound from the unit and a graphic display will appear on the front panel.



**Figure 48. Bluetooth Incoming Call Screen**

1. icon: Touch to answer an incoming call.
2. icon: Touch to end an incoming call.



VX6020

## Making an Outgoing Call

Outgoing calls can be performed in two manners. The outgoing call can be direct dialed using the front panel keypad or the by touching the either the Phonebook or Call History icons, selecting a name and touching the phone number.

### Direct Dialing:

1. Press the front panel MENU button and then touch the BLUETOOTH icon to access the Bluetooth® main menu. The following screen will appear:



Figure 49. Bluetooth Direct Dial Screen

2. Use the 0-9, \*/+, and # icons to input the phone number. If necessary touch the green arrow icon to clear the last digit or the entire number and start over.
3. After entering the phone number, touch the  icon to dial the call. The number dialed will be displayed on the screen.
4. To end the call, touch the  icon.

## Answering an Incoming Call

To answer an incoming call touch the  icon. For best reception, speak loudly and clearly into the units microphone (see figure 2.). To end the conversation, touch the  icon.

## Rejecting an Incoming Call

Touch the **Transfer to Phone** icon to reject an incoming call. The call will revert to your mobile phone and be left for voice mail.

## Volume Control

To increase or decrease the volume level of an incoming call, turn the rotary knob on the front panel or press the VOL+/VOL- icons on the remote control.

## Audio Mute

To mute the phone call audio from the unit when a call is received, press the front panel rotary knob. Press the front panel rotary knob again and phone call audio will be restored to the unit.





## Call Log

The call log consists of dialed numbers, received calls and missed calls.

**NOTE:** Not all wireless phones allow access to missed, received or dialed calls and some will not allow uploading of your wireless phone's address book.



**Figure 50. Bluetooth Call Log Screen**

**Missed Calls List-** The Missed Calls List retrieves the list of missed numbers from your wireless phone if your wireless phone allows the function. The last missed number is the first number on the list. Touch the Missed Calls menu option to view the list. To make a call from the Missed Calls list, touch the call's name. Touch the phone number and it will be dialed.

**Received Calls-** The Received Calls list retrieves the received numbers stored on your wireless phone if your wireless phone allows the function. To access the Received list, touch the Received Calls menu option. The last received number is the first number on the list. To make a call from the Received Calls list, touch the name. A new screen will appear with the name on the top and the phone number below. Touch the phone number and it will be dialed.

**Dialed Calls-** The Dialed Calls list retrieves the list of dialed numbers from your wireless phone if your wireless phone allows the function. The last dialed number is the first number on the list. Touch the Dialed Calls menu option to view the list. To make a call from the Dialed Calls list, touch the name. A new screen will appear with the name on the top and the phone number below. Touch the phone number and it will be dialed.



VX6020

## Call Transfer

While talking, to transfer audio from the unit back to the mobile phone, touch the **Transfer to Phone** icon. You can only transfer a call after it has been answered. Touching the **Transfer to Radio** icon will return the audio from the mobile phone to the unit. Touch the **Transfer Call** icon and the following screen will appear:



Transfer to Phone Screen



Transfer to Radio Screen

Figure 51. Call Transfer Screens.

## Bluetooth Music Function

Bluetooth® provides an Advanced Audio Distribution Profile (A2DP) profile for streaming music from a mobile phone or a portable multimedia player (PMP), sometimes referred to as a MP3 player. The unit allows you to play back audio files from your mobile phone or a PMP using a Bluetooth® connection.

**NOTE:** Please quit A2DP mode before attempting to make a phone call, as unexpected results may occur depending on your mobile phone model.

The unit can control a Bluetooth® audio player via Advanced Audio Distribution Profile (A2DP) or Audio/Video Remote Control Profile (AVRCP). Bluetooth® audio players (or Bluetooth® adapters) compatible with these profiles can be connected to this unit. The following screen is used for streaming music.



Figure 52. Bluetooth Audio Control Screen

While listening to audio the following functions are available:

1. Pause/Play (▶||) icon: Touch to pause playback. Touch again to resume playback.
2. Previous (◀) icon: Touch to play the previous track.
3. Next (▶▶) icon: Touch to play the next track.



# VX6020



Functionality varies depending on the profile used:

- A2DP: Stream audio from your Bluetooth® compatible audio player and listen to the music through the unit.
- AVRCP: Play back, pause, select songs, etc. while streaming audio from your Bluetooth® compatible audio player to the unit.

**NOTE:** *Song information (e.g. elapsed playing time, song title, song index, etc.) cannot be displayed on this unit. Since there are a number of Bluetooth® audio players available on the market, operations with your Bluetooth® audio player while using this unit may vary greatly. Please refer to the instruction manual that came with your Bluetooth® audio player.*

When there is an incoming call, the song will be paused. After the incoming call is finished, the screen will return to the music function screen and playback will continue.



VX6020

## NAVIGATION QUICK START GUIDE

Follow these six easy steps and you are on your way.

**NOTE: Before operating your iGO Primo software, please carefully read and follow the instructions provided in the "Warnings and Precautions" section of this manual.**

### Step 1 - Access the navigation function

To access the Navigation function press the front panel Menu button, then touch the Navigation icon.

### Step 2 - Start Up

After the iGO primo software starts, you will see the reminder warning to use your iGO Primo software safely and lawfully.



Figure 53. Navigation Warning Screen

### Step 3 - Access the Main Menu

Touch access the Navigation Menu:



Figure 54. Navigation Main Menu





## Step 4 - Select a Destination

You have many ways to select a destination. Select by touching screen:

- Tap **Destination** to select your destination by entering an address or selecting a place of interest, a location on the map or one of your Favorite destinations. You can also look up your recent destinations from the Smart History, enter a coordinate or use the location saved in a photo.
- Tap **Route Options** to display the route parameters and the route in its full length on the map. You can also perform route-related actions such as editing or canceling your route, setting a start point for the route, picking route alternatives, avoiding parts of the route, simulating navigation or adding the destination to your Favorites.
- Tap **More...** to customize the way the navigation software works, simulate demo routes, or to run some additional applications.
- Tap **Show Map** to start navigating on the map. The icon itself is a miniature live map that shows your current position, the recommended route and the surrounding map area. Tap the icon to enlarge the map to the full screen.

## Step 5 - Map/Guide Along Route

Proceed to the highlighted route and drive while the iGO Primo software provides guidance to your destination.



**Figure 55. Map/Guide Along Route Screen**



VX6020

### Step 6 - Arriving at Your Destination

When you are near your destination, the destination is indicated by a checkered flag symbol .



**Figure 56. Destination Arrived Screen**

Refer to the XV6020 Navigation Operating Manual to become familiar with the many options available on your iGO Primo software.



**VX6020**

---



**This page intentionally left blank**

**VX6020**

## STEERING WHEEL CONTROL (SWC) OPERATION (if equipped)

### SWC Functions

The following controls are available for most vehicles:

1. Volume Up	4. Seek Up	7. Band
2. Volume Down	5. Seek Down	8. Bluetooth Send
3. Mute	6. Source	9. Bluetooth End

\*\*All SWC functions may not be available on some vehicles.

To access the SWC Controls for programming, touch the Steering Wheel icon on the second page of the main menu.



SWC Programming Screen 1



SWC Programming Screen 2

Figure 57. SWC Programming Screens

## SWC Programming

### Keys

1. All SWC Keys can be programmed. Keys can be reassigned via the programming interface.
2. Touch a key and a screen of the functions will appear that are assignable to keys 1-16.
  - a. Select each key and assign a function to each from the menu displayed.
  - b. Upon touching last key assignment you will see the original screen with "pair" and "reset" icons.
  - c. Touch "pair" icon and then touch each key on the SWC corresponding to assigned functions 1-16. Then the keys are now reprogrammed.

The Reset icon is used to remove all programming of SWC keys 1-16.



# VX6020



## REAR CAMERA OPERATION

This unit is "camera ready." Before accessing any camera features, you must install a rear video camera.

When the camera is not installed and the function is accessed by the gear selector being placed in reverse or by the unit's menu, the message "No Signal!" will be displayed and the following screen will appear.



**Figure 58. Rear Camera Screen**

When the camera is installed, the rear view image of what is behind the vehicle will appear when the vehicle is placed in reverse gear. When leaving reverse gear, the unit displays the previous screen.

**VX6020**

## TROUBLESHOOTING

### Troubleshooting

Problem	Cause	Corrective Action
<b>GENERAL</b>		
Unit will not power on	Radio Fuse open	Install new fuse with correct rating
	Car battery fuse open	Install new fuse with correct rating
	Illegal operation	Press the RESET button located in the middle of the left side of the front panel
No/low audio output	Improper audio output connection	Check wiring and correct
	Volume set too low	Increase volume level
	Improper "MUTE" connection	Review wiring diagram and check "MUTE" connection
	Speakers damaged	Replace speakers
	Heavily biased volume balance	Adjust the channel balance to the center position
	Speaker wiring is in contact with metal part of car	Insulate all speaker wiring connections
Poor sound quality or distortion	Pirated disc is in use	Use original copy
	Speaker power rating not compatible with unit	Connect proper speakers
	Speaker is shorted	Check speaker contact
Unit resets itself when engine is off	Incorrect connection between ACC and positive battery wire	Check wiring and correct



# VX6020



Problem	Cause	Corrective Action
<b>TFT Monitor</b>		
No image	Incorrect connection to parking brake wire	Check wiring and correct
	Parking brake is not engage	Stop vehicle in safe place and apply parking brake
Flashing image or interference appears on screen	DVD is not compatible with current TV system settings	Change setup to accommodate disc
	Improper video signal connections	Check wiring and correct
Prolonged image or improper height/width ratio display	Improper aspect ratio setup	Use correct aspect ratio setting
<b>TUNER</b>		
Weak station searching	Auto antenna is not fully extended	Extend antenna fully or connect the auto antenna control cable properly
	Auto antenna not properly connected	Connect the auto antenna control cable properly
	LOCAL function is activated	Turn LOCAL function off
<b>DISC</b>		
Cannot insert disc	Disc already inside unit	Eject current disc and insert new one
Image blurred, distorted or dark	Disc is illegally copied	Use original disc



**VX6020**

<b>Problem</b>	<b>Cause</b>	<b>Corrective Action</b>
Disc does not play back	Disc is warped or scratched	Use disc in good condition
	Disc is dirty or wet	Clean disc with soft cloth
	Laser pickup is dirty	Clean laser pickup with cleaning disc
	Incompatible disc is used	Use compatible disc
	Disc rating exceeds Parental Lock rating limit	Change Parental Lock settings to lower restriction
	Disc region code is not compatible with unit	Use disc with proper region code
	Disc is inserted upside down	Insert disc with label side up

#### **MP3**

Interruption occurred during playback	Disc is dirty or scratched	Clean disc or replace
	File is damaged/bad recording	Recreate disc with good files



# VX6020



## Disc Error Messages

Message Displayed	Cause	Corrective Action
Loading	Disc is being read	
No Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
	Disc not present in loading compartment	Insert disc
Bad Disc	Disc is dirty	Clean disc with soft cloth
	Disc is upside down	Insert disc with label side up
Unknown disc	Disc format is not compatible with this unit	
Region Error	DVD is not compatible with region code of unit	
Error	Illegal mechanism operation	Press EJECT button for 5 seconds to reset loading mechanism



**VX6020**

## **Care and Maintenance**

1. Use only a clean silicone cloth and neutral detergent to clean the front panel or monitor. A rough cloth and non-neutral detergent (such as alcohol) may result in scratching or discoloration.
2. Do not get water or cleaning fluids on the unit.
3. If the temperature inside the player gets too hot, a protective circuit automatically stops play of the disc. If this occurs, allow the unit to cool before operating the player again.
4. Never insert anything other than a 5" (12 cm) compact disc into the player as the mechanism can be damaged by foreign objects.
5. Do not attempt to use a 3" (8 cm) CD-Single disc in this unit, either with or without an adaptor, as damage to the player and/or disc may occur. Such damage is not covered by the Warranty on this product.
6. The CD player may not operate properly in extreme hot or cold. If such conditions occur, allow the interior of the vehicle to reach a normal temperature before using player.
7. When the vehicle warms up during cold weather or under damp conditions, condensation may appear on the LCD panel. Should this occur, the screen will not operate properly until the moisture has evaporated.
8. We suggest you use a cleaning disc in this unit more frequently than in the unit in your home due to the environmental conditions of the vehicle.





# VX6020

---



**This page intentionally left blank**



**VX6020**

## **SPECIFICATIONS**

### **DVD/CD Player**

Compatible Disc Media: DVD + R / RW (Single and Dual Layer) and CD-R / RW  
Compatible Media Formats: CD-DA, MP3, WMA, VCD, SVCD, Xvid, AVI, MPEG 1/2  
Signal to Noise Ratio: >95dBA  
Dynamic Range: >95dB  
Frequency Response: 20Hz to 20 kHz, -3dB  
Channel Separation: > 60dB @ 1 kHz  
D/A Converter: High performance 24-bit / 192 kHz sample rate, Multi-Bit Sigma-Delta Modulator

### **Video**

Format: NTSC, PAL (auto-detection)  
Output: 1Vp-p (75-ohm)  
Input: 1Vp-p (75-ohm)

### **FM Tuner**

Tuning Range: 87.5MHz - 107.9MHz  
Mono Sensitivity (-30dB): 9dBf  
Quieting Sensitivity (-50dB): 15dBf  
Alternate Channel Selectivity: 70dB  
Signal to Noise Ratio @ 1 kHz: 58dB  
Image Rejection: 80dB  
Stereo Separation @ 1 kHz: >30dB  
Frequency Response: 30Hz - 15 kHz, -3d

### **AM Tuner**

Tuning Range: 530 kHz - 1720 kHz  
Sensitivity (-20dB): 15uV  
Signal to Noise Ratio @ 1 kHz: 50dB  
Image Rejection: 60dB  
Frequency Response: 50Hz - 2 kHz, -3dB

### **Monitor**

Screen Size: 6.2" (Measured diagonally), 16:9 Widescreen  
Screen Type: TFT Liquid Crystal Display (LCD) active matrix  
Resolution: 1,152,000 sub pixels, 800x3 (W) X 480 (H)



# VX6020



## General

Auxiliary Input impedance: 10k

Power Supply: 11 to 16VDC, negative ground

Power Antenna (Blue): 500mA max, current limited protection

Amplifier Remote (Blue/White): 500mA max, current limited protection

Operating Temperature: -20C ~ 65C

Fuse: 15-amp, mini ATO type

DIN chassis dimensions: 7" X 7" X 4" (178mm x 178mm x 100mm)

## CEA Power Ratings



Power Output: 13 Watts RMS x 4 channels into 4-Ohms @ < 1% THD+N

Signal to Noise Ratio: 70dBA below reference (Reference: 1 Watt, 4-Ohms)

Frequency Response: 20 Hz - 20 kHz, -3dB. (Aux Input used as reference input)

Reference Supply Voltage: 14.4VDC

\*Specifications subject to change without notice



**VX6020**

---

**NOTES**





**VX6020**

---





**VX6020**



**Audiovox Electronics Corporation  
Hauppauge, NY 11788  
Technical Assistance: 1-800-323-4815  
www.jensenmobile.com  
© 2013 Audiovox  
Printed in China**

#### **VX6020 Common Replacement Parts**

Owner's Manual, Install Manual and Warranty Card	30613880
Wire Harness (Pwr/Spk/GPS Antenna/Line Out/USB Adapter)	30313880
Trim Ring	30413880
Remote Control	30713880
Hardware Bag	30513880

**128-9243a**

PN:127075015388

