

# User's Guide for Split Fire Radio-Control Vehicle


Ages 3+

## FEATURE

Transmitter:  
Channel: 4  
Battery: 9V


Make sure you read this manual before using your Split Fire Car, especially noting the safety cautions.

Car:  
Battery: 6.0V rechargeable battery pack

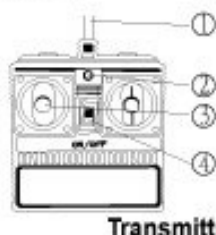


Transmitter

1. Antenna
2. Indicator
3. Joysticks

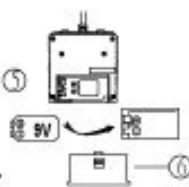

4. ON/OFF
5. 9-Volt Battery
6. Battery Cover

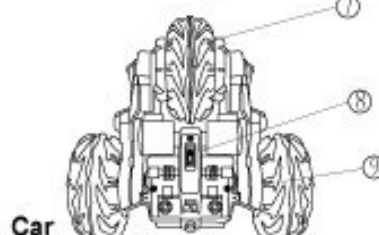


Car

7. Front Split Wheel
8. ON/OFF
9. Rear Wheels

## CHARGING

1. Plug the charger into an indoor 110V power outlet.
2. Plug the outlet line of the charger into the charging jack of the 6.0V battery pack outlet line.
3. Optimum charge time: 6 hours.

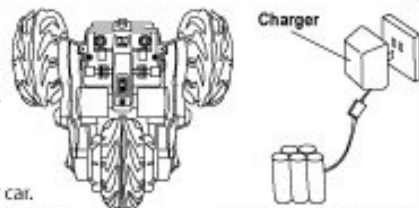


6.0V rechargeable battery pack.

## Cautions:

1. Charge using only the charger included with your car.
2. Do not charge too long. (6 hours is sufficient for charging. Overcharging may shorten the battery's life.)

## SAFETY CAUTIONS

- \* Never give this toy to children under 3.
- \* When the car is ON, keep fingers, hair, and clothes away from the wheels to avoid injury.
- \* Do not try to catch the car when it is moving.
- \* Keep the transmitter and the car away from heat sources such as electric or gas stoves or strong sunlight.
- \* Do not play with your toy in a dangerous place, such as a road or a slope.
- \* Do not get the car wet, or play with the car outdoors on a rainy day.
- \* Do not play with the car on sand.
- \* Avoid crashing the car into objects or people.
- \* Do not allow children to disassemble the transmitter.
- \* If the car is damaged it should be checked by an adult and repaired or replaced, when necessary.

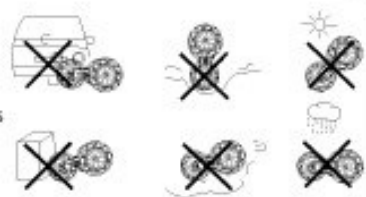

## OPERATIONS

1. Fully extend the antenna on the transmitter.
2. Set the ON/OFF switch on the transmitter and the car chassis to ON.
3. Use the joysticks on the transmitter to control the car and perform stunts.

Forward (High speed! Be careful not to turn into people!)



Backward (High speed! Be careful not to turn into people!)



High-speed spin (The front split wheel will divide into two and reassemble itself automatically.)



Sharp forward turns



Sharp backward turns



Tumbling and reverse running



- Notes:
1. Make sure the power switch underneath the car is turned OFF after each use, otherwise the power will be consumed quickly.
  2. If the car will not spin at a high speed or cannot spin until it stands up, the battery power is low. Charge the batteries or replace them with new ones.

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.