

8 Pair the Project Nursery camera with the App (continued)

After you've scanned the QR code on the bottom of the WiFi Camera, the App will ask you to press the Set Up button on the bottom of the camera and enter the name (WIFI SSID) and password of your WiFi network.

IMPORTANT: Double check your network name and password correctly—these must be correct to work with the App!

Once you've finished entering your network name and password, press the Next step button on the App screen. The indicator light on the back of the WiFi camera starts flashing—the camera is trying to join your WiFi network.

Find the SET button on the bottom of the WiFi camera. Press it for one second (until the camera gives an audio signal).

Once the WiFi camera has successfully connected to your WiFi network, you'll see the Success screen in the App and the indicator light on the back of the camera will turn green. **Congratulations—you've just set up your first camera!**

IMPORTANT: If the WiFi camera does not connect, follow the instructions in the App to troubleshoot.

Congratulations!
Camera successfully added!

For additional assistance, please call 1-844-393-7338.

Connection Troubleshooting

- + Make sure your phone or tablet is connected to the WiFi network you want to use.
- + Make sure the camera is getting a good signal from your WiFi router. See step 3 for more information.
- + Test your WiFi network with other devices to make sure it's working.
- + Double check that you've entered the correct password for your WiFi network in the Project Nursery App.
- + Make sure your router is broadcasting its SSID (name). The Project Nursery WiFi camera does not support hidden SSIDs.
- + Make sure that WiFi signal is 2.4GHz. The Project Nursery WiFi camera does not support 5GHz WiFi.
- + Make sure that your WiFi router uses either WPA2-PSK/WPA-PSK or AES as its encryption method.
- + Make sure that there is no MAC filter on router or add MAC address to router whitelist.
- + Reset the camera to set up connection again. Press and hold SET key for 10 seconds. The camera gives a long beep when it is fully reset.

The next section gives you a tour of the features available from this screen.




9 Choose the camera from the home screen

Press the part of the home screen showing the camera you set up in order to choose this camera.

The Camera View screen is your gateway to total control of your WiFi camera from virtually anywhere.

IMPORTANT: If the WiFi camera does not connect, follow the instructions in the App to troubleshoot.

For additional assistance, please call 1-844-393-7338.

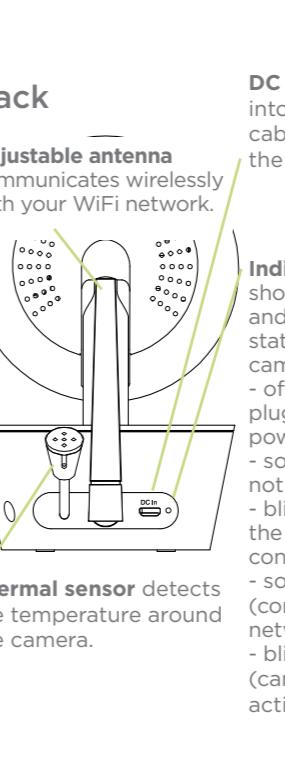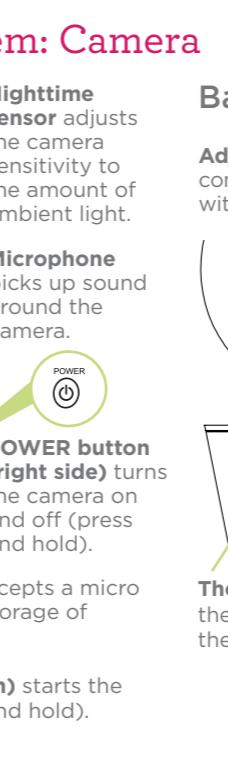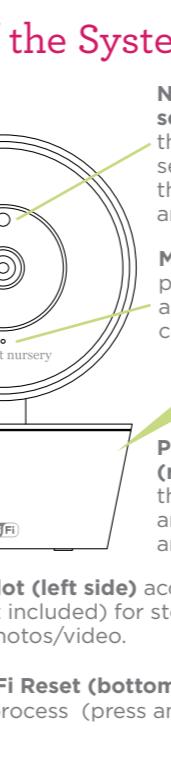

PNMWFIAQS 02



PNMWFIAQS 02

Up and Running In Just a Few Baby Steps...