

Operational Description

STEP ONE – Insert batteries into POOL THERMOMETER.

1. Remove five screws from pool thermometer.

2. Gently separate top and bottom halves

CAUTION: GENTLY PULL STRAIGHT APART. DO NOT TWIST.

3. Using your finger, snap open the battery compartment door in the bottom half.

4. Insert two new **AA ALKALINE BATTERIES ONLY**, positive end first.

CAUTION: MUST USE ALKALINE BATTERIES ONLY FOR PROPER FLOTATION.

5. Snap battery compartment door closed.

6. Align top-half, bottom-half and gasket. Insert and fully tighten 5 screws.

NOTE: INADEQUATE SCREW TIGHTNESS WILL CAUSE LEAKAGE AND PERMANENT FAILURE.

Keep the pool thermometer near the base station for now and go to Step Two.

STEP TWO – Insert batteries into BASE STATION.

1. If you will set the base station upright on a flat surface, snap the bracket onto the bottom of base station. If wall mount is preferred, do not use the bracket.

2. Insert 2 AA ALKALINE batteries.

3. The base station will automatically search for the pool thermometer for 3 minutes.
NOTE: YOU MUST WAIT 3 MINUTES TO CONTINUE.

4. The base station now displays the pool thermometer temperature on the top display and the indoor air temperature on the bottom display.

5. Float the pool thermometer in your pool. (You may use the enclosed tether cord to restrict the flotation area.)

6. Place the base station on a nearby wall or window ledge inside your home. A line-of-sight position between the base station and the pool thermometer is best.