

OPERATING INSTRUCTIONS

Now you can use your MP3, CD, DVD, MD, cassette player, PC, or laptop to listen to your favorite tunes through any FM stereo receiver. The FM Transmitter wirelessly connects portable music players to your car or home stereo quickly and easily using FM radio waves. Just plug the FM Transmitter into the headphone jack of your MP3, CD, DVD, MD or cassette player; Or connect it to your PC or laptop computer. Tune your car stereo or receiver to clear FM frequency, and enjoy your MP3 player music experience with more sound and fewer wires.

The FM Transmitter has a POWER switch and a CHANNEL key. Moving the switch you can turn on or turn off the FM Transmitter. You can press the key and select a clear FM channel. It transmits on FM channels at 106.7MHz, 107.1MHz, 107.5MHz or 107.9MHz.

It also includes 2 AAA batteries so you can play your music anywhere.

Operating Rang: 3~10 meter (a distance of 3 meter or less will minimize interference and provide the strongest signal)

Frequency Rang: 50~15000Hz.

FCC Note:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.