


# BT-CARKIT Installation Use Manual

## 一. Product Features:

- 1.FM frequency modulation, Bluetooth function
- 2.FM transmitting range: 88-108MHz with LCD display
- 3.Radio connecting range: 10m
- 4.Working Voltage: DC12V
- 5.A2DP

## 二. Keystroke Function Specification:

- 1.The Up "▲" Down "▼" buttons can modulate the transmitting range of Bluetooth (88-108MHz)
- 2.Turn On/Off "¶" and connect the Bluetooth with the "button, have "answer a call", "hold up a call", "refuse a call",voice dial ,redial functions .
- 3.Turn On/Off "○" button is to control the power source.

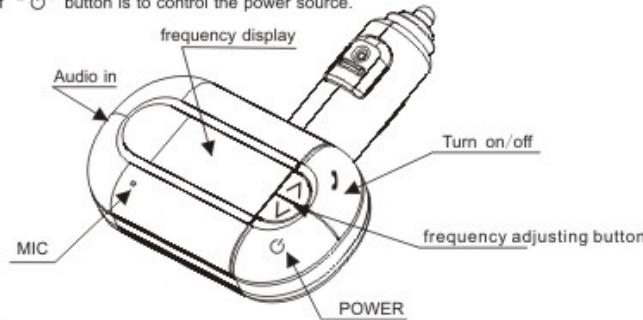

## 三. Operation:

### 1.Turn On /Off

It will have two possibilities when connecting the power source: one is ON mode , another is OFF mode. If the user's Bluetooth was power off under ON mode, so it will still under ON mode when it connecting with the power source next time .If it power off under OFF mode, when it Turn ON it will under OFF mode next time.

When the Hand free is under OFF mode and press the Turn ON/OFF button "○" for 4s, the Hand free will go in the ON mode; when the Hand free under ON mode, press the Turn ON /OFF button for 4s it will Turn OFF.

### 2.Bluetooth ON:

A:It will Turn ON mode automatically after changed the Hand free, and then go in connecting mode with 20s (connecting the Bluetooth equipment for the last time), 20s later go in matching mode.

B:Press "¶" button for 3s in the Turn OFF mode, Hand free will turn ON, the Hand free send out the short toot voice. After Turn ON the Hand free will go in the connecting mode for 20s right away. (connect with the Bluetooth equipment ) It will go in the matching mode after 20s.

Ps: The Hand free will always under matching mode if not connected with the Bluetooth equipment.

### 3.Blue OFF:

Under Standy mode press "¶" button for 3s,the Hand free will go in OFF mode, and send out the long toot voice.

### 4.Matching the mobile

#### (1). Matching

A:Place the mobile away from the Hand free within 1m

B:After charged the Cark,it will searching the Bluetooth equipment for the last time equipment for the last time after 20s.

C:Activating the Bluetooth function of the Bluetooth mobile, let the mobile searching the Bluetooth equipment. (Please refer to the manual)

D:The mobile will searching for the "Hand free "equipment and selected it .

E:Input "9999" and click Yes to complete. If succeed it will send out a long toot voice, the Hand free will go in stanby mode after matched and blue Blue LED flash every 3s.

F:Press the Back button return to the menu, make sure the distance between your mobile and Hand free is within 10m and have not any block is between .At that time you can answer or dial a call through the Hand free.

### (2).Connecting Mobile

A:Hand free will connecting with the Bluetooth equipment for the last time automatically when it under ON mode.

B:When Carbit under matching mode and then press "¶" button for short, the Hand free connect with the Bluetooth equipment for the last time automatically. It will send out the long toot voice after connected, the Blue light

### (3).Answer a call

In case call in, the hand free will ring up , you can press "¶" button to answer the call. (4).Hand up When you are making a call, press button for short to cut off.

### (5).Reject a call

In case call in, the Hand free will ring up, press "¶" button for 3s to reject the call.

### (6).Voice Dial

Under stanby mode, press "¶" button for short, the Hand free will connect with the mobile automatically and then send out a toot voice of toot .At that time you can dial any call by voice.(Note: Before you make a voice dial ,please make sure there has the voice dial function in your mobile already, you can see the detail by the manual )

### (7).Redial

Under Stanby mode press "¶" button twice for short, the Hand free will redial the last number automatically.

### (8).A2DP

(a) If your mobile supports BT A2DP, you can transmit its stereo audio via BT-CARKIT and digital FM which is then received by radio mounted on the car.

(b) When you are sharing BT A2DP music, the outside music which is via Audio in jack will be muted ,and the music can be played again automatically when the A2DP player is OFF

(c)The BT A2DP music will be pause when you are calling.(About BT A2DP,it may vary from different mobiles, please refer to the manual of your mobile. For example, some support playing in the background but the others doesn't)

### (d) Stop A2DP player

In case BT A2DP is playing, you can click the function button twice to stop A2DP player

### (e) Pause A2DP player

In case BT A2DP is playing, you can click the function button to pause A2DP player

## 二. LED Instructions

Carkit modes	LED Instructions	Sounds Instructions
OFF mode	Blue light died out	---
Power on	---	Short toot
Power off	---	Long toot
Standy mode (renew the instruction before used )	Blue light flash every 3s'	3 toot each minute
Standy mode (no connect with mobile)	Blue light flash every 3s'	
Standy mode (connect with mobile)	Blue light flash every 3s'	---
ON mode	Blue light on all the time	---
Silent mode	Blue light flash each 0.5s'	---
Matched mode	Blue light flash each 0.5s'	---
Matched (no connect with mobile)	Blue light flash each 3s'	Long toot

## FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.