

## Circuit Description

Fuse: When input is shorted, it performs input shorted protect function.

L1、C3: Work together with to perform EMI function.

D1、D2、D3、D4: Performs rectification function.

Q1、Q2: Performs Oscillating function, let low frequency switch high frequency(40kHz-50kHz).

L2、C5、C6、C7: When switching power, the L2 and C7 take place series resonance startup the lamp, then L2 restricting current.