


Sensor Instruction Manual



TPMS 

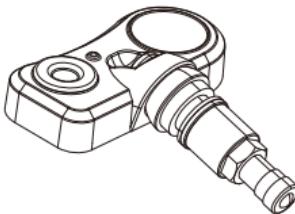


Sensors are already programmed in package, fix in tires then it's ready for use. Be sure to fix sensor to right tire according to the tire position marked on each sensor.

4 Sensors are provided in standard package, each one marked with its tire position (LF, LR, RF, RR), as already paired with monitor, please be sure to fix sensor in right tire.

SPECIFICATIONS

| | |
|--------------------------|---------------------------|
| Detecting pressure range | 0~8BAR (0~116PSI) |
| Operation temperature | -40°C~80°C |
| Storage temperature | -40°C~85°C |
| Frequency | 433.92MHz |
| Transmission power | <10dBm |
| Pressure accuracy | ±0.1 bar(±1.5 psi) |
| Temperature accuracy | ±3°C |
| Dimension | 75(L) x 62.5(W) x 21(H)mm |
| Weight | 29 g |

INSTALLATION

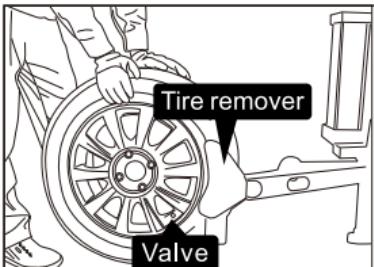

Notice:

For tire already had internal sensor installed, notify technician of sensor location and be cautious during tire detaching and loading (operate at 15cm or more away from the valve).

Step 1. Detach off tire and deflate, remove the tire valve.




Step 2. Screw off the dust cover, nut & washer from sensor.



Keep sensor parallel
with rim, with a gap in
between

Step 3. Fix sensor in tire rim.

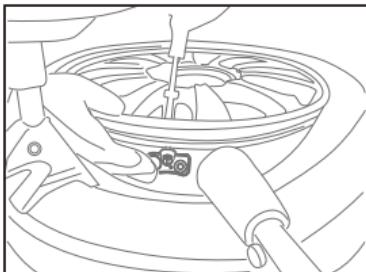

Notice:

Hold sensor in position and not be moved while re-screw back the parts.

Step 4. Hold sensor in position with hand.



Step 5. Re-screw back the washer, nut & dust cover, load tire to vehicle and inflate.

1. Internal sensor installation must be handled by technicians.
2. Be cautious of sensors in tire during maintenance and detaching/loading tire.
3. Each sensor is marked with tire position (as already paired with monitor), be sure to fix in the right tire.
4. Monitor issues sensor low battery alert when the sensor battery almost run out of power.
5. After sensor installed in tire, please examine tire/valve with soapy water to prevent any air leakage.

| EU433-003 | |
|------------------|-------------|
| 56029398AB | 68241067AA |
| 9050030 | 05154876AA |
| 9054100 | 53104671 |
| 9057200 | 670002790 |
| 35400217 | A0009050030 |
| 5154876AB | A4479050500 |
| 56029398AA | 4199034000 |
| A0035400217 | 56029400AB |
| A0009054100 | 56029400AC |
| A0009057200 | 56029400AD |
| A0035400217 | 56029400AE |
| 56029398AA | 68241067AA |
| 56029398AB | 05154876AA |
| 68241067AB | 53104671 |
| A0009050030 | 670002790 |
| A4479050500 | 68241068AB |
| 4199034000 | 56029400AD |
| 56029400AB | 56029400AE |
| 56029400AC | |

| US315-004 | | |
|------------------|----------|------------|
| 10394110 | 10394110 | 20923680 |
| 12768826 | 15268606 | 4313078J00 |
| 13581558 | 15825475 | 25952370 |
| 13586335 | 15921013 | 15123145 |
| 15268606 | 20925924 | 13589597 |
| 15825475 | 13586335 | 13598255 |
| 15921013 | 13598771 | 23445327 |
| 20922900 | 22853741 | 15920615 |
| 20923680 | 25799331 | 4313078J10 |
| 20964159 | 25920615 | 4313085Z00 |
| 22854866 | 1358635 | 20922900 |
| 25799331 | 15123145 | 22854866 |
| 25920615 | 15920615 | 22959744 |
| 15922396 | 20926680 | 22853741 |
| 15254101 | 15922396 | 15254101 |
| 13598771 | 20923680 | 15922396 |
| 20964159 | 25799331 | |
| 12768826 | 15254101 | |
| 13581558 | 25952370 | |

Declaration of conformity



FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.