

FS-GT3B

INSTRUCTION MANUAL 用户手册



Digital propotional radio control system

Http://www.flysky_cn.com Copy right 2008@flysky co., ltd







MODELS: FS-GT3B

I.INTCODUCTION

Thank you for choosing 2.4 G ratio remote control digital products, if you are the first time to use this type of products, please read this statement carefully and strictly in accordance with the requirements of operation. You could refer to the manual if you meet any problems during the operation. Please well keep the manual after use because you might have to use it again next time. Once again, thanks for buying our products.

FLYSKY

非常感谢您选择使用 5.2° 2.46数码比率遥控产品,如果你是第一次使用该类型产品,请您在使用之前先仔细阅读此说明书,并严格按说明要求进行操作。在操作过程中您如果遇到问题同样可以查看说明书。说明书在使用完后请您妥善保管好,以备后用。再次感谢您使用 5.2° 的产品,并希望它能给您带来快乐。

FIVSKY

2.SECVICES

If you find any problems during the operation process, **please refer to the manual.** If the problem still exist, you could contact our dealers to find out the way to solve. And you could also log on to our website service center:

HTTP: WWW. FLYSKY_CN. COM

如果您在使用过程中发现有问题,请您第一时间先查看数控明书.如果问题还不能解决,您可以跟我们的经销商联系解决.您也可以登陆我们的服务中心网站:

HTTP: WWW. FLYSKY_CN. COM



MODELS: FS-GT3B

3.THE SPECIAL SYMBOLS

Please pay attention to the following symbols when it appears on the manual, and read carefully.

此说明书中有如下符号的地方请您特别注意,



If the operator does not operate by following the Instructions, the operator Danger: may lead to serious injuries, even mortal danger.

如果操作者不按正常操作方法操作,可能导致操作**者严重受伤,甚至致命危险!**



Warning: If the operator does not operate by following the Instructions, the operator may lead to serious injuries, even mortal danger.

如果操作者不按正常操作方法操作,可能导致操作者严重外伤,重伤或者致命情况!



Attention:

If the operator does not operate by following the Instructions, the operator may lead to minor injuries, but generally it will not Injurles

如果操作者不按正常操作方法操作,可能会导致操作者轻伤,但一般不会对操作者造 成重伤!





Mandatory

4.5afty Guides



Don't fly at night, bad weather such as rainy or thundering days. It will interfere the transmitter signal. Thereby it will create out of control and unexpected accident.

请您不要在夜晚,刮风或下雨时使用,因为这样的天气环境会对遥控设备产生干扰,从而导致失



Before you fly, please make sure the movement of server correspond with the direction of joysticks. If inconsistent, plea

在飞行前,请您务必先检查伺服器的各项动作是否与对应操纵杆的方向一致,如果不一致,请调整 后再使用.



You need to turn the throttle channel(ch2) and inching switch to the lowest before You use. Then switch on the transmitter power ,fin

开机使用时请您勿必先将油门通道(CH2)及微调置最低端。然后打开发射机电源并检查电源 电量,再接通接收机电源。

The sequence to shutdown is that turn off the receiver power first, and then the



If the above operations are reverse, it might lead to uncontrolled and cause Accident.

停止使用前请您先关闭接收机电源然后关闭发射机电源。

以上操作如果反向,可能导致失控,从而产生意外!



MODELS: FS-GT3B **Digital propotional radio control system**



5.2.4GHZ SYSTEM



AFHDS(自动跳频数字系统), 这个系统是富斯公司专为模型爱好者自主 研发,并具有自主知识产权的一套数字无 **它是专门针对模** 研发的,它具有超强的主动和被动抗干扰能力及极低的使用功耗和 它是专门针对模型产品而 是目前市面上最好的系统之一。 发人员极端严格的

测试及多年市场验证,模型爱好者完全可放心使用!

AFHDS (automatic frequency hopping digital system), is developed by FLYSKY for all the Radio Control model lovers and is patented by FLYSKY at home. The system is specially developed for all the Radio control models, that offers super active and passive anti-jamming capabilities, very low power consumption and high receiver sensitivity. With extreme rigorous testing by engineers and studying the markets for years, FLYSKY AFHDS is now considered to be the one of the best systems available in the market.

系统特征:



m uses a linear spread of fine percuraph by excess antenna, which covers the entire band width of the antenna bandwidth range, greatly enhances the efficiency of the system launch and receiving sensitivity. It greatly improves system stability, and strengthen the passive anti-jamming capability of the system.



射机都具有唯一的身份识别ID码,当与接收机进行对码后此ID码被存放在接收机内。 此ID码是否正确,然后才工作,否则不会工作。此项可加大系统的主动抗干扰能力。

Each transmitter has its own unique ID. When the transmitter communicates with the receiver, the ID will be transmitter and saved in the receiver. The System works only when the ID is matched when the receiver powers on. This dramatically increases the ability of passive antijamming and enhances the total stability of the system.



完全采用超低功耗器件,且接收采用高灵敏度的接收芯片,工作时采用何隔发送方式。 提升了使用工作时间。此系统使用功耗相当于以前FM版本的十分之一。

The system uses low power consumption components, and the receiver chip is extremely sensitive; the system uses interval signal transmission, ther oby reducing the transmission power, and increasing the operating. Comparatively this system consumes only one tenth of the normal FM system.





7. TRANSMITTER PARAMETERS

Specifications:





8. RECEIVER PARAMETERS



MODEL: FS GR3C

机种多数:
1.通道个数: 3个通道;
2.近合机种: 年/船;
3.接收更数度:-105dbm;
4.调制方式: GFSK;
5.急绝模式: AFHDS;
6.数据分辨率: 1024级;
7.失控保护功能: 有 (第2通道);
8.对码接口: 有 (第三通道);
9.电源接口: 有 (VCC);
10.电源标准: 4.5-6.5VDC (1.5伙×4);
11.整机重量: 5克;
12.天线长度: 26毫米;
13.外型尺寸: 37.6×22.3×13毫米;
14.外观颜色: 黑色;
15.安规认证: CE (0678) FCC

K. Welght: 5g; L. ANT length: 26mm; M. Size: 37. 6+22. 3+13mm; N. Color: black;

SPECIFICATIONS:

A. Channels: 3channels;

B. Model type: car/boat;

G. Falsafe: yes (channel 2); H. Bind port: yes (channel 3); I. Power port: yes (VCC); J. Power: 4. 5-6. 5VDC (1. 5V+4);

D. Modulation: GFSK; E. System type: AFHDS; F. Sensitivity: 1024;

C. RF receiver sensitivity: 105dbm;

N. Color: black; O. Certificate: CE (0878) FCC.






9. RECEIVER CONNECTIVITY


9. 01INSTALLATION WHEN A MOTOR CONTROLLER IS USED:

带马达模型的安装选档

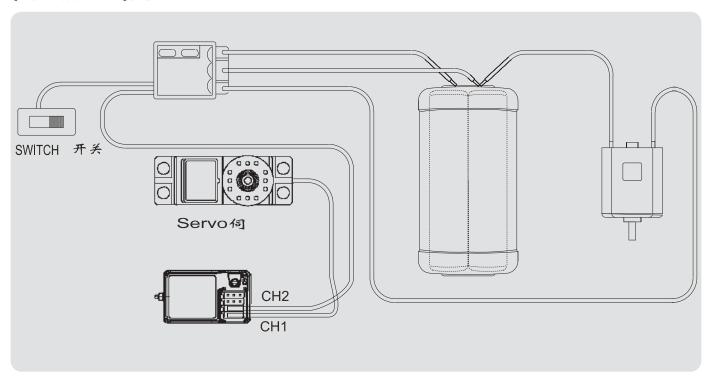

0

Remark: Place the antenna of the receiver vertically with the plane!
And don't let it close to the metal thing for assuring its sensitivity. (See pic1) 在安装接收机时请将接收机天线与水平面垂直被置! 且天线尽可能不要靠近金因为这样接收灵敏度景高。(如图1)

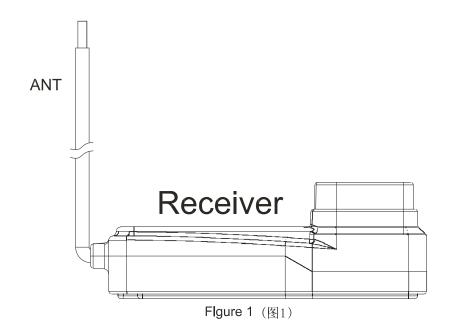



10. 02 POWER ON:

A. Connect every part.

- B. Switch on the power supply
- C. Connect the power supply of the receiver.
- D. Receive LED light solid.













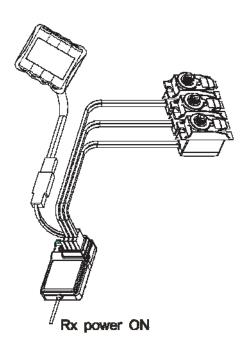

10. 03 SHUT DOWN:

- A. Cut off the receiver power supply.
- B. Cut off the transmitter power supply.

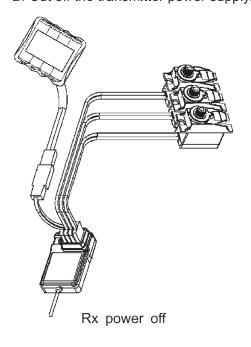



Shut down





Tx power off

11. EACH PART OF THE TRANSMITTER



- 1 2.4G ANT
- 2 STEERING WHEEL 3 CH3
- 4 BAT BOX

- **5** D/R
- 6 Ch3 TRIM














12. LCD FUNCTION EXPLANATION

12. 01LCD DISPLAY

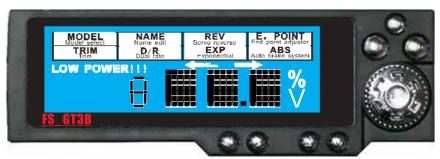

BUTTON FUNCTION:

Turn the ENTER button counterclockwise: decrease the rate 左旋: 逆时针旋转(做菜单选择及数据减);

Turn the ENTER button: increase the rate Press ENTER button: select the menu Press BACK button: return to the menu Press END button: end the programming

按键定义:

右旋:顺时针旋转(做菜单选择及数据加);

确认:确认按键(做菜单选择确定); 返回:返回按键(菜单返回);

END:(结束某一项功能篇缉的操作键):

12. 020PENING SCREEN:



Show current model number and user name Press ENTER button, the screen will be showing as following (voltage and model number):

在此画面下按左右旋转键可显示如下画面(显示当前电池电压及MODEL编号):



在此画面下如果电压低于9.5V侧会出现如下画面: Following screen will be showed when the voltage i



"LOW POWER" will be blinking, simultaneously buzzer will be warning. 此时LOW POWER!会闪烁,同时发出报警声。



12. 03MODEL:



Function explanation:

The radio (FS_GT_3B) can be stored with ten memories (FS_0FS_9) , and each memory in the radio can be setup separately to match up with different models.

Parameter specification:

The initial model No. is Model "NO. 0". ACB is for the name of model, the initial data is "FS0".

Operation:

Switch on the transmitter and press the "ENTER" button to be ready for choice, then turn to left or right to choose the model you want from the menu, then to press "ENTER" button and enter the next menu, meanwhile "8" will flash, at last turn left or right and confirm the model. (totally 10sets of memories. 0 to 9)

Press the "ENTER" button to finish the operation after edition. Then return to menu option Press BACK button and return to the initial men

此发射机(FS_GT3B)可存放10组模式(FS0_FS9),每组都可单独设定,以适应不同的机型

MODEL No.: 机种编号(工厂预设值为MODEL NO.0); ACB: 机种名称(工厂预设值为FSO)。

操作方法:

在开机菜单下通过"确认"键进入菜单选择,通过"左右旋转"键进行model菜单选择,再按"确认"键进入此菜单的操作(此时"8"会闪烁),然后按"左右旋转"键进行MODEL选择(共10组0_9)。编缉完成后按"确认"键,结束此菜单的编缉,返回并在任何状态下按"返回"键进入开机画面。



12. 04 NAME:



Function explanation:

This function allows you to assign a number to each model memory and a user name (three

Parameter specification:

MODEL No: Model number

ACB: User name

Operation:

Press the "ENTER" button and turn to select the NAME option. The selected function will be blinking. Select the channel by turning the "ENTER" button, and then press the "END" button. Turn the "ENTER" button to select letter. After this, press the "END" button to finish the setting. The rest can be done in the same way. After finishing the setting of three channels, press the "ENTER" button to return to menu screen.

Press "BACK" to return to the opening screen.

此功能是对发射机存放的机种进行名字的编写(使用三个字符),以方便记忆及调用.可使用的字符为:0123456789ABCDEFGHIJKLMNOPQRSTUVWXYZ.

参数说明:

MODEL No.: 机种编号:

ACB: 机种名称。

操作方法:

在开机菜单下通过按"确认"键进入菜单,通过"左右旋转"键进行NAME菜单选择,再按确认键进入此菜单的操作(此时第一字符"B"会闪烁),然后通过"左右旋转"键进行此字符的编写,此时如需对第二个字符进行编写,先按"END"键此时第二个字符会闪烁,并进入可编缉状态。依类推对三个字符进行编缉.连续按"END"则在编缉完成后按"确认"键返回并进入菜单选择状态。在任何状态下按"返回"键进入开机画面。



12. 05 REV:



Function explanation:

This function reverses the direction of the operations of servos: steering, throttle, and channel 3.

Parameter specification:

CHANNEL: channel number, from 1 to 3

REV: reverse NOR: normal

Operation:

Press the "ENTER" button and turn to select the TRIM option. The selected function will be blinking. Select the channel by turning the "ENTER" button, and then press the "END" button (now the "REV" or "NOR" will be blinking). Turn the "ENTER" button to select "REV" or "NOR". After this, press the "END" button to finish the setting. The rest can be done in the same way. After finishing the setting of three channels, press the "ENTER" button to return to menu screen.

Press "BACK" to return to the opening screen.

此功能是对三个输出通道做正反向输出的设定,以适应不机种及不同伺服器规格的要求。

参数说明:

CHANNEL: 通道编号, 从1到3.

REV: 反向输出。

NOR: 正向输出(工厂预设值为NOR).

操作方法:

在开机菜单下通过"确认"键进入菜单,通过左右旋转键进行REV菜单选择,再按确认键进入此菜单的操作(此时1"字符会闪烁),然后通过左右旋转键进行通道1到通道3的选择,选好要变更的通道后按"END"键,此时三个字符(REV或NOR)会闪烁,在此状态下按左右旋转键进行REV与NOR的设定。完成后按END"键可进入第二个通道的设定。依类推对三个

编缉完成后按"确认"键返回并进入菜单选择状态。 在任何状态下按"返回"键进入开机画面。



12. 06 E. POINT:





Function explanation:

Use this function when performing left and right steering angle adjustments, throttle high Side/brake side amount adjustment, and channel 3 servos up side/down side operation amount adjustment during link age setup. Used to correct steering angle of adjusting left and right steering angles when there is a difference in the Left

Parameter specification:

CHANNEL: channel number, from 1 to 3 100%:output value.Adjustment range:0~12

LEFT, FORWORD or RIGHT, BACK (select by steering wh

Operation:

Press the "ENTER" button and turn to select the TRIM option. The selected function will be blinking. Select the channel by turning the "ENTER" button, and then press the "END" button (now the icon will be blinking). Turm the "ENTER" button to adjust the rate. After this, press the "END" button to finish the setting. The e way. After finishing the setting of three channels.

press the "ENTER" button to return to menu screen.

Press "BACK" to return to the openning screen.

此功能是对三个输出通道做输出变化量的调整设定,此项设定分为两部份(正半部负半部份)来分别单独 进行设定,应适应不同机种及不同伺服器输出量的要求,另外对伺服器的两边输出行程不对称做修正.

参数说明:

CHANNEL:通道编号,从1到3.

100%:输出量百分比率,值越小输出越小,反之越大(此调整量为0%到120%,工厂预设值为100%)。

· 此图标表示当前你所设定调整的是那一部份(分正负两部份,由方向盘及油门扣机来选定)。

操作方法:

四人采甲,通过"左右旋转"键进行E. POINT菜单选择,再按"确认" F闪烁),然后通过"左右旋转"键进行通道1到3通道的选择,选好要变更 E个字符会闪烁,在此状态下通过方向盘及油门扣机进行单边选择(被记 会闪烁),然后按"左右旋转"键进行0-120%的设定. 完成后按"END"键可进 个通道进行设定. 性入菜单选择状态. F机画面.



12.07 TRIM:





Function explanation:

Use this function to adjust the neutral position of the steering, throttle and channel 3 servos.

Parameter specification:

CHANNEL:channel number.from 1 to 3:

R30:steeting or 3rd channel right side, adjustment range: 0~30(initial value is N00);

L30:steering or 3rd channel left slde, adjustment range: 0~30(initial value is N00):

F30:throttle forward side, adjustment range:0~30 (inital value is N00):

B30:throttle backward side adjustment range:0~30(initial value is NOO)

Operation:

Press the "ENTER" button and turn to select the TRIM option. The selected function will be blinking. Select the the channel by turning the "ENTER" button, and then press the "END" button (now the percentage will be blinking). Turn the "ENTER" button to adjust the rate. After this, press the "END" button to finish the setting. The rest can be done in the same way. After finishing the setting of three channels.

Press the "ENTER" button to return to menu screen.

Press:BACK" to return to the opening screen.

功能说明:

此功能是对三个输出通道中立点微调的设定,调整修正机种在装配及伺服系统中心点不对产生的偏差。以使车或船等模型在操控时更加直线。

参数说明:

CHANNEL:通道编号,从1到3. R30:通道右边微调,调整量量为0-30,工厂预设值为N00. L30:通道左边微调,调整量为0-30,工厂预设值为N00. F30:通道前进微调,调整量为0-30,工厂预设值为N00. B30:通道后退微调,调整量为0-30,工厂预设值为N00.

操作方法:

在开机菜单下通过"确认"键进入菜单,通过"左右旋转"键进行TRIM菜单选择,再按"确认"键进入此菜单的操作(此时1字符会闪烁),然后通过"左右旋转"键进行通道1到通道3的选择,选好要变更的通道后按"END"键,此时三个字符会闪烁,在此状态下通过按"左右旋转"键进行L30-N00-R30(油门通到是F30-N00-B30)设定调整.完成后按"END"键通道的设定.依类推对三个通道进行设定.编辑完成后按"确认"键返回并进入菜单选择状态.在任何状态下按:返回"键进入开机画面.



12.08 D/R:



Function explanation:

By setting the dual rates function, you can limit the total travel of each individual Channel.

Parameter specification:

CHANNEL:channel number, from 1 to 3;

100%: Dual Rate ,when you want to increase the servo travel ,turn the button to increase the rate. When you want to decrease the servo travel, turn the button to decrease the rate.0% is no signal output, 100% is maximum signal output. Adjustment range: 0~100% (initial value is 100%)

Operation:

Press the "ENTER" button and turn to select the D/R option. The selected function will be blinking. Select the channel by turning the "ENTER" button, and then press the "END" After this, press the "END" button to finish the setting. The rest can be done in the same way. After finishing the setting of three channels; press the "ENTER" button to return to menu screen.

Press "BACK" to return to t

功能说明:

此功能是对三个输出通道做输出变化量调整设定,此项设定同时对两部份(正半部负半部份)按同一比率进行设定,适应不通机种及不同伺服器输出的要求,以达到最佳的操控效果.

参数说明:

CHANNEL:通道编号,通道1到通道3; 100%:输出量百分比率,值越小输出越小,反之越大(此调整量为0%到100%,工厂预设值;为100%),0%表示此通道没有输出,100%表示全部输出,也就是最大输出.

操作方法:

在开机菜单下通过"确认"键进入菜单,通过"左右旋转"键进行D/R菜单选择,再按"确认"键要变更的通道后按"END"键,此时三个字符会闪烁,在此状态下按"左右旋转"键进行0-100%进入此菜单的操作(此时1字符会闪烁),然后通过"左右旋转"键进行通道1到通道3的选择,选好的设定.完成后按"END"键可进入 另一个通道的设定。依类推对三个通道进行设定。 编辑完成后按"确认"键返回并进入菜单选择状态。 在任何状态下按"返回"键进入开机画面。



12.09 EXP:



Function explanation:

This function is used to change the sensitivity of steering servo's 3 channels around the neutral position. In order to "soften" the response according to user's demand.

Parameter specification:

CHANNEL:channel number.from 1 to 3:

100%:steering EXP rate, when you want aggressive steering operation, turn the button to increase the rate. When you want to make steering operation less aggressive, turn the button to decrease the rate. Adjustment range:-100%~0~+100%(initial value is 0)

Operation:

Press the "ENTER" button and turn select the EXP option. The selected function will be blinking. Select the channel by turning the "ENTER" button and then press the "END" button (now the percentage will be blinking). Turn the "ENTER" button to adjust the rate. After this, press the "END" button to finish the setting. The rest can be done in the same way. After finishing the setting of three channels. Press the "ENTER" button to return to menu screen.

Press "BACK" to return to the opening screen.

此功能是对三个输出通道作指数变化量调整设定,适应不通机种对不同赛道以及不同人的操作习惯,以达到最佳的操控效果。

参数说明:

CHANNEL:通道编号,通道1到通道3.100%:指数输出百分比率,-100%表示中心点位置反应会越小,也就是反应越迟钝;100%表示中心点位置反应会越大,也就是反应越灵敏,EXP调整量为:-100%到100%(工厂预设值为0%)。

操作方法:

在开机菜单下通过"确认"键进入菜单,通过"左右旋转"键进行EXP菜单选择,再按"确认"键在进入此菜单的操作(此时1字符会闪烁)然后通过"左右旋转"键进行通道1到通道3的选择,选好要变更的通道后按"END"键,此时三个字符会闪烁,在此时状态下按"左右旋转"键进行-100%到100%的设定.完成后按"END"键可进入另一个通道的设定.依类推对三个通道进行设定.编辑完成后按"确认"键返回并进入菜单选择状态.在任何状态下按"返回"键进入开机画面.



12.10 ABS:



Function explanation:

While applying the brakes, locking them up can be easily done, which can cause your vehicle to spln out of control, this can be eliminated by pulsing the brakes, so that full control of your vehicle can be achieve at all times. The effect as like that of a A.B.S in a real pa

Parameter specification:

CHANNEL: channel number, it's only available in channel 2;

OFF: A. B. S. function is OFF;

SLW:slow pulse; NOR:normal pulse: FST: fast pulse;

Handy Tips: this data car vary from servo to servo, the best choice is the type that is suitable for your

Ope #at it IT ER"button and turn to select the ABS option. A selected function will be blinking. Turn the "ENTER" button to change the setting of ABS function, there are 4 settings: OFF, SLW, NOR, FST, press the "ENTER" button to return to menu screen.

Press "BACK" to return to the openning screen.

功能说明:

此功能是对油门输出通道作自动刹车(点刹)设定,适应不同机种赛道以及不同人的操作习惯,以达到最佳刹车效果及弯道的操控效果,而不至于有甩尾及转弯不足现象出现。

CHANNEL:通道编号,只有第二通道(油门通道)有此功能; OFF:表示ABS功能关闭(工厂预设值为OFF); SLW:表示ABS输出频率是最慢的; NOR:表示ABS输出频率一般;

FST:表示ABS输出频率最快;

注:此几个参数需依据不同机型及不同种类的伺服器决定.不一定输出频率最快就最好,最慢就最差.

操作方法:

在开机菜单下通过"确认"键进入菜单,通过"左右旋转"键进行ABS菜单选择,再按确认键进入此菜单的操作(此时三个字符会闪烁),然后通过"左右旋转"键进行0FF-SLW-NOR-FST的设定。编辑完成后按确认键"返回"并进入菜单选择状态. 在任何状态下按"返回"键进入开机画面.



13. TRANSMITTER FUNCTION NOTES



功能说明: 此功能是进行方向控制,当方向舵往右旋转时车子前轮会跟着往右(如图),当方向舵往左旋转时车子前轮会跟着往左(如图)。

操作方法: 开机后,通过方向舵进行方向控制,方向舵动作大小依据实际情况进行比率调整.方向舵大小动作量可通过D/R

Function explanation:
This function is to control the direction, When the steering turn to right then the front wheel will turn to right (see the picture), When the steering turn to left then the front wheel will turn to left (see the picture).

Operation:

Adjust the dual rate of the steering by adjusting the D/R knob.





14. FAIL SAFE FUNCTION

失控保护功能说明

失控保护功能是对模型车或船进行失控保护,避免因失控造成损失。主要是对油门通道进行控制,当接收机接收不到控制信号时,接收机的油门通道将自运行到当初设定的值,以免误动作。

- 将发射机开通电源进入工作状态. 将接收机接通电源进入工作状态,
- c、控制发射机的油门通道,使油门控制伺服器或调速器进入刹车或熄火状态,然后保持不动.
- d、此时将接收机的设定键(如图按下),此时接收机LED信号灯会闪烁,并在3秒左右停止。

3. 测试

- 将发射机打开进入工作状态. 将接收机接通电源进入工作状态. 将发射机关闭电源.
- d、此时可看到油门通道的伺服器便会自动进入设定状态的位置
- e、以上动作如果可以完成表示设定OK

FAIL SAFE FUNCTION

1.Function

Failsafe aims to prevent out-of-control driving of RC Car or RC Boat. If the Rec eiver is not able to receive any signal, from the control to Th rottle, the parameter of Th rottle on Rec eiver will turn back to its original setting.

2.SettIng

a. Turn on the Transmitter switch;

- b. Turn on the Receiver switch, the LED will be lighting;
- c. Adjust Transmitter's Throttle, make the car/boat to stop or flameout, then keep still.
- d. Press the "Setting" button on Receiver (as the pic below), the LED will be flashing, then stop after 3seconds around, which means

3.TestIng

- a. Turn on the Transmitter switch;
- b. Turn on the Receiver switch;
- c. Turn off the Transmitter switch;
- d. Servo of Throttle will turn back to it's original se
- e. Setting is successful if above proce



Max. ambient Temp.: 25°C

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.





Http://www.flysky_cn.com Copy right 2008@flysky co., ltd