



---

## Brief Introduction to NEO808i

The content of this manual has been checked carefully, while it may be some difference with the updated version. We reserve the right to make modifications to the product without prior notification and own the final right to interpret product performances.

<b>Topic</b>	<b>Page</b>
<b>1 For Your Safety</b>	<b>5</b>
1.1 Please note the following issues when using your device	5
1.2 Please follow the guidelines below when using batteries	6
1.3 Please note the following issues when using chargers	8
<b>2 Getting Started</b>	<b>8</b>
2.1 SIM Card	8
2.1.1 Inserting and Removing SIM Card	9
2.2 Battery	10
2.3 Inserting and Removing the T-FLASH Card	13
2.4 Security Codes	13
2.4.1 PIN (4-8 digits)	13
2.4.2 PIN 2 (4-8 digits)	13
2.4.3 PUK	13
2.4.4 Phone Code (Password)	14
<b>3 Phone Overview</b>	<b>14</b>
3.1 Appearance	14
3.2 Key Functions	15
3.3 Icons	16
<b>4 Basic Operations of the Phone</b>	<b>17</b>

---

4.1	Switch-on / Power on	17
4.1.1	Entering PIN	17
4.1.2	Using Hands free	18
4.2	Switch-off / Power off	18
4.3	Calling	18
4.3.1	Making Calls	18
4.3.2	Emergency Calls	19
4.3.3	Making International Calls	20
4.3.4	Dialing Recent Calls	20
4.3.5	Speed Dialing	20
4.3.6	Receiving Calls	21
4.3.7	Missed Calls	21
4.3.8	Additional Calling Functions	21
4.4	Text Input	22
4.4.1	Stroke Input	23
4.4.2	Smart Input Method	23
4.4.3	ABC Input Method	23
4.4.4	Arabic, Pinyin and other Languages Input	23
4.4.5	Number Input	24
<b>5</b>	<b>Menus</b>	<b>24</b>
5.1	Main Menu	24
5.2	Contacts	24
5.2.1	Quick Search	24
5.2.2	Name Search	26
5.2.3	Add Number, assign Caller Picture and customized Ring Tones	26

---

5.2.4	Copy All, Synchronization of Caller records, Files, and other between Phones and PC, using additional Synchronization Software to be installed from NEO CD!	27
5.2.5	Delete	27
5.2.6	Caller Groups	27
5.2.7	Other Numbers	27
5.2.8	Settings	28
5.3	SMS (Require network support)	28
5.3.1	SMS – MMS	29
5.3.2	Voicemail (require network support)	31
5.3.3	Cell Information	31
5.4	Call Records	32
5.4.1	Missed Calls	32
5.4.2	Dialed Calls	32
5.4.3	Answered Calls	32
5.4.4	Delete Call Records	33
5.4.5	Call Duration	33
5.4.6	Call Cost	33
5.4.7	SMS Calculator	33
5.4.8	GPRS Calculator	34
5.5	Settings	34
5.5.1	Phone Settings	34
5.5.2	Call Settings	35
5.5.3	Network Settings	37
5.5.4	Security Settings	38
5.5.5	Restore Factory Setting	39

---

5.5.6	Sound Effects	39
5.6	Entertainment and Games	39
5.6.1	Camera	39
5.6.2	Album , also settings like Wallpaper, Background etc.	40
5.6.3	Video Recorder	41
5.6.4	Video Player	42
5.6.5	Picture Artist	43
5.6.6	Music Player	43
5.6.7	Radio, Earphones , Handsfree, Speaker Settings etc.	44
5.6.8	Sound Recorder	45
5.6.9	Ring tone Composer	46
5.7	File Manager	47
5.8	Games	47
5.8.1	Stopwatch	48
5.8.2	Java	48
5.9	Profiles	48
5.9.1	Personal Settings	48
5.10	Additional Features	49
5.10.1	Alarm Clock	49
5.10.2	Calendar	49
5.10.3	Calculator	50
5.10.4	World Clock	50
5.10.5	Memo	51
5.10.6	Converter	51
5.10.7	Electronic Dictionary	52

---

5.10.8	Bluetooth functions	52
5.11	Services	55
5.11.1	WAP	55
5.11.2	Internet	56
<b>6</b>	<b>Troubleshooting</b>	<b>56</b>

**IMEI:** International Mobile Station Equipment Identity. Switch off your device, remove the battery, and you can find a bar-code label with this number on the back of your device. This number is also stored in your device and can be presented on the screen when you enter \*#06# in standby mode after switching on the device. Any mobile phone must have a globally unique **IMEI**. We recommend that you maintain this number properly as this number can protect your phone against unauthorized use, even using different SIM cards.

### **For Your Safety**

**NOTE! Any Changes to the Settings can ONLY be done with a valid SIM card inserted, and the Phone connected to a Service Provider!**

#### **1.1 Please note the following issues when using your device**

- Before using your device, please read the user's guide carefully!
- Please switch off your device when in or around aircraft. If automatic switch-on is enabled for such features of your device as alarm clock and reminder, please check and cancel the settings before boarding.
- Do not expose your device to high temperature or high voltage, such as electric appliances or electric heating cookers. Be sure to use your device in a normal temperature. Your device may be damaged in a temperature higher than 55°C or lower than -10°C.
- Switch off your device in an area where a potentially explosive atmosphere exists, for example, at a chemical plant, gas station, or oil depot.
- Always keep your hands free to operate the vehicle while driving. Do not place your device

---

in the area above your car's air bag, preventing your device from injuring you when the air bag is expanded.

- Use only approved batteries, chargers and accessories. The use of any other types may invalidate any approval or warranty.
- Do not attempt to disassemble your device.
- Because of possible interference, please keep your device away from electric appliances like televisions, radio recorders, personal computers, cardiac pacemakers, and hearing aids. Do not place your device near your credit cards or other magnetic storage medias.
- Do not drop or shake your device. Do not knock the screen of your device with edge tools.
- Use of the phone bag or plastic phone bag may ruin the paint on your device.
- Do not use solvents, harsh chemicals, or strong detergents to clean your device. Use a soft and clean cloth to clean it.
- Do not expose your device to strong sunlight, or use it in smoky or dusty areas.
- Keep your device dry. Do not use it in areas of high humidity like bathrooms. As your device is not waterproof, do not expose it to rains or moistures.
- Use earphones and other accessories with care. Do not touch the antenna unnecessarily. Use only the supplied antenna. Unauthorized antennas could damage your device.
- To remove the charger, hold the plug, other than the power cord, and pull out.
- Never rely solely upon your device for essential communications, for example, medical emergencies.
- Keep your device out of the reach of small children.

## **1.2. Please follow the guidelines below when using batteries**

- Before use, please carefully read user's guide and signs on the battery surface.
- Switch off your device before removing the battery.
- Use chargers indoors. If recharging in a too high temperature, the battery may become hot,

---

smoky, burnt, distorted, or even explosive.

- The battery has special protective circuits and devices inside it. Do not disassemble the battery, or it may damage the LCD and leak liquids. The liquids may hurt your eyes if contact your eyes! In this case, please immediately wash your eyes with clean water (DO NOT knead your eyes) and go to hospital.
- Do not crush, knock or shake the battery. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, pen or clip causes direct connection of the positive and negative terminals of the battery. Thus, do not store the battery together with metallic objects.
- Keep the metallic contact and the battery clean.
- Never use any battery that is damaged or worn out.
- The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- Do not expose the battery to sunshine, or place it in smoky or dusty areas. Do not use it in areas of high humidity like bathrooms. As the battery is not waterproof, do not expose it to rains or moistures.
- Do not leave the battery in too hot or too cold places.
- Do not dispose of the battery in a fire as they may explode.
- Never put the battery in water; otherwise, it may be short-circuited, and become heat, smoky, distorted, damaged, or even explosive.
- Dispose of the battery according to regulations (for example, recycle). Do not dispose as household waste to avoid explosion and pollution.
- Recharge your battery only with the approved charges designated for this device. Do not recharge for over 24 hours continuously.
- Keep the battery out of the reach of small children.



---

### **1.3. Please note the following issues when using chargers**

- Before use, please carefully read user's guide and signs on the charger surface.
- Do not disassemble or modify the charger. If the power cord is damaged, do not use the charger to reduce risks of electric shock, fire and damage.
- Do not touch the charger with wet hands. If the charger is exposed to water or other liquid, cut off the power immediately.
- Do not short-circuit, knock or shake the charger. Do not expose the battery to sunshine. Do not use it in areas of high humidity like bathrooms. As the battery is not waterproof, do not expose it to rains or moistures.
- Do not use the charger near such electric appliances as televisions and radio recorders.
- Hold the charger when unplugging it from the socket.
- Keep the charger out of the reach of small children
- Warning: Your device has a sound recorder feature. When using it, do obey related laws and regulations and respect privacy and legitimate rights of others. Users shall take full responsibilities for improper use of this feature and unauthorized replication and distribution of the recordings.

## **Getting Started**

### **2.1 SIM Card**

- When you register as a subscriber with a network operator, you get a SIM (Subscriber Identity Module) card. If the SIM card you get is about the same size as a credit card, remove edges and reserve the smaller part.
- *Note: This mobile phone supports 1.8v and 3v SIM card, while it doesn't support 5v SIM card.*
- With this SIM card, you can use various functions of your device. The SIM card contains a computer chip that keeps track of all network connection information and your personal

---

information (such as PIN, names and numbers in your contacts, SMS and other additional system services).

- Please use your SIM card with extreme care. Do not try to bend or press the SIM card. Try to not touch the metallic contacts. Do not place the SIM card near electric or magnetic storage Medias. Keep it from dust and water. Once your SIM card is damaged, you could not use your phone normally.

**Warning:** Always switch your device off before removing the SIM card. Do not insert or remove the SIM card when the device is connected with external power, or your device and SIM card may be damaged.

### 2.1.1 Inserting and Removing SIM Card

#### To insert SIM card

1. Put your device upside down, slide the cover of the device and remove the battery.
2. Slide the SIM card into its holder. Make sure that the metallic contacts of the SIM card are facing down, and the cut off corner is correctly aligned.



3. Slide the SIM card inwards to the end.
4. Slide the battery cover into place, leaving no gap with the device.

---

## To remove SIM card

- You just need to hold the edges of SIM card and slide it outwards. Other operations are the same as those described in To insert SIM card.

### 2.2 Battery

Your device is powered by a rechargeable battery. The full performance of a new battery is archived only after two or three complete charge and discharge cycles (each recharge period should be about 12 to 16 hours, but not more than 24 hours). We recommend that you recharge the battery after the battery runs out of power and the device switched off automatically.


- To archive the full performance of the battery, we recommend you fully discharge your battery once every month. To do this, you just need to let the phone run of power and switch off automatically.
- The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.
- In recharging, it is normal that the battery becomes heat. Your device will enable automatic protection to control temperature changes when the battery becomes heat.
- Use only the approved batteries and accessories; otherwise, your device may be damaged.
- Be sure to switch off your device before removing the battery, otherwise, the data saved in the device may loss and the lifetime of your device may be shortened.
- Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will loss its charge over time.
- Use the battery only for its intended purpose. Never use any charger or battery that is damaged. Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip or pen causes direct connection of the positive (+) and negative (-) terminals of the battery (namely the metal strips on the battery). This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

- Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.
- Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

### **2.2.1 Inserting and Removing the Battery**

#### **To insert the battery**

1. Place the battery with metal contacts face down and turn the battery at an angle of about 45°.
2. Insert the handles on the upper edge of the battery into the holder of the device.

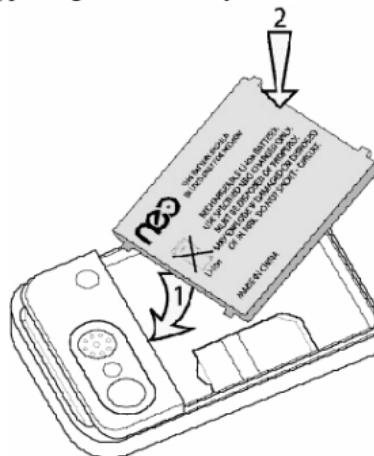

---

3. Press the lower part of the battery until it clicks in place.
4. Install the battery cover.

### **To remove the battery**

Make sure that the device has been switched off and the charger or other equipment has been disconnected from the phone.

Place the phone facing down, and push away to remove the battery cover.

Find the release button on the bottom of the battery, press it to make the battery leave the holder and take it out.

### **2.2.2 To charge the battery**

1. Make sure that the battery has been installed in the device.
2. Find the holder for the charger at the bottom of the device, connect the charger, and connect the charger with the power socket.
3. After the battery is fully charged, connect the charger from the power socket, and then press the buttons on both sides of the charger plug to disconnect it from the device.
4. Do not connect or disconnect the plug of the charger forcibly ; otherwise, the device or the charger could be easily damaged.

### **Battery icon on the screen**

- When the battery is being charged, the indicator bar scrolls repeatedly.
- After the battery is fully charged, the indicator bar stops scrolling.

### **Low battery alarm**

- When the battery is running low, the low battery alarm will present on the screen. The device will give warning tones, and later, it will be switched off automatically. If you get the low battery alarm in a call, please end your call immediately.



---

## 2.3 Inserting and Removing the T-FLASH Card

1. Slide the T-FLASH card slot open on the side of the device.
2. To install the T-FLASH card, put the metal contacts of the T-FLASH card face down and slide the card into the slot until it clicks in place.
3. To remove the T-FLASH card, press the T-FLASH card inwards until it clicks.
  - Never insert any other object except the T-FLASH card into the T-FLASH card slot.
  - Do not paste any label or other object on the T-FLASH card as any slight change to thickness of the T-FLASH card might make the insertion or removal difficult, or even make data lost.
  - Be extremely careful not to scratch the T-FLASH card or bend the metal contacts when inserting or removing the T-FLASH card.

## 2.4 Security Codes

### 2.4.1 PIN (4-8 digits)

The PIN is the personal identity number of your SIM card, which is usually associated with the SIM card and provided by your network operator.

If you enter the wrong PIN three times consecutively, the SIM card is blocked. To unblock it, you need to enter your PUK. For details, please consult your network operator.

### 2.4.2 PIN 2 (4-8 digits)

The PIN 2 will be provided for some SIM cards to use some functions, for example, call fee notice and fixed dialing number. These functions can be used only when your SIM card supports.

### 2.4.3 PUK

To unblock the blocked PIN, you need to enter your PUK (Personal Unblocking Key). Your PUK is provided together with your SIM card. If not so, please contact your network operator to get it. If you forget your PUK, please contact your network operator as well.

## 2.4.4 Phone Code

The phone code protects your phone against unauthorized use (the original phone code is 1122). To ensure security of your personal information, please change the original phone code in time.

### Phone Overview

#### 3.1 Appearance



### 3.2 Key Functions

The table below lists the major functions of your phone keys.

Key	Function
End key	<ul style="list-style-type: none"> <li>• Press and hold to switch on or off the device.</li> <li>• Press to end a call or reject an incoming call.</li> <li>• Press to return to standby mode.</li> </ul>
Dial key	<ul style="list-style-type: none"> <li>• Press to make an outgoing call or answer an incoming call.</li> <li>• In standby mode, press to view the list of dialed calls.</li> </ul>
Up, Down, Left, Right keys	<ul style="list-style-type: none"> <li>• Press to move through menus and tabs.</li> <li>• In standby mode, press up to access corresponding shortcuts.</li> <li>• You can also specify functional keys to change shortcuts in Setting / Phone Setup menu.</li> </ul>
OK key	<ul style="list-style-type: none"> <li>• Press to confirm the selected function.</li> </ul>
Left / Right soft key	<ul style="list-style-type: none"> <li>• Press to select the options shown above this key on the screen.</li> <li>• In standby mode, press # key immediately to lock the keypad after pressing Right Soft Key.</li> </ul> <p>After the keypad is locked, press Right Soft Key and press # key immediately to unlock it.</p>
Number keys 0 – 9	<ul style="list-style-type: none"> <li>• Dial numbers in standby mode, enter numerals and characters in edit mode, and press the corresponding number key under Menu to switch the specified function quickly.</li> <li>• Press and hold key 2 – 9 to speed dial.</li> </ul>

	<ul style="list-style-type: none"> <li>• Press and hold key 1 to enter the voicemail service.</li> </ul>
* key	<ul style="list-style-type: none"> <li>• In standby mode, press twice to enter “+” for international toll calls.</li> </ul>
# key	<ul style="list-style-type: none"> <li>• In standby mode, press and hold to switch between current profiles and mute mode.</li> </ul>
Volume key	<ul style="list-style-type: none"> <li>• In standby mode, press to adjust key press volume of the device.</li> <li>• In call mode, press to adjust volume of the ongoing call.</li> </ul>
Camera key	<ul style="list-style-type: none"> <li>• In standby mode, press to directly go into the camera mode.</li> </ul>

### 3.3 Icons

Different icons appear on the screen according to your selected functions and options.

Icon	Meaning	Icon	Meaning
	Tells you the status of the battery. While charging, the Indicator bar scrolls repeatedly		Ringing mode
	Shows you the strength of the network signal		Vibrating mode
	Missed call		Ring after vibrating
	New message arrived		Vibrate and ring

	Keypad has been locked		Lights only
	Alarm clock has been set.		

## **Basic Operations of the Phone**

### **4.1 - Switch-on**

#### **Power on**

Press and hold End to switch on the device.

#### **4.1.1 - Entering PIN**

- If no password is set to your phone or your SIM card, your phone will search for the network automatically. After successful subscription, the network name will present on the screen. After that, you can dial or answer calls.
- If a startup password has been set to your phone, you need to enter the correct password to enter the system upon each startup. The original password is “1122”.
- You can set a protection code (PIN) to protect your SIM card against unauthorized use. After the PIN is set, you are required to enter the PIN each time when you switch on your phone. When you enter your PIN, each digit appears as \*. Then, press left soft key to confirm your input. After the phone is unlocked, the subscribed network and signal strength will appear on the screen.
- If you enter the wrong PIN three times consecutively, the SIM is blocked. To unblock it, please contact your service provider.
- If you do not know the PIN, please contact your service provider.

---

- If the message “insert your SIM card” appears on the screen after startup, press End key to switch off the device and check if the SIM card has been properly installed.

#### **4.1.2 Using Hand free**

When you plug into earphone to the slot, the mobile phone automatically changes to the Hand free mode. The earphone can be used as both the receiver and speaker.

#### **4.2 Switch-off**

To switch off your phone, press and hold the End key in standby mode. The phone will be switched off after paying switch-off animation. Never switch off your phone directly by removing the battery. If you do this, the data that has not been saved to the SIM card or the phone may loss.

### **4.3 Calling**

#### **4.3.1 Making Calls**

- You can make calls only after your home network presents on the screen.
- In standby mode, enter numbers through the keypad, and press Dial to make calls, or press left soft key to save numbers.
- Dial calls through Contacts (phonebook). In standby mode, press Down key to enter Contacts, find your desired contact and his/her phone number by Quick Search or Name Search, and press Dial to make the call.
- Dial calls through SMS. If the SMS you received contains a phone number, you can dial the number contained in the SMS or dial the sender’s number.
- In the Inbox menu, select and open your desired SMS, press left soft key to enter Options menu, then press Use Number to select the phone number contained in the SMS or choose

---

the sender's number. Then, press Options again and choose to Dial or Save the number.

- Press right soft key to delete the last digit of your input number. Press and hold right soft key to clear all inputs.
- If you activate the Call Time Display function, a call timer will present on the screen after a call is connected.
- After a call is connected, press right soft key to enter hands free mode. In this mode, do not hold the device near your ears as exposure to high volume may damage your hearing. Press right soft key again to return to normal mode from hands free mode.
- Calls cannot be established possibly in the following cases:
- "The line is busy": The called party is busy or network is busy. If you have set automatic redialing, the phone will redial automatically.
- "The call is rejected": The call is blocked, for example, when call barring is set.
- If you activate automatic redialing, the device will redial the number automatically when the called party is busy or the call is not answered.
- If the dialed number has been stored, name of the corresponding contact will present on the screen.
- Press the End key to end a call. The call duration will present on the screen.
- Press the End key to cancel the call dialed just now.

#### **4.3.2 Emergency Calls**

- Emergency numbers can normally be used to make emergency calls, with or without a SIM card inserted, if a GSM network is within range.
- Different countries or regions have different emergency numbers, so the emergency numbers in your phone are not always valid in all regions. Also, emergency numbers sometimes cannot be dialed due to networks, environments and interferences.

---

- The number 112 is a standard GSM emergency number and can be used in any GSM network throughout the world.

#### **4.3.3 Making International calls**

- When you make an international call, the + sign replaces “00”. You can press \* key twice quickly to output the + sign.
- Enter the country code.
- Enter the area code and phone number.
- As usual, omit the digit “0” before the area code when dialing the number.
- Notice: To make calls between different areas of some countries or areas (for example, between China and Hong Kong), operate in the same manner as dialing international toll calls.

#### **4.3.4 Dialing Recent Calls**

- The device records the phone numbers of missed, received, and dialed calls in the time sequence. If the list is full, the most previous phone numbers will be removed.
- In standby mode, press Dial to display recent calls. Select your desired number with Up, Down, Left or Right key, and press Dial to directly dial out.

#### **4.3.5 Speed Dialing**

- You can save the phone numbers you dial frequently to reach them easily by pressing only two keys.
- Use number keys 2 to 9 to present different phone numbers. In standby mode, press and hold a number key to dial the corresponding phone number. If no phone number is set for the number key you press, the message ‘no number specified’ will appear.

---

- To set phone numbers for speed dialing, select Settings / Phone Setup / Speed Dialing.
- On the Speed Dialing screen, you can edit phone numbers for speed dialing at unset number keys, or delete the available phone numbers for speed dialing.
- You can choose to delete available phone numbers and set new ones.
- The number key 1 might have been reserved for voicemail service.

#### **4.3.6 Receiving Calls**

- The device will alarm for incoming calls according to its settings, for example, by ringing, vibrating, ringing and vibrating, ringing after vibrating, or with caller ID photo presence.
- To answer a call, press Answer.
- To reject a call, press End.
- If your subscription includes the Calling Line Identity Presence (CLIP) service, the caller's number is displayed on the screen. If the number is in your contacts, the contact's name is displayed.
- Press End to end a call.

#### **4.3.7 Missed Calls**

- If you have missed a call, a prompt message will appear on the main screen. You can press Read to view the list.
- If you have selected Settings / Call Setup / Call Diverting, calls will be diverted to the specified number.

#### **4.3.8 Additional Calling Functions**

In a call, you can press left soft key to enter Options menu where you can hold (resume) the call, end the call, open a new call, open contacts list, enter SMS menu, record sounds, mute the phone, and enable (disable) DTMF.

Option	Description
Hold	Suspend (put on hold and re-connect to...) the current call
End	Terminate the current call
New Call	Enter another phone number and originate the call. You can switch between the ongoing two calls.
Contacts	Select this menu to Contacts list. For details, see section Contacts.
SMS	For details, see section SMS.
Record	Record sounds in a call.
Mute/Un-mute	Mute or un-mute your device. If your device is muted, the other party in a call cannot hear your sounds but you can hear his/hers.
DTMF	Select whether to enable DTMF. DTMF tones allow your device to use automatic exchange.

#### 4.4 Text Input

Your device supports English, Arabic and/or some other languages. You can edit SMS in English or relative languages, use T9 Text Input method, and edit contacts. Your device provides several input methods. In the edit screen, you can press # key to switch between input methods, press \* key to enter punctuations, and press the number key 0 to enter space in any other method except numeral input.

#### 4.4.1 Stroke Input

- T9 Text Input Method is used for the device. This input method is developed on the basis of daily writing customs. You just need to split a character into strokes as writing customs, and then enter corresponding strokes at keys 1 to 5. In the input, a candidate row of the characters containing the strokes appears at the bottom of the screen. Press Left or Right key to choose your desired character and then press left soft key to confirm. In this case, a new character will be automatically associated and presented for your selection.
- The Wild Card key 6 can be used when you are not sure of which stroke to use.

#### 4.4.2 Smart Input Method

The device supports T9 smart input method (upper and lower cases). This input method has an association function. The more letters you input, the more complete words you can get. For example, if you press the keys 2, 3, 7, and 8, the word “best” will be entered. If the entered word is not the one you want, press Up or Down key to select another word.

#### 4.4.3 ABC Input Method

The device supports ABC input method (upper and lower cases). Unlike Smart Input Method, ABC input method does not have the association function. In this method, you should press keys once or several times to enter your desired letters. A corresponding character is entered in each click. For example, press key 2, letter “A” is entered; press key 3, letter “D” is entered; press key 2 continuously, “A”, “B”, “C” or “2” is entered.

#### 4.4.4 Pinyin Input

As multiple letters are allocated to each key, you can select letters by pressing the key for several times continuously. For example, to enter “Go”, press key 4 once to enter “G” and press key 6 three times to

---

enter "O".

#### **4.4.5 Number Input**

In this input method, press number keys to enter corresponding numerals.

### **Menus**

#### **5.1 Main Menu**

The main menu of your device includes such options as Contacts, SMS, Call Records, Settings, Entertainment, File Manager, Profiles, and Additional Features and Services.

#### **5.2 Phone Book**

- The device provides two storage medias: SIM card and the phone memory. The phone memory can deposit 500 groups telephone numbers.
- In standby mode, enter a string of numbers and press left soft key to store it. After you choose the storage media, the edit screen appears.
- The device supports the phonebook of business card style. That is, you can save the name, mobile phone, home phone, company name, Email, company phone, fax, caller ID photo, ring tone and group of each contact.
- In contacts saved in the SIM card, only names and phone numbers of the contacts can be entered.
- In standby mode, press right soft key to enter Contacts directly, and press left soft key to enter the function list of Contacts (including Quick Search, Name Search, Add Number, Copy All, Delete, Group, Other Number, and Settings).

##### **5.2.1 Quick Search**

- Browse all records in Contacts, or input text for a quick search.

---

- In Contacts, icons on the left side indicate the storage medias of the records (on SIM card or in phone memory), and the name information is displayed on the right side.
- To search for a record quickly, press the number key of the initial letter of the record under name list. For example, to find the record named “Lily”, press key 5 three times continuously (key 5 presents letters j, k and l) to scroll up to the first record starting with letter “L”.
- Select a record, and press Dial to make a call, or press left soft key to do the operations listed below.

Option	Description
IP dialing	When IP dialing number has been set and activated, select IP Dialing to add the IP number before the currently selected number and dial out. You can set IP dialing number in menus Settings / Call Setup / IP Dialing.
Send SMS	Enter text and directly send it to the specified contact.
View	View details of a record. The information can be displayed only when the phone number is saved in the phone memory and the corresponding entry is selected.
Edit	Edit the options in a record of Contacts.
Delete	Delete a record.



Copy	Enter the menu and select Copy or Replicate. Copy is to copy a record from the current storage media to another storage media. Replicate is to duplicate a record from the current storage media.
Move	Move a record from the current storage media to another.
Send Contact	Send a record through SMS or save it to File Manager.

### **5.2.2. Name Search**

Search for the records complying with conditions exactly from Contacts.

### **5.2.3 Add Number**

Add a new phone number record in Contacts, and save it in the phone or SIM card. Telephone Book Synchronization and other File Synchronization, please refer to CD and Start the Synchronization function from “NEO 808i Data Suite”. Follow CD Manual in Application.

#### **5.2.3.1 Add a Caller Picture and / or customized Ring Tine to incoming calls**

Caller Picture, you may now assign a picture from the Memory card or the Phone Memory to be the incoming caller Picture. To edit this function got to “Menu” > “Phone Book” and follow Instructions

#### **5.2.3.2 Add a customized Ring Tone , MP3 , to a callers record. Phone book**

Customized Caller (MP3) Ring Tone can be added either from Memory Card or Phone Memory , go to



---

“Menu” > “Caller Ring Tone” and follow Instructions

#### **5.2.4 Copy All**

Select to copy all phone number records from the SIM card to the phone or from the phone to SIM card.

#### **5.2.5 Delete**

You can select to remove records one by one or all records at a time from the SIM card or from the phone. To remove all records, you have to enter the correct PIN or phone code, if set, to proceed.

#### **5.2.6 Caller Groups**

The device supports five caller groups. You can select the group to view and edit group information, such as group name, melody, caller photo, and group members.

#### **5.2.7 Other Numbers**

In this menu, you can set My Numbers, Service Numbers and Emergency Numbers.

Option	Description
My Numbers	Up to two groups of your phone numbers can be set.
Service Numbers	This service requires SIM card support. At present, this service is used in Europe only.
Emergency Numbers	The emergency numbers can be normally used to make emergency call even without the SIM card or in unavailability of network service.

### 5.2.8 Settings

This menu includes such options as Capacity Query, Storage Location, Business Card Setting, and My Business Card.

Option	Description
Capacity Query	Query the total capacity for contacts records in the phone and in the SIM card, as well as the used space.
Storage Location	Set the default storage location of contacts. You can also choose the storage location when saving records.
Business Card Setting	Set whether to display the options in contacts, such as Home Phone, Company Name, Email, Fax, Caller ID Photo, Ring tone and Caller Group.
My Business Card	Edit your business card. You can send your business card to others.

Incoming-call with a big head picture

Incoming-call with big head picture can be set for new records, original records and caller groups.

Incoming-call ring tone

Incoming-call ring tone can be set for new records, original records and caller groups.

#### **Incoming-call video**

Incoming-call video can be set for new records, original records and caller groups.

### **5.3 SMS (require network support)**

The device supports SMS. Messages are sent to the SMC first, and then transferred to destination users through networks. If destination users do not turn on their devices or cannot receive messages, messages will be saved temporarily within the validity period defined by senders and service operators together.

- Prompts will appear on the screen when a new message arrives. You can press left soft key to read it directly.
- If the receiver has received the message, your device will give a prompt tone (when SMS Alert and Status Report are selected).
- If the storage for messages is used up, you cannot receive any new message. In the Inbox, select and delete old messages. When there is space for messages, the messages unsent will be delivered to the phone.

### 5.3.1 SMS

Option	Description
Inbox	<p>View the messages received in the Inbox.</p> <p>Reply: Reply the received message directly</p> <p>Delete: Delete the current message</p> <p>Edit: Enter the edit box of the message.</p> <p>Forward: Directly forward the current message to others</p> <p>Chat: Chat with the sender by SMS</p> <p>Delete all: Remove all messages in the inbox.</p> <p>Use Number: Take the phone number contained in the message</p>
Outbox	<p>Read or handle the messages saved in this folder.</p> <p>Send: Send the message.</p> <p>Edit: Edit the message.</p> <p>Copy to Phone (SIM card):</p> <p>Move to phone (SIN card)</p> <p>Delete all: Delete all the messages in the outbox</p> <p>Copy all: Copy all the messages in the Outbox to phone or SIM card.</p>



	<p>Move all: Move all the messages in the Outbox to phone or SIM card. Use number: Use the message receiver's number Use connection: Use connection to the message</p>
Edit Message	<p>Create and edit new messages. Finish: After finishing editing a message, select this option to Send, Save and Send, Save, Send to Multiparty, or Send to Group. Phrases: Enter this menu and select the phrase to be inserted into the message. Input Method: Select your desired input method.</p>
Phrases	<p>There are 10 pieces of phrases can be edited or deleted.</p>
SMS Settings	<p>Set related parameters of SMS. Modes: There are four modes to set such basic parameters as Folder Name, SMC Number, SMS Validity Period, and Send Format. Status: Check or uncheck Status Report and Reply Path. If Status Report is checked, SMC will send you a status report when the receiver has received the message you sent or has not received the message due to some reasons (network support is needed). If Reply Path is checked, the message sent by the receiver will be automatically sent to the SMC where your message was sent just now. Capacity Query: View the memory status, including the memory of the SIM card and the phone. Storage Location: View or change the default folder to which messages are stored. Transfer Setting: Set the network for message transfer.</p>

## MMS

You can send and receive MMS, including pictures, sound and files. When sending a piece of MMS, the

---

receiver should have a mobile phone also with MMS function; otherwise he/she could not check your message.

### **5.3.2 Voicemail (require network support)**

The voicemail service is a kind of services provided by your network operator. To use this service, you may need to subscribe to it first. This service is used to divert your calls to the voicemail service center and let callers leave voicemail messages. You can dial the voicemail service center number to get voicemail messages at any time.

- The voicemail number is provided by your network operator. Please contact your network operator for details. Your device will not check the correctness of the configured voicemail number.
- Your voicemail is provided through the network, so calls will not be missed. This service is somewhat like an answer phone, allowing you to get voicemail messages at any time.
- You can set two groups of voicemail numbers in your device.

Option	Description
Edit	Add or modify your voicemail number.
Dial Voicemail	Quickly connect to the current voicemail number.

### **5.3.3 Cell Information**

Cell information is a type of common message that is sent by the network operator. Your device can receive information of various subjects from your network operator, such as weather forecast, traffic information, hospital information, etc.

Option	Description

Receive Mode	Activate or deactivate cell information.
Read Info	Read the received cell information.
Language	Select the language of the cell information.
Channel Setting	Select: Choose your desired channels and filter those you don't require. Add: Add a cell information channel and set its name and number. Edit: Reset standby channels. Delete: Delete standby channels.

## 5.4. Call Records

You can learn about your call information through this menu.

### 5.4.1 Missed Calls

List all calls you missed. Select one record and you can view the date and time of the latest call, caller number, and times of the call you missed. A call rejected by you is also treated as a missed call.

### 5.4.2 Dialed Calls

List all calls you dialed. Select one record and you can view the date and time of the latest call, caller number, and times of the call you dialed.

### 5.4.3 Answered Calls

List all calls you answered. Select one record and you can view the date and time of the latest call, caller

---

number and times of the call you answered.

#### **5.4.4 Delete Call Records**

Delete the missed, dialed, answered calls or all records.

#### **5.4.5 Call Duration**

Since the last clear, record the duration of the last call, total outgoing call duration, total answered call duration, or clear call duration timer.

#### **5.4.6 Call Cost**

Call duration and cost is a network service that requires support by the network operator.

Option	Description
Last Call Cost	Query the fees of last call.
All Call Cost	Query fees of all calls.
Clear Call Cost	Clear all fees records.
Cost Restriction	Query the highest call fee.
Price and Charge Rate	Query and set call fee unit.

#### **5.4.7 SMS Calculator**

Calculate quantities of the messages sent and received since last reset.

---

#### 5.4.8 GPRS Calculator

Calculate the total capacity of GPRS transmission between input and output since last reset.

### 5.5. Settings

#### 5.5.1. Phone Settings

In this menu, you can set such options as date and time, timed on/off, language, direction keys of your device.

Option	Description
Date and Time	Set the city, date and time, and time format of your device.
Timed On/Off	Activate or deactivate timed switch-on/switch-off. The device allows you to set four startups/shutdowns at different time. For each startup or shutdown, you can set status and time.
Language	Select the display language of your device: English, Arabic or other languages.
Preset Input Method	The device has predefined the default input method.
Standby Menu	Display such menus as Wallpaper, Screensaver, Power-on Video, Power-off Video, Show Date & Time, Show My numbers, Show Service Operator name or Show Clock Mode. User can download wallpaper and screensaver. The picture mode can be GIF, BMP, JPG, the file would better be smaller than 30KB.



Greeting	Activate or deactivate startup greeting and edit its content.
Speed Dial	Enable or disable speed dial and edit the dialing list.
Auto Time Change	You can select it on or off. The services need the support of telecom operator.
Flight Mode	You can select between Normal Mode and Flight Mode, or select Prompt when Startup.
Other settings	LCD background light showing time: after certain time of non-touch to the mobile phone, the LCD background light will be turned off.

*Special Note: Check if the automatic startup function of your device is disabled before entering a special area where two-way radio should be turned off (for example, in aircraft).*

### **5.5.2 Call Settings**

In this menu, you can set such functions as call diverting and call waiting.

Option	Description
Phone Number	You can select Hide Number and Send Number.
Call Waiting	With this service enabled, you will be notified of any new incoming call when you are already in a call.

Call Diverting	<p>Call diverting is network service that allows you to divert incoming calls to another specified number. You can set and cancel call diverting service.</p> <p>Always: divert all calls</p> <p>Not reachable: divert calls if your phone is turned off or if you are unreachable.</p> <p>No reply: divert calls that you do not answer within a specified time limit.</p> <p>When busy: divert calls if you are already on the phone.</p> <p>Divert all: divert data calls to a number connecting through PC.</p> <p>Cancel all: cancel all call diverts.</p>
Call Barring	<p>Call barring is a network service that allows you to restrict the calls that you make or receive with the device. This service also requires network support. You need the barring password from your service provider. In this menu, you can set call barring objects.</p>
Line Switch	<p>Select Line 1 or Line 2. Note: If you select Line 2, you cannot make outgoing calls. Moreover, this menu varies with the used SIM card types.</p>
Call Time Alert	<p>Select whether to alert you about call time in calls. You can set the alert period.</p>
Call Time Display	<p>Select whether to display the current call time in a call.</p>
Automatic Redialing	<p>Select whether to allow the device to redial the number automatically when the called party is busy or the call is not answered.</p>



Close Group	Close group is a network service for you to dial or answer the calls from the users in a group. For more information, please consult your network operator service provider. If a group has been defined, it will be used for all dialed calls. If no group has been defined, the predefined list in the network (a special group list stored over network) will be used.
IP Dialing	The device supports IP dialing. Up to three groups of IP numbers can be set. Select an IP number, and press left soft key to enable or edit it. On: The selected IP number is used as the current IP call number. Edit: Input the IP number and edit it. If you select a number in Contacts and press left soft key to select IP Dialing, the device will immediately add the activated IP number to the selected number and call out.
Blacklist	Up to five numbers can be set in Blacklist. If set, the device will not respond and prompt when there are calls from the callers in the blacklist.

### 5.5.3 Network Settings

In this menu, you can set network parameters.

Option	Description
Network Selection	Search for the network in Automatic or Manual mode.
Referred Network	Set the preferred network.
GPRS	Select “Always” or “Connect when needed”.

### 5.5.4 Security Settings

In this menu, you can protect your device against unauthorized use.

Option	Description
SIM Card Lock	If this function is enabled, you need to enter the PIN upon each startup, thus protecting your device against unauthorized use. To disable this function, you also need to enter the PIN.
Phone Lock	If this function is enabled, you must enter the phone code upon each startup. Note: The original phone code is 0000.
Keypad Lock	Set the automatic keypad lock of your device, press Confirm to enter the Setting screen. Select Off (to invalidate keypad lock function), 5sec, 30sec, 60sec, or 5min to lock the keypad when no operation is made on the device within the specified time.
Fixed Dialing	The fixed dialing function allows calls to be made only to certain numbers saved in Fixed Dialing list. The fixed numbers are protected by your PIN2.
Restricted Dialing	The restricted dialing function requires network support and is used to restrict your outgoing and incoming calls.
Change Password	Set a new password, including PIN1, PIN2 and phone lock code. Please remember your new password.

### **5.5.5 Restore Factory Setting**

Rest all user settings and restore factory settings. To do this, you need to enter the phone lock code (the default code is 0000 or 1122).

### **5.5.6 Sound Effects**

Set the equalizer, for example, no change, S.WOOF, dance music, classic music, alt, feast, pop music, rock and roll.

## **5.6 Entertainment and Game**

### **5.6.1 Camera**

You can use the built-in camera to take photos and adjust the settings. The photos will be saved in the document system attached to the mobile phone. The format of the photos taken is JPG. When shooting, the right side screen will show the current setting conditions: special settings, white balance, exposure compensation, shoot delay, continuous shooting, night mode, picture quality and picture size etc, press left or right key to adjust exposure compensation.

**You can choose Options in the preview interface of taking photos:**

Options	Instructions
To Album	You can view and set your photos in the album list.
Camera Settings	You can set the related parameters of the camera, such as Shutter Sound, Exposure Compensation, Avoid Flicker., shoot delay, continuous shoot etc, to choose the best shoot result.
Shutter Sound	There are three shutter sounds can be set.



Avoid Flicker	You can choose 50Hz or 60Hz.
Exposure compensation	Choose exposure compensation parameters by press left/right key
Special Settings	You can choose this function to have special disposal to the photos. Or press number 1 key to set.
Photo Frame	Choose and add various photo frames when pictures are set as 176*220.
Setting of Continuous Shoot	You can choose numbers of continuous shoot, or press the number 5 key to set up. The photos will automatically be saved in album.
Shoot Delay	You can set the delay for shoot as 5s, 10s, 15s or press number 4 key to set
Photo setting	Setting photo quality by press number 7 key, setting picture size by press number 8 key.
White balance	You can choose to set Auto, Sun light, cloudy, hot white light etc., or press number key 8 to press photo size
Photo mode	You can choose Auto or Night Shoot mode.
Saving Path	You can choose to save to mobile phone or to memory card.
Restoration Setting	You can restore the settings of the mobile phone to the original default settings.

### 5.6.2 Album

You can browse and set your photos in the photo list. Also you can choose such operations as View, Browse Mode, Send, Change Name, Delete, Delete All, Ordering, Saving Path and so on.



---

### 5.6.2.1 Setting of Wallpapers and customized main Background Pictures

Wallpapers, select any available Wallpaper, or add a customized Wall paper to the Wallpaper Settings go to “Menu”> “Settings” > “Phone Setup”>”Display Options”> “Wallpaper” and add any Wallpaper to an empty position

The Main Background Picture You may select now any Picture from Your Memory Card, Camera, Main Memory, and select as Background Picture

Options	Instructions
View	You can choose and preview photos by press up/down direction key.
Brower mode	Brower the photos by list or in group.
Send (Forward) to:	You can choose to send (forward) pictures to: Wallpaper, Screen Protection and Phonebook.
Saving Path	You can choose to save to Mobile Phone or Memory Card.
Delete	Delete one photo
Delete All	Delete all photos in the file
Change name	Change photo name
Ordering	Change the photo order list.

### 5.6.3 Video Recorder

---

In the interface of video recorder, you can press the “start” or “pause” to record while training the camera on the targets. When press the right soft key to stop play, it will present a reminder “Yes” or “No” on whether to stock the picture recording.

Options	Instructions
To Player	You can browse the saved video documents.
Recorder Settings	You can set the related parameters for the recorder.
Movie Settings	You can set the related parameters for the movie recorded.
Special Settings	You can set special effects for the cartoon.
Saving Path	You can set the saving position of the video documents, Memory Card recommended!
Restoration Settings	You can restore the settings of the record into default settings.

#### **5.6.4 Video Player**

- The built-in video player of the device can be used to view and operate the video files (such as 3GP files) saved in the player. Note: Video files can be normally used only when they are stored in My Documents / Video folder
- Listening to video sounds at a moderate level. Continuous exposure to high volume may damage your hearing.
- When playing a video file in non-full screen mode, press left soft key to play, press right soft key to stop, press Left to back, and Right to Forward.
- When playing a video file in full screen mode, press the left soft key to play, press the right

---

- soft key to stop, press Up to back, and press Down to forward.
- On the play screen, you can press the left soft key to pause, and press the left soft key again to resume.
- On the play screen, you can press \* key to switch between full screen mode and none-full screen mode.
- You can modify video files by selecting Play, Transfer, Rename, Delete, Delete All, Sort, or Storage Path in Options menu.

### **5.6.5 Picture Artist**

Use this function to edit photos in the mobile phone or storage card. When editing, you can save the photos to new file, use 13 kinds of special affection, add frame, add stamp, add words, adjust the color, size, and direction.

### **5.6.6. Music Player**

The in-built music player of your device can be used to play music files and set music files as incoming call alarm tone.

- Listening to music at a moderate level. Continuous exposure to high volume may damage your hearing.
- On the music player screen, press Up to Play, press Down to Stop, press Left to Previous, and press Right to Next.
- On the player screen, press left soft key to enter the playlist where you can play music files, view file details, add as ringtone, update playlist, and setting.
- In setting menu, you can set such options as Set File Location, Generate Playlist, Repeat, Shuffle, Hide Player, and Equalizer.

Speaker Settings and Hands Free / Earphone Operation. Please Follow the Audio settings “Menu”> go to Function like FM Radio or MP 3 Player, and select internal Speaker ON / OFF from Settings. NOTE!

This can ONLY be done with the Headset CONNECTED to the USB port! And the Headset wire serves as FM Antenna!

Option	Description
Generate Playlist	If enabled, the device automatically detects the music files under root directory of file manager or in T-FLASH card and adds them to the default play list.
Appearance	You can select the appearance of the music player freely.
Repeat	Set the play mode of music files: repeat one or repeat all.
Shuffle	Play the files in the play list randomly.
Hide Player	If enabled, the device can also play music files on other operation screens (except mute operation screens or camera operation screens).
Equalizer	You can select the effects of the equalizer.

### 5.6.7 Radio

You can be free to listen to broadcast after plugging in an earphone. By entering the broadcast interface on FM, please press the following keys to find: Pressing “direction key” to change frequency modulation, “Volume” key, to adjust the volume.

Channel List: Display the channel list through automatically searching. User can compile and edit the



---

channel title and name and frequency accordingly. User can directly enter the channel by pressing the figures 1-9 on the FM broadcast interface.

When open the radio, Press the soft key “Options” to operate the following added value:

Turn on/off radio: Choose to turn on or off the radio.

Save Channel: You can save the channel to channel list. The mobile phone can save 20 channels.

Hand-operated Data Input: Press up/down key can adjust the channel forward or backward 0.05M Hz.

After hand-operated data input, user should press the soft key “Confirm” for listening in to the broadcast.

While numeric figures or decimal necessary for input, please press the key “#” accordingly.

Enactment for Auto-searching: The records can be retained and stocked on the channel list while auto-searching the channels.

Delete Channel: Delete selected channel

Rename Channel: Rename the selected channel

Speaker on/off: Use speaker or earphone to listen to the radio

Stereo on/off: Listen to the radio by stereo or mono mode.

When listen to the radio, you can also call our or receive the phone. When talking, the radio volume will be turned to mute automatically. If you are using (E) GPRS or HSCSD connection to send or receive data, then the software may interrupt the radio receiving.

### **5.6.8 Sound Recorder**

This mobile phone supports WAV and AMR sound record modes. On the sound recorder screen, you can select such options as Record, Play, Attach, Rename, Delete, Delete All, Set, or Transfer.

Option	Description
Record	Begin to record sounds.
Play	Play the selected recording file.
Attach	Attach recording to the selected recording file.
Rename	Rename the selected recording file. Note: If you rename a recording file that has been set as the incoming call ring tone, the default melody will resume to incoming call ring tone.
Delete	Delete the selected recording file.
Delete All	Delete all recording files.
Set	Set the storage location and format of the recording file.
Transfer	Transfer the recording file to Profiles.

### 5.6.9 Ring tone Composer

With this function, you can compose your favorite ring tone (vibration allowed) and set it as call alert tone.

Option	Description
--------	-------------



---

Play	Play the composed ring tone selected.
Edit	Play and store the composed ring tone control it's playing speed and choose musical instrument.
New	Compose a new ring tone.
Rename	Rename the composed ring tone selected
Transfer	Transfer the composed ring tone to Profiles.

Notice: The 8 key is for activating vibration (add vibration to the composed ring tone to achieve vibrating effect when set as the call alert tone).

### 5.7. File Manager

In this menu, you can manage your files.

Option	Description
Open	Open a specified folder
New Folder	Create a new folder.
Format	Format the file system. Warning: After formatting, you will loss all information stored in the file system.

### 5.8. Games

The device provides three mobile games: Pintu, Jet plane and dancing. For more games, please

---

download from corresponding website.

You can set game's background colors: orange, blue or gray. You can also set up to turn on/off the color; the color changing frequency, and the colors changing order.

### **5.8.1 Stopwatch**

Your device has a stopwatch for time measurement. There are two options: ordinary stopwatch and multi-dimensional stopwatch.

### **5.8.2. Java**

Java and all relative logos are register by Sun Microsystems Inc

## **5.9. Profiles**

The device provides several modes: Standard Mode, Meeting Mode, Outdoor Mode, Indoor Mode, and Hands free Mode. When you connect the earphone, the device will turn to Hands free Mode automatically.

- In standby mode, you can switch between Silent Mode and current mode by pressing # key.
- For each mode, you can set the following options in Personal Settings menu.

### **5.9.1 Personal Settings**

Option	Description
Sounds	Set the Ring tone, Alarm Signal, On/Off Sound, Message Alert, and Key Sound.



Volume	Adjust the volume of Tones and Key Sounds.
Ringing Mode	Several ringing modes are available for your selection: ring, vibrate, vibrate and ring, ring after vibrating, and light only.
Ringing Type	Three ringing types are provided: once, continuous, and grow stronger.
Alarm Tone	Choose whether to alert, prompt when error, when network connected, and when call connected.
Wallpapers	See Album and Pictures settings
Answer Mode	Choose whether to answer calls by Any Key.
lighting Settings	Select a time-out after which the backlight of the main display is switched off, including 5sec, 15sec, 30sec, and 45sec.

## 5.10. Additional Features

### 5.10.1 Alarm Clock

The device allows you to set three alarms at different time. For each alarm, you can choose whether to activate the alarm clock, and set the alarm time, alarm mode and alarm period.

### 5.10.2 Calendar

Show calendar between January 1, 1970 to December 31, 2030 (both Western Calendar and Lunar Calendar).

---

- On the Calendar screen, you can press the left soft key to select Schedule, Navigate to Specified Date, and Lunar Calendar.
- On the Calendar screen, the first row presents year and month, the second row presents week, the middle area present the specific day in a month, and the last row presents prompt messages. On this screen, press Up to back a week, press Down to next week, press Left to back a day, and press Right to next day. The selected day is highlighted.
- If you change date in Settings / Phone Setup, the calendar information will be updated accordingly.

### 5.10.3 Calculator

The calculator can add, subtract, divide and multiply.

- On Calculator screen, press number keys to enter corresponding numerals, press # key to enter a decimal point, press Up to select +, press Down to select -, press Left to select x, and press Right to select /. Press right soft key to clear latest inputs or results, digit by digit. Press right soft key and press Back to quit the calculator, or press left soft key to view results.
- Select Ordinary Stopwatch and several options appear: Calculate Separately, Calculate by Rounds, and View Records.
- Press and hold left soft key to clear records.

### 5.10.4 World Clock

You can view the GMT of major cities in the world pressing Left and Right key. The city name, current date and time will present on the screen.

- You can press Left or Right once or several times to choose your desired city, and the local date and time will present on the screen. You can also set the city, date and time by pressing left soft key.

### 5.10.5 Memo

Present the schedule of the day and all future schedules, maximum 10 memo can be used. In Options menu, you can add, browse, edit, delete, and delete all memos.

### 5.10.6 Converter

You can use the converter to convert measures such as length and weight.

Option	Description
Weight	Press Up or Down to select related fields. To convert weight between kilograms and ounces, or between kilograms and pounds, first select the unit from which you want to convert and the unit to which you want to convert. Enter the value you want to convert in either Unit field, select OK, and the converted value will be displayed automatically in the other Unit field.
Length	Press Up or Down to select related fields. To convert length between kilometers and miles, meters and yards, meters and inches, or centimeters and inches, first select the unit from which you want to convert and the unit to which you want to convert. Enter the value you want to convert in either Unit field, select OK, and the converted value will be displayed automatically in the other Unit field.

Notice: The converter supports the value to be converted consisting of up to 8 valid digits (decimal point included), and supports the converted value consisting of 14 valid digits.

#### Currency Converter

On the Currency Converter screen, enter the exchange rate first. Press Up or Down to choose a base currency. Press Left or Right in the Exchange Rate field to select the current exchange rate, that is, the

---

exchange rate of the local currency vs. the selected foreign currency. Choose the proper exchange rate, enter a value in Local Currency or Foreign Currency, press OK, and the converted result will be shown in the other field.

#### **5.10.7 Electronic Dictionary**

The Electronic Dictionary is a kind of document reader. User can refer to the text documents through this dictionary. Choose “option” to enter the menu lists:

Reading: Press upper key to forward, and press lower key or “OK” key to backward for reading.

Setting: Setting the storage of all the text documents in the mobile or T-Flash card.

Note: This mobile phone only support the coding format as “Unicode”. Before the text documents remained in the T-flash card or mobile while downloading, please save them and change them into the coding format “Unicode”. Note: The capacity of the text documents should reach up to no more than 50K at the best.

#### **5.10.8. Bluetooth Functions**

Bluetooth technology is a set of specifications that allow devices to talk to other devices, or to accessories, wirelessly over short distances. Bluetooth technology allows devices to communicate with each other without cables. Bluetooth technology is being used to connect mobile phones, computer, earphone etc.

The Bluetooth earphone can be applied to the phone call in terms of it is fully compatible with the mobile. After joint connection between the caller and the receiver basis on activation to the Bluetooth, the data hereby can be preceded on transmission to the other party.

In order to connect the mobile phone to other equipment properly by Bluetooth technology, you need to

---

keep the two equipments between 10 meters (32feet). But the connection may be interrupted by wall, other blockers or electronic equipments.

Bluetooth connection setting: There are several Options can be chose:

Open" or "Close": While in request of wireless connecting with other mobile phone, you should have the Bluetooth connection open, then to reset connection.

Visibility: Per allowed this model to be visible by other wireless mobile phone, please select "All". If not allowed to be visible, then select "Hiding".

My Mobile Name: Edit the name of mobile phone.

Security Reminder: When Bluetooth connection is not requested, please have "Bluetooth" closed, or to have it setting invisible.

Data Transmission: You can set up several Bluetooth wireless connections with others through your mobile phone. For example, you can transmit documents or files to other compatible mobiles after connection between earphone and mobile phone.

- Open multimedia to send photos to another mobile phone from your memory.
- Select a certain document or one photo, then access to Option>Sending>Through Bluetooth to send them accordingly. Your mobile phone will display the icon, name, format or short name of other equipments which can support Bluetooth technology in a certain distance.
- Select the mobile phone which is needed to be wireless connected with each other.
- When other mobile phone request compatibility with your mobile for sending data purpose, it will give you a remainder sound and request your entry of code.

---

- After wireless connection has been setup, the mobile phone will show “Being transmitted” on the screen.

Note: The sending message will not be remained in the mobile phone or T-Flash card when through wireless connection.

**Data Received:** Before receive some data via wireless Bluetooth connection, you will be noticed as whether to receive or refuse. If receive, then it will present you the message icon, and simultaneously save the message in Inbox folder.

**Compatibility of Mobiles Phones:** Before set up compatibility with each other, please fix your owned code (1-16 numbers), then using the same code of other mobile phone by negotiation with the user. You will be requested to try one attempt to enter the code as requested.

If you want to set up compatibility with another mobile phone, please choose Option>New Compatible Mobile Phone. Within a certain distance, your mobile phone will be appeared other wireless Bluetooth mobile phones on the screen. Select your requested wireless Bluetooth mobile phone, then simultaneously enter your owned code under a must by entering the same code. After compatibility with each other, your mobile phone will save it in the folder.

**Closure of Bluetooth Connection:** If you want to disconnect the wireless Bluetooth, please choose Bluetooth > Closed.

---

## 5.11. Services

### 5.11.1 WAP

- The device provides a WAP browser for you to access the Internet. But you can use it only after acquiring the license from your network operator and setting related options.

Option	Description
Homepage	Select this menu and you will be directly navigated to the default website configured in your device.
Bookmark	Add your desired websites to your list of bookmarks, edit the bookmarks, or directly connect to the websites through bookmarks
History	List of previously visited sites. You can directly access the Internet by selecting any record in this menu.
Enter Address	Enter the web page address of a site you want to visit.
Inbox	With this function, the service provider will send WAP content to your device, and you don't need to do anything. For example, you can acquire latest news or new WAP settings from your service provider.
Setting	Edit Settings: You can access the Internet smoothly after setting your phone options properly based on your local network. Browser Options: Set the Internet accessing wait time, and enable or disable picture display.



	<p>Service Message Setup: Choose to receive network service information or not.</p> <p>Clear Cache: clear all temporary stored Internet files saved in the phone.</p> <p>Clear Personal Data: clear cookies.</p>
--	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### **5.11.2 Internet**

- The device provides some websites for your quick access.

## **6 Troubleshooting**

Please refer to the information below to remove faults on your device. If faults cannot be removed, please contact your dealer or maintenance personnel. If none available please email to [emxi@emxi.com](mailto:emxi@emxi.com) , Subject 808i trouble shooting.

### **I cannot turn on the phone**

Press On/Off key till the startup screen appears.

Check if the battery is discharged.

Check if the battery is in poor contact. If so, remove the battery, install it again, and switch on your device.

### **The phone does not respond in several minutes**

Press the End key.

Remove the battery, install it again, and then switch on the phone.

### **Images look smudgy**

---

Clean the screen.

Turn on the backlight.

Use your device in the suggested conditions.

### **The phone turns itself off**

Check if the keypad is locked when not used.

Check the battery capacity.

Make sure that the backlight is not always turned on.

### **The phone is running out of power shortly after recharged**

Please ensure that you have enabled the screensaver program.

Ensure that the battery is fully charged for at least 3 hours.

After the battery is partially charged, the battery capacity indicator may be not correct. Please wait for 20 minutes to get the precious indication after removing the charger.

### **The phone cannot be charged normally**

Check if the battery is still usable as the battery performances drop down after uses over years.

Ensure that the battery is recharged in normal conditions.

Ensure that the battery has been installed before the charger is powered.

Ensure that the designated batteries and chargers are used.

Before going abroad, please check if the currency and voltage is compatible.

### **The phone cannot find a network**

Retry in another place.

Query the network coverage from your network service supplier.



---

Confirm with your service provider if your SIM card is valid.

Try to select a network manually.

Retry later if the network is too busy.

### **SIM card error**

Make sure that the SIM card has been inserted correctly (see 2.1 Insert SIM card).

Query from your service supplier if your SIM card is compatible with 3V (the old 5V SIM card cannot be used).

Make sure that the contacts in your SIM card are not smudgy, damaged, or scratched.

### **I cannot make calls**

Ensure that you have dialed correct numbers and pressed the Dial key.

- For international toll calls, ensure that the country code and area code are used.
- Ensure that your phone has found the network and the network is not busy.
- Make sure that you are not restricted in calls due to owing fees.
- Query your subscription information (quota, validity of SIM card, etc.) from your service provider.
- Make sure that call barring is not set in your phone (see 5.5.2. Call Settings).
- Check if you have set the fixed dialing function (see 5.5.4 Security Settings).

### **I cannot answer calls**

- Make sure your phone has been switched on and connected to the network (check if the network is overloaded or no network is found).
- Make sure that your incoming calls are not barred due to owing fees.
- Query your subscription information (quota, validity of SIM card, etc.) from your service provider.

---

provider.

- Make sure that you have not set the call diverting function (see 5.5.2 Call Settings).
- Make sure that you have not set call barring function.

#### **Callers' names are not presented on my screen.**

- Query from your service supplier if you have subscribed to the CLIP service.
- Check if the caller's number has been removed from your device.

#### **Sounds are not clear**

- Make adjustments using the side key while in a call.
- Check if your phone receives radio signals.

#### **I cannot use some functions listed in User's Guide**

- Please query from your service supplier if your subscription includes such services.
- Check if accessories are needed for such services.

#### **I cannot dial the number selected from Contacts list**

- Make sure the number saved in Contacts is correct.
- Make sure that you have selected the correct country code when dialing an international toll call.

#### **I cannot create new records in Contacts**

- Make sure your SIM card memory is not full. Otherwise, delete some numbers or save some numbers in the phone, or vice versa.

#### **Callers cannot leave messages in my Voicemail**



---

- Query from your service provider if your subscription includes voicemail service.

#### **I cannot enter my voicemail**

- Make sure you have entered the correct voicemail number in Voicemail option of SMS.
- Retry later if the network is busy now.

#### **I have entered the PIN incorrectly for consecutive three times**

- Acquire your PUK from your service provider.

#### **Music files cannot be played normally**

- Check if your phone supports the music file format (such as MMF).
- Check if the music file has been deleted but the name is still reserved in this folder. In this case, you can refresh the play list.

For any support or service questions, contact Your nearest NEO Dealer / Distributor and if none is near by or available, then ONLY by email [emxi@emxi.com](mailto:emxi@emxi.com) !

**Thank You for buying a NEO Product.**



---

## Appendix I. RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types NEO808i (FCC ID: VRG-NEO808I-07) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.196 W/kg and when properly worn on the body is 0.038 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help