

Operational Description

FM Transmitter(MF-100)Operational Description

Thanks for buying the MuzFull FM Transmitter. We'll get you up and running in 2 easy steps – Plug, Play, Tune.

1. Plug your MuzFull FM transmitter into your portable audio device and turn on MuzFull FM Transmitter.

2. Turn on portable audio device and play music.

If the frequency is not an empty frequency in your area (i.e. there is music or talk already on that station), please find an empty frequency.

In some situations, extraneous noises may be perceptible. This phenomena is going to be most obvious when the adapted audio player's volume is low and the stereo volume is high. We recommend that users keep the audio player around 60-80% of full volume for best signal to noise ratio, in other words, best performance.

Power On/Off

- Press and hold the Multi JOG-Button ③ (Power/Preset knob) approx. 2 seconds to turn on MuzFull FM transmitter. The LCD backlight turns on and the display shows current channel.

Locating a Frequency & Scan Tuning

- Jog up "scan+" or down "scan-" knob to select desired frequency, the frequency changes by 0.1 MHz each time.
- Use scan tuning by jogging up/down and hold the knob to quickly locate a frequency or to monitor several stations within a band.

Storing Frequency (Preset Tuning)(88.1 MHz – 107.9 MHz)

- To store a station into memory, use the following sequence:
 1. Tune into a desired frequency by jogging up/down knob.
 2. Press preset knob ③ once to make a preset mode. The display flashes and then move and choose one of preset address pressing preset knob ③.
 3. Press preset knob within 5 seconds in order to save the station.

Recall of stored frequency

- Recall a stored frequency directly pressing ③ preset knob. Press the knob twice to make a flashing mode and select stored frequency pressing preset knob, LCD displays the frequency and storage number.

Adjust Volume

- Note that a level of volume in portable audio device have to be 60~80% for RF efficiency.