



location 'warning' sticker

The 'warning' sticker on the RTU+[®] V6 is located on the bottom right side of the device.