



Operating Instructions Manual Wireless Remote Control

JWR-100

WMH TOOL GROUP

2420 Vantage Drive
Elgin, Illinois 60124
Ph.: 800-274-6848
www.wmhtoolgroup.com

Part No. M-
Revision A 12/07
Copyright © WMH Tool Group

Warranty and Service

WMH Tool Group, Inc., warrants every product it sells. If one of our tools needs service or repair, one of our Authorized Service Centers located throughout the United States can give you quick service. In most cases, any of these WMH Tool Group Authorized Service Centers can authorize warranty repair, assist you in obtaining parts, or perform routine maintenance and major repair on your JET® tools. For the name of an Authorized Service Center in your area call 1-800-274-6848.

MORE INFORMATION

WMH Tool Group is consistently adding new products to the line. For complete, up-to-date product information, check with your local WMH Tool Group distributor, or visit jettools.com.

WARRANTY

JET products carry a limited warranty which varies in duration based upon the product (MW = Metalworking, WW = Woodworking).

| 90 DAY WARRANTY | 1 YEAR WARRANTY | 2 YEAR WARRANTY | 5 YEAR WARRANTY | LIFE WARRANTY | | | | | |
|---|---|--|--|---|---|---|--|--|--|
| Lathe Accessories Machine Accessories Mobile Bases Safety Equipment Specialty Items Vise Accessories | Air Tools-Contractor Air Tools-Industrial Air Tools-Light Industrial Lubrication | Body Repair Kits Bottle Jacks Cable Pullers Cold Saws Hoists-Air Hoists-Electric Metalforming Mill/Drills Milling Machines | MW Bandsaws MW Drill Presses MW Finishing MW Lathes MW Precision Vises Pallet Trucks Rigging Equip. Service Jacks | Stackers Surface Grinders Tapping Trolleys-Air Trolleys-Electric Web Slings Winches-Electric Winches-Gearied | Beam Clamps Chain Hoist-Manual Equipment Hoists-Air MW Lathes MW Precision Vises Pallet Trucks Rigging Equip. Service Jacks | Trolleys-Plain Winches-Manual Trolleys-Air Lever Hoists Trolleys-JCH Models Scissor Lift Tables Screw Jacks Trolleys-Gearied | WW Dust Fittings WW Jointers WW Air Filtration WW Bandsaws WW Buffers WW Drill Presses WW Dust Collectors WW Dust Filters | WW Dust Fittings WW Jointers WW Lathes WW Planers WW Sanders WW Shapers WW Tablesaws | Fastening Tools Mechanics Hand Tools Striking Tools Vises (non-precision) Clamps |

WHAT IS COVERED?

This warranty covers any defects in workmanship or materials subject to the exceptions stated below. Cutting tools, abrasives and other consumables are excluded from warranty coverage.

WHO IS COVERED?

This warranty covers only the initial purchaser of the product.

WHAT IS THE PERIOD OF COVERAGE?

The general JET warranty lasts for the time period specified in the product literature of each product.

WHAT IS NOT COVERED?

Five Year Warranties do not cover woodworking (WW) products used for commercial, industrial or educational purposes. Woodworking products with Five Year Warranties that are used for commercial, industrial or education purposes revert to a One Year Warranty. This warranty does not cover defects due directly or indirectly to misuse, abuse, negligence or accidents, normal wear-and-tear, improper repair or alterations, or lack of maintenance.

HOW TO GET SERVICE

The product or part must be returned for examination, postage prepaid, to a location designated by us. For the name of the location nearest you, please call 1-800-274-6848.

You must provide proof of initial purchase date and an explanation of the complaint must accompany the merchandise. If our inspection discloses a defect, we will repair or replace the product, or refund the purchase price, at our option. We will return the repaired product or replacement at our expense unless it is determined by us that there is no defect, or that the defect resulted from causes not within the scope of our warranty in which case we will, at your direction, dispose of or return the product. In the event you choose to have the product returned, you will be responsible for the shipping and handling costs of the return.

HOW STATE LAW APPLIES

This warranty gives you specific legal rights; you may also have other rights which vary from state to state.

LIMITATIONS ON THIS WARRANTY

WMH TOOL GROUP LIMITS ALL IMPLIED WARRANTIES TO THE PERIOD OF THE LIMITED WARRANTY FOR EACH PRODUCT. EXCEPT AS STATED HEREIN, ANY IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS ARE EXCLUDED. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG THE IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

WMH TOOL GROUP SHALL IN NO EVENT BE LIABLE FOR DEATH, INJURIES TO PERSONS OR PROPERTY, OR FOR INCIDENTAL, CONTINGENT, SPECIAL, OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF OUR PRODUCTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WMH Tool Group sells through distributors only. The specifications in WMH catalogs are given as general information and are not binding. Members of WMH Tool Group reserve the right to effect at any time, without prior notice, those alterations to parts, fittings, and accessory equipment which they may deem necessary for any reason whatsoever. JET® branded products are not sold in Canada by WMH Tool Group.

Table of Contents

| | |
|---------------------------|-----|
| Warranty and Service..... | 2 |
| Table of Contents..... | 3 |
| Introduction | 3 |
| Warning | 4 |
| Operation..... | 5 |
| Specifications..... | 5-6 |
| Wiring Diagram..... | 6 |

Introduction

This manual is provided by WMH Tool Group covering the safe operation and maintenance procedures for the JET JWR-100 Wireless Remote Control. This manual contains instructions on installation, safety precautions, general operating procedures, maintenance instructions. This tool has been designed and constructed to provide years of trouble free operation if used in accordance with instructions set forth in this manual. If there are any questions or comments, please contact either your local supplier or WMH Tool Group. WMH Tool Group can also be reached at our web site: www.wmhtoolgroup.com.

Record your purchase information here for quick reference:

| | | |
|-------------------|------------------|-----------------|
| Model No.:JWR-100 | Stock No.:100100 | Serial No.: |
| Purchased From: | | Date Purchased: |

Warnings

15.19 FCC Compliance Statement

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

15.21 Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

OPERATING INSTRUCTIONS

Please read the manual carefully, Before using of this equipment.

The person who operates it should be trained and graduated.

The operator must watch the equipment's operating Clearly.

Two or more equipments should be in different frequency, if they are use in the same place.,and must far away 50ft

The radio frequency of two Equipments must in different channels.

The equipment should be regular maintained.

1) operating instructions for transmitter

After turn-on the electrical source, press the “on/off” button and lasted 1second, the signal lamp will shine, prompt system start working. Press “STOP” button when meet the urgent situation. Cut the electrical source and press “OFF” button if the transmitter being not used .

2) Technical Parameter

A. transmitter specification:

Distance remote control: 100 meters (no obstacle)

Frequency: FM 433M Hz

Power: < 10m W

Antenna: Built-in, prevent resistance 50 ohm

Operating temperature: -20 ~ +50°C

Operating voltage: AC.9V

Shell fence: high-grade ABS

Deplete electric: <7mA

Cipher enactment: 4,200,000,000 group

Weight: 165g (without battery)

B. Receiver specification:

Signal intensity: -116 dBm

Frequency: FM 433M Hz

Antenna: Built-in, prevent resistance 50 ohm

Operating temperature: -10 ~ +75°C

Operating voltage: AC110V/AC220V/AC380V 50/60HZ

Shell fence: IP65

Shell material: ABS

Deplete electric: <12W

Cipher enactment: 4,200,000,000 group


Weight: 700g (without cable)

This device is with automatic transmission function.

MAINTAIN ADJUSTMENT

TRANSMITTER

FIRSTLY (1) Ensure the equipment being in normal situation
 (2) Check the transmitter looks being not destroyed
 (3) Receiver can be in working

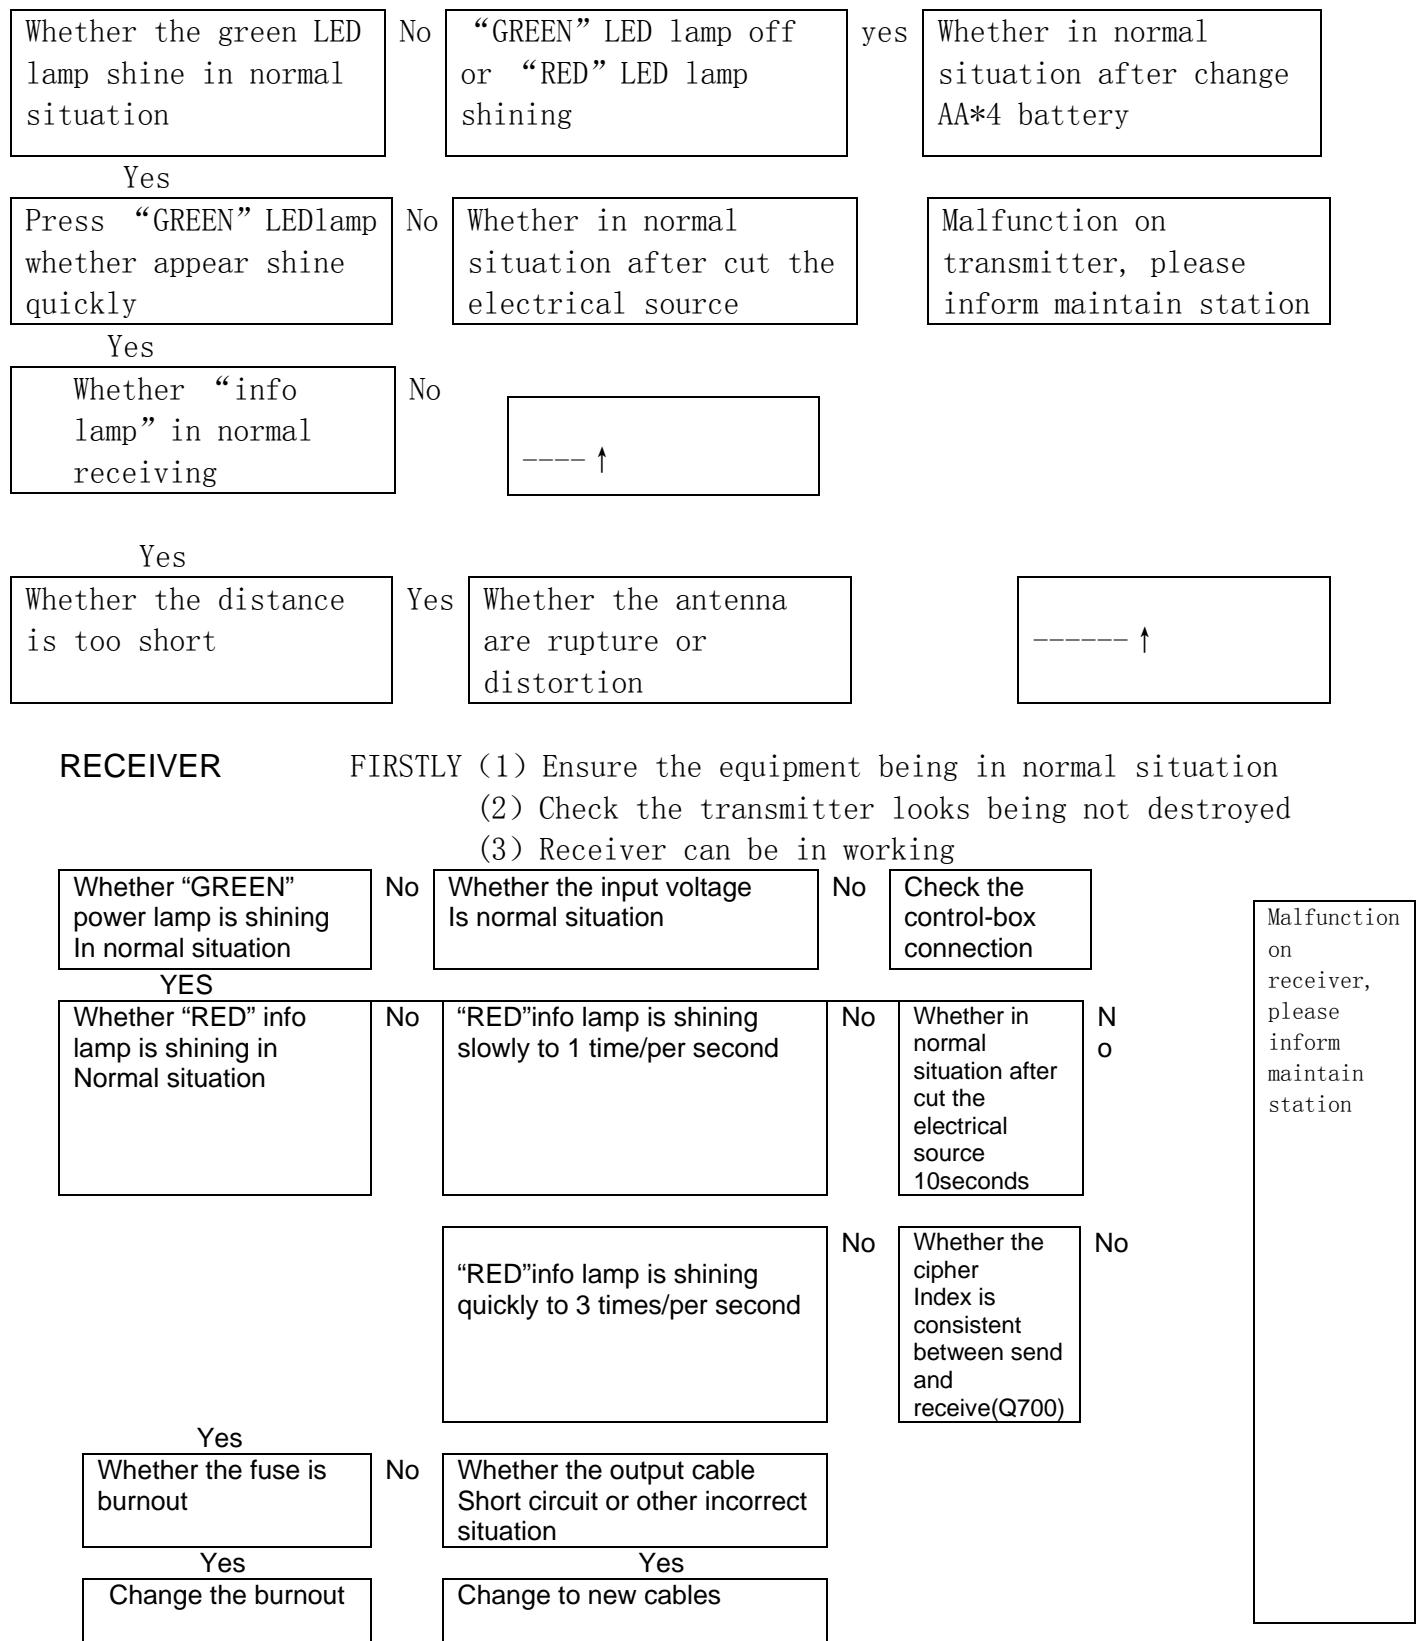



WMH Tool Group
2420 Vantage Drive
Elgin, Illinois 60124
Phone: 800-274-6848
www.wmhtoolgroup.com