

Official Licensed Product



WIRELESS CONTROLLER (2.4GHz) MANETTE SANS FIL (2.4GHz)

Carefully read the information on this package before use. For detailed connection and usage methods, refer to the instructions for the PlayStation®2 system.
Soigneusement lire l'information sur ce paquet avant l'usage. Pour les instructions détaillées et méthodes d'usage, se référer aux instructions à dessous ainsi que le livre d'instructions pour le système PlayStation®2.

COMPATIBLE MODELS / MODELES COMPATIBLES
PlayStation®2, PSone™, PlayStation®8

REQUIRES 3 AAA BATTERIES (NOT INCLUDED) / 3 PILES AAA (NON FOURNIES)

HOW TO USE

- Battery Installation & Pairing Instruction
 - Always insert the battery cover and place batteries in compartment. Make sure that your batteries are placed in the correct direction in the battery compartment.
 - Replace the battery cover once complete.
 - Insert the transmitter into the controller port on your PlayStation®2 system.
 - Turn on your PlayStation®2.
 - The Link LED will flash for a few seconds and the receiver will begin to search for the controller.
 - When the controller is paired with the receiver, the Link indicator will glow and will remain lit.
 - The LED will turn off when the controller is powered off or is in sleep mode.
 - In order to avoid conflicts between working controllers, each is paired to a unique ID. However, if there is a need to re-pair the controller and the receiver, simply press the "Force Link" button on the front. This will reset the ID and make the receiver search for the controller. Use the ID button to make the controller.
 - Caution: Follow the battery manufacturer's instructions as well as these important safety tips. Do not open or mutilate batteries as they might leak dangerous chemicals.
- Sleep Mode
 - The controller will revert to sleep mode after five minutes of inactivity or when the controller is without an active link for a period of two minutes.
 - The Pad will wake from sleep mode by pressing any of the following keys "Mode", "Select", "Start", "L3" or "R3".
- Low Power Warning Function
 - When the battery function, the Mode LED will flash and the vibration motors will automatically turn off.
- Vibration
 - The controller's default vibration setting is on.
 - To turn off the vibration function, press the vibration button once. The controller will vibrate twice to confirm.
 - Caution: Do not use the vibration function if you are driving or if you begin to feel discomfort or pain during use. Do not use the vibration function if you have an ailment or injury to the bones, joints or muscles of your hands or arms.

MODE D'EMPLOI

- Installation de la batterie et de la paire:
 - Insérer la batterie dans le compartiment de pile et installer les piles dans le compartiment (assurez-vous que vos piles sont placées dans la direction indiquée). Remplacer la couverture de pile une fois complète.
 - Insérer le transmetteur dans le port de contrôleur sur votre système de PlayStation®2.
 - Allumer votre système PlayStation®2.
 - Après l'allumage, le contrôleur cherchera à se connecter au récepteur pendant quelques secondes et le récepteur commencera à chercher le signal.
 - Une fois le contrôleur est à l'écoute avec le récepteur, l'indicateur "Link" restera allumé.
 - La lumière "Link" restera allumée si le contrôleur est connecté au récepteur. Cependant, s'il y a un besoin de remettre le contrôleur et le récepteur à l'état d'attente, appuyez sur le bouton "Force Link" sur le récepteur en premier, et alors sur le contrôleur. La lumière "Link" clignotera pour quelques secondes et le récepteur commencera à chercher le signal.
 - Application de sécurité: Suivez les instructions du fabricant de pile ainsi que celle dans votre livre de PlayStation®2.
- Mode sommeil
 - Le contrôleur retournera en mode sommeil quand le contrôleur n'est pas utilisé pour une période de deux minutes. Vos pouvez réveiller le contrôleur du mode de sommeil en appuyant n'importe quel des boutons, "Mode", "Select", "Start", "L3" ou "R3".
- Fonction d'avertissement de faible puissance
 - Quand la fonction de batterie, la lumière "Link" clignotera et le mode de vibration s'arrêtera automatiquement.
- Vibration
 - Le mode de base du fonctionnement du contrôleur est actif.
 - Pour arrêter la fonction de vibration, appuyez sur le bouton de vibration une fois. Le contrôleur vibrera deux fois pour confirmer.
 - Attention: Ne pas utiliser la fonction de vibration si vous êtes en train de conduire ou si vous commencez à ressentir le malaise ou la douleur pendant l'usage. La fonction de vibration de ce produit peut aggraver des blessures. Ne pas utiliser la fonction de vibration si vous avez une indolence ou une blessure aux os, les joints ou les muscles de vos mains ou de vos bras.

LIMITED WARRANTY

Katana warrants the original purchaser that this product will be free from defects in material and workmanship for a period of one (1) year from the date of purchase. If this product is deemed to be defective by Katana during the warranty period, Katana's liability will be limited to the repair or replacement of this product. This warranty shall not apply if the product is a used for commercial purposes (including rental) or is modified or tampered with or is damaged by misuse, abuse, negligence, accident, wear and tear, or other causes unrelated to defective materials or workmanship.

CAVANTIE LIMITEE

Katana garantit à l'acheteur d'origine que ce produit n'aura aucun vice de matériel ni de fabrication pour une période d'un (1) an à partir du date de l'achat. Cette garantie ne s'applique pas si ce produit a été utilisé à des fins commerciales (y compris la location) ou si le produit a été modifié ou endommagé par utilisation abusive, négligence, accident, usure et/ou d'autres causes non liées à des défauts de matériaux ou de travail.

WARNING:

Caution or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different power line than to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. The equipment complies with FCC's SAR exposure limits for both the head and torso when used as intended. The FCC radio frequency exposure guidelines in Supplement C to OET-65 and RSS-102 of the IC radio frequency (RF) exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing for specific absorption rate (SAR).

Declaration of Conformity
Type Name: Katana Game Accessories
Model Number: KT2C-0201
Standard: FCC Part 15, 2005, Subpart C (47 CFR 15.249) AND CE 3-A: 2003
FCC ID: VUSP200-045-01
FCC ID: VUSP200-045-01

This product is manufactured under license from Freedom Wave LLC under one or both of the following U.S. Patents: 6,280,327 and 6,878,066.
Ce produit est fabriqué sous licence de Freedom Wave LLC sous les brevets de US Patent: 6,280,327 and 6,878,066.

"PlayStation", "PSone" and the "PS" family logo are registered trademarks of Sony Computer Entertainment Inc. Manufactured & distributed under license by Sony Computer Entertainment America Inc.

Les logos de la gamme de produits "PlayStation", "PSone" et le logo de famille de "PS" sont des marques déposées de Sony Computer Entertainment Inc. Ce produit est fabriqué sous l'autorisation de Sony Computer Entertainment America Inc. et sous licence par Sony Computer Entertainment America Inc.

Katana Game Accessories, Inc.
1301 Stearns Drive
Mississauga, ON
L5S 1K7 Canada
www.katana-accessories.com

CUSTOMER SERVICE / SERVICE À LA CLIENTÈLE
1-866-779-1217
from / appelez nous 8am-8pm EST or visit / ou allez à
www.katana-accessories.com



PlayStation®2

WIRELESS
(2.4GHz)
Wireless Controller / Manette sans fil



PlayStation®2

WIRELESS
(2.4 GHz)
Wireless Controller / Manette sans fil

FUNCTIONS

Analog Control / Vibration Feedback

For the PlayStation®2, PSone™ and PlayStation®8 systems

Pour les systèmes PlayStation®2, PSone™ et PlayStation®8

Katana Game Accessories

PlayStation®2

WIRELESS
(2.4 GHz)
Wireless Controller / Manette sans fil



WIRELESS
(2.4GHz)
Wireless Controller / Manette sans fil

KT2C-0201
Made in China/Fabrique en Chine



Leaflet to be inserted:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.