



Warning!
The R/C helicopter has self-protection of cutting off the electricity and protection of low voltage.

1. When the main blade of the R/C helicopter collided something hard, the electrotpe will self-protect. It will cut off the electrical source by itself, then the light on the electrotpe will twinkle, the R/C helicopter can not fly. When such situation happens, you need to re-open the switch, when the light on the electrotpe keep bright, the R/C helicopter can fly properly.
2. When the voltage of the battery is lower than the voltage the R/C helicopter needs, the light on the electrotpe will twinkle, the R/C helicopter can not fly, that means the voltage is too low, the battery need to be re-charged.