

RX Technical description

| Description | Function | Component |
|-----------------------------|--------------------------------------|--|
| Antenna | Receive the RF signal | ANT1 |
| Super-regenerative receiver | Select the RF signal(49.860MHz) | Q1 and associated circuit |
| RF IC | Decode the RF signal to Motor Driver | IC1 |
| Motor Driver 1 | Drive the Motor | Q5,Q6, Q8, Q10,Q11, Q12,Q13, Q15, and associated circuit |
| Motor Driver 2 | Drive the Motor | Q3,Q4,Q9, Q7, Q14, Q16, and associated circuit |

Type of antenna: Integral