
Conducted Emission For Program Mode:

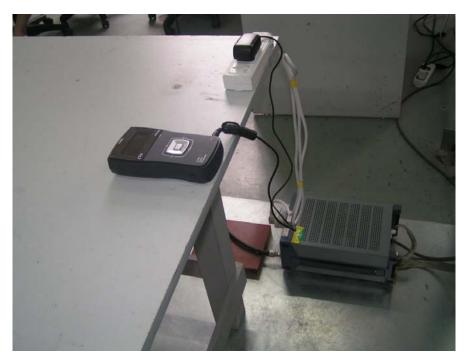

Conducted Emission Test Set-up - Front View



Conducted Emission Test Set-up - Side View

For Update Mode:



Conducted Emission Test Set-up - Front View



Conducted Emission Test Set-up - Side View

Radiated Emission For Program Mode



Low Frequency Radiated Emission Test Set-Up



Radiated Emission Test Set-Up - Front View



Radiated Emission Test Set-Up - Back View

For Update Mode



Radiated Emission Test Set-Up - Front View



Radiated Emission Test Set-Up - Back View