

Instruction for wireless keypad

1. Code Learn

The keypad must be entry to the receiver before use.

Press the LEARN switch on receiver, the LED on receiver light on.

Press the “*” key on keypad, follow by the six passwords, then the “#” key. The LED on receiver will flash 2 second. Then the keypad can be used, the press key as the password.

For example, press * 1 2 3 4 5 6 #, the password is 123456.

The alternation of two inputs must less 1s. if not, the input is interrupt, and must input again.

2. Entry via Keypad

Press the “*” key, followed by the six passwords, then the entry key (the largest at bottom), the receiver get the password. If the passwords are correct, the receiver's relay active.

For example, press * 1 2 3 4 5 6, ENTRY, the relay work.

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.