


## Theory of Operation

- 1 Plug in the Transmitter into an AC outlet.
- 2 Connect an audio source into the Transmitter (MP3 player, portable CD player, stereo, etc.) and rotate the Transmitter's antenna so that it is upright.
- 3 Turn on the audio source.
- 4 On the Transmitter, select the frequency channel by positioning the CHANNEL switch to 1, 2 or 3.



- 5 Turn on the Wireless Speakers by pressing the POWER button located on the Speaker's control panel. The SIGNAL indicator will illuminate. You may chose to operate the Speaker on battery power or from an AC outlet (See page 5).
- 6 Select the frequency channel on the Speaker by pressing the CH button to match the selected channel on the Transmitter.
  - The Green light indicates that the chosen frequency is clear. If the Red light is illuminated, it means the channel is not available. Please select another channel on the Transmitter and the Speaker.
- 7 Press the MS (Mono-Stereo) button located on the Speaker's control panel to select the stereo setting for each Speaker. Each Speaker's Left (L), Right (R), or Mono sound can be adjusted.
- 8 Use the VOLUME ▲ and ▼ buttons located on the Speaker's control panel to adjust the volume of each Speaker. The volume may also be adjusted using the Remote Control.

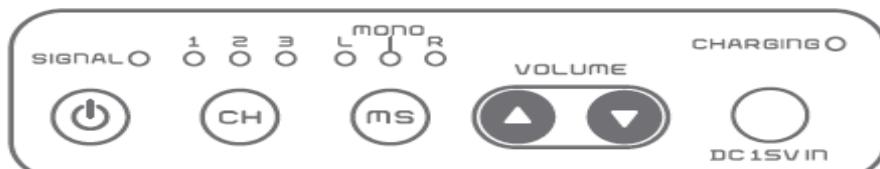

- It is recommended that the speaker batteries are recharged every 3-5 days. If this device has not been used for a long time, please recharge the speaker batteries for 3 to 5 days.