

**Starbridge 1702 VDSL2
802.11b/g/n 4 Port Managed Switch Router
User Manual**

NOTICE

This document contains proprietary information protected by copyright, and this Manual and all the accompanying hardware, software, and documentation are copyrighted. All rights are reserved. No part of this document may be photocopied or reproduced by mechanical, electronic, or other means in any form.

The manufacturer does not warrant that the hardware will work properly in all environments and applications, and makes no warranty or representation, either expressed or implied, with respect to the quality, performance, merchantability, or fitness for a particular purpose of the software or documentation. The manufacturer reserves the right to make changes to the hardware, software, and documentation without obligation to notify any person or organization of the revision or change.

All brand and product names are the trademarks of their respective owners.

© Copyright 2012

All rights reserved.

Content

1 OVERVIEW.....	1
1.1 FEATURES	1
1.2 PACKET CONTENTS.....	3
1.3 SYSTEM REQUIREMENTS.....	3
1.4 FACTORY DEFAULTS	4
1.5 WARNINGS AND CAUTIONS.....	4
2 HARDWARE DESCRIPTION.....	5
3 HARDWARE INSTALLATION.....	7
4 PC CONFIGURATION GUIDE.....	8
4.1 LOCAL PC CONFIGURATION IN WINDOWS 95, 98, ME, XP	8
4.2 LOCAL PC CONFIGURATION IN WINDOWS 2000	8
5 WEB-BASED MANAGEMENT GUIDE.....	9
5.1 LAN SETTING PAGE	9
5.2 INTERNET ACCESS CONFIGURATION.....	9
5.3 WIRELESS SETTING	28
5.4 PRINTER SERVER INSTALLATIONS	33
APPENDIX: FREQUENT ASKED QUESTIONS.....	36

1 Overview

Thank you for choosing our product. The Starbridge 1702 is a Wireless VDSL router combining an VDSL modem, an 802.11n wireless router, a 4-port switch and an USB port in one unit, bringing high-speed wireless Internet connection to a home or office.

1.1 Features

1.1.1 Data Rate

- Downstream data rate up to 100 Mbps
- Upstream data rate up to 50Mbps

1.1.2 VDSL Compliant

- ITU G.992.1 (G.DMT)
- ITU G.993.2 (G.vDSL2) (Profile 8a, 8b, 8c, 8d, 12a,12b and 17a)
- ITU G.992.2 (G.Lite)
- ITU G.994.1 (G.hs)
- ITU G.992.3 (G.DMT.BIS)
- ITU G.992.4 (G.lite.bis)
- ITU G.992.5
- Compatible with all T1.413 issue 2 (full rate DMT over analog POTS), and CO DSLAM equipment

1.1.3 Wireless

- Fully IEEE 802.11n compatible.
- Wireless data rate up to 300Mbps
- Operating in the unlicensed 2.4 GHz ISM band
- Multi-SSID
- Supports 64/128 bits WEP security and user authentication

1.1.4 Network Protocol & Features

- Ethernet to ADSL Self-Learning Transparent Bridging
- Internet Control Message Protocol (ICMP)

- IP Static Routing
- Routing Information Protocol (RIP, RIPv2)
- Network Address Translation (NAT)
- Virtual Server, Port Forwarding
- Dynamic Host Configuration Protocol (DHCP)
- DNS Relay, DDNS
- IGMP Proxy
- Simple Network Time Protocol (SNTP)
- VPN pass-through (IPSec/PPTP/L2TP)
- Parent control

1.1.5 ATM Capabilities

- RFC 1483 Multi-protocol over ATM “Bridged Ethernet” compliant
- RFC 2364 PPP over ATM compliant
- RFC 2516 PPP over Ethernet compliant
- ATM Forum UNI3.1/4.0 PVC – Support up to 16 PVCs
- VPI Range: 0-255
- VCI Range: 32-65535
- UNI 3.0 & 3.1 Signaling
- ATM AAL5 (Adaption Layer type 5)
- OAM F4/F5

1.1.6 FIREWALL

- Built-in NAT
- MAC Filtering
- Packet Filtering
- Stateful Packet Inspection (SPI)
- Denial of Service Prevention (DoS)
- DMZ

1.1.7 Management Support

- Web Based GUI
- Upgrade or update via FTP/HTTP
- Command Line Interface via Telnet
- Diagnostic Test
- Firmware upgradeable for future feature enhancement

1.1.8 Operating System Support

- WINDOWS 98/98 SE/ME/2000/XP/VISTA/7
- Macintosh
- LINUX

1.1.9 Environmental

- Operating humidity: 10%-90% non-condensing
- Non-operating storage humidity: 5%-95% non-condensing

1.2 Packet Contents

The packet contents are as the following:

- DSL ROUTER x 1
- External Splitter x 1
- Power Adapter x 1
- Telephone Line x 1
- Ethernet Cable x 1
- Antenna x 2
- Base x 1
- CD x 1

1.3 System Requirements

Before using this ROUTER, verify that you meet the following requirements:

- Subscription for ADSL service. Your ADSL service provider should provide you with at least one valid IP address (static assignment or dynamic assignment via dial-up connection).

- One or more computers, each contains an Ethernet 10/100M Base-T network interface card (NIC).
- A hub or switch, if you are connecting the device to more than one computer.
- For system configuration using the supplied web-based program: A web browser such as Internet Explorer v5.0 or later, or Netscape v4.7 or later.

1.4 Factory Defaults

The device is configured with the following factory defaults:

- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- SSID: WLAN
- Encapsulation: RFC 2516 LLC
- VPI/VCI: According to local information

1.5 Warnings and Cautions


- Never install telephone wiring during storm. Avoid using a telephone during an electrical storm. There might be a risk of electric shock from lightening.
- Do not install telephone jacks in wet locations and never use the product near water.
- To prevent dangerous overloading of the power circuit, be careful about the designed maximum power load ratings. Not to follow the rating guideline could result in a dangerous situation.
- Please note that telephone line on modem must adopt the primary line that directly outputs from junction box. Do not connect Router to extension phone. In addition, if your house developer divides a telephone line to multi sockets inside the wall of house, please only use the telephone that has connected with the splitter of ADSL Router when you access the Internet.

2 Hardware Description

Front Panel

	LED	Color	Function
 	PWR	Green	On: Power on Off: No power
 	LAN1,2,3,4	Green	On: LAN link established and active via LAN port
 			Blinking: DSL data activity occurs
 			Off: No LAN link via LAN port
 			
WLAN 	WLAN	Green	On: The wireless module is ready and idle Blinking: Data transmitting or receiving over WLAN Off: The wireless function is off
DSL 	DSL	Green	On: DSL link established and active Quick Blinking: DSL is trying to establish a connection Slow Blinking: No DSL link
INET 	INET	Green	On: IP connected Blinking: IP connected and IP traffic is passing thru this device Off: ADSL connection is not present

Rear panel

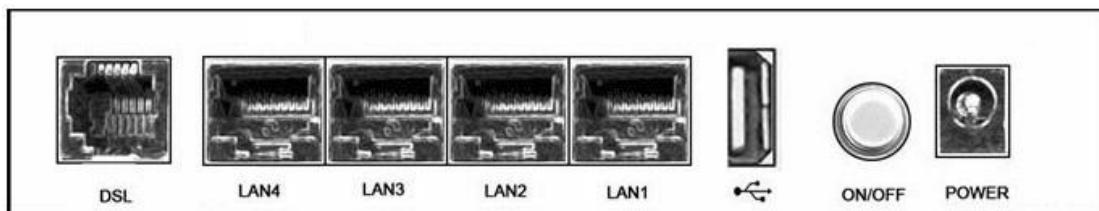

Port	Function
DSL	Connect the device to an DSL telephone jack or splitter using a RJ-11 telephone cable
LAN1,2,3,4	Connect the device to your PC's Ethernet port, or to the uplink port on your hub/switch, using a RJ-45 cable
USB	Connect the device to a printer
ON/OFF	Switch it on or off
POWER	Connect to the supplied power adapter

Side panel

WIFI button: Enable or disable wireless function.

Reset button: System reset or reset to factory defaults.

WPS button: A convenient way for WPS set.

3 Hardware Installation

This chapter shows you how to connect Router. Meanwhile, it introduces the appropriate environment for the Router and installation instructions.

1. Using a telephone line to connect the **DSL** port of **ROUTER** to the **MODEM** port of the splitter, and using a other telephone line connect your telephone to the **PHONE** port of the splitter, then connect the wall phone jack to the **LINE** port of the splitter.


The splitter comes with three connectors as below:

LINE: Connects to a wall phone jack (RJ-11 jack)

MODEM: Connects to the DSL jack of **ROUTER**

PHONE: Connects to a telephone set

2. Using an Ethernet Cable to connect the LAN port of the **ROUTER** to your LAN or a PC with network card installed.
3. Connect the power cable to the PWR connector on **ROUTER**, then plug in the power adapter to the power outlet, and then press the on-off button.

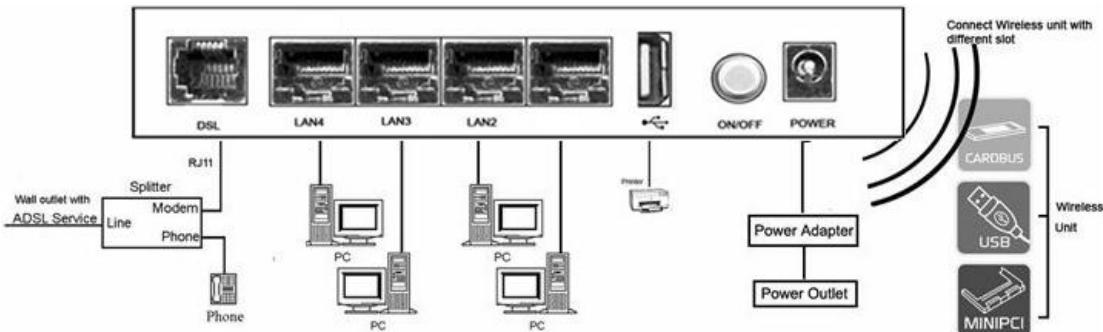

Notes: Without the splitter and certain situation, transient noise from telephone can interfere with the operation of the Router, and the Router may introduce noise to the telephone line. To prevent this from happening, a small external splitter must be connected to each telephone.

4 PC Configuration Guide

4.1 Local PC Configuration in Windows 95, 98, ME, XP

1. In the Windows task bar, click the “Start” button, point to “Settings”, and then click “Control Panel”.
2. Double-click the “Network” icon.
3. On the “Configuration” tab, select the TCP/IP network associated with your network card and then click “Properties”.
4. In the “TCP/IP Properties” dialog box, click the “IP Address” tab. Set the IP address as 192.168.1.x (x can be a decimal number from 2 to 254.) like 192.168.1.2, and the subnet mask as 255.255.255.0.
5. On the “Gateway” tab, set a new gateway as 192.168.1.1, and then click “Add”.
6. Configure the “DNS” tab if necessary. For information on the IP address of the DNS server, please consult with your ISP.
7. Click “OK” twice to confirm and save your changes.
8. You will be prompted to restart Windows. Click “Yes”.

4.2 Local PC Configuration in Windows 2000


1. In the Windows task bar, click the “Start” button, point to “Settings”, and then click “Control Panel”.
2. Double-click the “Network and Dial-up Connections” icon.
3. In the “Network and Dial-up Connections” window, right-click the “Local Area Connection” icon, and then select “Properties”.
4. Highlight “Internet Protocol (TCP/IP)”, and then click “Properties”.
5. In the “Internet Protocol (TCP/IP) Properties” dialog box, set the IP address as 192.168.1.x (x can be a decimal number from 2 to 254.), and the subnet mask as 255.255.255.0 and the default gateway as 192.168.1.1. Then click “OK”.
6. Configure the “DNS” tab if necessary. For information on the IP address of the DNS server, please consult with your ISP.
7. Click “OK” twice to confirm and save your changes.

5 Web-based Management Guide

In order to use the web-based management software it will be necessary to use a computer that occupies the same subnet as the Router. The simplest way to do this for many users will be to use DHCP server that is enabled by default on the Router.

5.1 LAN setting page

Launch a web browser, such as Internet Explorer, and then use <http://192.168.1.1> to log on to the setting pages.

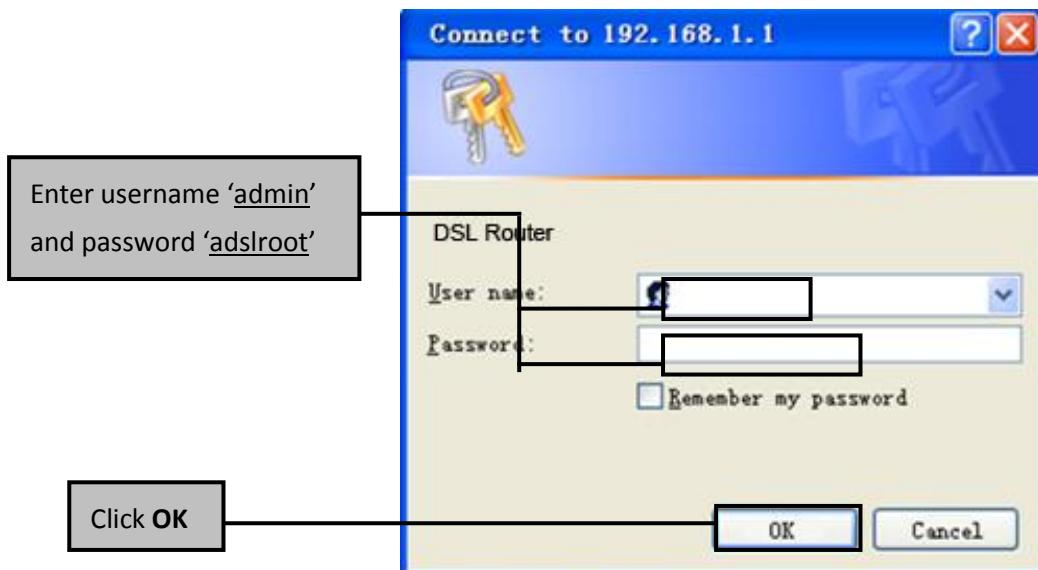

5.2 Internet Access Configuration

5.2.1 ADSL Setup

From home page, you can find **Advanced Setup** option on the left router configuration page.

1. From **Layer2 Interface**, click **ATM Interface**. you can set it up according to the following steps. You Choose **Add**, or **Remove** to configure DSL ATM interfaces.

Interface	Vpi	Vci	DSL Latency	Category	Peak Cell Rate (cells/s)	Sustainable Cell Rate(cells/s)	Max Burst Size (bytes)	Link Type	Conn Mode	IP QoS	MPAAL Prec/Alg/Wght	Remove
												Add Remove

2. Click **Add** to configure PVC identifier, select DSL latency and select connection mode according to your local occasion. After the configuration, you need to click **Apply/Save**.

VPI: [0-255]	<input type="text" value="0"/>
VCI: [32-65535]	<input type="text" value="35"/>

Select DSL Latency

- Path0
- Path1

Select DSL Link Type (EoA is for PPPoE, IPoE, and Bridge.)

- EoA
- PPPoA
- IPoA

Select Connection Mode

- Default Mode - Single service over one connection
- VLAN MUX Mode - Multiple Vlan service over one connection

Encapsulation Mode:

LLC/SNAP-BRIDGING

Service Category:

UBR Without PCR

- Click **WAN Service** from the left menu.

Interface	Description	Type	Vlan8021p	VlanMuxId	Igmp	NAT	Firewall	Remove	Edit
-----------	-------------	------	-----------	-----------	------	-----	----------	--------	------

[Add](#) [Remove](#)

- Click **Add** to select a layer 2 interface for this service and then click **Next**.

atm0/ (0_0_35)

[Back](#) [Next](#)

- Choose WAN service type, just choose PPPoE for example here. You can enter your own service description here if you want and then click **Next**.

Select WAN service type:

- PPP over Ethernet (PPPoE)
- IP over Ethernet
- Bridging

Enter Service Description:

6. Input **PPP Username & PPP Password** and then click **Next**. The user interface allows a maximum of 256 characters in the user name and a maximum of 32 characters in the password.

PPP Username:	<input type="text"/>
PPP Password:	<input type="text"/>
PPPoE Service Name:	<input type="text"/>
Authentication Method:	AUTO 

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

PPP IP extension

Use Static IPv4 Address

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

Multicast Proxy

Enable IGMP Multicast Proxy

No Multicast VLAN Filter

PPPoE service name can be blank unless your Internet Service Provider gives you a value to enter.

Authentication method is default to **Auto**. It is recommended that you leave the **Authentication method** in **Auto**, however, you may select **PAP** or **CHAP** if necessary. The default value for MTU (Maximum Transmission Unit) is **1500** for PPPoA and **1492** for PPPoE. Do not change these values unless your ISP asks you to.

Enable Full Cone NAT: In full cone NAT, all requests from the same private IP address and port are mapped to the same public source IP address and port. Someone on the Internet only needs to know the mapping scheme in order to send packets to a device behind the VDSL Device.

The gateway can be configured to disconnect if there is no activity for a specific period of time by selecting the **Dial on demand** check box and entering the **Inactivity timeout**. The entered value must be between 1 minute and 4320 minutes.

Use Static IPv4 address: If the ISP gave you a static (fixed) IP address, select this option and enter it in the IP Address field. If the ISP did not give you a static IP address, clear the Use Static IP Address option. The ISP automatically assigns the WAN connection an IP address when it connects.

Enable PPP Debug Mode: Select this to turn on the debug mode for the PPP connection.

Bridge PPPoE Frames Between WAN and Local Ports: In addition to the VDSL Device's built-in PPPoE client, you can enable this to pass PPPoE through in order to allow LAN hosts to use PPPoE client software on their computers to connect to the ISP via the VDSL Device. Each host can have a separate account and a public WAN IP address. PPPoE pass through is an alternative to NAT for applications where NAT is not appropriate. Disable PPPoE pass through if you do not need to allow hosts on the LAN to use PPPoE client software on their computers to connect to the ISP.


The **PPP IP Extension** is a special feature deployed by some service providers. Unless your service provider specifically requires this setup, do not select it. If you need to select it, the PPP IP Extension supports the following conditions:

- It allows only one computer on the LAN.
- The public IP address assigned by the remote using the PPP/IPCP protocol is actually not used on the WAN PPP interface. Instead, it is forwarded to the computer's LAN interface through DHCP. Only one system on the LAN can be connected to the remote, since the

DHCP server within the ADSL gateway has only a single IP address to assign to a LAN device.

- NAPT and firewall are disabled when this option is selected.
- The gateway becomes the default gateway and DNS server to the computer through DHCP using the LAN interface IP address.
- The gateway extends the IP subnet at the remote service provider to the LAN computer. That is, the PC becomes a host belonging to the same IP subnet.
- The ADSL gateway bridges the IP packets between WAN and LAN ports, unless the packet is addressed to the gateway's LAN IP address.

7. Select a preferred wan interface as the system default gateway.

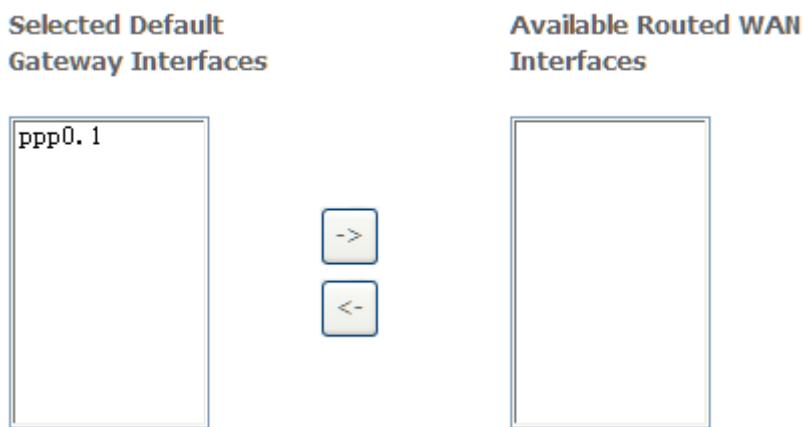


8. Get DNS server information from the selected WAN interface or enter static DNS server IP addresses. If only a single PVC with IPoA or static MER protocol is configured, you must enter static DNS server IP addresses.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server
Interfaces

Available WAN Interfaces

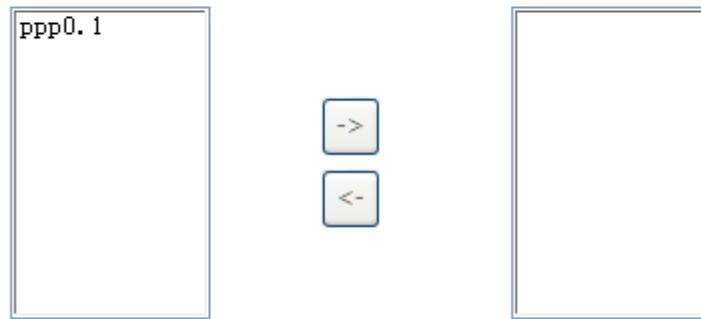

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

9. Make sure that the settings below match the settings provided by your ISP. Click on the **Apply/Save** button to save your configurations.

Connection Type:	PPPoE
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Enabled

5.2.2 VDSL Setup

From home page, you can find **Advanced Setup** option on the left router configuration page.

1. From **Layer2 Interface**, click **PTM Interface**. you can set it up according to the following steps. You Choose **Add**, or **Remove** to configure DSL PTM interfaces.

Interface	DSL Latency	PTM Priority	Conn Mode	IP QoS	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>					

2. Click **Add** to configure **PTM Priority**, select DSL latency and select connection mode according to your local occasion. After the configuration, you need to click **Apply/Save**.

Select DSL Latency		
<input checked="" type="checkbox"/> Path0 (Fast)		
<input type="checkbox"/> Path1 (Interleaved)		
Select Scheduler for Queues of Equal Precedence as the Default Queue		
<input checked="" type="radio"/> Weighted Round Robin		
<input type="radio"/> Weighted Fair Queuing		
Default Queue Weight:	<input type="text" value="1"/> [1-63]	
Default Queue Precedence:	<input type="text" value="8"/> [1-8] (lower value, higher priority)	
Default Queue Shaping Rate:	<input type="text"/> [Kbits/s] (blank indicates no shaping)	
Default Queue Shaping Burst Size:	<input type="text" value="3000"/> [bytes] (shall be >=1600)	

3. Click **WAN Service** from the left menu.

Interface	Description	Type	Vlan8021p	VlanMuxId	Igmp	NAT	Firewall	Remove	Edit
<input type="button" value="Add"/> <input type="button" value="Remove"/>									

4. Click **Add** to select a layer 2 interface for this service and then click **Next**.

<input type="text" value="ptm0/ (0_1_1)"/> <input type="button" value="▼"/>
<input type="button" value="Back"/> <input type="button" value="Next"/>

5. Choose WAN service type, just choose PPPoE for example here. You can enter your own service description here if you want and then click **Next**.

Select WAN service type:

- PPP over Ethernet (PPPoE)
- IP over Ethernet
- Bridging

Enter Service Description:

6. Input **PPP Username & PPP Password** and then click **Next**. The user interface allows a maximum of 256 characters in the user name and a maximum of 32 characters in the password.

PPP Username:	<input type="text"/>
PPP Password:	<input type="text"/>
PPPoE Service Name:	<input type="text"/>
Authentication Method:	AUTO <input type="button" value="▼"/>

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

PPP IP extension

Use Static IPv4 Address

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

Multicast Proxy

Enable IGMP Multicast Proxy

No Multicast VLAN Filter

PPPoE service name can be blank unless your Internet Service Provider gives you a value to enter.

Authentication method is default to **Auto**. It is recommended that you leave the **Authentication method** in **Auto**, however, you may select **PAP** or **CHAP** if necessary. The default value for MTU (Maximum Transmission Unit) is **1500** for PPPoA and **1492** for PPPoE. Do not change these values unless your ISP asks you to.

Enable Full Cone NAT: In full cone NAT, all requests from the same private IP address and port are mapped to the same public source IP address and port. Someone on the Internet only needs to know the mapping scheme in order to send packets to a device behind the VDSL Device.

The gateway can be configured to disconnect if there is no activity for a specific period of time by selecting the **Dial on demand** check box and entering the **Inactivity timeout**. The entered value must be between 1 minute and 4320 minutes.

Use Static IPv4 address: If the ISP gave you a static (fixed) IP address, select this option and enter it in the IP Address field. If the ISP did not give you a static IP address, clear the Use Static IP Address option. The ISP automatically assigns the WAN connection an IP address when it connects.

Enable PPP Debug Mode: Select this to turn on the debug mode for the PPP connection.

Bridge PPPoE Frames Between WAN and Local Ports: In addition to the VDSL Device's built-in PPPoE client, you can enable this to pass PPPoE through in order to allow LAN hosts to use PPPoE client software on their computers to connect to the ISP via the VDSL Device. Each host can have a separate account and a public WAN IP address. PPPoE pass through is an alternative to NAT for applications where NAT is not appropriate. Disable PPPoE pass through if you do not need to allow hosts on the LAN to use PPPoE client software on their computers to connect to the ISP.


The **PPP IP Extension** is a special feature deployed by some service providers. Unless your service provider specifically requires this setup, do not select it. If you need to select it, the PPP IP Extension supports the following conditions:

- It allows only one computer on the LAN.
- The public IP address assigned by the remote using the PPP/IPCP protocol is actually not used on the WAN PPP interface. Instead, it is forwarded to the computer's LAN interface through DHCP. Only

one system on the LAN can be connected to the remote, since the DHCP server within the ADSL gateway has only a single IP address to assign to a LAN device.

- NAPT and firewall are disabled when this option is selected.
- The gateway becomes the default gateway and DNS server to the computer through DHCP using the LAN interface IP address.
- The gateway extends the IP subnet at the remote service provider to the LAN computer. That is, the PC becomes a host belonging to the same IP subnet.
- The ADSL gateway bridges the IP packets between WAN and LAN ports, unless the packet is addressed to the gateway's LAN IP address.

7. Select a preferred wan interface as the system default gateway.

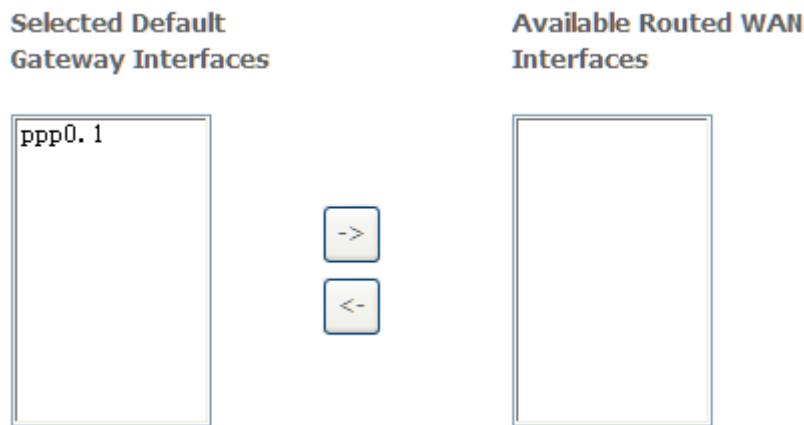


8. Get DNS server information from the selected WAN interface or enter static DNS server IP addresses. If only a single PVC with IPoA or static MER protocol is configured, you must enter static DNS server IP addresses.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server
Interfaces

Available WAN Interfaces

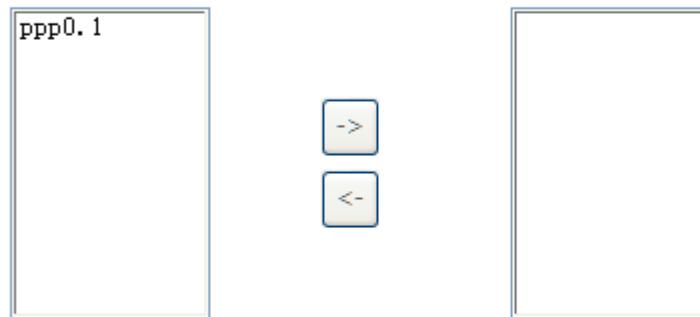

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

9. Make sure that the settings below match the settings provided by your ISP.
Click on the **Apply/Save** button to save your configurations.

Connection Type:	PPPoE
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Enabled

5.2.3 Router Mode Setup

1. From **Advanced Setup**, click **Layer2 Interface** and select **ETH Interface**.

Before you configure ETH WAN interface, you'd better remove all PVC settings from **ATM interface**.

Interface/(Name)	Connection Mode	Remove
Add	Remove	

2. Click **Add** and you'll see the following screen.

ETH WAN Configuration
This screen allows you to configure a ETH port .

Select a ETH port:

eth0/eth0	▼
Back	Apply/Save

3. Select a ETH port as you will. You can select ENET1, ENET2, ENET3 or ENET4 port as the WAN interface and Default mode as connection mode.

eth0/eth0	▼
eth0/eth0	
eth1/eth1	
eth2/eth2	
eth3/eth3	

4. Click **Apply/Save** and you'll see the following screen.

Interface/(Name)	Connection Mode	Remove
eth2/eth2	VlanMuxMode	<input type="checkbox"/>
Remove		

5. From **Advanced Setup**, click **WAN Service** to configure a WAN service over the interface you selected.

Interface	Description	Type	Vlan8021p	VlanMuxId	Igmp	NAT	Firewall	Remove	Edit
-----------	-------------	------	-----------	-----------	------	-----	----------	--------	------

Add **Remove**

6. Click **Add** and you'll see the following screen.

eth2/eth2 

Back **Next**

7. Click **Next** and you'll see the following screen. Select PPPoE as WAN service type for example. Click **Next**.

WAN Service Configuration

Select WAN service type:

- PPP over Ethernet (PPPoE)
- IP over Ethernet
- Bridging

Enter Service Description:

For tagged service, enter valid 802.1P Priority and 802.1Q VLAN ID.

For untagged service, set -1 to both 802.1P Priority and 802.1Q VLAN ID.

Enter 802.1P Priority [0-7]:

Enter 802.1Q VLAN ID [0-4094]:

Network Protocol Selection:(IPV6 Only not support)

Back **Next**

8. Enter the user name and password that your ISP has provided to you. Click **Next**.

PPP Username:	<input type="text"/>
PPP Password:	<input type="text"/>
PPPoE Service Name:	<input type="text"/>
Authentication Method:	AUTO <input type="button" value="▼"/>

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

PPP IP extension

Use Static IPv4 Address

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

Multicast Proxy

Enable IGMP Multicast Proxy

No Multicast VLAN Filter

PPPoE service name can be blank unless your Internet Service Provider gives you a value to enter.

Authentication method is default to **Auto**. It is recommended that you leave the **Authentication method** in **Auto**, however, you may select **PAP** or **CHAP** if necessary. The default value for MTU (Maximum Transmission Unit) is **1500** for

PPPoA and **1492** for PPPoE. Do not change these values unless your ISP asks you to.

Enable Full Cone NAT: In full cone NAT, all requests from the same private IP address and port are mapped to the same public source IP address and port. Someone on the Internet only needs to know the mapping scheme in order to send packets to a device behind the VDSL Device.

The gateway can be configured to disconnect if there is no activity for a specific period of time by selecting the **Dial on demand** check box and entering the **Inactivity timeout**. The entered value must be between 1 minute and 4320 minutes.

Use Static IPv4 address: If the ISP gave you a static (fixed) IP address, select this option and enter it in the IP Address field. If the ISP did not give you a static IP address, clear the Use Static IP Address option. The ISP automatically assigns the WAN connection an IP address when it connects.

Enable PPP Debug Mode: Select this to turn on the debug mode for the PPP connection.

Bridge PPPoE Frames Between WAN and Local Ports: In addition to the VDSL Device's built-in PPPoE client, you can enable this to pass PPPoE through in order to allow LAN hosts to use PPPoE client software on their computers to connect to the ISP via the VDSL Device. Each host can have a separate account and a public WAN IP address. PPPoE pass through is an alternative to NAT for applications where NAT is not appropriate. Disable PPPoE pass through if you do not need to allow hosts on the LAN to use PPPoE client software on their computers to connect to the ISP.


The **PPP IP Extension** is a special feature deployed by some service providers. Unless your service provider specifically requires this setup, do not select it. If you need to select it, the PPP IP Extension supports the following conditions:

- It allows only one computer on the LAN.
- The public IP address assigned by the remote using the PPP/IPCP protocol is actually not used on the WAN PPP interface. Instead, it is forwarded to the computer's LAN interface through DHCP. Only one system on the LAN can be connected to the remote, since the DHCP

server within the ADSL gateway has only a single IP address to assign to a LAN device.

- NAPT and firewall are disabled when this option is selected.
- The gateway becomes the default gateway and DNS server to the computer through DHCP using the LAN interface IP address.
- The gateway extends the IP subnet at the remote service provider to the LAN computer. That is, the PC becomes a host belonging to the same IP subnet.
- The ADSL gateway bridges the IP packets between WAN and LAN ports, unless the packet is addressed to the gateway's LAN IP address.

9. Select WAN interface as the system default gateway. Click **Next**.

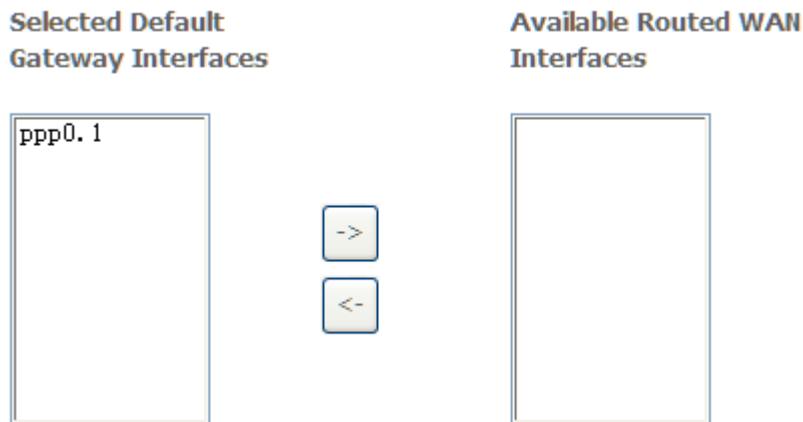

10. Get DNS server information from the selected WAN interface or enter static DNS server IP addresses. Click **Next**.

Select DNS Server Interface from available WAN interfaces:

Selected DNS Server Interfaces	Available WAN Interfaces
<div style="border: 1px solid #ccc; padding: 5px; width: 150px; height: 150px; display: flex; align-items: center; justify-content: center;">ppp0.1</div>	<div style="border: 1px solid #ccc; padding: 5px; width: 150px; height: 150px; display: flex; align-items: center; justify-content: center;">-> <-</div>

Use the following Static DNS IP address:

Primary DNS server:

Secondary DNS server:

11. Make sure that the settings below match the settings provided by your ISP.
Click on the **Apply/Save** button to save your configurations and reboot the ADSL router.

Connection Type:	PPPoE
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Enabled

5.2.4 LAN Settings

From **LAN**, Configure the DSL Router's IP Address and Subnet Mask for LAN interface. In this page, you can use DHCP (Dynamic Host Configuration Protocol) to control the assignment of IP addresses on your local network (LAN only).

Local Area Network (LAN) Setup

Configure the Broadband Router IP Address and Subnet Mask for LAN interface. GroupName **Default** 

IP Address:	<input type="text" value="192.168.1.1"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>

Enable IGMP Snooping

Standard Mode
 Blocking Mode

Enable LAN side firewall

Disable DHCP Server
 Enable DHCP Server

Start IP Address:	<input type="text" value="192.168.1.2"/>
End IP Address:	<input type="text" value="192.168.1.254"/>
Leased Time (hour):	<input type="text" value="24"/>

Static IP Lease List: (A maximum 32 entries can be configured)

MAC Address	IP Address	Remove
Add Entries	Remove Entries	

Enable DHCP Server Relay

DHCP Server IP Address:	<input type="text"/>
-------------------------	----------------------

Configure the second IP Address and Subnet Mask for LAN interface

IP Address:	<input type="text"/>
Subnet Mask:	<input type="text"/>

Item	Description
IP address	This is the IP address that other devices on your local network will use to connect to the modem.
Subnet mask	This defines the size of your network. The default is 255.255.255.0 .

Enable IGMP snooping	IGMP Snooping is a method that actually “snoops” or inspects IGMP traffic on a switch. When enabled, the switch will watch for IGMP messages passed between a host and a router, and will add the necessary ports to its multicast table, ensuring that only the ports that require a given multicast stream actually receive it.
Disable / Enable DHCP server	The DHCP server assigns an IP addresses from a pre-set pool of addresses upon request from DHCP client (e.g. your computer). Do not disable the DHCP server unless you wish to let another device handle IP address issuance on the local network.
Start / end IP address	This is the beginning and ending range for the DHCP server addresses.
Lease time	The amount of time before the IP address is refreshed by the DHCP server.
Enable DHCP server relay	If NAT is disabled and the PVC is the IPoA or static MER type, this item allows you to inform the router of another DHCP server on your LAN. To do this, disable the DHCP server on the gateway. Then input the IP address of the current DHCP server. Click Apply and restart the gateway.
Configure the second IP address and...	Use this feature to create a public network on your local LAN, accessible from the Internet. By assigning an address to this interface and then statically setting your LAN clients to the same network, the LAN clients are accessible from the public network (e.g. FTP or HTTP servers).

Note: If you want to cancel all modification that you do on the Router, please select from “Management⇒Setting⇒Restore Default Settings” to restore factory default settings.

5.3 Wireless setting

5.3.1 Basic

- Enable Wireless
- Hide Access Point
- Clients Isolation
- Disable WMM Advertise
- Enable Wireless Multicast Forwarding (WMF)

SSID:

BSSID: 00:0E:F4:E2:50:87

Country:

Max Clients:

Wireless - Guest/Virtual Access Points:

Enabled	SSID	Hidden	Isolate Clients	Disable WMM Advertise	Enable WMF	Max Clients	BSSID
<input type="checkbox"/>	wl0_Guest1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	N/A
<input type="checkbox"/>	wl0_Guest2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	N/A
<input type="checkbox"/>	wl0_Guest3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="text" value="16"/>	N/A

Option	Description
Enable wireless	A checkbox that enables or disables the wireless LAN interfaces. The default is to enable wireless communications.
Hide Access Point	Select Hide Access Point to protect the ADSL route access point from detection by wireless active scans. If you do not want the access point to be automatically detected by a wireless station, this checkbox should be deselected. The station will not discover this access point. To connect a station to the access point, the station must manually add this access point name in its wireless configuration. In Windows XP, go to the Network>Properties function to view all of the available access points. You can also use other software programs such as NetStumbler to view available access points.
Clients	Enable this item if you don't want your wireless clients to communicate with each other.

isolation	
Network name (SSID)	Enter a name for user's wireless network here. SSID stands for Service Set Identifier. This name must be between 1 and 32 characters long. The default name is WLAN . All wireless clients must either detect the gateway or be configured with the correct SSID to access the Internet.
BSSID	Displays the gateway's wireless MAC address. (User may need this address if user is using WDS or multiple gateways.) Click Apply to save changes.
Country	Drop-down menu that allows selection of specific channel.

5.3.2 Security

This page allows you to configure security features of the wireless LAN interface. You may set up configuration manually or through WiFi Protected Setup(WPS)

1.Click **Security of Wireless** item and you'll see the following page.

Enable WPS

Manual Setup AP

You can set the network authentication method, selecting data encryption, specify whether a network key is required to authenticate to this wireless network and specify the encryption strength. Click "Apply/Save" when done.

Select SSID:

Network Authentication:

WEP Encryption:

2.Configure WPA Pre-shared key as below and click **Apply/Save**.

Select SSID:

Network Authentication:

WPA/WAPI passphrase: [Click here to display](#)

WPA Group Rekey Interval:

WPA/WAPI Encryption:

WEP Encryption:

3.Enable WPS as below.

Enable WPS	Enabled <input type="button" value="▼"/>
Add Client (This feature is available only when WPA-PSK, WPA2 PSK or OPEN mode is configured)	
<input type="radio"/> Push-Button <input checked="" type="radio"/> PIN <input type="button" value="Add Enrolee"/> Help	
<input type="text"/> Help	
Set WPS AP Mode	Configured <input type="button" value="▼"/>
Setup AP (Configure all security settings with an external registrar)	
<input type="radio"/> Push-Button <input checked="" type="radio"/> PIN <input type="button" value="Config AP"/>	
Device PIN	<input type="text" value="13585907"/> Help

4. Set WPS AP mode as **unconfigured** and click **Config AP**.

Enable WPS	Enabled <input type="button" value="▼"/>
Add Client (This feature is available only when WPA-PSK, WPA2 PSK or OPEN mode is configured)	
<input type="radio"/> Push-Button <input checked="" type="radio"/> PIN <input type="button" value="Add Enrolee"/> Help	
<input type="text"/> Help	
Set WPS AP Mode	Unconfigured <input type="button" value="▼"/>
Setup AP (Configure all security settings with an external registrar)	
<input type="radio"/> Push-Button <input checked="" type="radio"/> PIN <input type="button" value="Config AP"/>	
Device PIN	<input type="text" value="13585907"/> Help

5. Set WPS AP mode as **configured** and click **Save/Apply**.


6. Now you can use a wireless adaptor with WPS function and the WPS button to connect KW5212H to access the Internet.

7. To configure security features for the Wireless interface, please open Security item from Wireless menu. This web page offers nine authentication protocols for user to secure user's data while connecting to networks. There are four selections including Open, Shared, 802.1X, WPA, WPA-PSK, WPA2, WPA2-PSK, Mixed WPA-WPA2, Mixed WPA-WPA2-PSK. Different item leads different web page settings. Please read the following information carefully.

The wireless security page allows user to configure the security features of user's wireless network.

Select SSID:	<input type="text" value="WLAN"/>
Network Authentication:	<input type="text" value="Open"/>
WEP Encryption:	<input type="text" value="Enabled"/>
Encryption Strength:	<input type="text" value="128-bit"/>
Current Network Key:	<input type="text" value="1"/>
Network Key 1:	<input type="text" value="1234567890123"/>
Network Key 2:	<input type="text" value="1234567890123"/>
Network Key 3:	<input type="text" value="1234567890123"/>
Network Key 4:	<input type="text" value="1234567890123"/>

There are several security methods to choose from, depending on user's needs and the capabilities of user's wireless machines.

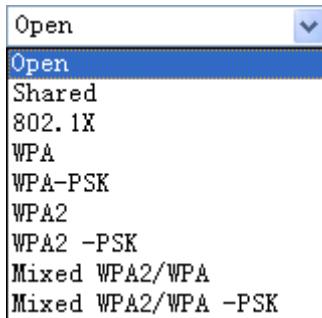

- **WEP open** and **WEP shared** —WEP is an encryption scheme that is used to protect user's wireless data communications. WEP uses a combination of 64-bit keys or 128-bit keys to provide access control to user's network and encryption security for every data transmission. To decode a data transmission, each wireless client on the network must use an identical 64-bit or 128-bit key. WEP is an older wireless encryption method that is not as hard to break as the more-recent WPA.
- **802.1x** — In 802.1x (also known as RADIUS), a separate machine called an authentication server receives a user ID and password. It grants or denies access based on whether the ID and password match any entries in its account list. User can optionally enable WEP encryption with this option. Because it requires a separate machine acting as the authentication server, 802.1x is most often used in business environments.
- **WPA** — WPA is a more recent encryption method that addresses many of the weaknesses in WEP. Any client capable of WPA encryption should use

it instead of WEP.

- **WPA (PSK)** — This is WPA encryption combined with a *pre-shared key (PSK)*, which is a text string known only to the gateway and authorized wireless clients. The gateway rejects the login if the client's PSK does not match.
- **WPA2** — WPA2 is a more advanced encryption method than WPA. Because it is a more recent standard, some of user's wireless devices might not be able to use it.
- **WPA2 (PSK)** — This option uses WPA2 with a pre-shared key.
- **WPA2 and WPA** — This option supports WPA2/WPA encryption for devices capable of one or the other standard. The gateway automatically detects whether a particular device can use WPA2 or WPA.
- **WPA2 AND WPA (PSK)** — This has WPA2 or WPA encryption based on client abilities, as well as a pre-shared key.

After making changes, click **Apply** to save.

5.4 Printer Server Installations

1. Click “Advanced setup⇒Print Server” and then Check “**Enable on-board printer server**” and key in “**Printer name**”, “**Make and model**” .

Print Server settings

This page allows you to enable / disable printer support.

Enable on-board print server.

Printer name


Make and model

Save/Apply


2. Click on Add a printer from **Control Panel** of the Windows computer and click “**Next**”.



3. Select “Network Printer” and click “**Next**”.

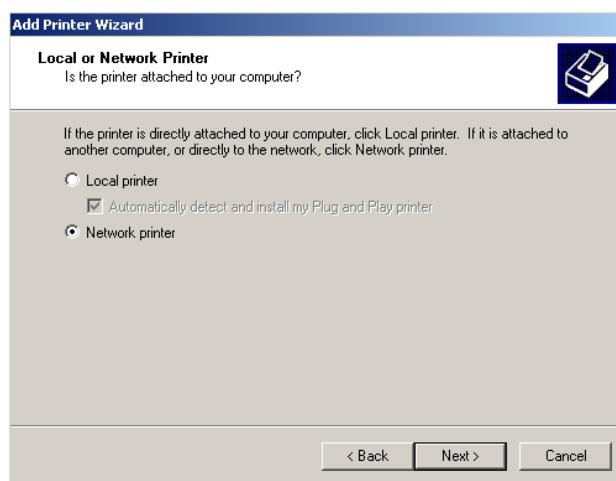

4. Select Connect to a printer on the Internet, type “<http://192.168.1.1:631/printers/printer>” and click “Next”. **The printer name “Printer” must be the same name entered in the ADSL router “print server setting” as in step 1.**

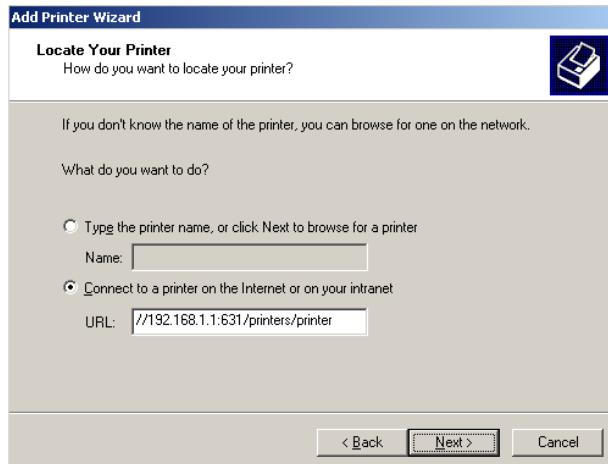

5. Select driver file directory on CD-ROM or in your hard disk and click “OK”.

6. Choose “Yes” or “No” for default printer setting and click “Next”.



7. Click “Finish”.



Appendix: Frequent Asked Questions

Q: None of the LEDs are on when you power on the ADSL router?

A: Please make sure what you use is the power adaptor attached with the ADSL router package and checks the connection between the AC power and ADSL router.

Q: DSL LED does not turn on after connect telephone line?

A: Please make sure what you use is the standard telephone line (as attached with the package), make sure the line is connected correctly and check whether there is poor contact at each interface. Wait for 30 seconds to allow the ADSL router establishes connection with you ADSL operator.

Q: DSL LED is in the circulation of slow-flashing and fast-flashing after connecting telephone line?

A: This situation means the ADSL router is in the status of failing to establish connection with Central Office. Please check carefully and confirm whether the ADSL router has been installed correctly.

Q: LAN LED does not turn on after connect Ethernet cable?

A: Please make sure Ethernet cable is connected hub/PC and ADSL router correctly. Then please make sure the PC/hub have been power on.

Please make sure that you use parallel network cable to connect UpLink port of hub, or use parallel network cable to connect PC. If connect normal port of hub (not UpLink port), you must use cross-cable. Please make sure that your network cables meet the networking requirements above.

Q: PC cannot access the Router?

A: Please make sure that all devices communicating with the device must use the same channel (and use the same SSID). Otherwise your PC will not find the wireless Router.

Q: PC cannot access the Internet?

A: First check whether PC can ping the interface Ethernet IP address of this product successfully (default value is 192.168.1.1) by using ping application. If ping application fails, please check the connection of Ethernet cable and check whether the states of LEDs are in gear.

If the PC uses private IP address that is set manually (non-registered legal IP address), please check:

1. Whether IP address of the PC gateway is legal IP address. Otherwise please use the right gateway, or set the PC to Obtain an IP address automatically.
2. Please confirm the validity of DNS server appointed to the PC with ADSL operator. Otherwise please use the right DNS, or set the PC to Obtain an IP address automatically.
3. Please make sure you have set the NAT rules and convert private IP address to legal IP address. IP address range of the PC that you specify should meet the setting range in NAT rules.
4. Central Office equipment may have problem.
5. The country or the wireless network type you selected is wrong.

Q: PC cannot browse Internet web page?

A: Please make sure DNS server appointed to the PC is correct. You can use ping application program to test whether the PC can connect to the DNS server of the ADSL operator.

Q: Initialization of the PVC connection failed?

A: Be sure that cable is connected properly from the DSL port to the wall jack. The DSL LED on the front panel of the ADSL router should be on. Check that your VPI, VCI, type of encapsulation and type of multiplexing setting are the same as what you collected from your service provider, Re-configure ADSL router and reboot it. If you still cannot work it out, you may need to verify these variables with the service provider.

If the cause is not given above, please contact your local service provider!

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.