

Sidekick Gaming Controller

Read and follow all safety instructions before use or risk bodily injury, damage to property and/or void your warranty.

Contents:



Sidekick
Gaming Controller



Slim wireless adapter
for Wii™ Remote



USB Charge Cable

① Charge Battery

Plug charger into Wii™ and Sidekick Gaming Controller until charge is complete.



② Attach adapter to Memorex Game Controller/Game Controller Plus or Wii™ Remote.



Before sync process can occur, Slim wireless adapter for Wii™ Remote must be connected to Memorex Game Controller/Game Controller Plus, or Wii™ Remote.

③ Sync with Game Controller

For First Time Use: Sidekick Gaming Controller needs to sync with Memorex Game Controller/Game Controller Plus, or Wii™ Remote.



Press power button on Game Controller.



Switch power switch to "on position" on Sidekick Gaming Controller.



Press the sync button on side of Sidekick Gaming Controller.

Charge status indicator on Game Controller will start to blink during sync process. Once the charge status indicator stops blinking the Sidekick Gaming Controller and Game Controller are synced.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

€2200