



**KUK JE TONG SHIN CO., LTD.**

# **Bluetooth Mono Headset (KHM-210R) User Manual**



**KUK JE TONG SHIN CO., LTD.**

**Table of contents**

**Power on**

**Power off**

**Charging**

**Low battery**

**Pairing**

**Connect**

**Volume control**

**Call usage**

- Answering a call
- Making a call
- Ending a call
- Call waiting
- Transferring a call

**Specification**



## KUK JE TONG SHIN CO., LTD.

### Power on

- Press and hold the **PWR/END** key for 3 seconds
  - ➔ The power will turn on and a booting tone will play .

### Power off

- Press and hold the **PWR/END** key for 3 seconds.
  - ➔ A shutdown tone will play, the Bluetooth link will be disconnected, and the power will turn off.

### Charging

- Remove the cover on the charging port and connect the charger.
- When the charger is connected with power on or off, the headset will turn off. While charging, the LED indicator will show a solid blue light.
- When charging is complete, the LED indicator will turn off.
- It takes 3 hours to fully charge the headset.
- 

### Low battery

The LED indicator will blink blue when the battery power is low.

When the battery is not charged, the LED indicator will be blinked blue and then turn off.

When this occurs, the battery needs to be charged.

### Pairing

- With the KHM-210R off, press and hold the **PWR/END** button for 6+ seconds.
  - ➔ You will hear a short beep and the LED indicator will be blinked blue, when the device enters Pairing Mode.
    - ▶ Using your handset, find the Bluetooth Menu and “search for” or “add” new devices.
    - ▶ Select “KHM-210R” from the list of devices and pair it with your handset.
  - ➔ When asked for the Pass/PIN code during the pairing procedure, please enter “0000” (4 Zeros).
  - ➔ Once pairing has completed successfully, you will hear a beep
- ▶ After pairing successfully, be sure to “Connect” to the KHM-210R
- If you want to **pair** with other devices in the future, the headset must be in Pairing Mode.
- If it will be not connected the “**Pairing**” for five minutes, it will be turned off.



**KUK JE TONG SHIN CO., LTD.**

## **Connecting**

### **[ Call connection ]**

- Briefly press the **PWR/END** key to activate "Voice Command"\*\*\*

\*\*\*Your handset must support the Voice Command function.

➔ Press the **PWR/END** key for 1 seconds to activate last number redial. The headset will enter "**Redial**" and call the most recent number after making a beep.

- To end a call, press the "**PWR/END**".

### **[ Auto Reconnect ]**

- When the KHM-210R and your handset are separated by a distance of 33 feet (10meters) or more, the headset and handset will disconnect. When the handset and KHM-210R are brought back within the required distance, the KHM-210R will automatically reconnect with the handset.
- If the headset and handset do not automatically reconnect when they are back within the required range, briefly press the **PWR/END** key to reconnect manually.



## **Volume control**

- Press the **VOLUME UP** or **VOLUME DOWN** key to adjust the speaker volume.
- There are eight levels of speaker volume.

## **Calling**

### **Answering a Call**

- When there is an incoming call, the headset will ring.
- Press the **PWR/END** key to answer an incoming call.

### **Making a Call**

#### **[ Voice Command ]**

Briefly press the **PWR/END** button.

(\* It is possible to use these functions only when your Handset supports them.)

#### **[ Last Number Redial ]**

Press and hold the **PWR/END** button for 1seconds until beeping sound is heard.

### **Ending a call**

Briefly press the **PWR/END** button.

### **Call waiting**

- Answer a second call without hanging up the first call by pressing the **PWR/END** button for 1 seconds.  
Press the **PWR/END** button for 1 seconds to return to the original call.
- Press the **PWR/END** button to terminate both calls at once.
  - \* It is possible to use these functions only when your Handset supports them. For further information about using these features. Please consult your Handset's user manual.

### **Transferring a call**

While on a call, briefly press the **PWR/END** button for transferring the audio to the headset.



**KUK JE TONG SHIN CO., LTD.**

## **Specification**

ITEM	Description
Bluetooth Specification	V2.0
Supported Profile	Handsfree / Headset
Battery	3.7V, Li-Polymer
Headset Receiver	32Ω / 10pi
Headset Mic	-40dB / Omni directional
Talk Time	Up to 5 Hours
Operating Temperature	-10 °C ~ 50 °C
Dimension	50 mm (L) X 17.1 mm (W) X 9.6mm (H)



**KUK JE TONG SHIN CO., LTD.**

## Declaration of confirmation

FCC

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. Operation is subject to the following two conditions;

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with RF exposure requirements, this device may not be co-located with any other transmitter or antenna.

CE:

Hereby, KUK JE TONG SHIN CO., LTD., declares that this KHM-210 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity may be consulted at [www.address.com/DoC.pdf](http://www.address.com/DoC.pdf).