



## TT32 and TT32G Transponder Operating Manual



01846-00-AB

17 June 2021

Trig Avionics Europe B.V.  
Hardwareweg 3  
3821 BL Amersfoort  
Netherlands

© Copyright 2021


EN

DRAFT COPY

This page intentionally left blank

DRAFT COPY

## Front Panel

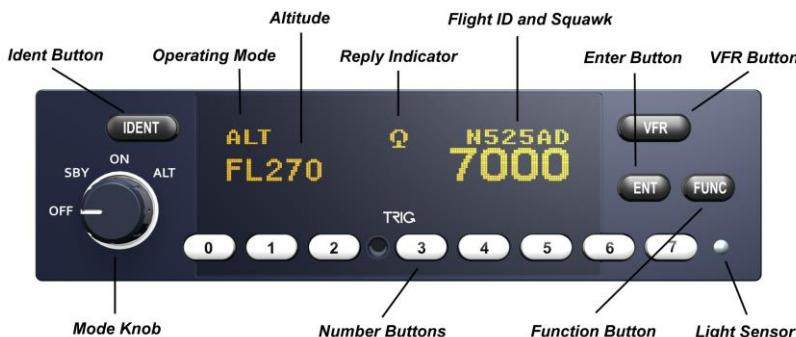

## Display

The display shows the operating mode of the transponder, the reported pressure altitude, and the current squawk code and Flight ID. The reply indicator is active when the transponder replies to interrogations.

The pressure altitude is displayed as a Flight Level, which is the pressure altitude in hundreds of feet. When non-standard atmospheric conditions apply, this may not match the altimeter indicated altitude, but will be correctly displayed by the ATC radar.

### Mode Selector Knob

The knob controls the power to the transponder and the operating mode.

OFF Power is removed from the transponder.

SBY The transponder is on, but will not reply to any interrogations.

ON The transponder will respond to all interrogations, but altitude reporting is suppressed.

ALT The transponder will respond to all interrogations.

When airborne, the transponder should always be set to ALT unless otherwise directed by Air Traffic Control. If your installation includes a squat switch or is configured with an automatic air/ground system, the transponder should be left in ALT mode and it will switch automatically to GND mode on landing or whilst taxiing. GND will appear on the display.

### Push Buttons

**IDENT** Press the IDENT button when ATC instructs you to "Ident" or "Squawk Ident". This activates the SPI pulse in the transponder replies for 18 seconds. IDENT will appear in the display.

## EN

**FUNC** Pressing the FUNC button provides access to flight ID setup, flight timer, stopwatch, ADS-B monitor (depending on installation) and altitude monitor functions, in that order.

**VFR** Pressing the VFR button sets the transponder to the pre-programmed conspicuity code. Pressing the button again restores the previous squawk code.

**ENT** The ENT button confirms options and menu selections.

### Squawk Code Entry

Press any of the numeric buttons (0 through 7) to change the squawk code. A new squawk code is set when the fourth digit is entered. If the code entry is not completed within 7 seconds, the changes are ignored and the previous code restored.

Some standard squawk codes are listed below

1200	VFR code in the USA
7000	VFR code commonly used in Europe
7500	Hijack code
7600	Loss of communications
7700	Emergency code

### Setting Flight ID

Select the Flight ID screen using the FUNC button and press ENT to edit the Flight ID using the number buttons corresponding to the letters A-Z and numbers 8 and 9.

<b>E1111122</b>							
<b>0</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>
<b>ABCD</b>	<b>EFGH</b>	<b>IJKL</b>	<b>MNOP</b>	<b>QRST</b>	<b>UVW</b>	<b>XYZ</b>	<b>89..</b>

Repeatedly pressing the number button will cycle through the letters shown underneath the number on the lower portion of the display. Press ENT to select the character and advance to the next character. The flight ID is terminated with a "space" character located on the 7 button or when all eight characters are set. When ENT is pressed on the last character, the new Flight ID will replace the previous value.

The Flight ID should correspond to the aircraft call sign entered on your flight plan. If no flight plan is active, the aircraft registration should be used as your Flight ID. Use only letters and digits.

## Flight Timer

The Flight Timer records the time for which the transponder has been powered on and operating in flight mode – either ON or ALT. Press the FUNC button to display the Flight Timer.

## Timer

The stopwatch can be used as a convenient timer. Press the FUNC button to display the stopwatch. Pressing ENT will reset and start the timer. Pressing ENT again will stop the timer.

## ADS-B Position Monitor

The ADS-B Monitor is only available on installations that include an ADS-B position source. The ADS-B Monitor provides a display of the position information that is being transmitted in ADS-B position reports. This can provide confirmation that the correct information is being transmitted, particularly where the GPS source is remote from the transponder.

In the event that valid position information is NOT available from the GPS, the latitude and longitude display will be replaced by dashes; if no valid latitude and longitude is shown then ADS-B position information is NOT being transmitted.

Loss of ADS-B position information will also result in a WARNING message being displayed.

## Altitude Monitor

The Altitude Monitor activates an audio annunciator or annunciator light (depending on installation) when the aircraft pressure altitude differs from the selected altitude by more than 250 feet. Press the FUNC button to display the altitude monitor enable screen. Pressing ENT toggles the altitude monitor at the current altitude.

When altitude monitoring is in use, a small deviation pointer appears adjacent to the altitude display on the transponder.

## Warning Messages

If the transponder detects a problem, the screen will indicate WARNING and a brief statement of the problem. Depending on the nature of the problem, your transponder may not be replying to interrogations. Note the message on the screen and pass that information to your avionics maintenance organisation. Press ENT to clear the message; if the fault is still present the message will reappear.

## Fault Annunciation

If the transponder detects an internal failure, the screen will indicate FAULT and a brief statement of the problem. No replies will be made to interrogations when a fault is detected.

Some FAULT indications can be recovered by switching the transponder off and back on again, although in all cases a FAULT code implies that there is a fault with the transponder or the installation. Note the FAULT message at the bottom of the screen and pass that information to your avionics maintenance organisation.

### **Configuration Mode**

The system is configured when it is first installed by your avionics supplier.

Configuration items include the Mode S aircraft address, the interface to the other aircraft systems, the aircraft category, and the pre-programmed values for VFR squawk code. To view or change these settings you must use Configuration Mode.

**Do not use Configuration Mode in flight. Check with your avionics installer before changing the configuration.**

To enter configuration mode, hold down the FUNC button whilst switching on the transponder. Configuration items can be changed using the numerical buttons and ENT button. Pressing FUNC advances to the next configuration item.

When configuration is complete, switch the transponder off. When it is switched back on the transponder will use the new configuration.

### **Low Temperature Operation**

The TT32 and TT32G are certified to operate correctly down to -20C, but at low temperatures the display may be impaired. On a cold day you may need to wait for the cockpit to warm up to ensure normal operation.

This page intentionally left blank

DRAFT COPY

**Trig Avionics Europe B.V.**  
Hardwareweg 3  
3821 BL Amersfoort, Netherlands  
Tel: +31(0)33 782 0900

**Trig Avionics Limited**  
Heriot Watt Research Park  
Edinburgh, EH14 4AP, UK  
Tel: +44(0)131 449 8810

[support@trig-avionics.com](mailto:support@trig-avionics.com)  
[www.trig-avionics.com](http://www.trig-avionics.com)

**DRAFT COPY**