
LAWIN®

# Ezyplay®

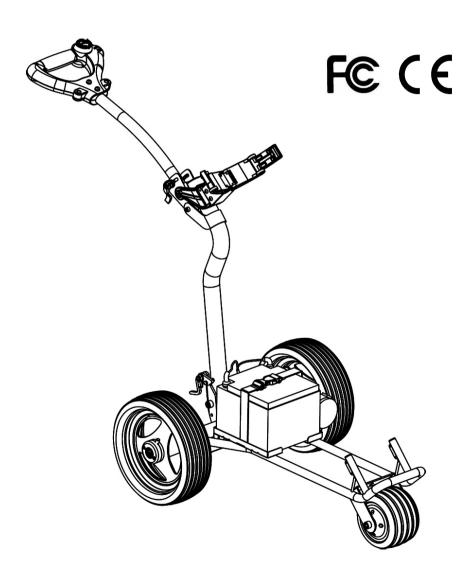

**DIRECTIONS FOR USE** 



**Distributor:** 

MODEL:# 89061 P/N: 906116

## INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

#### **Table of contents**

Contents	Pages
Remote Control Important	2
Electromagnetic Interference	3
Release and Assemble the Wheels	4
Assemble Upper Bag Holder	5
Opening the Trolley	6
Handle Height adjustment	8
Precaution	9
Auto. Switch Off / Electronic System	10
Direction for use - Distance remote	11
How to pair remote transmitter with your caddy	12
Battery for remote transmitter	13
Motor brake - option model	14
Folding the trolley	15
Battery and Charger	18
Battery Charger	19
Battery Care & Maintenance	20
How to Move the Trolley to Your Car	21
Repackaging Instruction	22

#### NOTE

Battery, Scorecard holder and Wheels may vary from each market. **SAVE THIS MANUAL FOR FUTURE REFERENCE.** 

#### REMOTE CONTROL IMPORTANT

(For Distance Remote model)



- Keeping extra care while use this distance remote caddy, be careful
  to avoid mis-press from the buttons of remote transmitter and always
  dis-connect main battery connector while not in use.
- Read this manual before you start to use this trolley.
- This remote control was preset in factory for full speed.
- Do not operate around cars or building with remote control.
- Do not direct trolley towards to other players or carts with remote control.
- Always keep watch while operating remote control.
- Don't operate remote control while unattended.
- The remote distance may be reduced by possible effected of Electromagnetic Interference on your remote golf trolley.
- Do not operate remote control when up and down slopes.
- Use manual mode in car parks, down steep hills, confined space or where there are lots of peoples.
- Do not operate in indoor with remote control.
- It is recommend to use remote control within 50 yards, this trolley is designed to operate within range of 50 yards.
- The remote distance may be reduced by possible effected of Interference on your remote golf trolley. Interference can be included electromagnetic, high voltage power lines, cellular phones or CB radios, or certain obstructions such as mounds, clusters of trees, will possible reduce the distance of transmission.
- Keep shipping carton in dry place after unpacking your unit for in case should need to be shipped for service.

#### **ELECTROMAGNETIC INTERFERENCE**

(For Distance Remote model)

: It is very important that you notice and understand this information regarding the possible effects of Electromagnetic Interference on your remote golf trolley.

Electric remote golf trolley may be susceptible to electromagnetic interference (EMI), which is interfering electromagnetic energy (EM) emitted from sources such as radio stations, TV stations, amateur radio (HAM) transmitters, two-way radios, and cellular phones. The interference (from radio wave sources) can cause the remote golf trolley, reduced its remote distance, move by itself, or move in unintended directions.

It is recommended to do following when your trolley is unattended:

 Always disconnect main battery connector before leaving your trolley or while unattended.

This trolley complies with current telecommunications regulations for conforms to CE and FCC, but we strong recommend you read this manual completely before you start to use your trolley.

#### RELEASE AND ASSEMBLE THE WHEELS

#### To assemble the wheels:


- Insert the wheel on the axle in the direction of the arrow.
- Open the locking system B, then insert onto the axle, put slot C onto the pin A.
- Release locking system B and make sure the wheels have been locked.
- On the inside of the wheel, there is a color mark, the red dot for the right side and blue dot on the left side.

#### Free wheeling: (for Motor brake model)

In case of power failure, for easier to push your trolley, the wheels can be disengaged from motor by putting the locking system on outside of axle groove.

#### To release the wheels:


• Open the locking system B, then pull out the wheel.

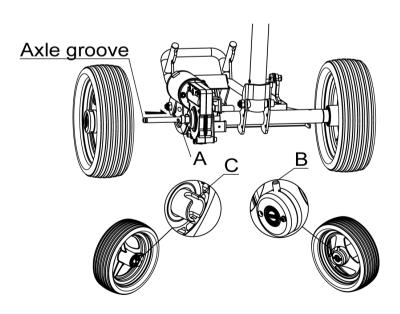

• Inflate the air tire model to a maximum of 1.2 bar (18 PSI) for air tire.


#### **ASSEMBLE UPPER BAG HOLDER**

Before you start to use your trolley, please assemble the upper bag holder as per illustrated.

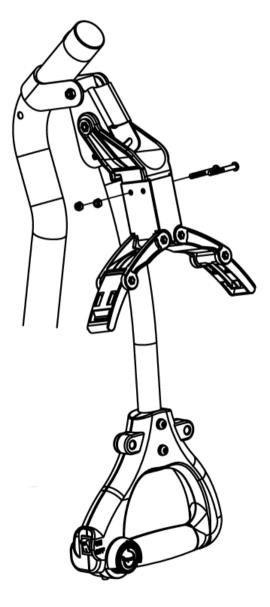


#### **OPENING THE TROLLEY**

• Pull the handle upward in the direction of the arrow, until you hear the "click" of it locking into position of main frame mechanism.

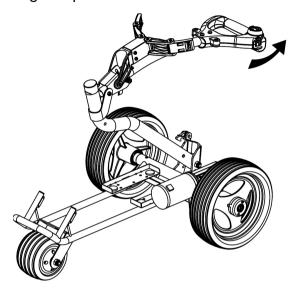


• Pull the handle upward and press the upper bag holder downward (in the direction of the arrow), to let the upper bag holder lock into position E.

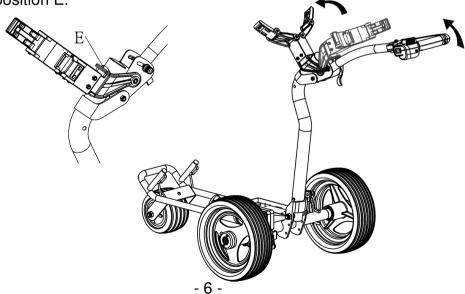

#### • To extend 4<sup>th</sup> wheel (for distance remote model)

Pull the knob G with one hand and pull the 4<sup>th</sup> (back) wheel backward with your other hand until you hear it "click" of locking into position.

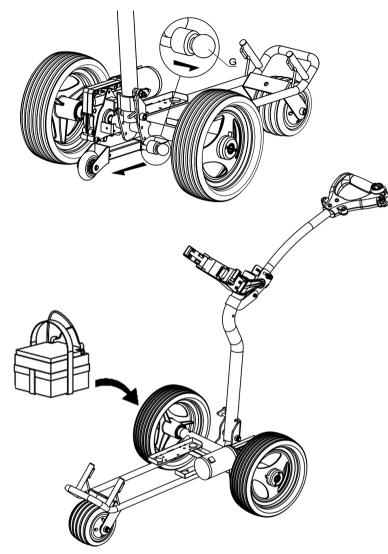


- Install the battery and fasten it securely.
- Load golf bag on bag holder and fasten straps correctly.
- Plug in the battery connector.

#### HANDLE HEIGHT ADJUSTMENT

Adjust the height of the handle where you find most comfortable to operate.

Adjust nut (Q) and press the lever to tighten the handle.

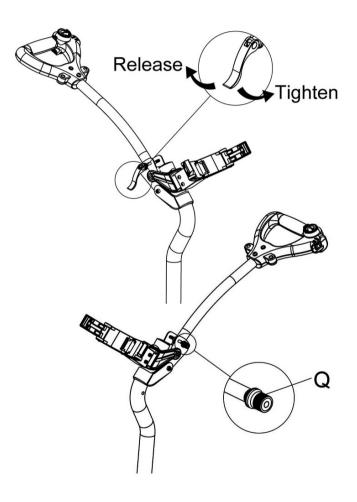

#### **PRECAUTION**



- Take extra care to practice for operation in the spacious area.
- Do not overload the base pockets of your golf bag, the more weight on the trolley will result in less maneuverability and will use more power from the battery.
- Always switch power off and pull off the battery connection before leaving your trolley or while unattended.
- Never use this trolley for carry anything other than a golf bag and clubs.
- It is recommend to use manual mode and take extra care to operate for narrow paths on up and down slope, and it is best to hold the handle grip.
- Always walk with your trolley, maintaining a reasonable distance of within 50 yards between you and trolley at all time.(For Distance Remote model)
- Do not store your trolley outside without adequate protection.
- Keep shipping carton in dry place after unpacking your unit in case it should need to be shipped for service.

**NOTE**: Please be aware that should the trolley hit any obstruction, you will need to help it out manually. Continuing to attempt the power output when the trolley is stuck will result in damage.

#### **A**WARNING

Avoid power spray water washing on trolley as this could cause damage to the wire connectors and electronic system.

Completely dry off the trolley, if necessary, use a dry cloth to clean your trolley.


#### **AUTO. SWITCH OFF/ ELECTRONIC SYSTEM**

- The electronic system of this trolley is protected by a digital current cut-off system. In case your trolley stops, you must turn the main ON/OFF switch (on handle grip) to the OFF position, then switch to the ON-position to continue.
- When trolley stops by digital cut-off system, the green and red led light (on handle grip) will flash intermittently.
   If this happened, the led light can be reset by ON/OFF switch on handle grip.

#### **IMPORTANT NOTICE**



- When operating from the handle grip, before you switch to ON position, the potentiometer button must be turned back to "0" (zero) position.
- Always switch power off and keep potentiometer on "0" (zero) position (on handle grip) before leaving your trolley or while unattended.

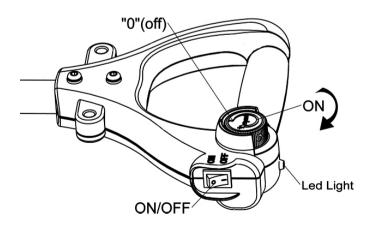

#### **DIRECTION FOR USE – DISTANCE REMOTE**

# Indicators On Handle LED Color Green... Remote on Yellow... 10 Second Distance Timer on Red Flashing... Battery level Low Red Continuous... Battery Level Critical Green Flashing... Reset from On/Off switch to continue OR Red Flashing... Press any button on remote transmitter

Remote Operation		
Large Button	Stop/Start the Caddy (Factory pre set speed, maximum 1 minute run time for user safety)	
Small Triangular Button	10 Second Distance Timer (caddy will run for 10 second and then stop)	
Switch from Hand Control to Remote	Press any button on Remote Fob	
Switch from Remote to Hand Control	Switch use on/off switch on handle	

#### **NOTE**

 The large button on transmitter will be disregarded if press twice within one second.

### HOW TO PAIR REMOTE TRANSMITTER WITH YOUR CADDY.

For occasions where the transmitter is replaced.

- Start with ON/OFF switch (on handle grip) in OFF position, switch potentiometer in "0" zero position and re-connect the battery.
- 2. Switch to ON and back to OFF position <u>3 times</u> within one minute from the battery re-connection.
- 3. Confirm green LED light on Handle is quick flashing.
- 4 Push any button on remote transmitter the LED light will **steady on** and the caddy will **start**.

The new transmitter is now been paired successfully.




- This remote control was preset in factory for full speed.
- It is recommend to use remote control within 50 yards, this trolley is designed to operate within range of 50 yards. It may lose control from remote transmitter if over 50 yards.

#### **BATTERY FOR REMOTE TRANSMITTER**

(DISTANCE REMOTE MODEL)

• Your remote transmitter is contained with 12V 23a battery.

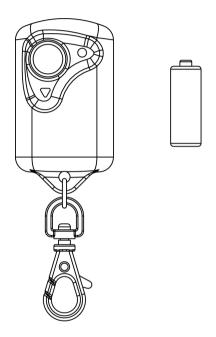

#### **A**CAUTION

The battery contained in the remote transmitter need be replaced when the operation of remote distance reduced and /or led light becoming lower.

#### **MOTOR BRAKE – OPTION MODEL**




- This motor brake trolley have equipped with differential gear box for making easier turn, you must push the handle to let front wheel up before turning direction.
- The motor brake model is equipped and control the brake function by digital electronic system, you just need to set the speed through potentiometer.

#### **▲**WARNING


The differential gear may easier to wear off when in heavy turn and or over weight loading.

#### **FOLDING THE TROLLEY**


- Undo the bag strap and unload golf bag.
- Pull the knob G with one hand and push the 4<sup>th</sup> (back) wheel forward with your other hand until you hear it "click" of locking into position.

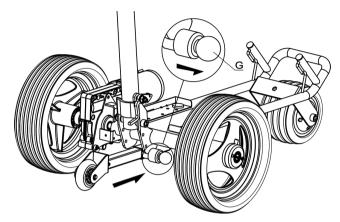


 Unplug the connector from battery, undo the strap and remove the battery.

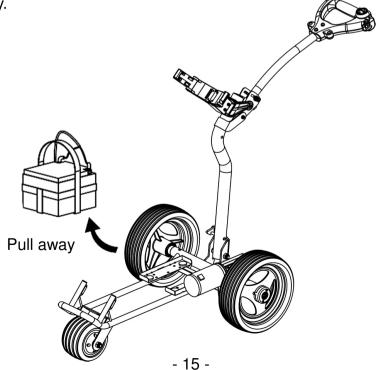

• Hold the handle up with one hand and have your other hand to pull the upper bag holder upwards.

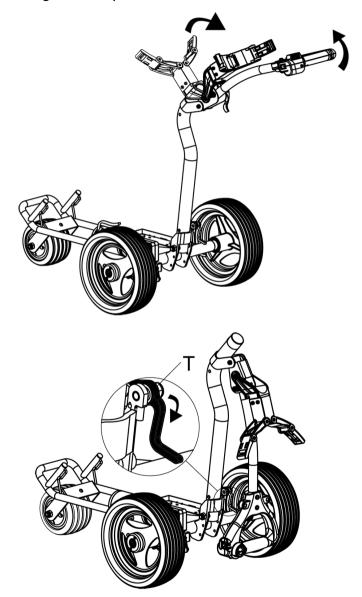



• Push down the locking lever T and push the upper frame downward to fold the trolley.

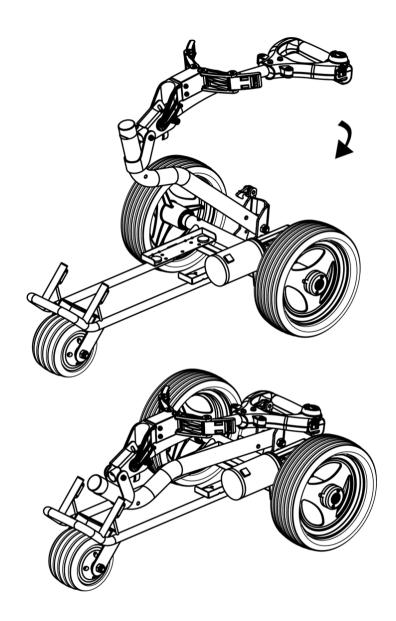


- Do not forget to recharge your battery.
- The battery must be installed last and taken out first.

- When you get your brand new battery, put it on charge for at Least 24 hours.
- Leave your battery recharging for at least 12 hours after every round of golf.
- Do not leave your battery on the trolley for recharging. (Remove battery from the trolley for recharging)
- The negative and positive pole of the battery must be in the upright position for recharging.

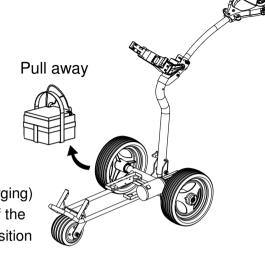

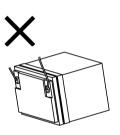

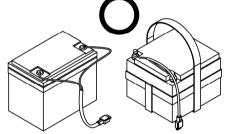

- To ensure that the battery is fully charged, it is recommended to leave the charger connected to the battery with the mains switched on until the battery is needed.
- Study charger instruction (on back side of charger) before charging your battery.



#### **IMPORTANT NOTICE:**

Please DO NOT leave your battery near metal parts in the free position which might touch on the positive and negative pole of the battery. If this happens it might spoil and explode the battery. DO NOT dispose of battery in fire. Improper storage and disposal of the battery could result in explosion causing injury and or property damage.

#### **BATTERY CHARGER**



- Before charging, read the instructions. (on back side of charger)
- For indoor use only, do not expose to rain.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Disconnect the supply before making or breaking the connections to the battery.
- Batteries contain explosive gases. Prevent flames and sparks.
   Provide adequate ventilation during charging.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This charger is not for recharging non-rechargeable batteries.
- During charging, the battery must be placed in a well ventilated area.
- The battery charger must only be plugged into an earthed socket-outlet.
- Do not use for charge any other batteries not specified by the manufacturer.

#### **BATTERY CARE & MAINTENANCE**



#### TO prolong the life span of the battery:


- Before the first time use of your battery, put it on charge for 24 hours even if the battery is already fully charged.
- Do not place the battery on a concrete floor for charging, have the battery raised off the floor on wooden blocks or place the battery on a shelf.
- For fully charge the battery, choose a place where ambient temperature is above 10 degrees Celsius (+10°C).
- Always recharge your battery as soon as possible after use.
- Always keep your battery on charge between games, if you play golf regularly every week.
- Never play 18 holes without fully recharging. You will discharge the battery below its designated voltage and damage it.
- Do not drop the battery. Avoid storing the battery in the trunk of your car as it might roll around and be damaged.
- STORAGE: (This also applies for new batteries kept in stock)
  If you know that you will not be playing for next 3 weeks or so.
  REMOVE BATTERY FROM THE CHARGER AND STORE IN A
  PLACE WHERE THE AMBIENT TEMPERATURE IS ABOVE 10
  DEGREES AND LOWER THAN 30 DEGREES CELSIUS. Recharge it before your next round or every 3 months (No more than 3 months) if it is not used in that period.


Disconnect charger from power supply.

Always contact our service agent before you try to replace the battery or the charger. Using an incompatible battery or charger may damage the trolley and void your warranty.

#### **HOW TO MOVE THE TROLLEY TO YOUR CAR**

#### REPACKAGING INSTRUCTION

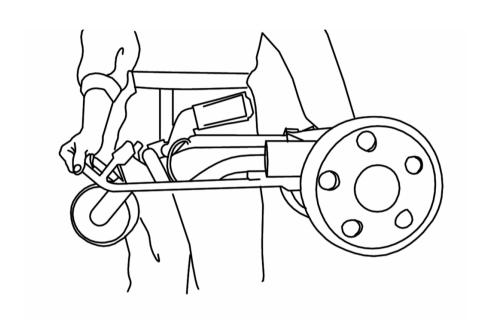

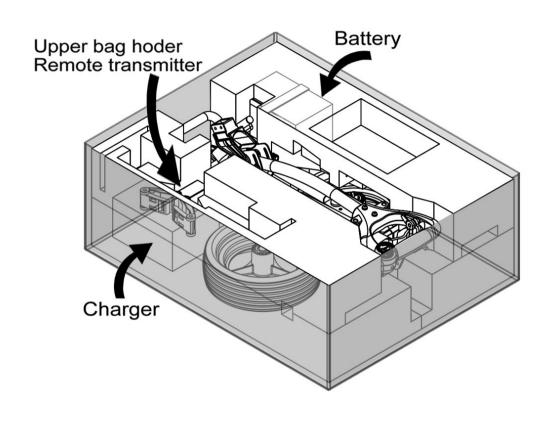

- Remove the battery from trolley.
- Fold the trolley.
- Using the strap from battery tray for tighten the handle bar.

- Keep shipping carton in dry place after unpacking your unit.
- Follow the way and position as illustrated above to do repacking your unit for in case should need to be shipped for service or whatever purpose.