



Instruction Manual

1. Click for backward song & Long press for volume down.
2. Click for Play/Pause the music (Answer/hang up the phone while phone call is coming in) & Long press for pairing with Bluetooth device.
3. Click for forward Song & Long press for volume up.
4. Power Switch.
5. 3.5mm AUX input.
6. 5V Micro USB Charging.
7. 2 Channels stereos output with 1 channel simulate woofer.
8. Side Portable Bar.

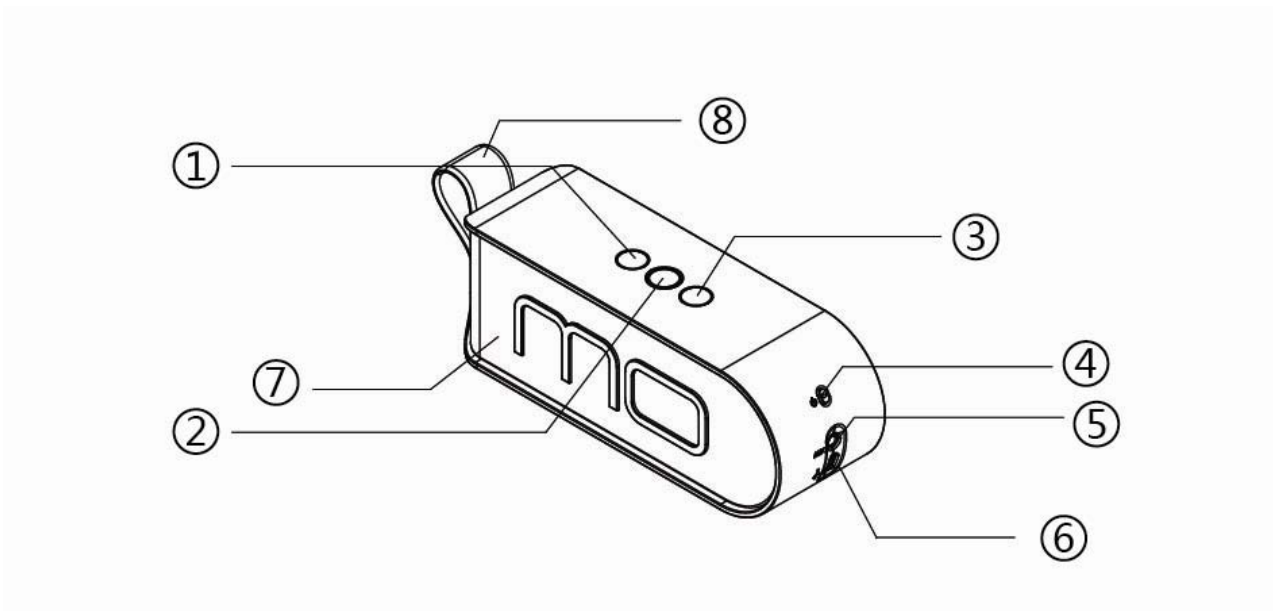


Bluetooth Connection

1. Turn on MO7 power and activate the device's Bluetooth function.

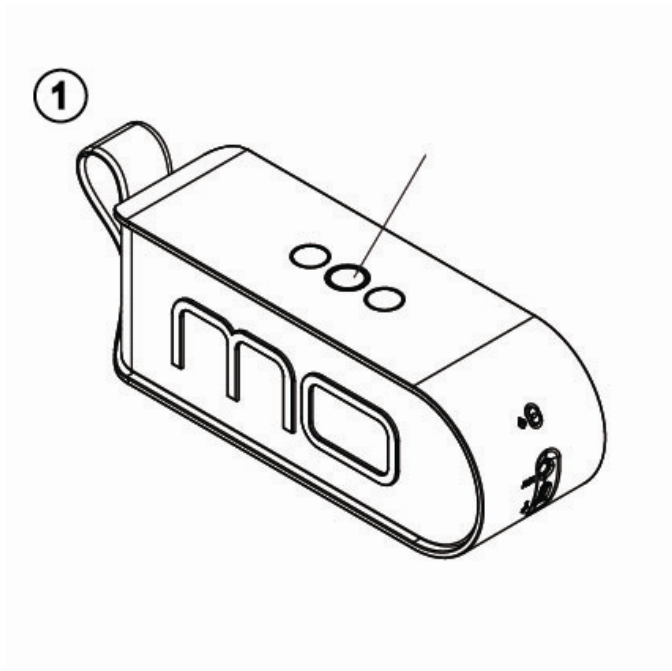

2. Long press the button and the LED indicator will activate (red-blue).

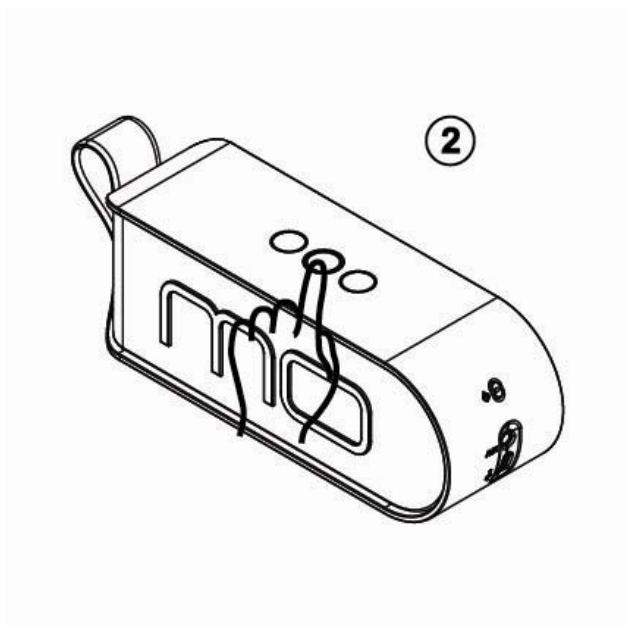

3. Search "MO7" on your Bluetooth device and connect it.



FCC Warning Statement

FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation .

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.