



# Aqua Bolt Sentry

## User's Guide



Model No.: PR26

### INSTALLING BATTERIES

#### *Remote*

1. Remove the battery compartment cover by using a small screw driver and then sliding it off.
2. Insert 1 - 9 volt battery, making sure to properly match the polarity (+ and -) as indicated by the diagram inside the battery compartment.
3. Slide the compartment cover into place and screw in firmly.

#### *Sentry*

1. The battery compartment is located on the bottom of the unit. Remove the cover by using a small Phillips screwdriver and then sliding it off.
2. Insert 4 - C batteries into the compartment making sure to match the polarity (+ and -) as shown on the diagram inside the compartment.
3. Replace the compartment cover and screw in firmly.

### LEGS

Snap each of the three legs into the small slots near the base of the unit.

### SPRAY NOZZLES

Aqua Bolt Sentry comes with three spray nozzles. Attach the nozzles by sliding them over the main nozzle and locking it into place.

### WATER SUPPLY

Take a standard garden hose and connect it firmly to the Sentry's water intake.

**NOTE:** Make sure main water is turned off before connecting.

**DO NOT** shoot the Aqua Bolt at a person's face, especially the eyes.

### OPERATING YOUR AQUA BOLT SENTRY

1. Turn the unit on by pushing the yellow power button. This button is located on the main body. When the red light is on the sentry is ready.
2. Turn the controller on by pressing the power button.
3. Turn on the main water supply.
4. Use the directional arrows to aim the cannon (up, down, left and right).
5. Press the red FIRE button to shoot.

### CARE & HANDLING

- Do not submerge in water or other liquids.
- Do not disassemble the product for any reason.
- Do not expose to extreme temperatures.
- Do not drop, throw, smash or otherwise cause physical shock.
- Clean using only a slightly damp cloth.
- Do not use cleaners with chemical agents.

### BATTERY INFORMATION

- Do not short-circuit the battery terminals.
- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Remove exhausted batteries.
- Batteries should be installed and replaced by an adult only.
- Remove batteries when not in use.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium/Ni-MH) batteries.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 90-DAY LIMITED WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.  
13755 SW 119th Ave  
Miami, Florida 33186 U.S.A.  
Phone: 305.477.8080  
Fax: 305.477.9516

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

**Please Visit Us @**  
**[www.ExcaliburElectronics.com](http://www.ExcaliburElectronics.com)**



Aqua Bolt Sentry  
Model No.: PR26  
121608