
Key points:

This manual includes security measures and correct operating methods. For personal safety, please make sure to read this manual before using. Thank you!

- ◆ The machine adopts capacitive touch screen, you can just touch it by finger or click with capacitive pen for operation. (Never use the sharp objects to click the screen, or the touch screen may be damaged).
- ◆ Do not put the device at any high temperature, high humidity or dusty place.
- ◆ Do not drop or crash the device to prevent the violent impacting between the display and the capacitive touch screen. Or the customers have to take the consequence by themselves.
- ◆ Please choose the suitable volume and never make the too loud volume .If you feel uncomfortable please turn down the volume or stop to use the device soon.
- ◆ Please charge if you meet those situations as below:
 - A、 Low battery on the battery icon.
 - B、 The system turns off automatically.
 - C、 The keys do not work.

【Note】:Don't use the different type charger or it may make the device burned . We assume no liability for the damage.

Please contact with our agent if you need the original adaptor.

- ◆ In the charging process, the device may be warning up a little (not too hot), this is normal phenomenon, but it wont effect the use.
- ◆ Do not disconnect the device while formatting, downloading or uploading, or it may make the error.
- ◆ Our company won't bear the duty for the loss of the memory erasing on account of the damage, repair or some other reason.

Please operate the device according to the user manual rightly and backup the important data in time.

- ◆ Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.
- ◆ Do not use this device where electronics is forbidden, such as on the airplane.
- ◆ Do not use this device while walking and driving, avoiding traffic accident.
- ◆ USB is for transferring data but also for charging.
- ◆ Virus can damage this device. So please use proper computer antivirus and keep it updated.
- ◆ For any support needed for this device please contact the company or the authorized distributor. Any unauthorized dismantling of the device will make the warranty null and void.

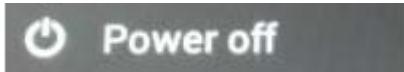
We reserve the right to keep the change of the products, the specification and design is subject to change without notice!

1. User Guide

1.1 Power ON OFF Key

Press the key for a long time and the TVE911S will power on and the unit will operate. And it will go to the “Front view”. You can use the unit as the following way. And then if press the key for a long time again the unit will display the following icon.

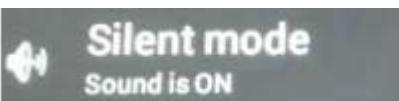
Choose this icon the unit will Power OFF



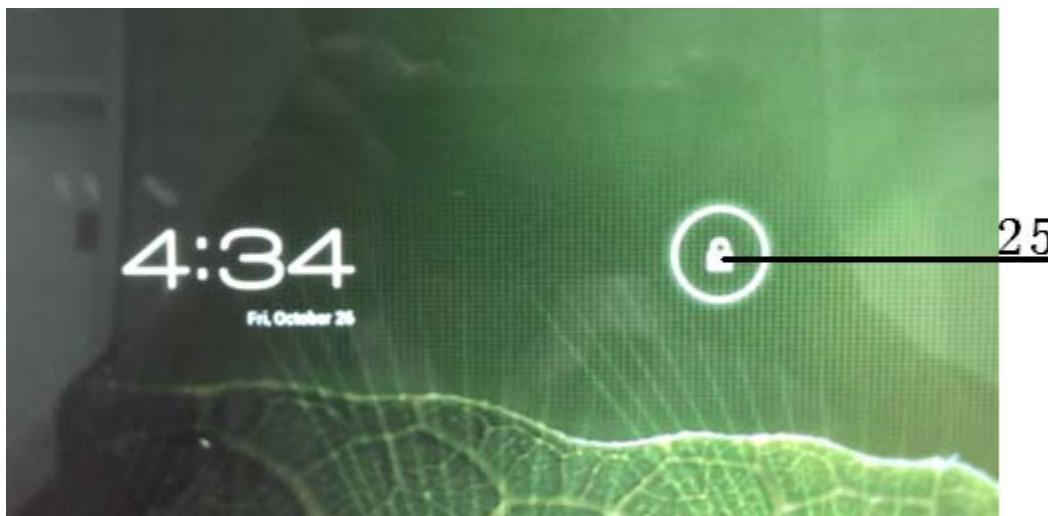
Choose this icon the unit will go to Airplane Mode



Choose this icon the unit will go to Silent Mode



Press the power ON OFF Key for a short time, the unit will go to standby Mode and the LCD will not display. And short press again the unit will go to normal operation and the LCD will display the following icon, Slid the lock icon to the right side the unit will unlock



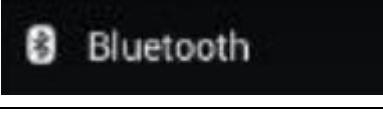
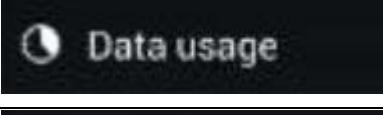
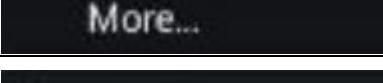
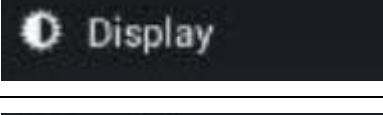
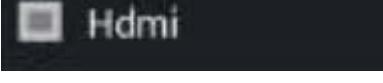
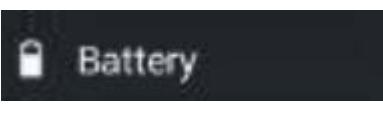
1.2 System setting

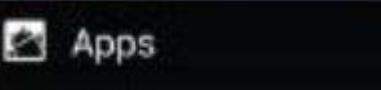
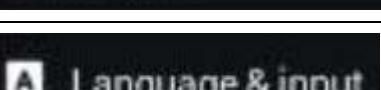
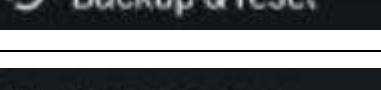
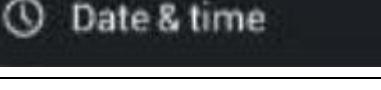
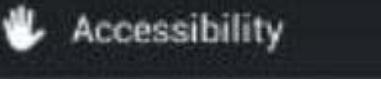
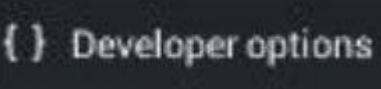
2.2.1 How to going to setting interface

	Back Key		Home Key		Main menu
	Fast operation Key		Fast going to setting Key		Batter icon

2.2.2 The system parameter setting

In the system setting icon choose the System settings as below indicate. The unit will going to system setting interface.

	Wi-Fi setting	Choose this icon to set Wi-Fi wireless network
	Bluetooth setting	Choose this icon to set Bluetooth (Optional fuction)
	Ethernet	Choose this icon to set Ethernet converted by USB
	Data usage	Choose this icon to check the data as your use
	More	Setting the VPN and the mobile nets and so on
	Sound setting	Setting Volume and touch noise and other sound
	Display setting	Setting LCD display brightness and sleep time wallpaper and Font size
	HDMI setting	Trun on or off HDMI and HDMI resolution setting
	Storage setting	View the storage memory
	Battery consumption	Over view the system and other parts battery consumption

 Apps	Apps	Over view and setting the apps
 Location services	Location services	Use and setting the network location
 Security	Security setting	Pass word and others security setting
 Language & input	Language setting	Language setting and the keyboard input methods
 Backup & reset	Backup and reset	Back up the unit data and rest the data and factory data reset
 Add account	Add account	Add the account and record the data
 Date & time	Date and time setting	Setting the time date and zone and choose the date format
 Accessibility	Accessibility	Setting the screen auto-rotate and speak passworks and others
 Developer options	Developer Options	Setting USB connected mode and others
 About tablet	About tablet	Over view the unit parameter

1.3 Application program

2.3.1 How to going to the application program interface

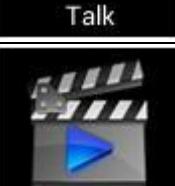
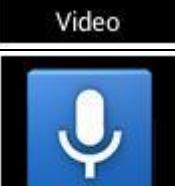


: Choose this icon the unit will going to application programmers interface

2.3.2 application program interface

 ApkInstaller	APK installer	Install and manage the APK program
 Browser	Browser	Connect to Internet
 Calculator	calculator	Use the calculator to do some sample count
 Calendar	Calendar	calendar
 Camera	camera	Use the camera take photo and video.
 Chrome	Chrome	Googel browser
 Clock	Clock	Over view the time and setting the clock
 Downloads	Downloads	Over view the download data and the download states.
 Email	Email	Use the email address to receive and send the email

 Explorer	Explorer	Over view and manage the SD card and internal memory and USB storage
 Flash Player Se	Flash Player Settings	settingFlash player.
 Gallery	Gallery	Over view and manage the pictures
 Gestures Builde	Gestures builde	Use the Gestures builde could creation a sign for example sign your name or others
 Gmail	Gmail	Gmail
 Latitude	Latitude	Googel maps
 Local	local	Fast to find where you are
 Maps	maps	Fast to find where you are
 Music	Music	Play music

	People	Add or record your contacts
	Play store	Use this store to download the APK as you want
	search	Fast going to Google search
	setting	Fast going to setting interface
	Sound recorder	Choose this icon going to sound record
	Speech record	Speech record
	Google Talk	Google Talk
	Video	Use this icon going to video play
	Voice search	Voice search

1.4 Micro SD user guider

Put the micro SD card in to the card slot, when you heard the card make a click voices, and then the card was prepared, at this time you can use the micro SD card

Remove the micro SD card

Close all the application programmers that it story in the micro SD card. And then click the  icon → setting → storage → SD →unmount SD card. And then pick out the micro SD card
☆ don't remove the card too fast and frequently, it will broken your micro SD card.

1.5 Wi-Fi user guider

Most of the application program need the Wi-Fi wireless network to support. So we suggest to set up the Wi-Fi firstly.

Click  → setting。 Wi-Fi icon : Slip the off icon to right side and then it will become to on icon . and then the Wi-Fi will operation.

The unit will search all the Wi-Fi wireless network automatically. If the Wi-Fi icon has a lock icon on the right side ,it should input password to unlock the Wi-Fi and connected to the wireless network..

Click  back to main launcher.

1.6 HDMI user guider

The unit support HDMI device, We can use the Mini HDMI cable connected to TV and other HDMI device.

When the unit was operation ,we can go to the setting interface to set the HDMI. Click  → setting →HDMI

When the HDMI device connected to the unit, you'd better to short press the power ON OFF Key to close the LCD to reduce the battery consumption.

1.7 USB user guider

2.7.1 USB debug

USB debug mode was used to debug program by the programmer. We should install ADB driver before use this kind of mode. You can install the driver as the following way:

(1) First of all let the device going to install mode, and then use the explorer open the “CD driver” in PC, copy the “\adb_driver” to PC;

(2) Set the unit to USB debug mode, The PC will point to install the driver, guider the pathway to the “\adb_driver” file in PC. And then the program will operation automatically.

2.7.2 USB Mass Storage

USB mass storage mode is use to copy and storage file or document or other data, you can manage it as a rigid disk in PC when it is connected to your PC. You can copy, delete, paste or other actions

2.7.3 USB OTG

The peripheral USB device as the USB mouse, keyboard, USB 3g dongle or other USB device could connect to the unit.

2.Troubleshooting

• Can not power on:

- Connect the power cable to charge to the device, after a while and then check again.
- If it still can not power on, please contact with our distributor or service centre.

• Serious noise:

- Check if the music file is damaged.
- If the music files are damaged, it may cause serious noise and jumping sound.

• Can not download or copy:

- Check if it is connecting correctly between the device and PC.
- Check the spare space of the memory.
- Check the USB cable.

• USB connect is fail.

- Make sure that the USB device is securely connected to the USB jack.
- Check if the USB device or a cable is damaged.
- If the USB device is connected via a USB hub, connect the USB device directly to the device.

• Cannot connect the device to the wireless LAN router

- Check if the wireless LAN router is on.
- Depending on the surrounding environment, such as the wall material, radio wave receiving condition, or obstacles between the device and the wireless LAN router, the communication distance may be shortened. Move the device and the wireless LAN router closer to each other.
- Devices that use a 2.4GHz frequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication. Move the device away from such devices, or turn off such devices.

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.