



Limited 2 Year Warranty

What is covered: Any defect in materials and workmanship.

For how long: 2 year from date of purchase.

What we will do: If your product is defective and returned within 30 days after the date it was purchased, we will replace it at no charge to you. If returned after 30 days but within 2 years of the date of purchase we will repair it or, at our option, replace it at no charge to you.

If we repair your product, we may use new or reconditioned replacement parts. If we choose to replace your product, we may replace it with a new or reconditioned one of the same or similar design. The repair or replacement will be warranted under our standard 2 year warranty.

LIMITATIONS: IMPLIED WARRANTIES, INCLUDING THOSE OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY (AN UNWRITTEN WARRANTY THAT THE PRODUCT IS FIT FOR ORDINARY USE), ARE LIMITED TO 2 YEARS FROM DATE OF PURCHASE. WE WILL NOT PAY FOR LOSS OF TIME, INCONVENIENCE, LOSS OF USE OF YOUR PRODUCT OR PROPERTY DAMAGE CAUSED BY YOUR PRODUCT OR ITS FAILURE TO WORK, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING PERSONAL INJURY.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

WHAT WE ASK YOU TO DO: To get warranty service for your product, you must provide proof of the date of purchase. Within 30 days of the date it was purchased, return your product to your place of purchase for immediate replacement. After 30 days, but before the end of the 2 year warranty period, you may call 888-646-8638 for further instructions.

WHAT THIS WARRANTY DOES NOT COVER: AMONG OTHER THINGS THIS WARRANTY DOES NOT COVER DEFECTS RESULTING FROM ACCIDENTS, DAMAGE WHILE IN TRANSIT TO OUR SERVICE LOCATION, ALTERATIONS, UNAUTHORIZED REPAIR, FAILURE TO FOLLOW INSTRUCTIONS, MISUSE, FIRE, FLOOD, AND ACTS GOD. IF YOUR PRODUCT IS NOT COVERED BY OUR WARRANTY, CALL OUR CUSTOMER SERVICE NUMBER AT 888-646-8638.

TO DETERMINE WHETHER WE WILL REPAIR YOUR PRODUCT AND OTHER REPAIR INFORMATION, INCLUDING CHARGES. WE, AT OUR OPTION, MAY REPLACE RATHER THAN REPAIR YOUR PRODUCT WITH A NEW OR RECONDITIONED ONE OF THE SAME OR SIMILAR DESIGN. THE REPAIR OR REPLACEMENT WILL BE WARRANTED FOR 2 YEARS.

THIS LIMITED WARRANTY IS THE ONLY ONE WE GIVE ON YOUR PRODUCT AND IT SETS FORTH ALL OUR RESPONSIBILITIES REGARDING YOUR PRODUCT. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION SET FORTH ABOVE.

STATE LAW RIGHTS: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

LPL999102108-107

PELION™ FORM+FUNCTION

Wireless Remote Control



LPL999 Owner's Manual

© 2008 Lancer & Loader Group LLC. All rights reserved.
Custom manufactured in China for Lancer and Loader Group LLC, New York, NY 10016.



LPL999 owner's manual



Introduction

Thank you for purchasing the Pelion™ Wireless Remote Control Switch. This product is designed to provide you with added convenience when using your Pelion™ LED lighting system.


Remote Overview

This innovative Wireless Remote Control allows you to control your LED lights at a distance using radio frequency technology. Works with three AAA batteries so there are no messy cords to run and you can place it almost anywhere you need it. Works with Pelion™ model numbers: LPL9512RC-6CPDC and LPL895XLRC-4CPDC.

Location of Controls

1. ON/OFF Switch with Selectable Dimmer
2. Battery Compartment*
3. EZ-Mount Bracket

*On back of unit

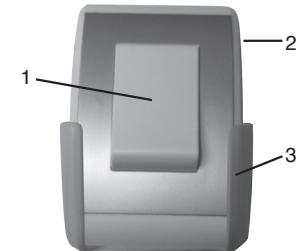


FEATURES AND SPECIFICATIONS

- One Touch ON/OFF Switch with Selectable Dimmer: Press once for full brightness. Press and hold until desired brightness is reached. Press a third time to turn the lights OFF.
- EZ-Mount Bracket: Mounts quickly and easily almost anywhere you need it.
- Batteries: 3 x 1.5V (AAA or LR03 batteries).
- Remote Control Range: 16 feet (5 meters)
- Warranty: Two year limited warranty.
- Patents Pending

Mounting the Remote Control

Hook and Loop Tape (included):

1. Check the location of where you want to place the Remote. Make sure it is clean and that there is no debris or dust.
2. The two sides of the hook and loop tape come pre-attached for ease of mounting. Remove the paper covering on one sticky side of the tape.

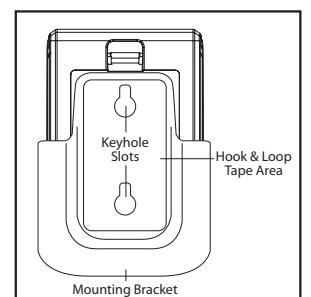

NOTE: Hook and loop tape may be cut to desired size for easier removal.

3. Place the tape in the recessed area in the center on the back of the Mounting Bracket.
4. Remove the paper covering on the other sticky side of the tape.
5. Place the Mounting Bracket in the desired location. Press firmly and hold for five (5) seconds so that the tape adheres to the surface.

CAUTION: Be cautious of what surface the hook and loop adhesive is attached to, as it may remove paint or damage surface.



Screws (included):


You can secure the EZ-Mount Bracket to almost any surface using 2 screws. To do so, remove the Remote from the bracket by sliding it up and out of the bracket. Use the printed paper mounting template for pilot hole positions.

1. Drill two (2) pilot holes in the location where you want to mount the Remote Control making sure you are within 16 feet (5 meters) of the LED lighting system.
2. Place screws (included) in pre-drilled holes. Tighten slightly until secure, but do not tighten all the way. Slide the EZ-Mount Bracket keyhole slots over screw heads and into position.
3. Tighten screws to secure the bracket to the wall. Take care to not over tighten.
4. Place the Remote Control in the mounting bracket.

Using the Remote Control

The Wireless Remote Control is easy to use. With radio frequency technology, it can work through walls and floors. To use the remote, first make sure that the remote is held or mounted within 16 feet (5 meters) of the LED lighting system.

1. Press the bottom of the switch once to turn the LED lights ON.
2. Press and hold the bottom of the switch until the desired level of brightness is reached then release the switch.
3. Press the bottom of the switch a third time to turn the LED lights OFF.

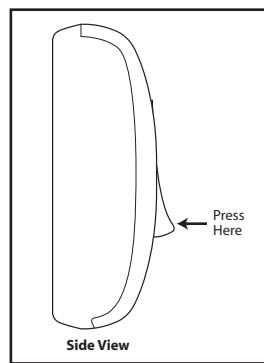


Changing the Batteries

If the Remote Control does not work to turn the LED lights ON, this may be an indication that the batteries need to be replaced.

Replacing the Batteries:

1. Remove the Remote from the EZ-Mount Bracket by pulling it up and out of the bracket.
2. Pull up on the battery compartment housing tab on the back of unit to open the battery compartment.
3. Remove the old batteries (if replacing).
4. Insert 3 new AAA batteries. Be sure to match the battery polarity guide when installing new batteries.
5. Replace the battery compartment cover.

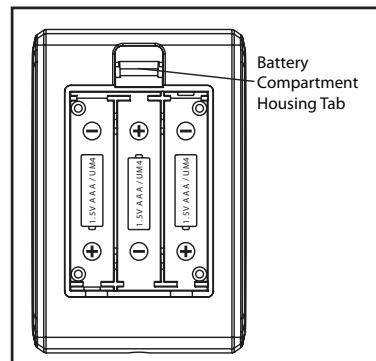

Battery Precautions:

1. Use only the size and type of batteries specified.
2. Always purchase the correct size and grade of battery most suitable for the intended use.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
5. Replace all batteries of a set at the same time. Do not mix old and new batteries.
6. Clean the battery contacts and also those of the device prior to battery installation.
7. Do not dispose of batteries in fire.
8. Remove batteries if consumed or if product is to be left unused for an extended period of time.

FCC Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Customer Service

This product is designed to provide years of super bright light where you need it. Most commonly asked questions about the remote can be found on our website www.lancerandloader.com.

For questions that cannot be addressed via our website please email us at cs@lancerandloader.com or call us at 888-646-8638, Monday - Friday during the hours of 10:00 AM – 4:00 PM EST.