



## Card Radio - 4C Receiver

- ① ON/OFF
- ② Channel selection
- ③ LED
- ④ Earphone socket 3,5 mm
- ⑤ Volume
- ⑥ Battery slot
- ⑦ Battery cover



1. Insert 2 pcs. alkaline batteries 1.5V AAA in the battery slot ⑥
2. Close the battery cover ⑦
3. Turn ON the receiver with ①
4. LED ③ turns red
5. Select the channel with ②. Choose the same channel as the transmitter according to the table inside the battery cover ⑦
  - i.e. Receiver's channel (CH) 1 (freq. 644.000) corresponds to transmitter's channel (TX) 51
  - i.e. Receiver's channel (CH) 2 (freq. 641.900) corresponds to transmitter's channel (TX) 34
- NOTE: In some models receiver's (CH) and transmitter's (TX) channel may have a different number. Always check the table ⑦
6. Insert the earphone in the earphone socket ④. Use only earphones with stereo plug
7. Adjust the volume with wheel ⑤
8. Remember to turn OFF the receiver with ① after each use, in order to save the battery for next use

### FCC ID : W64VOXCARDRADIO4C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) this device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.