


Front 黑色

KB008W-B

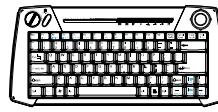

Wireless Trackball Keyboard

USER'S MANUAL

System requirements

- IBM or compatible PC
- Windows Operating System
- Pentium®-equivalent processor or above
- One available USB port

OS support

- Windows VISTA
- Windows XP
- Windows 2000
- Windows ME

Introduction

Thank you for your purchase of our RF-666 Wireless Trackball Keyboard. For your own safety, please read this manual thoroughly before using this product. After you have read this manual, please keep it in place for reference when necessary.

Content in the package

Product including (Keyboard, receiver, power adapter, and manual). Please make sure all items are accounted for as follows in the package. If there was any item missing or damaged, please contact the reseller where the product was purchased or our support center.

- Wireless Keyboard x 1
- USB 2.4GHz receiver x 1
- Instruction CD x 1
- Manual x 1
- AAA Alkaline batteries x 2

Warning

Zippy Technology Corporation and its respective distributor and resellers are not responsible for any malfunctions, damage or personal injury incurred by any malfunction, damage or personal injury caused by the malfunctioning or damage of the user's personal computer or misuse of this product.

Any attempt to dismantle, change or modify this product in any manner, will void the warranty.

Product warranty

Please do not use this product in dusty, wet, or oily environments. Failure to do so may shorten the life of this product and may cause both items. Please keep this product as far away from Radio Frequency Interference areas as possible.

This is not an outdoor product. Exposing this product to the elements may cause damage to the product and harm to its users. Please do not use petroleum, benzene or thinner-based solution to clean this product.

Warranty information

This product is covered by a One-Year Manufacturer's Warranty, starting from the date of purchase. Please keep the original receipt for this reason in accordance with the contents stated below but does not cover wear and tear and any malfunction or damage as results of improper usage as stated in this manual.

Specifications

- Keyboard**
 - Dimensions: 350 x 107 x 97mm
 - Weight: 570g (with Battery)
 - Key Number: 86/87/90 keys (By language)
 - Battery: 2 x AAA batteries
 - Battery Life: 2 Month (See on average usage)
- Mouse**
 - Dimensions: 105 x 105 x 25mm
 - Weight: 75g (with Battery)
 - Hot Keys: Back, Next, Skip, Play/Pause, Stop, Mute, Volume up, Volume down, WWW
 - Frequency: 400, 800, 1000dp (adjustable)
 - Radio Frequency: 2.4 GHz
- Mouse Receiver**
 - Dimensions: 41x16x6
 - Weight: 15g
 - Interface: USB V1.1

Installation Procedure

A. Setting up the Dongle Receiver

1. Plug the dongle receiver (FIG. 2) into an available USB port.
2. Wait for operating system to install drivers for the dongle receiver, keyboard and mouse.

B. Setting up the Keyboard

1. Open the keyboard's battery compartment cover and insert the two pieces of AA Alkaline batteries. Make sure they are properly installed. (FIG. 1)
2. Replace the keyboard's battery compartment cover, and switch the ON/OFF button to "ON" position.
3. Usually the keyboard and mouse have found in the factory, and it can be used after inserting batteries. If the keyboard and mouse cannot be recognized from system, please follow steps below.

Keyboard



FIG.1

Back 黑色

Receiver



FIG.2

Hotkey Functions

There are 8 button hotkeys for quick access under the Windows operating system. Please refer to the following section on their functions.

FIG.3

Home page : Press once to start Internet browser.

Volume down : Press once to decrease the volume.

Volume up : Press once to increase the volume.

Mute : Press once to mute sound from a CD or a video file, and press once again to resume sound.

Stop : Press once to stop playing the CD.

Back Step : Press once to skip back to previous track. Press and hold to search for a desired position at high-speed backward, and release the button to resume normal play.

Play/Pause : Press once to start playing the CD, and press once again to stop playing the CD temporarily, and press once again to resume playing.

Next Step : Press once to skip to next track. Press and hold to search for a desired position at high-speed forward, and release the button to resume normal play.

Media Center Edition Features

The KB008W-B keyboard supports Media Center function. Media Center enables a powerful and intuitive way to enjoy all of your digital entertainment—video, music, TV, movies, home video, radio, and a world of applications and services whether you're sitting in front of your Windows desktop or across the room with a remote control.

Complex key function


The blue printed character can be functioned by holding the "Fn" key and press the blue character key. Please refer to the following section on their functions.

Complex Key	Instruction	Complex Key	Instruction
Fn		WCC	
Page Up/Ch		My TV	
Page Down/Ch		My Video	
Home		My Music	
End		My Picture	
Mouse Button 4/6/8		Reset TV	
Mouse Soltice 600/600		DVD	
Mouse Soltice 1000/1000		<=>	

Number Lock, Scroll Lock, Caps Lock indicator software

The CD in the package provides the Number Lock, Scroll Lock, Caps lock indicator function. The software will show the Num Lock, Caps Lock and Scroll lock information on the screen when you log in. If the software does not show up automatically, please open [my computer] -> [CD ROM], and double click "Setup.exe".

After install keyboard status indicator software, you will find 3 small icons in your task bar as follows:

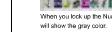

When you log in, the Number pad, caps or scroll the light will show green color, otherwise it will show the gray color.

Uninstall the software


Right click on the "Slim Multimedia" icon in the taskbar.

Left click [Exit Slim Multimedia] from the menu, then the "Slim Multimedia" icon will disappear from the taskbar.

Click [Start] -> [Program] -> [RF Status] -> [Uninstall], and uninstall according to the directions on the screen.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

折法:左右S折,封面朝外

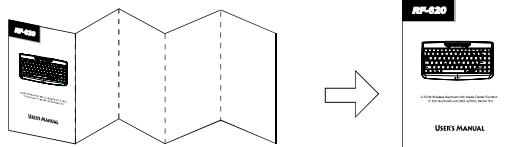

日期	設計	修改內容敘述	確認	材質
		說明書	廖勤演	70P模造紙

注意:

- 須正反面(雙面)印刷,
- 印刷面不可產生影像模糊或有餘影
- 裁切邊不可有裁切不良現象
- 交貨時,需左右S折,封面朝正面