
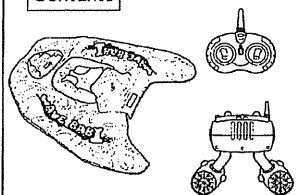
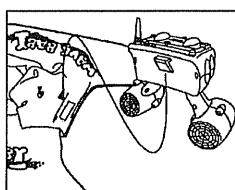


CONTENTS


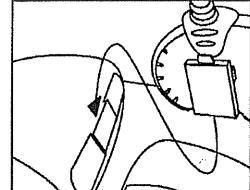
- 1 - Float
- 1 - Remote Control
- 1 - Motor
- 1 - User's Guide (not pictured)

ASSEMBLY
PLEASE READ ALL ASSEMBLY INSTRUCTIONS BEFORE GETTING STARTED.


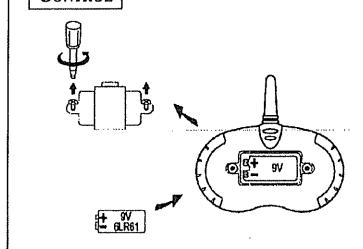
1. Before inflating the Wave Baby, insert the motor unit into the rear as shown above.

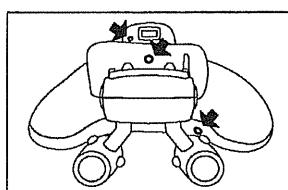


2. Inflate all 3 chambers of the float as shown. Inflate the chambers until they are firm and close each valve as you are finished.



 
3. Insert the remote control into the front of the unit.

BATTERY INSTALLATION
REMOTE CONTROL


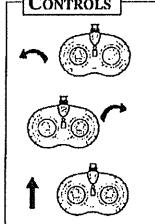
1. Remove the battery compartment cover by removing the two screws with a small Phillips screwdriver.
2. Insert 1 - 9V battery into the battery compartment making sure to match the polarity (+ and -) as shown on the inside of the compartment.
3. Replace the battery compartment and screw in firmly.

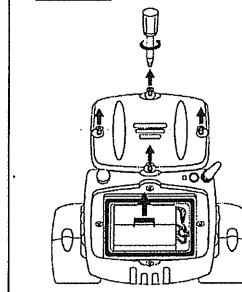MOTOR


1. Remove the battery compartment cover by unscrewing the four screws with a small Phillips screwdriver.
2. Remove the battery cartridge and install 6 - C (1.5V) batteries, making sure to match the polarity (+ and -) as shown on the inside of the battery cartridge.
3. Insert the battery cartridge and replace the compartment cover screwing it in firmly.

OPERATION


1. Place the Wave Baby in a swimming pool.
2. Lift your child into the Wave Baby, making sure the child's legs are comfortably through the seat.
3. Turn the motor on by pressing the power button. The power indicator light will illuminate.
4. Turn the controller on by pressing the power button.
5. You can leave the controller connected to the Wave Baby and allow your child to operate it around the pool or detach the controller and drive your baby around.

CONTROLS


Press LEFT button to turn left.

Press RIGHT button to turn right.

Press both LEFT and RIGHT to move forward.

IMPORTANT WARNINGS

- Please read the User's Guide carefully before operating this product.
- Children should not operate this product without parental supervision.
- This product is designed for pool use. It may be used in ponds or small lakes only within the range of the user's comfortable ability to swim to shore provided that there are no strong currents, waves, or water craft present which could create wakes. Do not use in any other body of water or in salt water.
- This product is designed to hold one child not exceeding 45lbs.
- Keep hands, hair, and loose objects such as clothing away from the propeller.
- If an object becomes lodged in the propeller, make sure that this product is turned off before attempting to dislodge.

**SEE REVERSE SIDE FOR MORE IMPORTANT WARNINGS,
CARE AND BATTERY INFORMATION.**

- Always inspect the pool area before use to insure it is free of hazards and/or obstacles, such as pool toys and etc.
- Never ride into or over swimmers.
- Keep this product away from hot or sharp objects.
- Always use caution and common sense.
- Never jump or dive off of or onto this product.
- This product is neither a personal-flotation nor a life-saving device. All users should know how to swim.

CARE & HANDLING

- Do not submerge motor or remote control in water or other liquids.
- Do not disassemble the product for any reason.
- Do not expose to extreme temperatures.
- Do not drop, throw, smash or otherwise cause physical shock.
- Clean using only a slightly damp cloth.
- Do not use cleaners with chemical agents.

BATTERY INFORMATION

- Do not short-circuit the battery terminals.
- Do not use rechargeable batteries.
- Do not mix old and new batteries.
- Remove exhausted batteries.
- Batteries should be installed and replaced by an adult only.
- Remove batteries when not in use.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium/ Ni-MH) batteries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

90-DAY LIMITED WARRANTY

EXCALIBUR ELECTRONICS, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, EXCALIBUR ELECTRONICS, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address below.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of LIMITED 90-DAY WARRANTY implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply. The only authorized service center in the United States is:

Excalibur Electronics, Inc.
13755 SW 119th Ave
Miami, Florida 33186 U.S.A.
Phone: 305.477.8080
Fax: 305.477.9516
www.ExcaliburElectronics.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton. If your warranty has expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

NOTE: Please do not send your unit without first receiving an estimate for servicing from EXCALIBUR ELECTRONICS, INC. Contact us before sending your unit. We cannot store your unit!

Excalibur Electronics, Inc. reserves the right to make technical changes without notice in the interest of progress.



Wave Baby
Model No.: PR28
012709

Please Visit Us @ www.ExcaliburElectronics.com