


MIYS37 Wristband Transmitter

Operating instructions

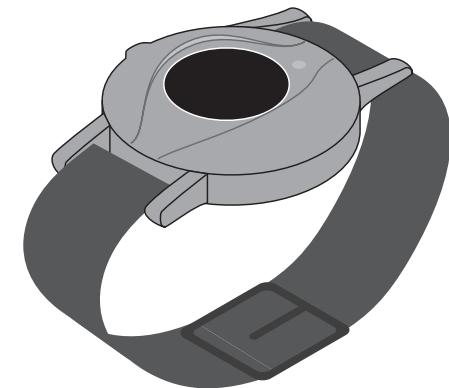

Accessories



10 x Necklace-Set



 
1 x Magnet for reset



1 x Clip-Set



10x Wristband-Set



5 x 3V Battery CR2025

Cleaning the transmitter and the accessories




Not to be used: alcohol, alcohol or vinegar-based cleaning agents, vinegar, cleaning agents for glass or plastics, disinfectants (except Incidur®), methylated spirits, benzine, other aggressive agents, body lotion, sun cream, hand and nail cream. Do not wash.



Torx T4 screwdriver

Battery change

Only by authorized personnel!

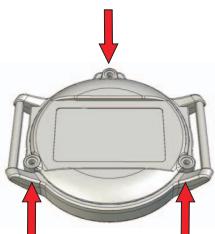

Model: MIYS37 Wristband Transmitter

FCC ID.: W9N-MIYS37

This equipment complies with Part 15 of the FCC rules. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept all interference received, including interference that may cause undesired operation.

CRS-MIYS37-FI
CRS-SB-427FIUS


MIYS37 Wristband Transmitter with black button
MIYS37 Wristband Transmitter with reset possibility



970.051 V1 2009.04

BOSCH

Trigger an emergency call

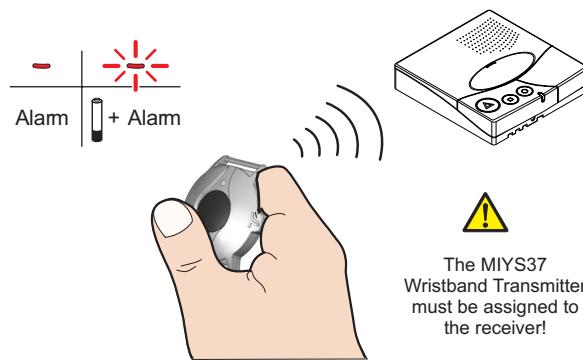

Safety notes

 



Repairs only by authorized service stations

Shortening the cord



Changing the wearing method

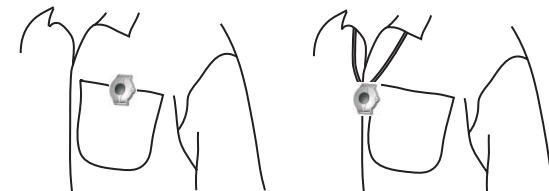

Technical data

	Ø 42 mm x 13.5 mm 22 g
	1x CR2025 3V
	0°C ~ +55°C
	Frequency: 434.01 MHz
	Radiated power: 50 µW
	Minimum range in free field: 250 m
	Automatic radio link monitoring: daily check and at every alarm
	IP 67 Environment class II

EN 50134-2