



testo 570s - digital manifold

0564 5701

0564 5702

0564 5703

0564 5704

Instruction manual



Contents

1	About this document	5
2	Safety and disposal.....	6
2.1	Product-specific information	7
2.2	Disposal	9
3	Product-specific approvals	9
4	Intended use	9
5	Product description	10
5.1	Overview of the testo 570s.....	10
5.2	Overview of main menu.....	11
5.3	Control keys	12
6	First steps	13
6.1	Charging the rechargeable battery.....	13
6.2	Inserting batteries.....	14
6.3	Switching the instrument on and off	14
6.4	Setup wizard	15
7	Using the product.....	16
7.1	Preparing for measurement.....	16
7.1.1	Operating the valve positioners.....	16
7.1.2	Automatic mode	16
7.2	Measuring mode.....	17
7.2.1	Refrigeration.....	17
7.2.2	Evacuation	21
7.2.3	Pressure Leak Test	24
7.2.4	Target Superheat	27
7.2.5	Compressor Test (DLT).....	31
7.2.6	Delta T.....	33
7.3	Performing long time measurement	35
7.4	Bluetooth	36
7.4.1	Probes compatible with the instrument.....	36
7.4.2	Establishing a connection.....	37
7.4.3	Switching on/off.....	37
7.4.3.1	Switching on	38
7.4.3.2	Switching off.....	38
7.4.3.3	Manual probe selection	39
7.5	Settings	40
7.5.1	Backlight duration.....	41
7.5.2	Backlight brightness	42

Contents

7.5.3	Auto Off	43
7.5.4	Auto Tfac (Temperature compensation factor)	44
7.5.5	Units	45
7.5.6	Language.....	46
7.5.7	Setup Wizard	47
7.5.8	Restore factory settings	48
7.5.9	Device Info.....	49
8	Smart App.....	50
8.1	App – user interface.....	50
8.2	Main menu.....	51
8.3	Measurement menu.....	52
8.3.1	Basic view.....	53
8.3.1.1	Graphic view	53
8.3.1.2	Table view	54
8.3.2	Refrigeration	54
8.3.3	Target superheat	58
8.3.4	System Leak Test.....	60
8.3.5	Evacuation.....	62
8.4	Customer	64
8.4.1	Creating and editing a customer.....	64
8.4.2	Creating and editing measuring sites.....	65
8.5	Memory.....	67
8.5.1	Searching for and deleting measurement results.....	67
8.6	Sensors	68
8.6.1	Information.....	68
8.6.2	Settings.....	69
8.7	Settings.....	69
8.7.1	Language.....	69
8.7.2	Measurement settings	69
8.7.3	Company details	70
8.7.4	Privacy settings.....	70
8.8	Help and Information	71
8.8.1	Instrument information	71
8.8.2	Tutorial.....	71
8.8.3	Exclusion of liability.....	71
8.9	testo DataControl archiving software	72
8.9.1	System requirements.....	72
8.9.1.1	Operating system.....	72

8.9.1.2	PC	72
8.9.2	Procedure.....	73
9	Maintenance.....	75
9.1	Calibration	75
9.2	Cleaning the instrument	75
9.3	Keeping connections clean	75
9.4	Removing oil residues.....	75
9.5	Ensuring measuring accuracy	75
9.6	Changing batteries batteries	76
10	Technical data	76
11	Tips and assistance	80
11.1	Questions and answers.....	80
11.2	Error Codes	80
11.2.1	Main screen.....	80
11.2.2	Status view.....	81
11.3	Accessories and spare parts	81
12	Support	81

1 About this document

- The instruction manual is an integral part of the instrument.
- Pay particular attention to the safety instructions and warning advice in order to prevent injury and damage to the product.
- Please read this instruction manual through carefully and familiarize yourself with the product before putting it to use.

Symbols and writing standards

Display	Explanation
	Note: basic or further information
	Warning advice, risk level according to the signal word: Warning! Serious physical injury may occur. Caution! Minor physical injury or damage to the equipment may occur. > Take the specified precautionary measures.
1 2 ...	Action: several steps, the sequence must be followed
-	Result of an action
✓	Requirement
>	Action
Menu	Elements of the instrument, the instrument display or the program interface.
[OK]	Control keys of the instrument or buttons of the program interface.

Warnings

Always pay attention to any information marked with the following warning notices along with warning pictograms. Implement the specified precautionary measures!

 **DANGER**

Risk of death!

 **WARNING**

Indicates possible serious injury.

CAUTION

Indicates possible minor injury.

CAUTION

Indicates possible damage to equipment.

2 Safety and disposal

General safety instructions

- Always operate the product properly, for its intended purpose and within the parameters specified in the technical data. Do not use any force.
- Do not commission the instrument if there are signs of damage on the housing.
- Dangers may also arise from the systems being measured or the measuring environment: Make sure you comply with the locally valid safety regulations when carrying out measurements.
- Do not expose the product to temperatures above 50 °C (122 °F).
- Do not store the product together with solvents. Do not use any desiccants.
- Only maintenance and repair work that is described in the documentation may be carried out on this instrument. Follow the prescribed steps exactly when doing the work. Only use original spare parts from Testo.

Built-in rechargeable battery

DANGER

Risk of death!

The built-in rechargeable battery can explode if it gets too hot.

- Do not expose the product to ambient temperatures above 50°C.
- Improper use of batteries may cause destruction of the batteries, injuries due to current surges, fire or the escape of chemicals.
- Do not deform batteries. Batteries must not be squashed, drilled, dismantled, pierced, modified or damaged in any other way. This may lead to the leakage of battery acid, to the escape of gases and/or to an explosion.
- Do not heat batteries above the permitted temperature or burn them. If a battery is heated, this may lead to the leakage of battery acid and/or to an explosion. Lithium batteries can, for instance, react very strongly in combination with fire. This may involve battery components being emitted with considerable power.
- Do not consume the battery; risk of burns due to hazardous substances. Keep new and used batteries away from children.

- In principle, contact with escaping battery components may present a risk to health and to the environment. Adequate body and respiratory protection is therefore required when in contact with batteries that exhibit abnormalities (escaping contents, deformations, discolourations, dents or the like).
- Batteries must be disposed of in accordance with the local and country-specific regulations. In order to prevent short circuits and the associated heating, lithium batteries must never be stored unprotected in bulk. Appropriate measures against short circuits are, for instance, inserting the batteries into the original packaging or a plastic bag, masking the poles or embedding them in dry sand.
- Lithium batteries must be transported and shipped in accordance with the local and country-specific regulations.
- If there is any contact with the skin or eyes, the areas must be rinsed with water for at least 15 minutes. If there is any contact with the eyes, a doctor must be contacted in addition to the rinsing.
- If burns are caused, these must be treated appropriately. You are also strongly advised to contact a doctor.
- Airways: leave the room immediately when smoke development or gas release is acute. Consult a doctor when amounts are larger and airways are irritated.
- Swallowing: rinse out mouth and surrounding area with water. Get medical assistance immediately.

2.1 Product-specific information

CAUTION

The measuring instrument being dropped or any other comparable mechanical stress may cause breakage of the pipe pieces in the refrigerant hoses. The valve positioners may also suffer damage, causing further damage inside the measuring instrument that is not necessarily visible externally.

- **Therefore, always replace the refrigerant hoses with new ones after the measuring instrument is dropped or after any comparable mechanical stress.**
- **For your own safety, you should return the measuring instrument to the Testo Customer Service for technical inspection.**

CAUTION

Electrostatic charging may destroy the instrument.

- **Integrate all the components (system, manifold's valve block, refrigerant bottle, etc.) into the potential bonding (earthing).**
 - **Please see the safety instructions for the system and the refrigerant used.**
-


⚠ CAUTION

Refrigerant gases can harm the environment.

- Please note the applicable environmental regulations.

Explosion hazard when using A2, A2L and A3 refrigerants

During maintenance and repair work on refrigeration systems with flammable refrigerants (e.g. category A2L, A2 and A3 of ISO 817), a hazardous and explosive atmosphere must always be expected in the immediate vicinity of the system. The **testo 570s** may only be operated outside of designated, recognizable or assumed explosion hazard zones (acc. to IEC 60079-10-1).

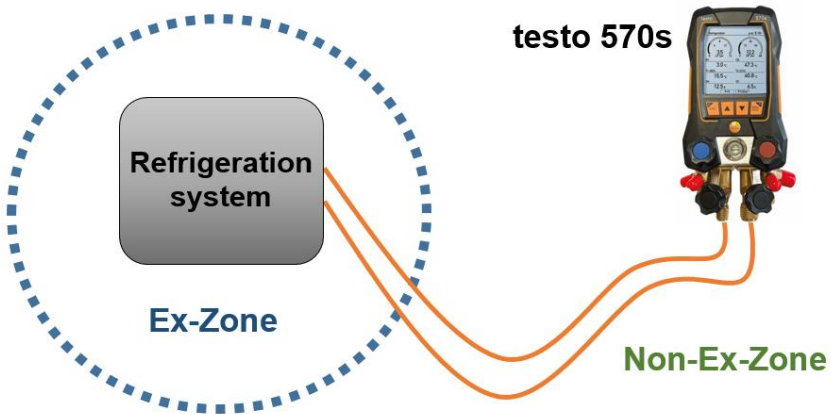

The following occupational safety measures must be observed to avoid a hazardous explosive atmosphere (see also: TRBS 1112, TRBS 2152 and VDMA 24020-3):

- Wear protective goggles and gloves.
- Before applying pressure to the measuring instrument: Always attach the measuring instrument to the suspension device to prevent it from falling down (risk of breakage).
- Before each measurement, check that the refrigerant hoses are intact and correctly connected.
Do not use any tools to connect the hoses, only hand-tighten the hoses (max. torque 5.0Nm / 3.7ft*lb).
- Adhere to the permissible measuring range (-1...60 bar/-14.7...870 psi). Pay particular attention to this for systems with refrigerant R744, as these are often operated at higher pressures!
- Open and close valves on the unit in the correct sequence to prevent any leakage of refrigerant from the system throughout the commissioning, maintenance and repair period.

2.2 Disposal

- Dispose of faulty/spent batteries in accordance with the valid legal specifications.
 WEEE Reg. Nr. DE 75334352
- At the end of its useful life, deliver the product to the separate collection point for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.

3 Product-specific approvals

For the relevant country approvals, please refer to the printed quick reference guides or short instructions enclosed with the products.

4 Intended use

The measuring instrument **testo 570s** is a digital manifold for maintenance and service work on refrigeration systems that are set up, maintained and operated in accordance with the provisions of EN 378:2021-06 Part 1-4. It may only be used by qualified personnel.

The safety instructions in the operating manual of the refrigeration system, the refrigerant manufacturer and the measuring device must be followed.

The functions of the instrument **testo 570s** mean it can replace mechanical manifolds, thermometers and pressure/temperature charts. Pressures and temperatures can be applied, adapted, tested and monitored.

With its integrated logging function the device can be left on the system and logging can be done without being on site.

The combination of rechargeable battery and exchangeable batteries allows dual power operation.

The instrument **testo 570s** is compatible with most non-corrosive refrigerants, water and glycol. The instrument **testo 570s** is not compatible with refrigerants containing ammonia.

The product must not be used in potentially explosive atmospheres!

WARNING

Under no circumstances should the manifold be used as a pressure reducing valve, especially when nitrogen N₂ is used.

5 Product description


5.1 Overview of the testo 570s

		
1	Mini-DIN probe socket for NTC temperature probe, with socket cover	2 USB-C port for firmware update and charging rechargeable battery
3	Display. Instrument status icons	4 Rear: • Battery compartment • Foldable suspension device
5	Control keys	6 Sight glass for refrigerant flow
7	4 x valve positioner	8 4 x hose bracket for refrigerant hoses
9	Connection 7/16" UNF, brass. High pressure, for refrigerant hoses with quick-release screw fitting, passage can be closed via valve positioner.	10 Connection 5/8" UNF, brass, for vacuum pump
11	Connection 7/16" UNF, brass, e.g. for refrigerant cylinders, with sealing cap	12 Connection 7/16" UNF, brass. Low pressure, for refrigerant hoses with quick-release screw fitting, passage can be closed via valve positioner.

Symbol explanation

	Observe operating instructions
---	--------------------------------

5.2 Overview of main menu

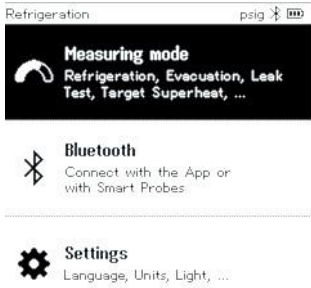	
Measuring mode	Refrigeration Evacuation System Leak Test Target Superheat Compressor Test (DLT) Delta T
Bluetooth®	Connection to the testo Smart App or Smart Probes
Settings	Backlight duration Backlight brightness Auto Off Auto Tfac (Temperature compensation factor) Units Language Setup Wizard Restore factory settings Instrument information

5.3 Control keys

Symbol	Meaning
	• Open menu • Confirm input • Switch on the display illumination: Press and hold the key for >2s • Switch off the display illumination: Press and hold the key for >2s
 , 	Change/navigate the display screen.
	• Switches to the measurement view • Back to the menu • Switch off the instrument: Press and hold the key for >2s

6 First steps

6.1 Charging the rechargeable battery

DANGER

- Do not charge the rechargeable battery in potentially explosive atmospheres!
- The device must only be recharged using the corresponding charger outside of a potentially explosive atmosphere in the ambient temperature range from 0 °C ... +35 °C.

WARNING

Risk of injury! The instrument may be damaged!

Deformation around the battery!

Regularly check the instrument for deformations around the battery. If you notice any deformation, the instrument must no longer be used. Switch it off to prevent physical injury or damage to the instrument. Dispose of the instrument properly (observe local regulations) or return it to Testo for disposal.



Only charge the battery using the original Testo mains unit supplied.

The instrument indicates that the battery needs to be charged via a flashing battery symbol.

- 1 Connect the instrument to the mains via the mains unit. To do this, insert the plug of the mains unit into the charging socket on the right side of the instrument.



The instrument can become very warm during charging and should not be held in your hand.

6.2 Inserting batteries



The exchangeable batteries are the backup power to continue working with the device when the integrated lithium battery is empty, e. g. for long-term measurements.

- ✓ The instrument is switched off.
- 1 Fold out the suspension hook, release the clip and remove the battery compartment lid.
- 2 Insert the batteries (scope of delivery, 3 x 1.5V, type AA Alkaline) into the battery compartment. Observe the polarity!
- 3 Attach and close the battery compartment lid (the clip must click into place).
- ▶ Switch the instrument on.



When not in use for a long period: Take out the batteries.

6.3 Switching the instrument on and off

Current status	Action	Function
Instrument off	Press 	Instrument is switched on.
 When the measuring instrument is started for the first time, the setup wizard guides you through the following setting parameters step by step: - Language - testo Smart App		
Instrument on	Press  and hold down (> 2 s)	Instrument is switched off.



The instrument setup that is implemented can be adapted at any time in the **Settings** menu.

6.4 Setup wizard

When the **testo 570s** is started up for the first time and after the factory settings have been reset, the setup wizard is activated and guides you step-by-step through the following setup parameters.



The instrument setup that is implemented can be adapted at any time in the **Settings** menu.

Language selection and QR code

- ✓ Instrument is switched on and the initialization phase has been completed.

- 1 Select language: Press **[▲]** / **[▼]** and **[Menu/Enter]** to confirm.



Selecting the language activates the appropriate presetting of the units of measurement



- 2 Take a photo of the QR code of the testo Smart App and press **[Menu/Enter]** to confirm.



- The measurement menu is displayed.

7 Using the product

7.1 Preparing for measurement

7.1.1 Operating the valve positioners

With respect to the refrigerant path, the digital manifold behaves just like a conventional four-way manifold: The passages are opened by opening the valves. The applied pressure is measured with the valves closed and the valves opened.

- Open the valve: Turn valve positioner anticlockwise.
- Close the valve: Turn valve positioner clockwise.

WARNING

Valve positioner tightened too tightly.

- Damage to the PTFE seal (1).
- Mechanical deformation of the valve piston (2) leading to the PTFE seal (1) falling out.
- Damage to the thread of the threaded spindle (3) and the valve screw (4).

Broken valve knob (5).

Only tighten the valve positioner hand-tight.
Do not use any tools to tighten the valve positioners.



7.1.2 Automatic mode

The manifold automatically detects the pressure difference between the low-pressure and high-pressure sides. If the measured pressure on the low pressure side is 1 bar higher than on the high pressure side, a dialogue appears and the display can be changed accordingly. If “yes” is selected, the low pressure moves from left to right and the high pressure moves from right to left.

This mode is particularly suitable for air conditioning systems that provide cooling and heating.

7.2 Measuring mode

WARNING

Risk of injury caused by refrigerant that is under high pressure, hot, cold, or toxic!

- > Wear protective goggles and safety gloves.
- > Before applying pressure to the measuring instrument: Always fasten the measuring instrument on the suspension hook to prevent it from falling (danger of breakage).
- > Before each measurement, check the refrigerant hoses are intact and connected properly. Do not use any tools to connect the hoses; only tighten hoses hand-tight (max. torque 5.0 Nm/3.7 ft*lb).
- > Comply with the permissible measuring range (-1 to 60 bar/-14.7 to 870 psi). Pay particular attention to this in systems with R744 refrigerant, since these are frequently operated at higher pressures!

7.2.1 Refrigeration

The **Refrigeration** application is used to determine the following system measuring values:

- High pressure
- Low pressure
- Refrigerant evaporating temperature
- Refrigerant condensation temperature
- Temperature of suction line
- Temperature of liquid line
- Superheating
- Subcooling



An NTC temperature probe (accessory) must be connected for measuring the pipe temperature and for automatic calculation of superheating and subcooling.

These can be fixed cable temperature probes or Testo Smart Probes (e.g. **testo 115i**).



Before each measurement, check that the refrigerant hoses are in flawless condition.




Before each measurement, zero the pressure sensors. All connections must be pressureless (ambient pressure). Press the **[▲] (P=O)** key for 2 seconds to zero the sensors.

- ✓ The instrument is switched on and the measurement menu is displayed.
- ✓ All connections must be pressureless (ambient pressure).


1 Press **[Menu/Enter]** to confirm.

- The main menu is displayed.

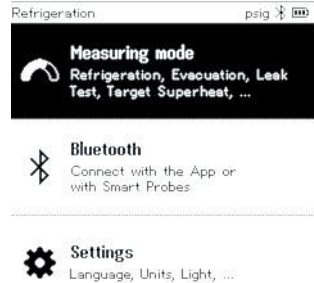


2 Press **[Menu/Enter]** to confirm.

3 Select **Refrigeration** and press **[Menu/Enter]** to confirm.

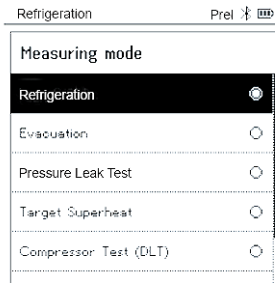


- The measurement menu is displayed.

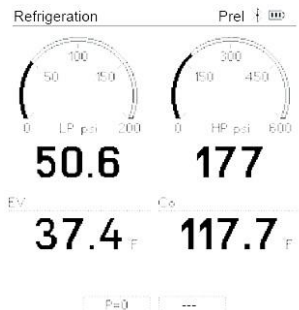


4 Connect the refrigerant hoses.

- 4.1 Close the valve positioners.
- 4.2 Connect the refrigerant hoses for low-pressure side (blue) and high-pressure side (red) to the measuring instrument.
- 4.3 Connect the refrigerant hoses to the system.
- 5 Connect **testo 115i** or fixed cable probes.
- 6 Set refrigerant.
- 6.1 Press the key [▼] (Rxx) (refrigerant number according to ISO 817).

- The refrigerant menu opens and the current refrigerant is highlighted.

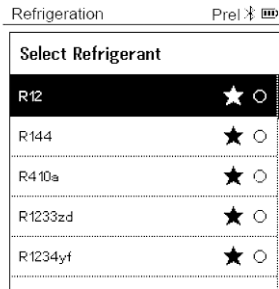

- 6.2 Setting the refrigerant: Press [▲] or [▼] to select the refrigerant and press [Menu/Enter] to confirm.

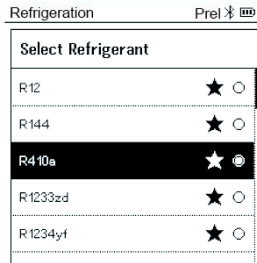


You have the option of setting up favourite refrigerants on your instrument and in the app. These then appear at the beginning of the refrigerant list.

To do this, the app must be connected to the instrument via Bluetooth. In the refrigerant list (App), you can now choose the refrigerant as a favourite by clicking on the star.

The new favourite refrigerant will now be synchronized to the **testo 570s**.

Note: During synchronization, the refrigerant list/selection on the instrument must remain closed.

- The newly set refrigerant is displayed in the refrigerant list.
- 7 Press the [**▲**] (**P=O**) key for 2 seconds to zero the sensors.
- Zeroing takes place.
- 8 Pressurize the measuring instrument.
- The measurement starts automatically.

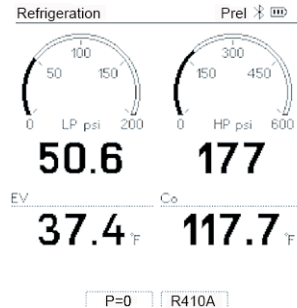

- Measurement results are displayed:
 - Low/high pressure
 - Condensation and evaporation temperature
 - Suction and liquid line temperature
 - Superheating and subcooling



With zeotropic refrigerants, the evaporation temperature to/Ev is displayed after complete evaporation/the condensation temperature tc/Co is displayed after complete condensation.

The measured temperature must be assigned to the superheating or subcooling side ($t_{oh} <--> t_{cu}$). Dependent on this assignment, the display will show $t_{oh}/T1$ resp. $\Delta t_{oh}/SH$ or $t_{cu}/T2$ resp. $\Delta t_{cu}/SC$, depending on the selected display.



Reading and display illumination flash:

- 1 bar/14.5 psi before reaching critical refrigerant pressure
- When max. permissible pressure of 60 bar/870 psi is exceeded.



All values can be saved and sent in the app. The data can also be transferred between the app and the testo DataControl software.

7.2.2 Evacuation

 
Via the **Evacuation** application, foreign gases and moisture can be removed from the refrigeration circuit.



The **testo 552i** is recommended for carrying out the measurement. The measurement is also possible without the **testo 552i**, with **testo 570s**. However, this is not advisable due to insufficient accuracy.

- ✓ The instrument is switched on and the measurement menu is displayed.
- ✓ **Bluetooth®** is enabled.
- ✓ Hoses are connected.


- 1 Press **[Menu/Enter]**.
- 2 Press **[▲] / [▼]** to select **Measuring Mode** and press **[Menu/Enter]** to confirm.



Bluetooth
Connect with the App or
with Smart Probes.

Settings
Language, Units, Light, ...

- The **Measuring Mode** menu is displayed.

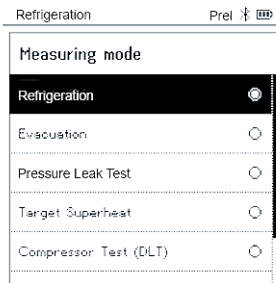

- 3 Press **[▲] / [▼]** to select **Evacuation** and press **[Menu/Enter]** to confirm.

- The **Configure Target Lines** menu is displayed.

Evacuation ⌘ UD

Configure Target Lines

Evacuation Target

550 micron Manual Input

Maximum Decay Target

650 micron Manual Input

OK

- 4 Adjust the **Target Line** value

- 4.1 Press the **[▲]** key and in the **Evacuation Target** field, select **Manual Input**.

- 4.2 Press **[Menu/Enter]** to confirm.

- The field is activated.

- 4.3 Press **[▲]** / **[▼]** to set the value.

- 4.4 Press **[Menu/Enter]** to confirm.

- 5 Adjust the **Maximum Decay Target** value.

- 5.1 Press the **[▼]** key and in the **Maximum Decay Target** field, select **Manual Input**.

Evacuation ⌘ UD

Configure Target Lines

Evacuation Target

550 micron Manual Input


Maximum Decay Target

650 micron Manual Input

OK

- 5.2 Press **[Menu/Enter]** to confirm.

- The field is activated.

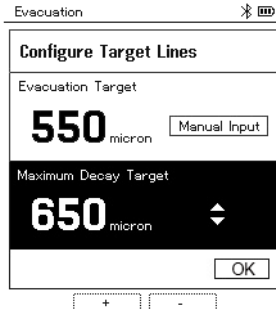

5.3 Press [**▲**] / [**▼**] to set the value.


5.4 Press [**Menu/Enter**] to confirm.

- 6 Confirm the entries in steps 4 and 5:
Press [**▼**] to select **OK** and press [**Menu/Enter**] to confirm.

- A connection is established with available Bluetooth® probes.


- **testo 552i** is switched on and connected automatically.

- The **Evacuation** measurement menu is displayed.

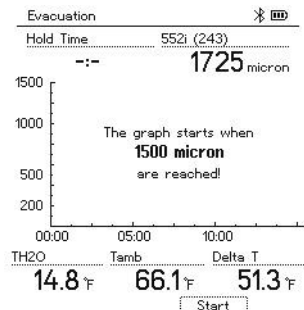

- 7 Start measurement: Press the [**▼**] (**Start**) key.

- Once the measuring range 0 to 20,000 microns / 0 to 26.66 mbar is reached, the current vacuum value is shown on the instrument display. The instrument also displays the current ambient temperature, the water evaporation temperature which corresponds to the vacuum reading, and the delta between these two temperatures.

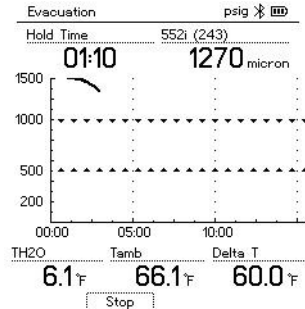

- 8 End measurement: Press the [▼] (Stop) key.
- The measurement result is displayed.



Press the [▲] New key to reset the determined values. If necessary, a test can also be started again.

- 9 Press [Menu/Enter] to return to the main menu.

7.2.3 Pressure Leak Test

The temperature compensated leakage test can be used to check the leak tightness of systems. For this purpose both the system pressure and the ambient temperature are measured over a defined period of time.



To this end, a temperature probe that measures the ambient temperature or a Smart Probe for measuring the air temperature can be connected. As a result, information is provided about the temperature-compensated differential pressure and about the temperature at the beginning/end of the test. Due to the temperature compensation, the actual pressure drop is displayed as delta P. If no temperature probe is connected, you may also perform the tightness test without temperature compensation.



Surface temperature probes (e.g. **testo 115i**) can also be used for the temperature-compensated leakage testing, but must not be used to measure surface temperature. They must be positioned as far as possible to measure the air temperature. If a surface probe is used, in the **Settings** menu of the **testo 570s**, the **Auto Tfac (Temperature compensation factor)** must be switched off, see section 8.3.4.

 


The **testo 570s** manifold is used to carry out the measurement.

- ✓ The instrument is switched on and the measurement menu is displayed.
- ✓ Hoses are connected.

1 Press [Menu/Enter].


2 Press [▲] / [▼] to select **Measuring Mode** and press [Menu/Enter] to confirm.




 **Bluetooth**
Connect with the App or with Smart Probes

 **Settings**
Language, Units, Light, ...

- The **Measuring Mode** menu is displayed.

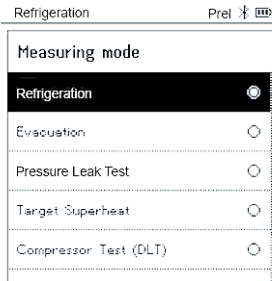

3 Press [▲] / [▼] to select **Pressure Leak Test** and press [Menu/Enter] to confirm.

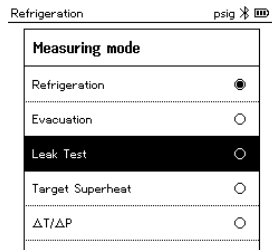


- For the temperature-compensated leak test, a connection is established with available Bluetooth® probes. If cable probes are connected to the instrument, they are prioritized for the compensation. Please note that only air probes are ideal for temperature-compensated leakage testing.

- **testo 905i / testo 605i** is switched on and automatically connected. Other temperature probes compatible with **testo 570s** can be connected.
- The **Pressure Leak Test** menu is displayed.



T Comp is shown on the display if a compatible probe is connected via Bluetooth® or cable. The temperature compensation is used for the measurement result.

- 4 Press the **[▼] (Start)** key.
- The leakage test is carried out.
- 5 Press the **[▼] (Stop)** key.
- The leakage test is terminated.
 - The measurement result is displayed.

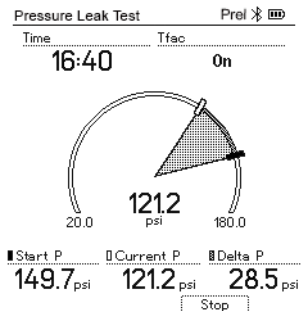

Press the **[▲] New** key to reset the determined values. If necessary, a test can also be started again.



The measurement result can be displayed graphically on the manifold as well as in the app.

- 6 Press **[Menu/Enter]** to return to the main menu.

7.2.4 Target Superheat

This feature makes it possible to connect the **testo 570s** manifold to two additional **testo 605i** Smart Probes in order to calculate the target superheat. This application can only be used for split air conditioning systems/heat pumps with a fixed expansion valve. The two connected **testo 605i** Smart Probes determine the **ODDB** and **RAWB** values. The target superheat value appears on the display as a result.



The following are used for the measurement:

- **testo 115i** (clamp thermometer) or
- fixed cable probes
- **testo 605i**

in practice.



Alternatively, the values can be configured manually.




Before each measurement, check that the refrigerant hoses are in flawless condition.




Before each measurement, zero the pressure sensors.

- ✓ The instrument is switched on and the measurement menu is displayed.
- ✓ All connections must be pressureless (ambient pressure).
- ✓ **Bluetooth®** is enabled.

- 1 Press **[Menu/Enter]**.
- 2 Press **[▲] / [▼]** to select **Measuring Mode** and press **[Menu/Enter]** to confirm.

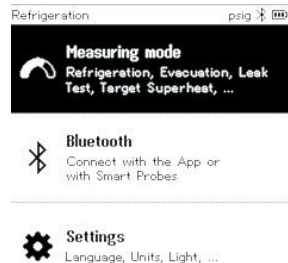


- The **Measuring Mode** menu is displayed.

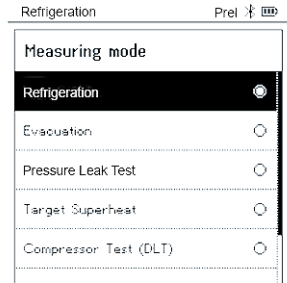

- 3 Press **[▲]** / **[▼]** to select **Target Superheat** and press **[Menu/Enter]** to confirm.

- The **Configure Target Superheat** menu is displayed.

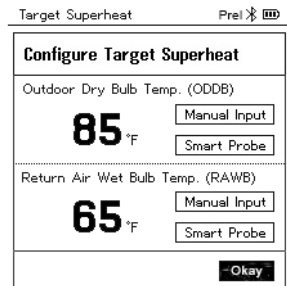

The values can either be configured manually via **Manual Input** or recorded by the **testo 605i** via **Smart Probe**. When a **Smart Probe** is selected, available **testo 650i** instruments are displayed for the connection.

- 4 Adjust values for **Outdoor Dry Bulb Temp.**
 - 4.1 Press the **[▲]** key and in the **Outdoor Dry Bulb Temp.** field, select **Manual Input**.
 - 4.2 Press **[Menu/Enter]** to confirm.
 - The field is activated.
 - 4.3 Press **[▲]** / **[▼]** to set the value.
 - 4.4 Press **[Menu/Enter]** to confirm.
- 5 Adjust the **Return Air Wet Bulb Temp.** value

- 5.1 Press the **[▲] / [▼]** key and in the **Return Air Wet Bulb Temp.** field, select **Manual Input**.

Target Superheat Prel 

Configure Target Superheat

Outdoor Dry Bulb Temp. (ODDB)

85 °F Manual Input Smart Probe

Return Air Wet Bulb Temp. (RAWB)

65 °F Manual Input Smart Probe

Okay

- 5.2 Press **[Menu/Enter]** to confirm.

- The field is activated.

Target Superheat Prel 

Configure Target Superheat

Outdoor Dry Bulb Temp. (ODDB)

85 °F Manual Input Smart Probe

Return Air Wet Bulb Temp. (RAWB)

65 °F ▲ ▼

Okay

+ -

- 5.3 Press **[▲] / [▼]** to set the value.

- 5.4 Press **[Menu/Enter]** to confirm.

- 6 Confirm the entries in steps 4 and 5:
Press **[▼]** to select **Okay** and press **[Menu/Enter]** to confirm.

- The **Target Superheat** measurement menu is displayed.

Target Superheat psig 

EV **74** NO bar 200 CO **18.6** HD bar 600

1.5 °C **31.4** °C

T1 (302) **8.5** °C T2 (213) **23.5** °C

SH **6.9** K TSH **5.0** °C SC **7.9** K


P=0 R12

- 7 Connect the refrigerant hoses.


- 7.1 Close the valve positioners.

- 7.2 Connect the refrigerant hoses for low-pressure side (blue) and high-pressure side (red) to the measuring instrument.
- 7.3 Connect the refrigerant hoses to the system.
- 8 Connect **testo 115i**/fixed cable probes.
- 9 Set refrigerant.
- 9.1 Press the key [▼] (Rxx) (refrigerant number according to ISO 817).

- The refrigerant menu opens and the current refrigerant is highlighted.

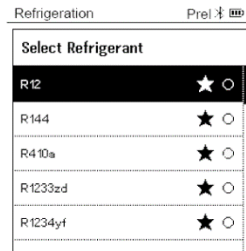

- 9.2 Setting the refrigerant: Press [▲] or [▼] to select the refrigerant and press [Menu/Enter] to confirm.

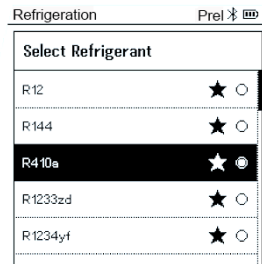

- The newly set refrigerant is displayed in the refrigerant list.
- 10 Press the [▲] (P=O) key for 2 seconds to zero the sensors.
 - Zeroing takes place.
 - 11 Pressurize the measuring instrument.
 - The measurement starts automatically.
 - Measurement results are displayed:
 - Low/high pressure
 - Condensation and evaporation temperature
 - Suction and liquid line temperature

- Superheating and subcooling
- Target superheat TSH

7.2.5 Compressor Test (DLT)

For this mode, 3 temperature probes are used. In addition to the conventional temperature sensors for superheating and subcooling, an additional temperature probe must be connected via Bluetooth.



The testo 115i (clamp thermometer) or fixed cable probes are used to carry out the measurement.



Before each measurement, check that the refrigerant hoses are in flawless condition.



Before each measurement, zero the pressure sensors.



The instrument is switched on and the measurement menu is displayed.

1


Press **[Menu/Enter]**.

2

Press **[▲] / [▼]** to select **Measuring Mode** and press **[Menu/Enter]** to confirm.

-


The **Measuring Mode** menu is displayed.

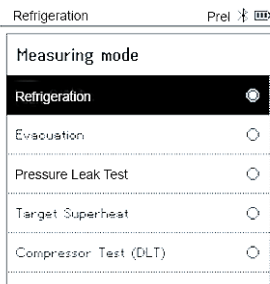

- 3 Press [▲] / [▼] to select **Compressor Test (DLT)** and press [Menu/Enter] to confirm.


- ▶ The measurement menu is displayed.

The DLT temperature is shown on the display.

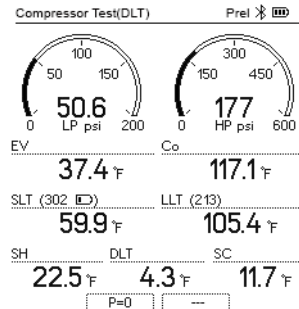


- 4 Connect the refrigerant hoses.
- 4.1 Close the valve positioners.
- 4.2 Connect the refrigerant hoses for low-pressure side (blue) and high-pressure side (red) to the measuring instrument.
- 4.3 Connect the refrigerant hoses to the system.
- 5 Connect 2 x **testo 115i** or 2 x fixed cable probes and third temperature probe to the compressor outlet.
- 6 Set refrigerant.
- 6.1 Press the key [▼] (Rxx) (refrigerant number according to ISO 817).

- The refrigerant menu opens and the current refrigerant is highlighted.

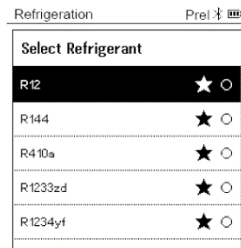

- 6.2 Setting the refrigerant: Press [▲] or [▼] to select the refrigerant and press [Menu/Enter] to confirm.

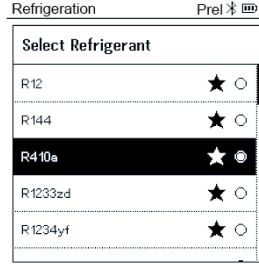

- The newly set refrigerant is displayed in the refrigerant list.
- 7 Press the [▲] (P=O) key for 2 seconds to carry out zeroing.
- Zeroing takes place.
- 8 Pressurize the measuring instrument.
- The measurement starts automatically.
 - The measurement result is displayed.
- 9 Press [Menu/Enter] to return to the main menu.

7.2.6 Delta T


Temperature 1 and temperature 2 are measured. The difference is shown on the display as the delta temperature.




Two **testo 115i** (clamp thermometers) or fixed cable probes are used to carry out the measurement.

- ✓ The instrument is switched on and the measurement menu is displayed.
 - ✓ The steps described in the **Preparing for measurement** section have been followed/carried out.
 - ✓ **testo 115i** is switched on.
- 1 Place the **testo 115i** at the measuring points.
- 2 Press [Menu/Enter].

- 3 Press **[▲]** / **[▼]** to select **Measuring Mode** and press **[Menu/Enter]** to confirm.

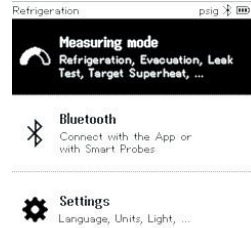


- The **Measuring Mode** menu is displayed.

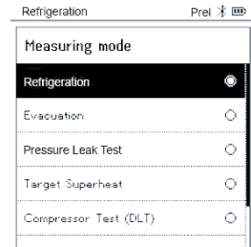

- 4 Press **[▲]** / **[▼]** to select **Delta T** and press **[Menu/Enter]** to confirm.

- The measurement result is displayed.

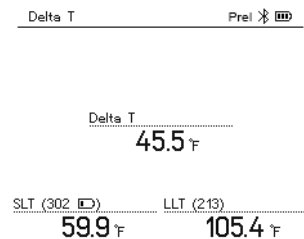

- 5 Press **[Menu/Enter]** to return to the main menu.

7.3 Performing long time measurement

With its integrated logging function the device can be left on the system and logging can be done without being on site.

This allows an intelligent error analysis in the testo Smart App.

The logging is possible for following applications:

- Refrigeration
- Evacuation
- Pressure leak test
- Compressor test




The logging can only be started, stopped and saved from the connected testo Smart App.



While the device is in logging mode, all functions are blocked.

Only the live view is available, which means the current values are shown in the screen like usual. For example in refrigeration mode all 8 measured values are shown.

When pressing any button a corresponding information message is shown.

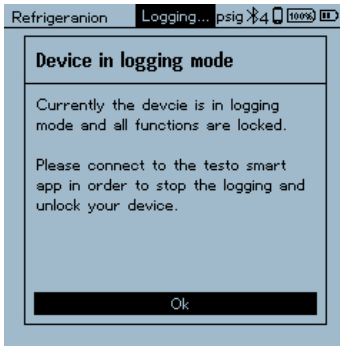

7.4 Bluetooth

The **testo 570s** has the option of establishing a Bluetooth® connection with wireless probes as well as a connection to the testo Smart App at the same time.



If the **testo 570s** is used with Smart Probes, they must be at least 20 cm apart.

7.4.1 Probes compatible with the instrument

Smart Probes

Order no.	Designation
0560 2115 02	testo 115i – clamp thermometer with smartphone operation
0560 2605 02	testo 605i – thermohygrometer with smartphone operation
0564 2552 01	testo 552i – vacuum Smart Probe
0560 1905	testo 905i – temperature probe with smartphone operation

NTC probes

Order no.	Designation
0613 1712	Robust air temperature probe (NTC)
0613 5505	Clamp probe (NTC) for temperature measurements on pipes (Ø 6-35 mm), 1.5 m fixed cable
0613 5506	Clamp probe (NTC) for temperature measurements on pipes (Ø 6-35 mm), 5 m fixed cable
0613 5507	2 x clamp probes (NTC) for temperature measurements on pipes (Ø 6-35 mm), 1.5 m fixed cable
0613 4611	Temperature probe with Velcro (NTC)
0613 5605	Pipe wrap probe (NTC), measuring range: -50 to +120 °C
0613 1912	Waterproof surface temperature probe (NTC) for flat surfaces, measuring range: -50 to +150 °C

7.4.2 Establishing a connection



To establish a connection via Bluetooth®, you need a tablet or smartphone with the Testo Smart App installed on it.

You can get the App for iOS instruments in the App Store or for Android instruments in the Play Store.

Compatibility:

Requires iOS 13.0 or later/Android 8.0 or later, requires Bluetooth® 4.0.



Once the connection between the app and the Testo manifold has been successfully established, the app is in second screen mode. This is indicated by a yellow frame in the app.


This means that all measurement data from the manifold is being mirrored on the app. The measurement can now be controlled from both instruments. It is possible to carry out the following actions:

- Start measurement
- Stop measurement
- Reset measurement
- Configure measurement
- Select refrigerant


7.4.3 Switching on/off

- ✓ The instrument is switched on and the measurement menu is displayed.

- 1 Press **[Menu/Enter]**.
- 2 Press **[▲] / [▼]** to select **Bluetooth:** and press **[Menu/Enter]** to confirm.

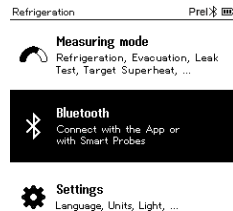

- The **Bluetooth** menu is displayed.

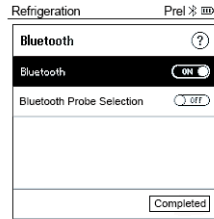


7.4.3.1 Switching on

- ✓ The Bluetooth menu is selected.

1 [Menu/Enter]

- In the On/Off switch icon,  is displayed.
- 2 Enable Bluetooth®: Press [▼] to activate the **[Completed]** button and press **[Menu/Enter]** to confirm.

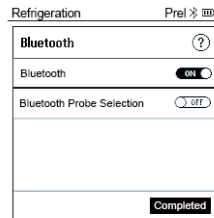

- When the Bluetooth® icon is shown on the display, Bluetooth is switched on.
- Bluetooth® automatically searches for and connects available probes.
- After opening the App, the instrument is automatically connected if it is within range. The instrument does not have to be connected to the smartphone/tablet via settings beforehand.

7.4.3.2 Switching off


- ✓ The Bluetooth® menu is activated.

1 [Menu/Enter]

- In the On/Off switch icon,  is displayed.



- 3 Disable Bluetooth®: Press [▼] to activate the [Completed] button and press [Menu/Enter] to confirm.

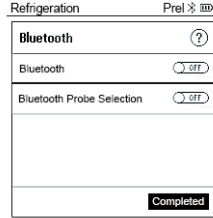

- When the Bluetooth® icon is not shown on the display, Bluetooth® is switched off.

7.4.3.3 Manual probe selection

If this menu is activated, it appears before a measurement.

- ✓ The Bluetooth® menu is activated (in the On/Off switch icon,  is displayed).

- 1 Press [▼] to select **Manual probe selection**.

Enable function: Via [Menu/Enter], set the switch to [ON].



An info window with the available probes appears before each measurement to be carried out. The information must be confirmed by pressing [Menu/Enter]/[Okay].

Disable function: Via [Menu/Enter], set the switch to [OFF].



If the advanced Bluetooth® settings are switched off, the instrument automatically connects to the first compatible Smart Probe.

- 2 Press [▼] to click on the [Completed] button and press [Menu/Enter] to confirm.



In the **Bluetooth®** menu  you will obtain further information.

Display	Explanation
 flashes	There is no Bluetooth® connection, or a potential connection is being searched for.
 is permanently displayed	There is a Bluetooth® connection, the number of connected Bluetooth® probes is displayed next to it.
 is not displayed	Bluetooth® is disabled.

7.5 Settings

- ✓ The instrument is switched on and the measurement menu is displayed.

1 Press [Menu/Enter].

2 Select **Settings**: Press [▼] and then [Menu/Enter] to confirm.

Refrigeration Prel 



Measuring mode

Main Screen, Evacuation, System
Leak Test, Target Superheat, ...



Bluetooth

Connect with the App or
with Smart Probes



Settings

Language, Units, Light, ...

- The **Settings** menu is displayed.

Available settings:


- Backlight duration
- Backlight brightness
- Auto Off
- Auto Tfac (Temperature compensation factor)
- Units
- Language
- Setup Wizard
- Restore factory settings
- Instrument information

7.5.1 Backlight duration

Set the backlight duration for the display.


- ✓ The **Settings** menu is activated.

- 1 Press **[▲] / [▼]** to select **Backlight duration** and press **[Menu/Enter]** to confirm.

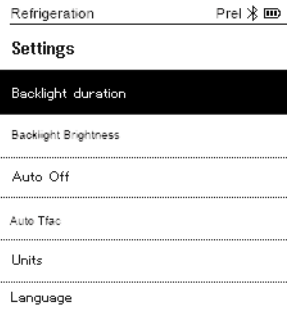

- Menu properties are displayed.

- 2 Press **[▲] / [▼]** to select the backlight duration and press **[Menu/Enter]** to confirm.

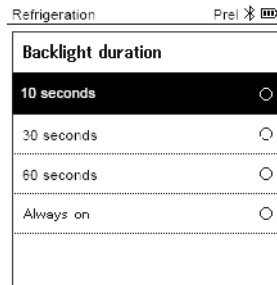


- 3 Press **[ESC]**: 1x main menu view, 2 x measurement menu view.

7.5.2 Backlight brightness

Set the brightness for the display.


- ✓ The **Settings** menu is activated.

- 1 Press **[▲]** / **[▼]** to select **Backlight brightness** and press **[Menu/Enter]** to confirm.

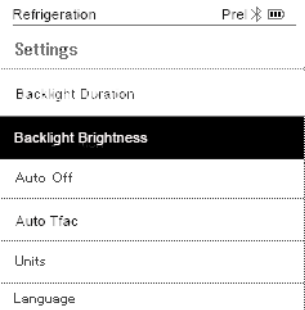

- Menu properties are displayed.

- 2 Press **[▲]** / **[▼]** to select the brightness value (25%, 50%, 75%, 100%) and press **[Menu/Enter]** to confirm.

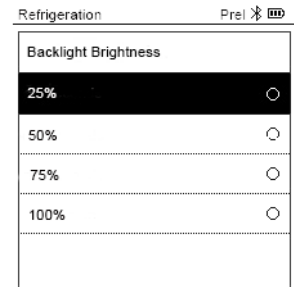


- 3 Press **[ESC]**: 1x main menu view, 2 x measurement menu view.

7.5.3 Auto Off

You can manage the energy consumption for your instrument yourself.

- ✓ The **Settings** menu is activated.

- 1 Press **[▲]** / **[▼]** to select **[Auto OFF]** and press **[Menu/Enter]** to confirm.

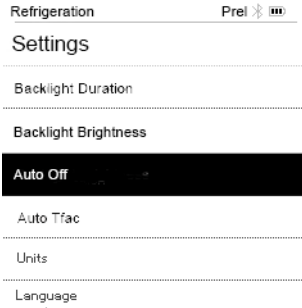


- Menu properties are displayed.

- 2 Select using **[▲]** / **[▼]**
 - On: The instrument automatically switches off after 30 minutes of inactivity.



The instrument switches off automatically if no pressure is measured and no key was pressed within 10 minutes. As long as pressure is present, the instrument remains on.

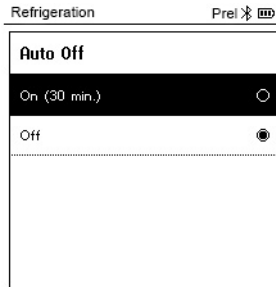

- Off: Continuous operation

- 3 Press **[Menu/Enter]** to confirm selection.

- 4 Press **[ESC]**: 1x main menu view, 2 x measurement menu view



Unsaved readings are lost when the measuring instrument is switched off.

7.5.4 Auto Tfac (Temperature compensation factor)

A surface compensation factor has been set in the measuring instrument to reduce the measuring errors in the main field of applications. This reduces measuring errors when using surface temperature probes.




Surface temperature probe

An NTC temperature probe (accessory) must be connected for measuring the pipe temperature and for automatic calculation of superheating and subcooling.

✓ The **Settings** menu is activated.

1 Select **Auto Tfac** and press **[Menu/Enter]** to confirm.

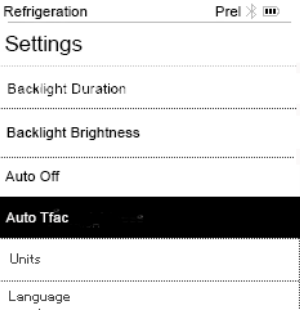

- Menu properties are displayed.

2 Press **[▲]** / **[▼]** to select **On/Off** and press **[Menu/Enter]** to confirm.




Press **[▲]** / **[▼]** to select the question mark icon and **[Menu/Enter]** to open. You will obtain further information on temperature compensation.

3 Press **[ESC]**: 1x main menu view, 2 x measurement menu view

7.5.5 Units

- ✓ The **Settings** menu is activated.
- 1 Press [**▲**] / [**▼**] to select [**Units**] and press [**Menu/Enter**] to confirm.
- Menu properties are displayed.

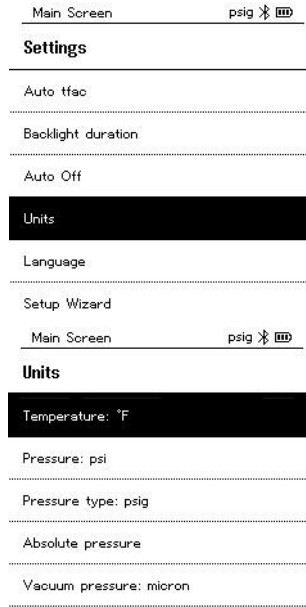

Adjustable units

Measurement parameter	Unit	Description
Temperature	°C, °F	Set unit for temperature.
Pressure	psi, kPa, MPa, bar	Set unit for pressure.
Pressure mode	Prel, Pabs	Depending on the chosen unit for pressure: Change between absolute and relative pressure displays.
Absolute pressure	bar (Pabs)	Set the current absolute pressure (current air pressure values for your region can be obtained, for example, from the local weather service or on the Internet).

Measurement parameter	Unit	Description
Vacuum pressure	Micron, mbar, Torr, mTorr inH2O, in Hg, hPa, Pa	

- 3 Press **[ESC]**: 1 x **Units** menu, 2 x main menu view, 3 x measurement menu view.

7.5.6 Language

- ✓ The **Settings** menu is activated.

- 1 Press **[▲]** / **[▼]** to select **[Language]** and press **[Menu/Enter]** to confirm.



- Menu properties are displayed.

- 2 Select language: Press **[▲]** / **[▼]** and **[Menu/Enter]** to confirm.



Selecting the language activates the appropriate presetting of the units of measurement.




- 3 Press **[ESC]**: 1 x **Units** menu, 2 x main menu view, 3 x measurement menu view.

7.5.7 Setup Wizard

- ✓ The **Settings** menu is activated.

- 1 Press [**▲**] / [**▼**] to select [**Setup Wizard**] and press [**Menu/Enter**] to confirm.

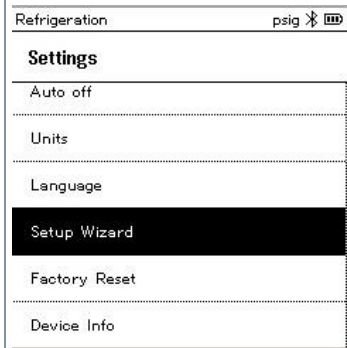

- Language selection opens.

- 2 Press [**▲**] / [**▼**] to select the language.



- The units for the respective country are set automatically.


- Barcode is displayed and the app can be downloaded from the respective app store.




7.5.8 Restore factory settings

The instrument is reset to the factory settings.

- ✓ The **Settings** menu is activated.
- 1 Press **[▲]** / **[▼]** to select **[Factory Reset]** and press **[Menu/Enter]** to confirm.
- Menu properties are displayed.
- 2 Start **[Factory Reset]**: Press **[▲]** / **[▼]** to select **[Do a factory reset]** and press **[Menu/ESC]** to confirm.
 Press **[Back]** to quit the process.

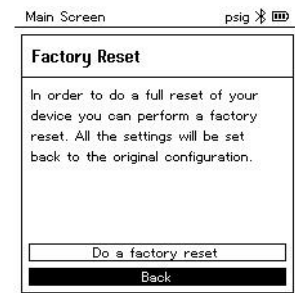


- **[Factory Reset]** is carried out.
- 3 See **Setup Wizard**.

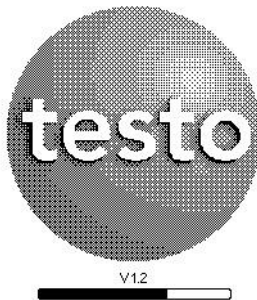

7.5.9 Device Info

- ✓ The **Settings** menu is activated.

- 1 Press [**▲**] / [**▼**] to select [**Device Info**] and press [**Menu/Enter**] to confirm.

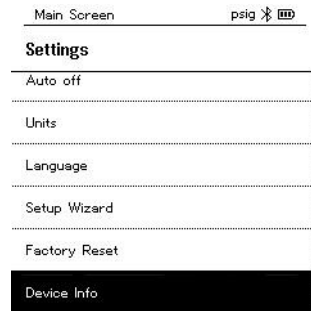

- The **Versions Info** menu is displayed.


The following information can be viewed:

- Serial number
- Firmware version
- Refrigerant version
- BLE (Bluetooth Low Energy) version

- 2 Press [**ESC**]: 1 x **Units** menu, 2 x main menu view, 3 x measurement menu view.

8 Smart App

8.1 App – user interface

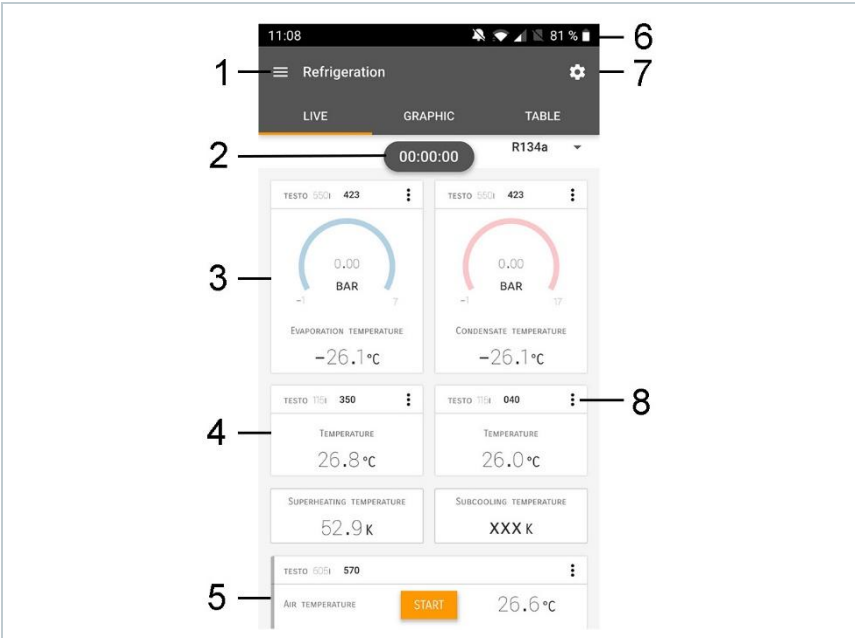


1		Open main menu
2		Display of the measurement period
3		Display of calculated measurement results
4		Reading for each probe
5		Can be controlled with different function keys
6		Instrument status bar
7		Configuration
8		Edit reading display

Further symbols on the user interface (without numbering)

	One level back
	Exit view
	Share report
	Search
	Favourite
	Delete
	Further information
	Display report
	Multiple selection

8.2 Main menu

The **Main menu** can be accessed via the  icon at top left. To exit the main menu, select a menu or right-click on the guided menus. The last screen displayed is shown.

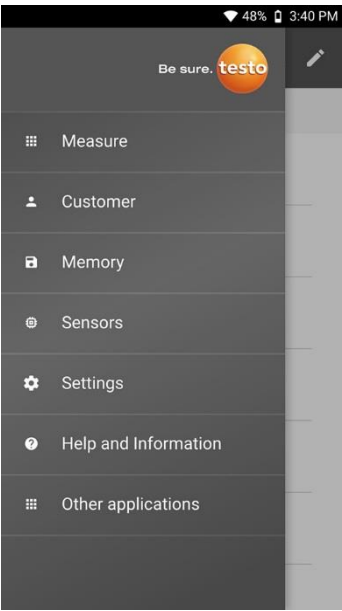	Measure	
	Customer	
	Memory	
	Sensors	
	Settings	
	Help and Information	


Additional icons:

	One level back		Deleting
	Exit view		Further information
	Share measurement data/reports		Display report
	Search		Edit
	Favourite		

8.3 Measurement menu

The testo 570s has permanently installed measurement programs. These enable the user to carry out convenient configuration and implementation of specific measuring tasks.

The testo 570s offers the following **Measurement menus**:

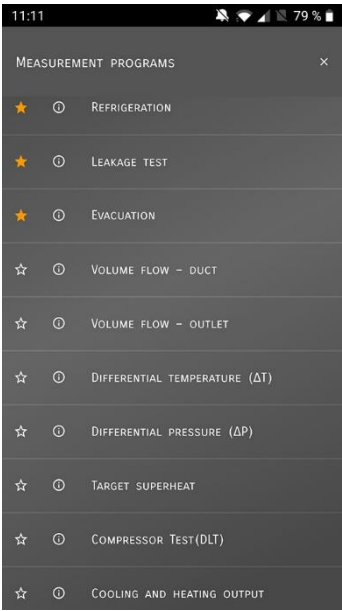Basic view	
Volume flow – duct	
Volume flow – outlet	
Differential temperature (ΔT)	
Differential pressure (ΔP)	
Refrigeration	
Target superheat	
Cooling and heating output	
Leakage test	
Evacuation	

8.3.1 Basic view

In the **Basic view** application menu, the current measuring values can be read, recorded and saved. The Basic view is particularly suitable for fast, uncomplicated measurements without the specific requirements of a standard-compliant measurement.


All Bluetooth® probes compatible with the testo Smart App are displayed in the **Basic view** angezeigt.

In all application menus, apart from the volume flow measurement, there are three different screens for the measurement - Live (or also Basic view), Graphic and Table.

8.3.1.1 Graphic view

In the Graphic view, the values for a maximum 4 channels can be displayed simultaneously in a chronological trend graph. All measured parameters can be displayed in the Graphic view via the channel selection (click on one of the four selection fields). Once a measurement parameter has been selected, the value is updated automatically.

The Zoom touch function allows individual parts of the graphic to be viewed in more detail or time progressions to be displayed compactly.

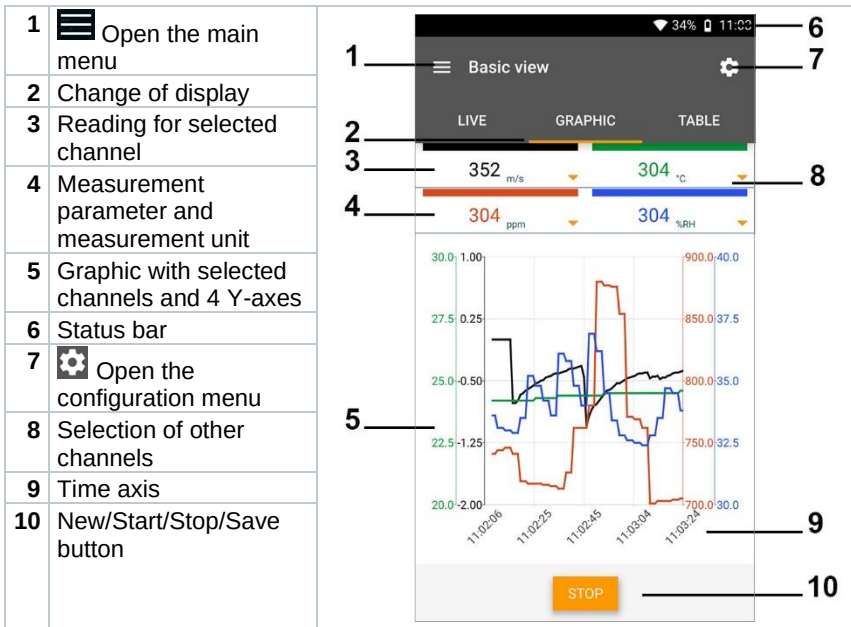

8.3.1.2 Table view

1  Open the main menu

2 Change of display

3 Column with date and time

4 Arrow keys to go directly to the end of the table


5 Status bar

6  Open the configuration menu

7 Probe ID - measurement unit

8 Measuring values

9 New/Start/Stop/Save button

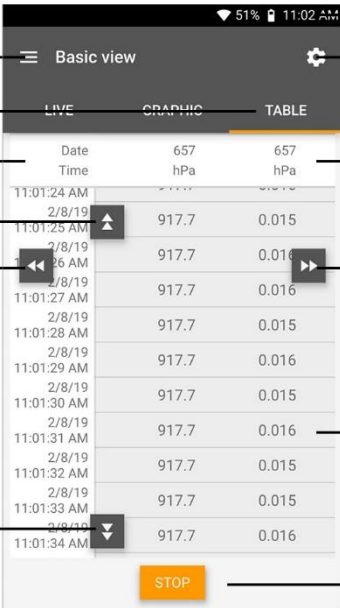

5

6

7

8

9

8.3.2 Refrigeration

The **Refrigeration** application is used to determine the following system measuring values:

- Low-pressure side: Evaporation pressure, refrigerant evaporation temperature t_o/E_v (T evap.)
- Evaporation pressure: Measured temperature $t_{oh}/T1$
- Evaporation pressure: Superheating $\Delta t_{oh}/SH$
- High-pressure side: Condensation pressure, refrigerant condensation temperature t_c/Co (T condens.)
- Condensation pressure: Measured temperature $t_{cu}/T2$
- Condensation pressure: Subcooling $\Delta t_{cu}/SC$

With its integrated logging function the device can be left on the system and logging can be done without being on site.

This allows an intelligent error analysis in the testo Smart App.



The testo 115i clamp thermometer is used for the measurement.



An NTC temperature sensor (accessory) must be connected for measuring the pipe temperature and for automatic calculation of superheating and subcooling. Testo Smart Probes (e.g. testo 115i) can be used.



Before each measurement, check that the refrigerant hoses are in flawless condition.



Before each measurement, zero the pressure sensors. All connections must be pressureless (ambient pressure). Press the button [▲] (P=O) for 2 seconds to zero the sensors.

1



Click on **Measure**.

2

Click on **AC + Refrigeration**.



The Refrigeration measurement menu opens.

3

Set refrigerant.



You have the option of setting up favourite refrigerants in the App. These then appear at the beginning of the refrigerant list. To do this, click on the asterisk next to the refrigerant in the refrigerant list (App).



The newly set refrigerant is displayed in the refrigerant list.

4


Click on .



Configuration menu opens.

5 Make the required settings.


To start a log-term measurement, activate the option **Long-term measurement with testo 570s**.

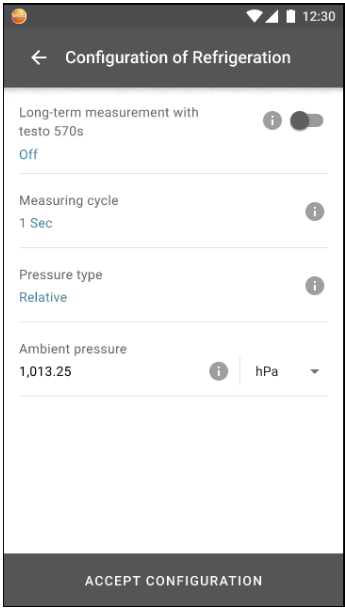

6 In case of **Automatic** start of long-term measurement, select **Start date** and **Start** (time).



For start type **Manual** the long-term measurement can be started via **Start long-term measurement** after closing the configuration menu.

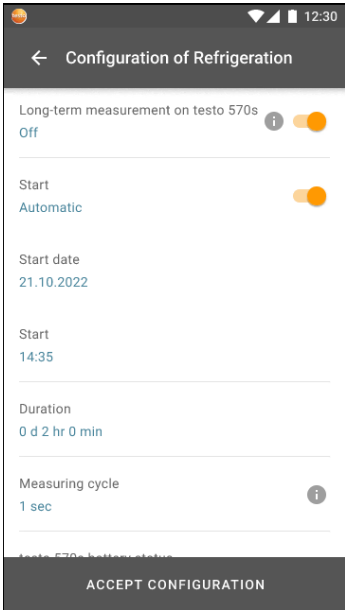

- If the long-term measurement option is enabled, the configuration menu shows the remaining battery and rechargeable battery capacity and the maximum possible duration of the long-term measurement.

testo 570s battery status
 Internal battery: 80%
 Rechargeable battery: 15%
 Estimated maximum runtime for a long-term measurement: 64 hr 45 min

- 7 Click on **Apply Configuration**.


- 8 Depending on whether immediate measurement or long-term measurement should be started:

- Click on **Start**.
- Click on **Start long-term measurement**.

- The measurement resp. long-term measurement starts.

In case of automatically started long-term measurement, the display shows after which duration the measurement will be started.

- Values currently being measured are displayed.

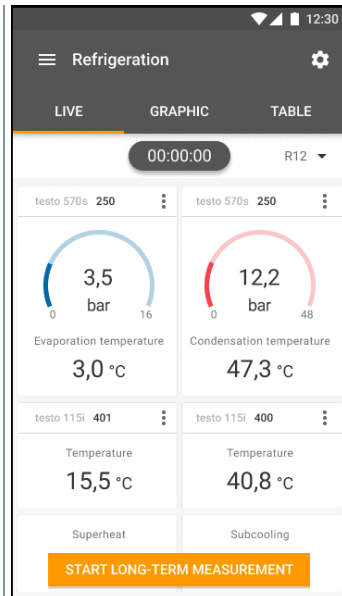

- Measured values can be saved or a new measurement can be started.



With zeotropic refrigerants, the evaporation temperature t_{oh} /Ev is displayed after complete evaporation/the condensation temperature t_{c}/Co is displayed after complete condensation.

The measured temperature must be assigned to the superheating or subcooling side ($t_{\text{oh}} <--> t_{\text{cu}}$). Dependent on this assignment, the display will show $t_{\text{oh}}/T1$ resp. $\Delta t_{\text{oh}}/SH$ or $t_{\text{cu}}/T2$ resp. $\Delta t_{\text{cu}}/SC$, depending on the selected display.




Reading and display illumination flash:

- 1 bar/14.5 psi before reaching critical refrigerant pressure
- When max. permissible pressure of 60 bar(870 psi) is exceeded.

▶ After completing a long-term measurement the following options are available:

- **Save summarised data:** only summarized data will be saved.
- **Transfer & save complete data:** all recorded measurement results are transferred and saved in the app.
- **Delete data on manifold:** the recorded measurement results on the device will be deleted without transferring them to the app.

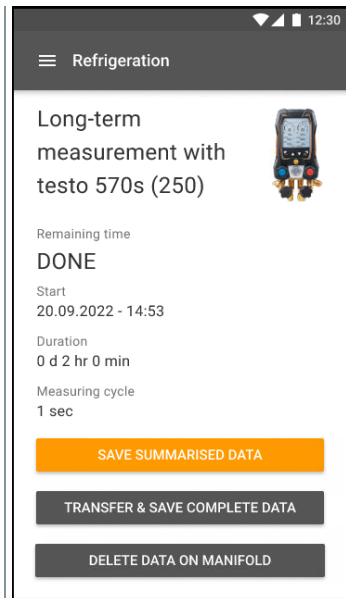

8.3.3 Target superheat

This feature allows the manifold to calculate the target superheat in conjunction with the App and additional testo 605i Smart Probes. This application can only be used for split air conditioning systems/heat pumps with a fixed expansion valve. The two connected testo 605i Smart Probes determine the ODDB and RAWB values. As a result, the target superheat appears in the App.



The following are used for the measurement:

- testo 115i (clamp thermometer)
- testo 605i



Before each measurement, check that the refrigerant hoses are in flawless condition.



Before each measurement, zero the pressure sensors.

- 1 Click on **Measure**.
- 2 Click on **Target superheat**.
- ▶ The Target superheat measurement menu opens.
- 3 Click on .
- ▶ Configuration menu opens.
- 4 Make the required settings.

11:15 78%

← Configuration of target superheat

OUTDOOR DRY BULB TEMPERATURE (ODDB) ⓘ MANUAL INPUT

TESTO 605i
83011570

RETURN AIR WET BULB TEMPERATURE (RAWB) ⓘ MANUAL INPUT

TESTO 605i
83011570

PRESSURE TYPE ⓘ

RELATIVE


AMBIENT PRESSURE ⓘ BAR ▾

1.01300

APPLY CONFIGURATION

- 5 Click on **Apply Configuration**.

6 Set refrigerant.

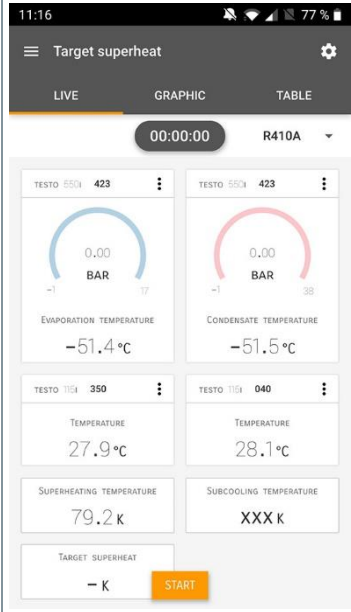

▶ The newly set refrigerant is displayed in the refrigerant list.

7 Click on **Start**.

▶ The measurement starts.

▶ Values currently being measured are displayed.

▶ Measured values can be saved or a new measurement can be started.

8.3.4 System Leak Test

The temperature compensated leakage test can be used to check the leak tightness of systems. For this purpose both the system pressure and the ambient temperature are measured over a defined period of time.



To this end, a temperature probe may be connected to measure the ambient temperature (recommendation: Deactivate the surface compensation factor and use an NTC air probe or Bluetooth® temperature Smart Probes) or Smart Probe for air temperature measurement. This provides information about the temperature-compensated differential pressure and the temperature at the beginning/end of the test. Due to the temperature compensation, the actual pressure drop is displayed as delta P. If no temperature probe is

connected, you may also perform the tightness test without temperature compensation.




Surface temperature probes (e.g. testo 115i) can also be used for the temperature-compensated leakage test, but must not be used for measuring surface temperature. They must be positioned as far as possible to measure the air temperature.




The 550i, 550s, 557s or 570s manifold is used to perform the measurement.

- 1 Click on **Measure**.
- 2 Click on **Leakage test**.
- ▶ The **Leakage test** measurement menu opens.
- 3 Click on .
- ▶ Configuration menu opens.
- 4 Make the required settings.

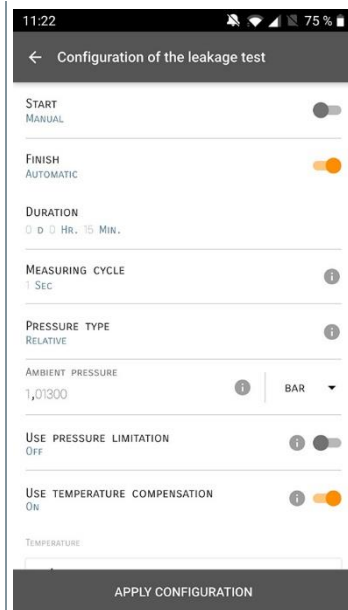

- 5 Click on **Apply Configuration**.

- 6 Click on **Start**.
- ▶ The measurement starts.
- ▶ Values currently being measured are displayed.

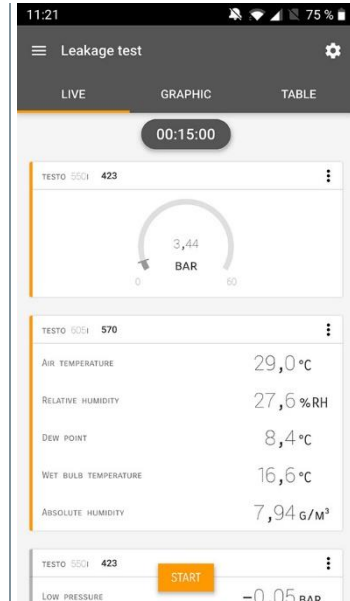

- ▶ Measured values are saved. The values can be exported or a report can be created.

8.3.5 Evacuation

With the Evacuation application, foreign gases and moisture can be removed from the refrigeration circuit.

- 1  Click on **Measure**.
- 2 Click on **Evacuation**.
- ▶ The **Evacuation** measurement menu opens.
- 3 Click on .
- ▶ Configuration menu opens.

4 Make the required settings.

11:23 74 %

← Configuration of the evacuation process

START
MANUAL

FINISH
MANUAL

MEASURING CYCLE
1 SEC

PRESSURE TYPE
ABSOLUTE

AMBIENT PRESSURE
1,013,00 MBAR

AMBIENT TEMPERATURE
MANUAL INPUT
20,0 °C

EVACUATION TARGET
ON

EVACUATION TARGET
1,600 MBAR


APPLY CONFIGURATION

5 Click on **Apply Configuration**.

6 Click on **Start**.

► The measurement starts.

- ▶ Values currently being measured are displayed.

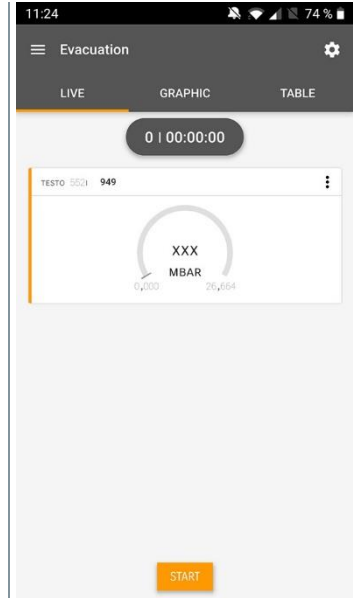

- ▶ Measured values can be saved or a new measurement can be started.

8.4 Customer

In the **Customer** menu, all customer and measuring site information can be created, edited and deleted. Fields marked with * are mandatory. Without any information in this field, no customers or measuring sites can be stored.

8.4.1 Creating and editing a customer

- 1 Click on .
- ▶ Main menu opens
- 2  Click on **Customer**.
- ▶ The Customer menu opens.
- 3 Click on + **New Customer**.
- ▶ A new customer can be created.

- 4 Store all relevant customer data.

- 5 Click on **Save**.

- ▶ The new customer was saved.

8.4.2 Creating and editing measuring sites

- 1 Click on .

- ▶ Main menu opens

- 2  Click on **Customer**.

- ▶ The Customer menu opens.

- 3 Click on **+ New Customer**.


- 4 Click on the right tab **Measuring point**.

- 5 Click on **+ New Measuring Point**.

- ▶ A new measuring site can be created.

6 Store all relevant measuring site information.

7 Click on right tab **Parameters**.

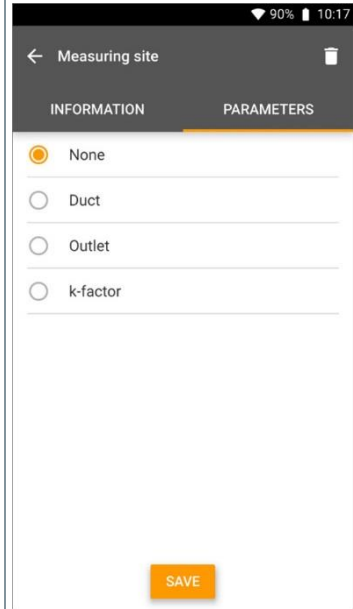

8 Select further parameters.



For the duct, outlet or duct with k-factor measuring sites, further parameter settings can be implemented.

9 Click on **Save**.

► The new measuring site has been saved.

8.5 Memory

In the **Memory** menu, you can call up all the measurements stored with the testo 570s, analyze them in detail and also create and save csv data and PDF reports. When clicking on a measurement, an overview of the measurement results is displayed.

8.5.1 Searching for and deleting measurement results

In the **Memory** menu, all stored measurements are sorted by date and time.


- ✓ The **Memory** menu is open.
- 1 Click on .
- ▶ Search field with measurements opens.
- 2 Enter the customer name or measuring site or date/time in the search field.
- ▶ The result is displayed.

Deleting

- 1 Click on .
- ▶ A check box is displayed in front of each measurement.
- 2 Click on the required measurement.
- ▶ A tick is displayed in the respective box.
- 3 Click on .
- ▶ Information window is displayed.
- 4 Acknowledge the information.
- ▶ Selected measurements were deleted.

8.6 Sensors

All sensors used with the App can be found in the  **Sensors** menu. There, you can view general information about currently connected probes as well as recently connected probes.

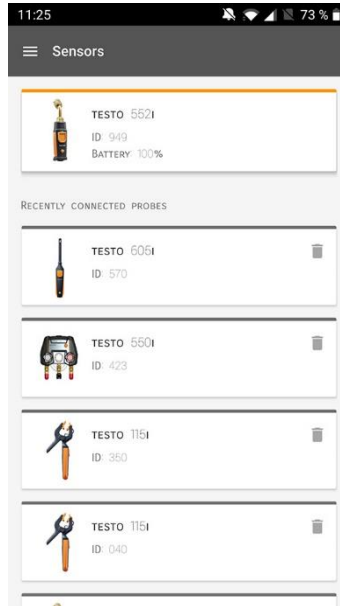

8.6.1 Information

Information is stored for each probe.

- ✓ The App is connected to testo 570s.
- 1 Click on .
- ▶ Main menu opens.
- 2  Click on **Sensors**.
- ▶ The Sensors menu opens.
- 3 Click on one of the displayed probes.
- ▶ Information is displayed about the model, order number, serial number and firmware version.

8.6.2 Settings

Settings can also be made for each probe.

- ✓ The probe is connected to the App.
- 1 Click on .
- ▶ Main menu opens.
- 2  Click on **Sensors**.
- ▶ The Sensors menu opens.
- 3 Click on one of the displayed probes.
- 4 Click on the Settings tab.
- 5 Click on one of the displayed probes.
- ▶ Settings appear that can be changed if necessary.

8.7 Settings

8.7.1 Language

- 1  Click on **Settings**.
- ▶ The **Settings** menu opens.
- 2 Click on **Language**.
- ▶ A window with different languages opens.
- 3 Click on the required language.
- ▶ The required language is set.

8.7.2 Measurement settings

- 1  Click on **Settings**.
- ▶ The Settings menu opens.

- 2 Click on **Measurement settings**.
- ▶ A window with different basic settings for measurement opens.
- 3 Click on the required settings and change if necessary.
- ▶ The required measurement settings are set.
- 4  Exit **Measurement settings**.

8.7.3 Company details

- 1  Click on **Settings**.
- ▶ The Settings menu opens.
- 2 Click on **Company details**.
- ▶ A window with company details opens.
- 3 Click on the required data and enter if necessary.
- ▶ The required company details are set.
- 4  Exit **Company details**.

8.7.4 Privacy settings

- 1  Click on **Settings**.
- ▶ The Settings menu opens.
- 2 Click on **Privacy settings**.
- ▶ A window with privacy settings opens.
- 3 Activate or deactivate the required settings.
- ▶ The required settings are set.
- 4  Exit **Privacy settings**.

8.8 Help and Information

Under Help and Information, you will find information about the testo 550i, and the tutorial can be called up and implemented. This also where legal information can be found.

8.8.1 Instrument information

- 1  Click on **Help and Information**.
 - ▶ The Help and Information menu opens.
- 2 Click on **Instrument information**.
 - ▶ The current App version, Google Analytics instance ID, refrigerant version and update are displayed for the connected instrument.

Automatic updates for instruments can be enabled or disabled.

- > Use the slider to activate or deactivate **Update for connected instruments**.

8.8.2 Tutorial

- 1  Click on **Help and Information**.
 - ▶ The Help and Information menu opens.
- 2 Click on **Tutorial**.
 - ▶ The tutorial shows you the most important steps prior to commissioning.

8.8.3 Exclusion of liability

- 1  Click on **Help and Information**.
 - ▶ The Help and Information menu opens.
- 2 Click on **Exclusion of liability**.
 - ▶ The data protection information and licence usage information is displayed.

8.9 testo DataControl archiving software

The free testo DataControl measurement data management and analysis software enhances the functionality of the testo Smart App measuring instrument with lots of useful functions:

- Manage and archive customer data and measuring site information
- Read out, evaluate and archive measurement data
- Presenting readings in graphic form
- Create professional measurement reports from the existing measurement data
- Conveniently add pictures and comments to measurement reports
- Data import from and data export to the measuring instrument

8.9.1 System requirements



Administrator rights are required for installation.

8.9.1.1 Operating system

The software can be run on the following operating systems:

- Windows® 7
- Windows® 8
- Windows® 10


8.9.1.2 PC

The computer must meet the requirements of the operating system in each case. The following requirements must also be met:


- Interface USB 2 or higher
- DualCore processor with minimum 1 GHz
- Minimum 2 GB RAM
- Minimum 5 GB available hard disk space
- Screen with a resolution of at least 800 x 600 pixels

8.9.2 Procedure


- ✓ To transfer the data from the App to testo DataControl, both instruments must be in the same network.
For example: A notebook with installed testo DataControl and a smartphone with installed testo Smart App are connected to the same WLAN.
- 1 Open testo Smart App on the smartphone or tablet.
- 2 Open the testo DataControl archiving software on the PC.
- 3 Click on **Select instrument**.

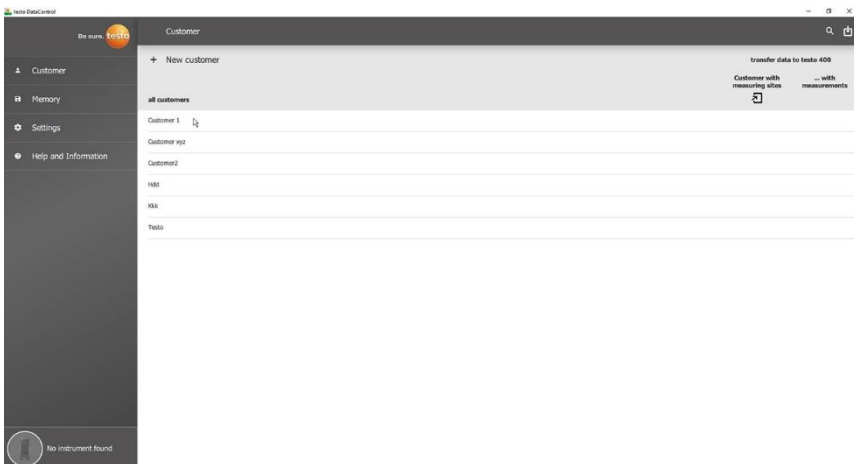

- ▶ An overview with available instruments opens.

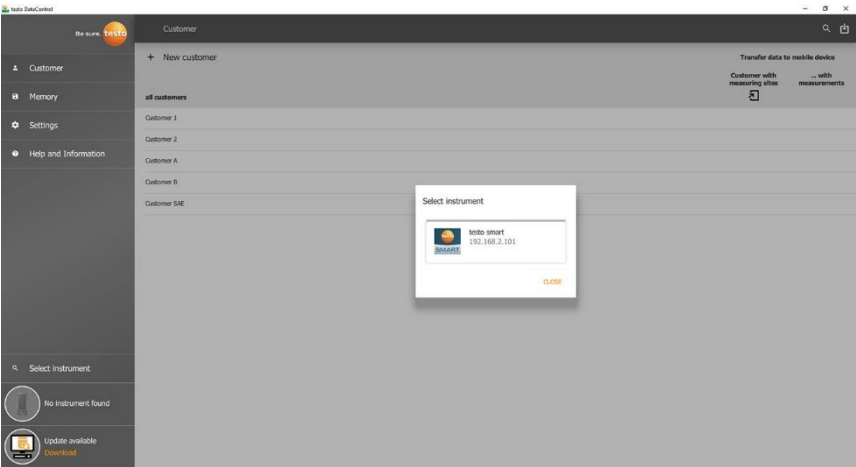

- 4 Select instrument.
- ▶ A safety notice is displayed.

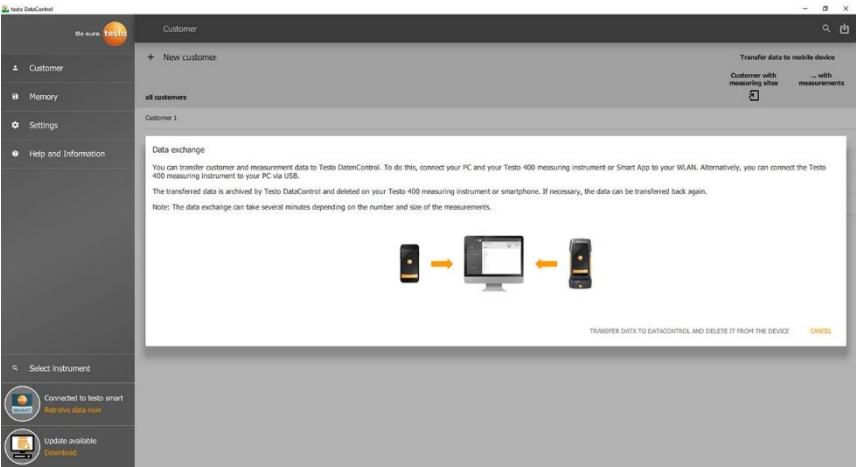

- 5 Click on **Transfer data to DataControl and delete from instrument.**
- ▶ Data has been successfully transferred.

9 Maintenance

9.1 Calibration



The testo 570s is supplied with a factory calibration certificate as standard.

Recalibration once every 12 months is recommended in many applications.

This can be carried out by Testo Industrial Services (TIS) or other certified service providers.

Please contact Testo for further information.

9.2 Cleaning the instrument



Do not use any aggressive cleaning agents or solvents! Mild household cleaning agents and soap suds may be used.

- > If the housing of the instrument is dirty, clean it with a damp cloth.

9.3 Keeping connections clean

- > Keep screw connections clean and free of grease and other deposits; clean with a damp cloth as required.

9.4 Removing oil residues

- > Carefully blow out oil residues in the valve block using compressed air.

9.5 Ensuring measuring accuracy

Testo Customer Service will be happy to help you as required.

- > Check the instrument regularly for leaks. Keep to the permissible pressure range!
- > Calibrate the instrument regularly (recommendation: once a year).

9.6 Changing batteries

- ✓ The instrument is switched off.
- 1 Fold out the suspension hook, release the clip and remove the battery compartment lid.
- 2 Remove the spent batteries and insert new ones (3 x AA alkaline) into the battery compartment. Observe the polarity!
- 3 Attach and close the battery compartment lid (the clip must click into place).
- 4 Switch the instrument on.



10 Technical data

Feature	Value
Measurement parameters	Pressure: kPa/MPa/bar/psi Temperature: °C/°F/K Vacuum: hPa / mbar/ Torr / mTorr / inH ₂ O / micron / inHg / Pa
Sensor	Connections: 4 Valves: 4
	Pressure: 2 x pressure sensor Temperature: 2 x NTC Vacuum: via external probe Up to 4 Smart Probes via Bluetooth [®] connection
Measuring cycle	0.5 s
Interfaces	Pressure ports: 3 x 7/16" UNF, 1 x 5/8" UNF NTC measurement External vacuum probe

Feature	Value
Measuring ranges	HP/LP pressure measuring range: -100 to 6000 kPa/-0.1 to 6 Mpa/-1 to 60 bar (rel)/-14.7 to 870 psi Temperature measuring range: -50 to +150 °C / -58 to 302 °F Temperature measuring range of testo 115i: -40 to +150 °C / -40 to 302 °F Vacuum measuring range: 0 to 20,000 microns
Overload	65 bar; 6500 kPa; 6.5 MPa; 940 psi
Resolution	Resolution pressure: 0.01 bar/0.1 psi/1 kPa/0.001 Mpa Resolution temperature: 0.1 °C / 0.1 °F / 0.1 K Vacuum resolution: 1 micron (from 0 to 1000 microns) 10 microns (from 1000 to 2000 microns) 100 microns (from 2000 to 5000 microns) 500 microns (from 5000 to 10,000 microns) 5000 microns (from 10,000 to 20,000 microns)
Accuracy (nominal temperature 22 °C/71.6 °F)	Pressure: $\pm 0.25\%$ of full scale value (± 1 digit) Temperature (-50 to 150 °C): ± 0.5 °C (± 1 digit), ± 0.9 °F (± 1 digit), testo 115i temperature: ± 2.3 °F (-4 to 185 °F) / ± 1.3 °C (-20 to +85 °C), Vacuum: $\pm (10 \text{ microns} + 10\% \text{ of m.v.})$ (100 to 1000 microns)
Intelligent logging function	- Logging duration time: 1 ... 72 hours. - Measurement cycle: 1 ... 60 s. - Intelligent logging data: App read logging data in fast way via BLE (25 s in typical use case) - Very accurate logging timestamp: $\leq 5 \text{ s}/72 \text{ hours}$ @ -20 ... 50 °C
Measurable media	Measurable media: all media that are stored in the testo 557. Not measurable: ammonia (R717) and other refrigerants which contain ammonia.
Ambient conditions	Operating temperature: -20 to 50 °C / -4 to 122 °F -10 to 50 °C / 14 to 122 °F (vacuum) Storage temperature: -20 to 60 °C / -4 to 140 °F Humidity application range: 10 to 90 %RH

Feature	Value
Housing	Material: ABS/PA/TPE Dimensions: approx. 235 x 121 x 80 mm Weight: 930 g (without batteries)
IP class	54
Power supply	Internal Battery: 3400mAh 18650 Lithium battery in device - Battery lifetime @ 25°C: >=70 h MCU+BLE+LCD+50 % Backlight (all-time) >=90 h MCU+BLE+LCD+50 % Backlight (half-time) >=130 h MCU+BLE+LCD >=190 h MCU+LCD. - Fast charge: achieve 80 % capacity in 1.5 hours. - charge ambient temperature range: 0 .. 35 °C Exchangeable Batteries: 3 x 1.5 V type AA alkaline battery - Battery lifetime @ 25°C: >=55 h MCU+BLE+LCD+50 % Backlight (all-time) >=75 h MCU+BLE+LCD+50% Backlight (half-time) >=110 h MCU+BLE+LCD >=145 h MCU+LCD.)
Auto off	30 min, if enabled
Display	type: Illuminated LCD Response time: 0.5 s
Directives, standards and tests	EU Directive: 2014/30/EU  You can find the EU declaration of conformity on the Testo website, www.testo.com, under the product-specific downloads.

Available refrigerants

Feature	Value		
No. of refrigerants	~ 90		
Selectable refrigerants in the instrument	R114	R407C	R444B
	R12	R407F	R448A
	R123	R407H	R449A
	R1233zd	R408A	R450A
	R1234yf	R409A	R452A
	R1234ze	R410A	R452B
	R124	R414B	R453a
	R125	R416A	R454A
	R13	R420A	R454B
	R134a	R421A	R454C
	R22	R421B	R455A
	R23	R422B	R458A
	R290	R422C	R500
	R32	R422D	R502
	R401A	R424A	R503
	R401B	R427A	R507
	R402A	R434A	R513A
	R402B	R437A	R600a
	R404A	R438A	R718 (H ₂ O)
	R407A	R442A	R744 (CO ₂)
	R11	R227	R417A
	FX80	R236fa	R417B
	I12A	R245fa	R417C
	R1150	R401C	R422A
	R1270	R406A	R426A
	R13B1	R407B	R508A
	R14	R407D	R508B
	R142B	R41	R600
	R152a	R411A	RIS89
	R161	R412A	SP22
	R170	R413A	

11 Tips and assistance

11.1 Questions and answers

Question	Possible causes/solution
 flashes	Rechargeable battery and/or exchangeable batteries are almost empty. > Recharge battery/Change the exchangeable batteries.
The device switches itself off.	Residual capacity of rechargeable battery/exchangeable batteries too low. > Recharge battery/Change the exchangeable batteries.
Below range lights up instead of the measurement parameter display	The value is below the permissible measuring range. > Keep within the permissible measuring range.
Above range lights up instead of the measurement parameter display	The value is above the permissible measuring range. > Keep within the permissible measuring range.

11.2 Error Codes

11.2.1 Main screen

Code	Possible cause / solution
E 11	Remove the batteries and reinsert them in the instrument. If the error persists, please contact our service department.
E 12	
E 13	
E 14	
E 15	

11.2.2 Status view

Code	Possible cause / solution
E 30	An old version is still running on the testo 570s. Update the instrument. If the error persists, please contact our service department.
E 31	testo 570s is still using the old version refrigerants. If you wish to use the new refrigerants, please update the refrigerant list again. If the error persists, please contact our service department.
E 32	Remove the batteries and reinsert them in the instrument. If the error persists, please contact our service department.

11.3 Accessories and spare parts

Description	Order no.
Clamp probe for temperature measurement on pipes (1.5 m)	0613 5505
Clamp probe for temperature measurement on pipes (5 m)	0613 5506
2 x clamp temperature probes kit (NTC) for digital manifolds	0613 5507
Pipe wrap probe with Velcro tape for pipe diameters of up to max. 75 mm, Tmax +75 °C, NTC	0613 4611
Water tight NTC surface probe	0613 1912
Precise, robust NTC air probe	0613 1712
Spare valve set	0554 5570
Magnetic strap	0564 1001
External vacuum probe	0564 2552

For a complete list of all accessories and spare parts, please refer to the product catalogues and brochures or visit our website www.testo.com

12 Support

You can find up-to-date information on products, downloads and links to contact addresses for support queries on the Testo website at: www.testo.com.

If you have any questions please contact your local dealer or the Testo Customer Service. You can find contact details on the back of this document or online at www.testo.com/service-contact.



Testo SE & Co. KGaA

Celsiusstr. 2

79822 Titisee-Neustadt

Germany

Phone: +49 (0)7653 681-0

E-mail: info@testo.de

www.testo.com

Approval and Certification

Product	testo 570s
Mat.-No.	0564 5701 0564 5701 02 (for United Kingdom)
Date	2023-05-02

i The use of the wireless module is subject to the regulations and stipulations of the respective country of use, and the module may only be used in countries for which a country certification has been granted. The user and every owner have the obligation to adhere to these regulations and prerequisites for use, and acknowledges that the re-sale, export, import etc. in particular in countries without wireless permits, is his responsibility.

Country	Comments
Canada	IC: 6127B-05645701 See IC Warnings
Europa + EFTA	  The EU Declaration of Conformity can be found on the testo homepage www.testo.com under the product specific downloads. EU countries: Belgium (BE), Bulgaria (BG), Denmark (DK), Germany (DE), Estonia (EE), Finland (FI), France (FR), Greece (GR), Ireland (IE), Italy (IT), Latvia (LV), Lithuania (LT), Luxembourg (LU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Sweden (SE), Slovakia (SK), Slovenia (SI), Spain (ES), Czech Republic (CZ), Hungary (HU), Republic of Cyprus (CY). EFTA countries: Iceland, Liechtenstein, Norway, Switzerland  WEEE Reg. no.: DE 75334352
Türkiye	Authorized
United Kingdom (GB)	  The UK Declaration of Conformity can be found on the testo homepage www.testo.com under the product specific downloads.
USA	 FCC ID: WAF-05645701 See FCC Warnings

Bluetooth® Information	<table><tr><th>Feature</th><th>Values</th></tr><tr><td>特征与参数</td><td>数值</td></tr><tr><td>Bluetooth® range / 范围</td><td>up to 100 m (328 feet) (free field / 无障碍场地)</td></tr><tr><td>radio type 型号</td><td>Bluetooth® Low Energy (BLE)</td></tr><tr><td>company 制造商</td><td>Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B</td></tr><tr><td>RF Band 射频频段</td><td>2402 – 2480 MHz</td></tr><tr><td>power output 输出功率</td><td>18.57 dBm</td></tr></table>	Feature	Values	特征与参数	数值	Bluetooth® range / 范围	up to 100 m (328 feet) (free field / 无障碍场地)	radio type 型号	Bluetooth® Low Energy (BLE)	company 制造商	Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B	RF Band 射频频段	2402 – 2480 MHz	power output 输出功率	18.57 dBm
Feature	Values														
特征与参数	数值														
Bluetooth® range / 范围	up to 100 m (328 feet) (free field / 无障碍场地)														
radio type 型号	Bluetooth® Low Energy (BLE)														
company 制造商	Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B														
RF Band 射频频段	2402 – 2480 MHz														
power output 输出功率	18.57 dBm														
Bluetooth® SIG Listing	<table><tr><th>Feature</th><th>Values</th></tr><tr><td>特征与参数</td><td>数值</td></tr><tr><td>Declaration ID</td><td>D051404</td></tr><tr><td>member company</td><td>Testo SE & Co. KGaA</td></tr></table>	Feature	Values	特征与参数	数值	Declaration ID	D051404	member company	Testo SE & Co. KGaA						
Feature	Values														
特征与参数	数值														
Declaration ID	D051404														
member company	Testo SE & Co. KGaA														

	Comments
Hongkong	Authorized

Country	Comments														
Japan	Contains Lierda S98 BLE module   201-200960 See Japan Information														
Bluetooth® Information	<table><tr><th>Feature</th><th>Values</th></tr><tr><td>特征与参数</td><td>数值</td></tr><tr><td>Bluetooth® range / 范围</td><td>up to 60 m (196 feet) (free field / 无障碍场地)</td></tr><tr><td>radio type 型号</td><td>Bluetooth® Low Energy (BLE)</td></tr><tr><td>company 制造商</td><td>Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B</td></tr><tr><td>RF Band 射频频段</td><td>2402 – 2480 MHz</td></tr><tr><td>power output 输出功率</td><td>8.77 dBm</td></tr></table>	Feature	Values	特征与参数	数值	Bluetooth® range / 范围	up to 60 m (196 feet) (free field / 无障碍场地)	radio type 型号	Bluetooth® Low Energy (BLE)	company 制造商	Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B	RF Band 射频频段	2402 – 2480 MHz	power output 输出功率	8.77 dBm
Feature	Values														
特征与参数	数值														
Bluetooth® range / 范围	up to 60 m (196 feet) (free field / 无障碍场地)														
radio type 型号	Bluetooth® Low Energy (BLE)														
company 制造商	Lierda Science & Technology Group Co., Ltd Lierda LSD4BT-S98B														
RF Band 射频频段	2402 – 2480 MHz														
power output 输出功率	8.77 dBm														
Bluetooth® SIG Listing	<table><tr><th>Feature</th><th>Values</th></tr><tr><td>特征与参数</td><td>数值</td></tr><tr><td>Declaration ID</td><td>D051404</td></tr><tr><td>member company</td><td>Testo SE & Co. KGaA</td></tr></table>	Feature	Values	特征与参数	数值	Declaration ID	D051404	member company	Testo SE & Co. KGaA						
Feature	Values														
特征与参数	数值														
Declaration ID	D051404														
member company	Testo SE & Co. KGaA														

IC Warnings

CAN ICES-003(B)/NMB-003(B):

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

RSS-Gen & RSS-247 statement:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Caution: Radio Frequency Radiation Exposure

This device has been tested for compliance with IC SAR values at a typical operating near the body. To ensure that RF exposure levels below the levels tested, use accessories with this equipment to maintain a minimum separation distance of 5mm between the body of the user and the device. These accessories should not contain metallic components. It is possible that the accessories used close to the body that do not meet these requirements are not consistent with the SAR limits and it is advisable to avoid using them.

Co-Location:

This device must not be co-located or operated in conjunction with any other antenna or transmitter.

Attention : Ce dispositif a été testé pour la conformité avec les valeurs SAR à un fonctionnement typique près du corps . Pour assurer que les niveaux d'exposition aux radiofréquences en deçà des niveaux testés , utiliser des accessoires avec cet équipement pour maintenir une distance de séparation minimale de 0mm entre le corps de l'utilisateur et l'appareil. Ces accessoires ne doivent pas contenir des composants métalliques . Il est possible que les accessoires utilisés près du corps qui ne répondent pas à ces exigences ne sont pas compatibles avec les limites SAR et il est conseillé d'éviter de les utiliser.

Co-location

Ce dispositif ne doit pas être utilisé à proximité d'une autre antenne ou d'un autre émetteur.

FCC Warnings

Information from the FCC (Federal Communications Commission)

For your own safety

Shielded cables should be used for a composite interface. This is to ensure continued protection against radio frequency interference.

FCC warning statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference

will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cable must be used in order to comply with the emission limits.

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Radio Frequency Radiation Exposure

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types testo 570s (FCC ID: WAF-05645701) has also been tested against this SAR limit. This device was tested for typical body - worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Co-Location:

This device must not be co-located or operated in conjunction with any other antenna or transmitter.

Japan Information

当該機器には電波法に基づく、技術基準適合証明等を受けた特定無線設備を装着している。