



Welcome

Thank you for purchasing the Dior phone.

You are now the proud owner of the new luxury mobile phone created by Dior.
Our design team has conceived each element with the same passion,
creativity and perfectionism as for haute couture clothing.
We have also selected the best materials thereby highlighting
Dior's excellence and know-how.



This device is not intended for sale in the USA.

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Part 15 Class B Compliance

This device and its accessories comply with part15 of FCC rules.

Operation is subject to the following two conditions:

- (1) This device & its accessories may not cause harmful interference.
- (2) This device & its accessories must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device has been tested for typical body-worn operations

with the distance of 0.79inches (2.0cm) from the user's body.

To comply with FCC RF exposure requirements, a minimum separation distance of 0.79inches(2.0cm) must be maintained from the user's body.

For example, this device must be maintained from the user's body with an appropriate belt-clip accessory.[More than 0.79inches(2.0cm)]

Additionally, Belt clips, holsters & other body-worn accessories may not contain metallic components.



Package contents

1 Dior phone

1 phone pouch

1 international warranty book

1 user's guide

1 CD-ROM

(including the complete user guide and the Data Suite software to pair
your Dior phone with your personal computer)

1 battery

1 charger with 5 international plugs

1 USB charge & data cable for the Dior phone

1 suede cloth


1 stereo headphone with remote control

The package contents may vary according to regional regulations.





Getting to know your Dior phone

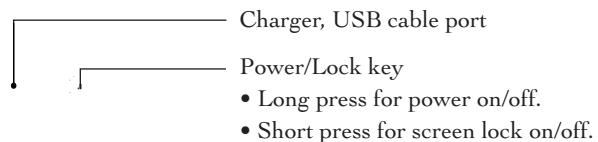

Side keys

- When in standby screen:
touch tone
and ring tone
volume.
- Press and hold
'down' key
to turn silent
mode on/off.
- During a
call: speaker
volume.





Installing the USIM and battery

-1-

Remove the battery cover

Ensure the USB/Charger port cover is closed, then slide down the battery cover towards the bottom of the Dior phone and pull it away.

-2-

Install the USIM card

Slide the USIM card into the USIM card holder, making sure that the gold contact area on the card is facing down. Please make sure the battery is removed from the Dior phone before installing the USIM card.

To remove the USIM card, pull it out gently.

-3-

Install the battery

Insert the right side of the battery into the top edge of the battery compartment first.

Ensure that the battery contacts align with the phone's terminals.

Press the left side of the battery down until it clicks into place.





Charging your Dior phone

Connect the Travel Adapter (Charger) to the included USB cable.

Connect the USB cable to the Dior phone and plug it into a power socket.

Your Dior phone must be charged until the "Battery full" message appears on the screen.

Note: for the first charge, the battery must be fully charged to improve battery life.

Disregard the first "Battery full" message and keep the Dior phone on charge overnight.

Power On & Off your Dior phone

1. Hold down the Power key for more than three seconds to switch on.
2. Enter your USIM card PIN code, if you have previously set one on your USIM card. Then the Dior phone searches for your network and when detected, will display the home screen. The status bar displays the signal strength, charging level, and time.
3. When you wish to switch off the Dior phone, hold down the Power key for more than three seconds.





Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
 - Do not press too hard.

The touch screen is sensitive enough to pick up a light touch.

- Use the tip of your finger to avoid selecting other options.
- After the Dior phone has not been used for sometime it will automatically lock the screen. Auto lock duration can be changed under “Device settings”.

Control the touch screen

The controls on the Dior phone touch screen change dynamically depending on the task.

Opening Applications

To open any application, simply touch its icon.

Scrolling

Scrolling can be from side to side (e.g. in menu screen) or up and down (e.g. in Call log) depending on which screen is in use.





Personalising your home screen

From here you can access all the menu options, make a quick call, view the status of your Dior phone and much more.

Adding Icons to the home screen

You can add widgets, bookmarks or shortcuts to the home screen.

1. Touch  from the home screen.
2. If you want to remove a favourite menu, touch  on the upper right of the icon.
If you want to add icons to the home screen, touch "Add" on the bottom right of the screen.
3. Once you touch "Add", you can choose between "Widget", "Bookmarks" or "Shortcut" (If you do not want to add, touch "Cancel").
4. Select a menu you want to add by touching the "Star mark" on the right side of the menu.

The menu will appear on the screen when you return to the previous screen.

5. When you are finished, touch "OK".





Quick keys

The quick keys on your home screen provide easy, one-touch access to the functions you use the most.



Touch to open your contacts.
To search for the number you want to call: Enter the name of the contact using the touchpad.
You can also create new contacts and edit existing ones.



Touch to bring up the touch dialling pad, which lets you make a call.

Touch to open the full Top menu

Touch to access the Messaging menu.
From here you can create a new SMS or MMS or view your messaging folders.





Settings

Personalising your profiles

You can personalise each profile setting using the settings menu.

It allows you to set all the sounds and alert options.

1. Touch  from the home screen and then look for the icon "Profiles" in the full menu.
2. Choose the profile you want to edit.
3. You can then change all the "Ringtone", "Volume", "Message tone settings" and more, available in the list.

Changing your Display settings

Touch  from the home screen and then "Display settings".

Choose the screen setting you want to edit.

Note: the longer the backlight is on, the more battery power is used.

This may result in your needing to charge your Dior phone more often.

Changing your Device settings

Enjoy the freedom of adapting the operation of your Dior phone to your own style.

Touch  from the home screen, touch "Device settings" and then choose from the list below.

Date & Time

Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.





Power save

Slide the switch left to set the power saving settings on/off.

Languages

Change the language of your Dior phone's display.

Auto lock

Lock the keypad automatically in the home screen.

You can choose the time for the auto lock.

Security

Adjust your security settings including PIN codes and handset lock.

Please note the phones default security code is 0000.

Memory info

See Using memory manager for more information.

Primary storage settings

Choose the location you prefer items to be saved between Handset memory
and extended memory.

Reset settings

Restores all settings to their factory defaults.

Device information

Shows the device information.

Changing your touch settings

You can activate sound or vibration
for your touch tone.

Changing your Connectivity settings

Your connectivity settings have already been set up by your network
operator so you can enjoy your new Dior phone immediately.

To change any settings, use this menu:

Touch  from the home screen and then look for "Connectivity" in the full menu.



Network selection

Select network

If you select "Automatic" the Dior phone automatically searches for the network and registers the handset to the network.

This is recommended for best service and quality.

If you select "Manual", all the currently available networks are shown and you can select one of them for registration.

Network mode

You can set a type of network to search for when networks are searched in the "Select network" menu.

Preferred lists

You can add a preferred network to connect to.

If the network is searched automatically, simply choose one from the network list.

If not, you can add a new network manually.

Internet profiles

This menu shows the Internet profiles and Wi-Fi.

Access points

Your network operator has already saved this information.

You can add new access points using this menu.

Synchronisation

You can send/receive your information to/from an operator server.

Note: This service is not available from all operators.

Please contact your service provider for further information.

Home network

You can choose and share contents by "Home network".

Be careful about disclosing personal information.

GPS type

Select GPS type: "Assisted GPS, Stand alone".

DivX VOD registration

This menu is used to generate a DivX VOD registration code.

Please visit <http://vod.divx.com> to register and for technical support.





USB connection mode

Choose a data service from the options and synchronise your Dior phone using the LG PC Suite software to copy files from your Dior phone.

See "PC Sync" for more information on synchronisation.

If you use "Music sync" with Windows Media Player, select "Music sync" in this menu.

"Music sync" is only available for music content.

Packet data conn.

Choose when your device should be connected to the network for packet data.

Browser settings

Set the values related to the browser "Profiles, Appearance settings, Cache/Cookies, Security, Reset settings".

Streaming settings

Your network operator has already saved this information.

You can add a new profile using this menu.

Java settings

Allows you to set profiles for connections made by Java programs and to view certificates.

Data roaming

Allows you to manage data reception of Multimedia/Widget/ Email in roaming area.

Using the data roaming function, you can block applications from accessing data while in a roaming area.

When you activate the data roaming function, you can download and synchronise data while in a roaming area.

Using memory manager

Your Dior phone has three memories available:

the phone, the USIM Card and an extended memory.

You can use memory manager to see how each memory is being used and how much space is available.

From the home screen, touch "Device settings", then "Memory info".



Internal common memory

View the memory available on internal common memory.

Internal multimedia memory

View the memory available on internal multimedia memory.

Internal reserved memory

View the memory available on your handset for "SMS, Contacts, Calendar, To do list, Memo, Alarm, Call history, Bookmarks and Miscellaneous items".

USIM memory

View the memory available on your USIM Card.

Extended memory

View the memory available on your extended memory.

Changing your Bluetooth® settings

Touch "Bluetooth®" and select .

Make your changes to:

My device information

View your device information regarding Bluetooth®.

My device visibility

Choose to be Visible, Hidden or Visible for 1 min.

My device name

View your device name.

My Bluetooth® address

View your Bluetooth® address.

Supported services

Select how to use Bluetooth® in association with different services.

Remote USIM Mode

Turn on or off.



Pairing with another Bluetooth® device

By pairing your Dior phone and another device, you can set up a passcode protected connection.

1. Check that your Bluetooth® is “ON” and “Visible”.

You can change your visibility by touching .

2. Touch “New device”.

3. Your Dior phone will search for devices.

When the search is completed, the “Refresh” icon will appear on the upper left side of the screen.

4. Choose the device you want to pair with and click ‘Yes’ in the confirmation message. You may need to enter the passcode if the passkey does not match with the device you are trying to pair.

5. Touch “Always ask” or “Always allow”, then the device is paired.

Using a Bluetooth® headset

1. Check that your Bluetooth® is “ON” and “Visible”.

2. Follow the instructions that came with your headset to put it in pairing mode and pair your devices.

3. Touch “Always ask” or “Always allow”.

Your Dior phone will automatically switch to Headset profile.







Day-to-day use of Dior phone

Calls

Making a call

1. Touch  from the home screen to open the dialling pad.
2. Key in the number using the keypad.
3. Touch  to initiate a voice call.

To initiate a video call, touch  then select 
(a video call can only be started if your contact has a video call option too).

4. To end the call, press "End call" on the bottom of the screen.

Note: to enter + for making an international call, press and hold "0".

Press the power key to lock the touchscreen to prevent
making calls by mistake.

Making a call from your contacts book

1. From the home screen touch  to open your "Contacts".
2. Tap the search field box on the top of the screen and use the keypad
to enter the first few letters of the contact you want to call.
3. From the filtered list, touch  the next to the contact you want to call.
The call will use the default number if there is more than one for that contact.
4. Where a contact has more than one number, in order to call a
different number from the default, touch the contact name and then
select the number to dial.





Answering and rejecting a call

When your Dior phone rings, touch "Answer" to answer the call.

Touch "Reject" to reject the call.

To mute the ringing tone touch "Silent".

This is useful if you have forgotten to change the profile to silent for a meeting.

In-call options

Options


Touch  to bring up a list of further in-call options.

Speaker

Touch  to turn the speaker phone on.

Hold

Touch  to put a call on hold.

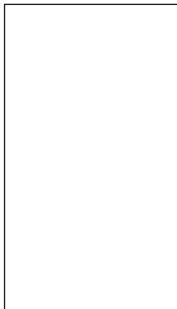

Contacts

Touch  to open your contacts during a call. You can also initiate a second call from the contacts screen.

Memo

Touch  to create a memo during a call.

Dialpad

Touch  to open the dialling keypad for making a second call or to navigate menus with numbered options when dialling automated telephone services, such as call centres.

Note: to scroll through a list of options or your list of contacts, touch the last item visible and slide your finger up the screen.

The list will move up so more items become visible.





Speed dialling

Open your contacts during a call.

You can also initiate a second call from the contacts screen.

1. Select “Phonebook” and touch and select “Speed dials”.
2. Your voicemail is already set to speed dial 1. You cannot change this.
Touch any other number to assign it to a speed dial contact.
3. The Contacts screen will open, select the contact you want to assign to that number by touching the contact’s phone number once.
To find a contact, tap the search field box and enter the first few letters of the contact’s name.

Viewing your call logs

Touch “Logs” main menu.

Note: touch any single call log entry to view the date, time and duration of the call.

Using call divert

1. Touch “Call settings” in the main menu.
2. Touch “Call divert”.
3. Choose between “Voice calls” and “Video calls”.
You can choose to divert all calls, when the line is busy, when there is no answer or when you cannot be reached.
4. Touch “Activate”.
5. Choose “To voicemail centre” or “To other number” to enter the new divert number.
6. Touch “OK” when you have finished entering the number.

Note: to turn off all call diverts, select “Deactivate” all from the “Call divert” menu.



Changing the common call settings

1. Touch “Call settings” in the main menu.

2. Touch “Common settings”.

From here you can adjust the settings for:

Call reject

Slide the switch to the left to display the “Reject list”.

You can touch the text box to choose “All calls”, calls from specific “Contacts” or “Groups”, calls from “Unregistered” numbers (those not in your contacts) or calls with “No caller ID”.

Touch  to change the setting.

Send my number

Choose whether your number will be displayed when you call someone.

Show SNS (Social Network Service) events

Choose whether SNS events will be displayed or not.

Auto redial

Slide the switch left for “ON” or right for “OFF”.

Minute minder

Slide the switch left to turn ON. A tone is heard every minute during a call.

BT answer mode

Select Handsfree to be able to answer a call using a Bluetooth® headset or select Handset to answer a call by pressing a key on the handset.

Save new number

Choose whether the Save new number function is “ON” or not.

Slide the switch left for “ON” or right for “OFF”.



Voice clarity

Choose whether the Voice clarity function is “ON” or not.
Slide the switch left for “ON” or right for “OFF”.

Changing the Video call settings

1. Touch “Call settings” in the main menu.
2. Touch “Video call settings”.

From here you can adjust the settings for:

Use private image

Choose whether to use a private image for video calls.

Private image

Choose an image for video calls.

Mirror

Choose whether to use Mirror



Call costs

View the charges applied to your dialled numbers
(this service is network-dependent and some operators cannot support it).

Call durations

View the duration of the last call, all calls, as well as dialled and received calls.

Data volume

View the amount of data used in kilobytes for received data,
sent data and all data.

— —





Contacts

Searching for a contact

There are two ways to search for a contact:

Touch  from the home screen and then touch "Phonebook"
or touch  from the home screen.

You see a list of contacts.

Typing the first letter of a contact's name in the search field will jump the menu to that alphabetical area of the list.

Note: The alphabetical keypad is displayed once you tap the search field.

Adding a new contact

1. Touch "Phonebook" tab and touch "New".
2. Choose whether to save the contact to your "Handset" or "USIM".
3. Enter the first and last name of the contact in the appropriate fields.
4. If saving to the handset memory you can enter up to 5 different numbers per contact.

Each entry is preset for "Mobile, Home, Office, Pager, Fax, VT, and General".

5. Add an email address.
6. Assign the contact to one or more groups.

You can assign up to three groups per contact.

Choose between "No group, Family, Friends, Colleagues, School and VIP".

7. If saving contact to handset memory you can also add a "Ringtone, Vibration, Homepage, Home address, Company name, Job title, Company address, Birthday, Anniversary and Memo".
8. Touch  to save the contact.





Creating a group

1. Touch "Phonebook" from the home screen .
2. Touch the down arrow beside Contacts and then select "Groups".
3. Touch "New group" or touch  and select "New group".
4. Enter a name for your new group in "Group name" field.
You can also assign a ringtone to the group.
4. Touch .

Note: if you delete a group, the contacts assigned to that group will not be lost. They will remain in your "Phonebook".

Changing your contact settings

1. You can adapt your contact settings to suit your own preferences.
2. From the home screen, touch "Phonebook", touch  then scroll down and select "Contact settings". From here, you can adjust the following settings:

Show keypad

Choose whether the Keypad is displayed.

Display name

Choose the display order of the name.

Synchronise contact

Connect to your server to synchronise your contacts.

Copy all

Copy your contacts from your handset to your USIM or from your USIM to your handset. You can choose one at a time or all at once.





Messaging

Your Dior phone combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

1. Touch  from the home screen and then touch "Messaging" or touch  from the home screen.
2. Touch "Write message" then  and select "Insert" to add an image, video, sound, emoticon, etc.
3. Touch the "To" text field to enter the recipient's number or open your "contacts" or "favourites".
You can add multiple contacts. When you are finished, touch "the message box" below to start composing the message text.
4. After entering the text, you can send the message by touching "Send SMS/Send MMS" at the top of the message.

Changing your text message settings

Touch , touch  and select "Settings". Select "Text message".

Changing your multimedia message settings

Touch . Touch  and select "Settings", then select "Multimedia message".



Setting up your e-mail

Touch  from the home screen, scroll to the right and then touch “E-mail”.

If the email account is not set up, touch “Microsoft Exchange, Others”, etc.

If the email account is set up in your Dior phone and you want to add a new email account, touch  and select “New e-mail account”.

Note: if you register a generic email address (e.g. gmail, yahoo, etc.), after entering your Password, you may not be asked to fill in all the information (mailbox type, server, etc.)

If you don't know some of the requested answers, we invite you to contact your Phone Network Provider.

Retrieving your e-mails

You can automatically or manually check your account for new emails.

To check manually:

1. Touch “E-mail” main menu.
2. Touch the account you want to use.
3. Choose “Retrieve new”.

Sending an e-mail using your new account

1. Touch “Write e-mail” and a new email will open.
2. Complete the message and contact.
3. Touch “Send e-mail” and your email will be sent.

Changing your e-mail settings

1. Touch “E-mail” main menu.
2. Touch  and select “E-mail settings”, then you can change the following settings:





E-mail account

Select an email account

Allow reply e-mail

Choose to allow the sending of read confirmation messages.

Request reply e-mail

Choose whether to request read confirmation messages.

Include message in reply

Choose to include the original message in your reply.

Include attachment

Choose to include the original attachment in any reply.

Auto retrieval while roaming

Choose whether to retrieve your messages automatically when abroad (roaming).

New e-mail notification

Choose whether to be alerted to new emails.

Signature

Create an email signature.

Priority

Choose the priority level of your email messages.

Maximum receive size


Select the maximum receive size.



Using multimedia functions

Camera

Getting to know the viewfinder

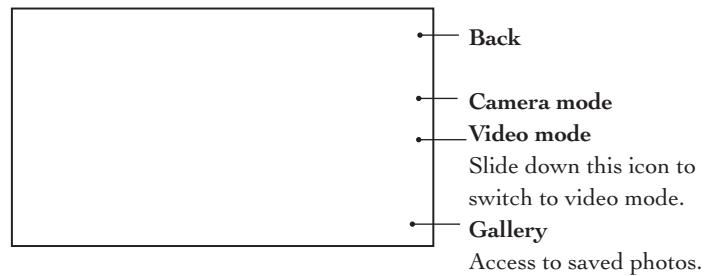

Exposure

Touch  to open the exposure menu. A low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

Settings

Touch  to open the settings menu.

See Using the advanced settings.

Zoom

Touch  to zoom in or zoom out. You can also zoom in or out by pressing the side keys of the phone.

Macro

Touch  to switch on take a close up shot



Taking a quick photo

1. From the home screen, touch and scroll to "Camera".
2. When the camera is focused on your subject, touch the on the right-centre of the screen to take a photo.

After taking a photo

Your captured photo will appear on the screen.

The image name is shown on the bottom of the screen with four icons on the right side.

Touch to send the photo as a Message, E-mail, Bluetooth®,etc.

Note: additional cost may occur when MMS are downloaded when roaming.

Touch to use the image as "Homescreen, Lock screen, Contact, Start-up, Shut down, Outgoing call or Incoming call" screens.

Touch to edit the image using various tools.

Touch to return to the viewfinder.

Touch to delete the image.

Touch to take another photo immediately.

Your current photo will be saved.

Touch to view a gallery of your saved photos

Using the advanced settings


From the viewfinder, touch to open all the advanced settings options: Size, Scene mode, ISO, White balance, Colour Effect, Focus, Self-timer, Shot mode, Quality, Show captured image, Shutter sound, Grid screen, Geo-Tagging, Reset settings, Memory and Swap cam





Video camera

Getting to know the viewfinder

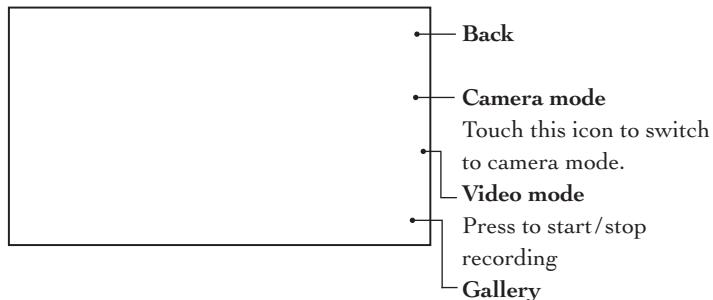

Exposure

Touch , a low contrast video will appear foggy, whereas a high contrast video will appear much sharper.

Settings

Touch  to open the settings menu.

See Using the advanced settings.

Zoom

Touch  to zoom in or zoom out. You can also zoom in or out by pressing the side keys of the phone.

Note: to switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.



Making a quick video

1. From the home screen, touch and scroll to "Camera video".
2. Holding the Dior phone horizontally,
point the lens toward the subject of the video.
3. Touch the red dot on the screen once to start recording.
4. REC will appear at the bottom of the viewfinder with a timer
at the bottom showing the length of the video.
5. To pause the video, touch and resume by selecting .
6. Touch on screen to stop recording.

After making a video

A still image representing your captured video will appear on the screen.

The name of the video will be shown on the bottom of the screen
Touch to send the video as a "Message" or "E-mail" or by "Bluetooth®".

Note: additional cost may occur when videos are downloaded when roaming.

Touch to use the video as a voice or video ringtone

Touch to play the video.

Touch to return to the viewfinder.

Touch to delete the video you have just made

and confirm by touching "Yes".

The viewfinder will reappear.

Touch to shoot another video right away.

Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch to open all the advanced settings options:

Video size, Recording mode, Audio , Show recorded video

Refer to the advanced settings for the Camera.



Your photos and videos

Viewing your photos and videos

1. Scroll and touch "Gallery" in main menu or touch  on your camera screen.
2. Your gallery will appear.
3. Touch the video or photo to open it fully.

Note: flick left or right to view other photos or videos.

Some functions will not work properly if the multimedia file has not been recorded on the phone.

Slide show mode will show all the photos in your gallery one at a time as a slide show.

Videos cannot be viewed as a slide show.

1. Touch  in the "Gallery", then scroll and select "Slide show".
2. The slideshow will begin.
3. You can open menus such as "Duration", "Transition", etc. by tapping  during the slide show.

Setting a photo as wallpaper

1. Touch "Gallery" in main menu.
2. Touch the photo you would like to set as wallpaper.
3. Touch  to open the menu.
4. Touch "Set as", then "Homescreen image".

Editing your photos

From the gallery menu, choose the photo you'd like to edit, touch  on the upper left of the screen to open the menu and select "Edit".

Touch the icons to alter your photo and select area .

You have then a large range of tools  to modify your photo.



Multimedia

You can store any multimedia files on your Dior phone's memory to have easy access to all your pictures, sounds, videos and games.

You can also save your files to the extended memory.

You can find these files in the "My files".

Sending a photo

1. Touch from the home screen, touch "My files" and select "Images".
Select the picture you want and touch .
2. Touch "Send via" and choose "Message", "E-mail" or "Bluetooth®".

Sounds

From here you can manage or send sounds or set them as ringtones.



Flash contents

The Flash contents folder contains all downloaded SWF and SVG files.

1. Touch "My files" and select "Flash contents".
2. Select the file you want to view.

Documents

From the "Documents" menu, you can view all your document files.

From here, you can view your Excel, PowerPoint, Word, Text and pdf files.

Other content

"Other content" contains a list of files that are not pictures, sounds, videos, documents, games or applications.

— —





Transferring music to your Dior phone

The easiest way to transfer music to your Dior phone is via Bluetooth® or your USB cable.

You can also use PC Suite.

To transfer using Bluetooth®:

1. Make sure your Dior phone and computer have Bluetooth® switched on and can see each other.
2. Select the music file on the other device and choose to send it via Bluetooth®.
 3. When the file is ready to be sent, you should accept it on your Dior phone by touching "Yes".
 4. The file should appear in Music

Your Dior phone has a built-in music player so you can play all your favourite tracks. To access the music player, touch Music in the main menu. From here, you can access

a number of folders located at the top of the screen:

All tracks, Favourite, Artists, Albums, Genres and Playlist.

Note: the copyright of music files is protected by international treaties and national copyright laws. It may be necessary to obtain permission or a licence to reproduce or copy music.

Playing a song

1. Touch "Music" from the main menu.
2. Select the song you want to play.
The confirmation message appears when in "Silent" mode.
3. Touch to pause the song.
4. Touch to skip to the next song.
5. Touch to go back to the previous song.
6. Touch to return to the "Music" menu.



— —





Synchronising Dior phone with the computer

Organiser

SNS

A Social Network Service focuses on building and reflecting a social network or social relationship among people who share interests and/or activities.

1. Touch  from the home screen and then touch “SNS settings”.
2. Turn on Social networking. If you have an account related to social networking, the account is displayed. Touch the account, then touch “Import Friends” to add your friend contact to your Dior phone.
3. If you have no account, touch “New account”, then create your account.



Facebook

Facebook is a social networking website.

1. Touch  from the home screen and then touch “Facebook”.

Twitter

Twitter is a free social networking and micro-blogging service.

1. Touch  from the home screen and then touch “Twitter”.

Navigation

Navigation is a GPS navigation system that gives you turn-by-turn directions onscreen

— —





Adding an event to your calendar

1. Touch  from the home screen and then touch “Calendar”.
2. Select the date you would like to add an event to.
3. Touch  and touch “New schedule”.

Adding an item to your to do list

1. Touch  from the home screen and then touch “Tasks”
2. Touch  and touch “New task” or simply touch “New task” at the top of the screen.
3. Set the date for the task, add notes and select a priority level: “High”, “Normal” or “Low”.
4. Save your task by touching .

Adding a memo

Touch  from the home screen and then touch “Memo”.

Touch  and then “New memo”.

Or simply touch “New memo” at the top of the screen.

Type your memo and then touch “Save”.

Your memo will then appear on the screen in the memo application.

Setting your alarm

1. Touch  from the home screen and then touch “Alarms”.
- “Widget alarm” should appear in the list as the default and you cannot delete it.
2. Touch  and then “New alarm”.
- Or simply touch “New alarm” at the top of the screen.

Note: you can set up to 11 alarms including “Widget alarm”.

Slide the alarm switch left to turn it on.



Using your calculator

1. Touch  from the home screen and then touch "Other tools".
2. Select "Calculator".
3. Touch the numeric keys using the keypad to input numbers.
4. For simple calculations, touch the function you require (+, -, ×, ÷), followed by =.
5. For more complex calculations, touch  and choose from "sin, cos, tan, log, ln, exp, sqrt, deg, rad" etc.

Adding a city to your World clock

1. Touch  from the home screen and then touch "Other tools".
2. Select "World clock".
3. Touch  and then "New city".

Or simply touch "New city" at the top of the screen.

LG Air Sync

Using this menu, you can synchronise your PIM (Personal Information Management) data or other contents of your Dior phone with your "LG Air Sync" account.

1. Touch LG Air Sync.
2. If you have no LG Air Sync account, please visit www.lgairsync.com to create your account.
If you have an account, key in your ID and Password.
3. If you want to synchronise your PIM data, touch "PIM Sync".
If you want to synchronise your contents, touch "Link Air".
4. In case of PIM Sync, select the items you want to synchronise, then touch "Sync now".
5. In case of Link Air, select the items you want to synchronise, then touch "Sync now".



PC Sync

You can synchronise your PC with your Dior phone to make sure all your important details and dates match.

You can also backup your files to put your mind at ease.

Please note that the Email feature of PC Sync is not supported by the Dior phone.

Your phone is compatible with Mac OS, Microsoft Windows XP, Windows Vista and Windows 7.

Note: for Windows 7, you will need to set up the AutoPlay menu first.

Go to Control Panel > All control Panel Items > Default programs > AutoPlay Settings >

Software and Games > Choose option Install or run program from your media >

Then Save / Install PC Suite by clicking always "YES".

Installing PC Suite on your computer

1. From the home screen, touch and touch "Connectivity".
2. Select "USB connection mode" and touch "PC Suite".
3. Connect the handset and PC via USB cable and wait a few moments. An installation guide message will be displayed.
4. Follow the instructions on the screen to complete the PC Suite Installer wizard.
5. Once installation is complete, the PC Suite icon will appear on your desktop.

Connecting your Dior phone and PC

1. From the home screen, touch and touch "Connectivity".
2. Select "USB connection mode".
3. Touch "PC Suite".
4. Connect the handset and PC via USB cable and wait a few moments.
PC Suite runs automatically.





Backing up and restoring the information on your Dior phone

1. Connect your Dior phone to your PC as described previously.
2. On your PC, click on the “Backup” icon and select “Backup” or “Restore”.
3. Mark the content you would like to backup or restore.
4. Select the location you would like to backup information to or restore information from. Click the “Start” icon.
5. Your information will be backed up or restored.

Viewing Dior phone files on your PC

1. Connect your phone to your PC as described previously.
2. On your PC, click on the “Photos”, “Videos” or “Music” icons.
3. Images, audio files and videos you have saved on your phone will be displayed on the screen in the phone folder.

Note: viewing the contents of your phone on your PC helps you to store files you no longer need.

Synchronising your contacts

1. Connect the Dior phone to your PC.
2. On your PC, click on the “Contacts” icon.
3. Click “Sync Contacts” button your PC will now import and display all the contacts saved on your handset.
4. Click on “Menu” and select “Export”.

You can now select the target where you want to save your contacts





Synchronising your messages

1. Connect the Dior phone to your PC.
2. On your PC, click on the "Messages" icon.
3. All your Dior phone messages will be displayed in folders on the screen.

Using your Dior phone as a Music Sync device

Your phone can be used to sync music files.

Music sync can be carried out using Windows Media Player 10/11

1. Disconnect your phone from your PC.
2. From the home screen, touch and touch "Connectivity".
3. Select "USB connection mode".
4. Touch "Music sync".
5. Connect the phone to your PC.

Your phone will read: Connected.

Using iSync

Insert the PC Suite CD provided with your Dior phone and install the iSync plug-in install file (only for Mac users) which is supported by Mac computers

and connect the Dior phone via Bluetooth® or USB.

To synchronise via Bluetooth®, set up a pairing between the Mac or PC and the Dior phone.

If you want to set up via USB, select the iSync menu in USB connection mode.

Note: When using Bluetooth®, you have to select "iSync" on in option menu.





DivX Converter

DivX will convert media files on your PC to a format that lets you upload them and view them on your phone.

Once installed, select "DivX" from the Program Files on your PC, then "DivX converter" followed by "Converter".

Use the arrows in the application to change the conversion format to "Mobile". If you right click on the application box and select "Preferences", you can change the location where the converted files are saved.

Drag and drop the files into the application for initial analysis. Then select "Convert" for the process to begin. When the process is complete a Conversion complete pop up will be displayed.

OSP (On Screen Phone)

Using the OSP feature, you can see your Dior phone screen from your PC.

You can control your Dior phone from the PC Monitor just as you would on the Dior phone.

For example, if you want to send a message using OSP, click "Messaging" in the Communication tab of the OSP main menu, then click "Write message". You can enter characters by mouse clicking or using your PC keyboard.

ABOUT DIVX VIDEO:

DivX® is a digital video format created by DivX®, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND:

This DivX Certified® device must be registered in order to play DivX® Video-on-Demand (VOD) content.

To generate the registration code, locate the DivX VOD section in the device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.





Reaching the web

Accessing the web

1. Touch "Web" in the main menu.
2. Touch "Browser", then select to go straight to the homepage or "Enter" URL and type in a URL followed by OK.

Note: an additional cost might occur when connecting to this service and downloading content.

Check with your network provider for data charges.

Saving a page

1. Access your required web page as described above.
2. Touch and select "Save this page".
3. Enter a name for the web page so you can easily recognise it.
4. Touch "Save".

Accessing a saved page

Touch "Web" in the main menu and select "Saved pages".

You can view the saved pages here.

Viewing your Mobile history

Touch "Web" in the main menu and select "Mobile history".

Using your phone as a modem

Your Dior phone can double as a modem for your PC, giving you email and internet access even when you can't connect by wire.

You can use either the USB cable through PC Sync or Bluetooth®.

