

Manual

Please thoroughly read this user ' s manual and follow the operating instructions here under.

To replace batteries,please refer to the following functions.

(1) Battery installation

- 1) Unscrew the two screws on the back ,take off the rear cabinet
- 2) Take out the circuit board
- 3) Place the batteries in the battery holder with the “+” side upward
- 4) Make the side of batteries closely stick to inner wall of battery holder,then put the circuit board in the cabinet
- 5) Cover the back cabinet,fasten the two screws

(2) Battery test

Push the switch to “on ” position, the red indicatiior blinks. When the indicator becomes dim, it indicates low power, need to replace the batteries.

(3) On battery replacement

(Regularly check the working condition this Electronics Personal Remind Alarm,check whether the power of batteries is sufficient)
Recommender batteries: 3V CR2032

In following cases,replace the batteries

When low signal or the red indicator does not blink then replace the batteries

(4) Precautions

- 1) Do not use this product on airplane.
- 2) If you have used it for a long time ,please take out the batteries and place it in cold and dry places so as to prolong the life of batteries.
- 3) Generally,sending wave of the product is 1mW,which will not cause injury to our body.
- 4) Keep the product far from water.
- 5) Please wear the transmitter well in the objects to be protected,because once the transmitter is separate from the objects,the distance may be farther than the preset safe distance.
- 6) The product has wide applications,but the children below 3 years

should not use it unless custody of adults.

- 7) Any fault of this product caused by dropping, collision by users will be excluded from the scope of free warranty.

(5) Specification

Safe distance 0-25m (if there are no special wireless blocking)

Life of batteries 3 weeks(8 hours a day)

Notes: wireless blockings include metal walls, buildings, electric vehicles, and any other objects where exits radio waves, the set distance may be shorter or longer than preset value because of such a distance.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER 'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation