



EXQ-SE configuration internals

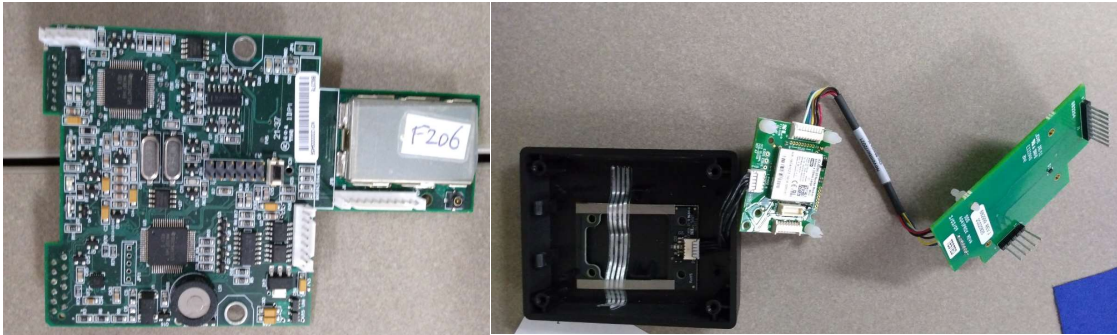

EXQ-PSEBH configuration internals

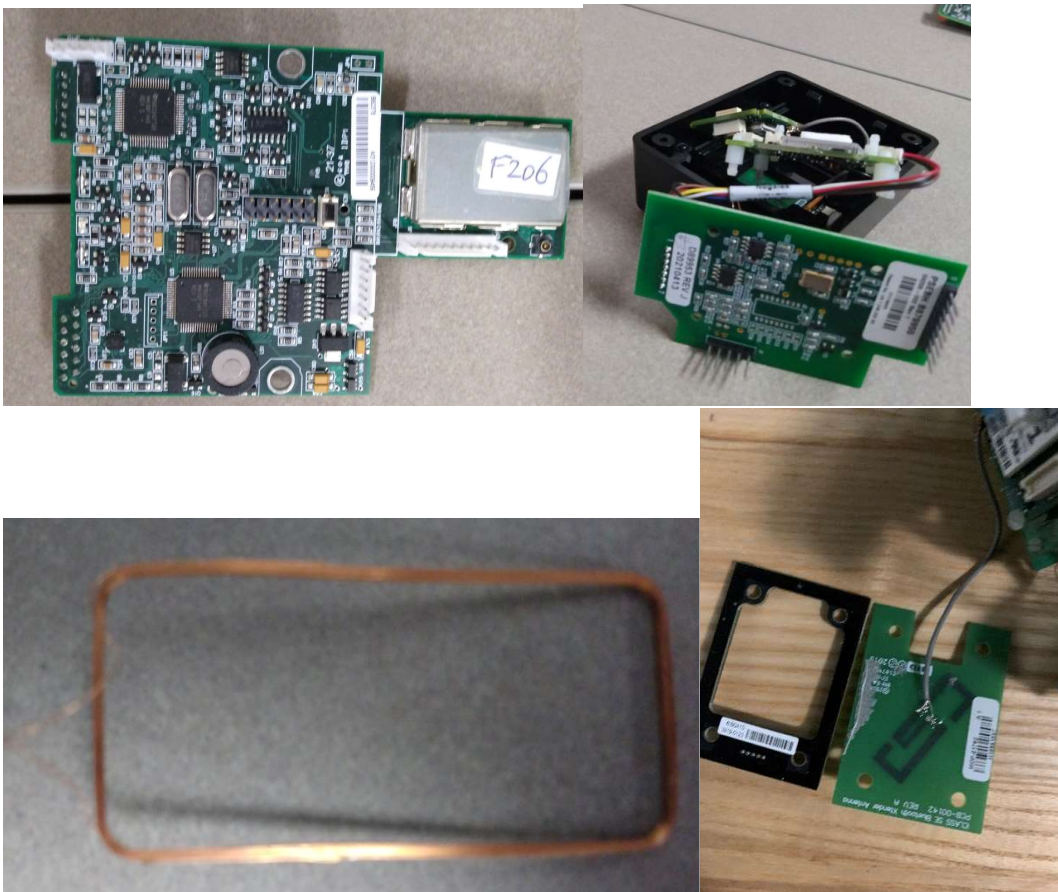




EXQ-PH configuration internals



EXQ-PKP configuration internals

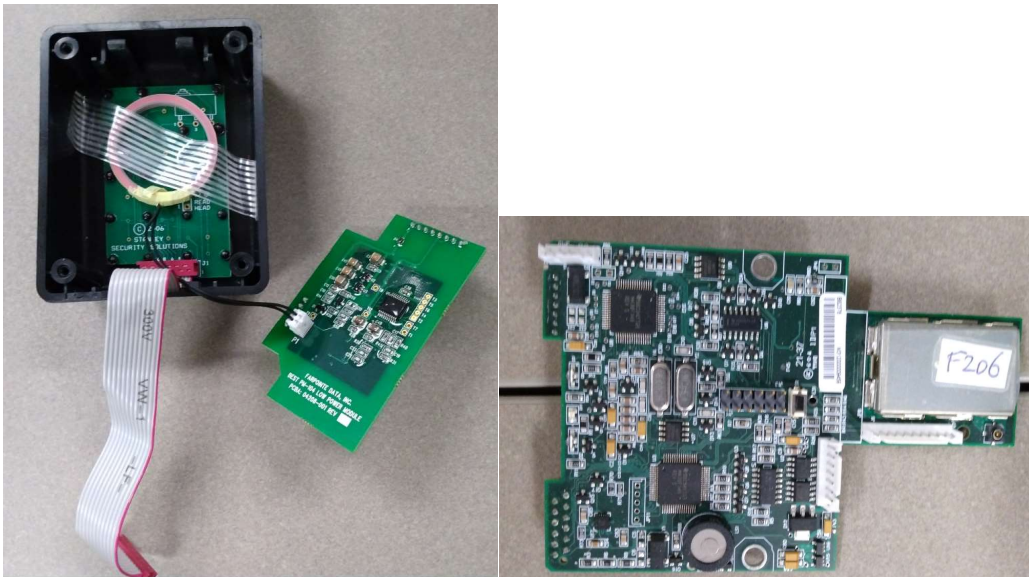

EXQ-MS configuration internals

