













HOME

MENU

BACK

NEXT

PLEASE NOTE THAT THIS DOCUMENT CONTAINS NO-ACTIVE LINKS AS YET.

The world's first socially networked mobile.

This is beyond a web phone. This is a social networking mobile designed to keep you in touch and online wherever you are. Web essentials like Facebook, Skype, Ebay and Windows Live Messenger are always on, always connected ensuring you're never out of touch.

We believe your phone should do the hard work for you and that you shouldn't need a degree in nuclear physics to work it. Now here's the switcher. It runs along the bottom of your Home screen with all your favourite applications, so they're easy to get to and quick to open.

Your contacts used to be just a static list. Not now. We've brought it to life, integrating your Facebook, Skype and Windows Live contacts so when your friends' status (or even their profile pictures) change, you'll see it live in your Contacts.

It's never been quicker or easier to get online and keep connected with the things that matter to you.

MENU

GET SET UP

YOUR MOBILE EXPLAINED

INTERNET:

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

HANDSET:

CALLS

TEXT, MULTIMEDIA AND EMAIL MESSAGES AND SKYPE CHAT

CONTACTS

MEDIA AND GAME CENTRE

EXTRA FEATURES AND SECURITY

CONNECTIVITY SETTINGS

HELP



2

Q

HOME

MENU

BACK

GET SET UP

First things first.

There are a few things you need to do to get your mobile working. Things like inserting your USIM and battery and setting time and date. Then there are the things that personalise the phone, like setting wallpaper.

Getting ready to go. That's what this section is all about.

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE



INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

Your 3 USIM can only be used in mobiles which are enabled for 3 services. If you try to use the USIM in other mobiles you could seriously damage the mobile and may be unable to use it, including making emergency calls. If you do that, we are not responsible for any such damage or usage problems.

ILLUSTRATIONS

- 1 Remove battery cover and battery
- 2 Insert your USIM
- 3 Insert memory card
- 4 5 Insert your battery and battery cover
- 6 Charge your battery

2 2 6

GET SET UP

INSERT YOUR USIM, BATTERY
AND MEMORY CARD, AND
CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE

Fully charge the battery before using it for the first time.

Q


HOME

MENU

BACK

WIZARD

The Wizard will appear when you first turn on your mobile to take you through setting the time and date and also plays a short video. You need to go through the Wizard so that your phone will work properly.

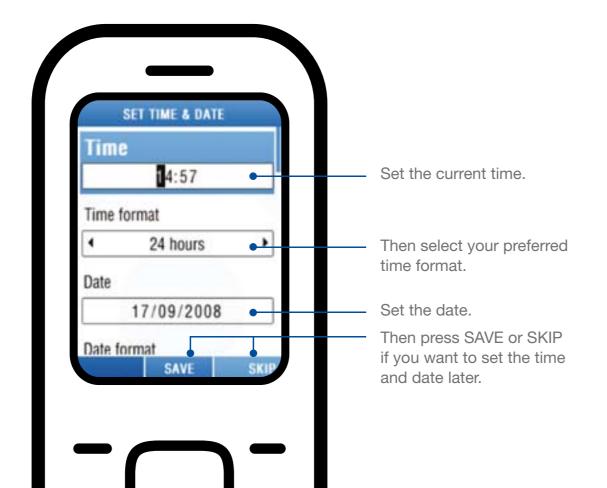

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND **CHARGE YOUR MOBILE**

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE

NEXT

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND **CHARGE YOUR MOBILE**

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE



BACK

NEXT

TURN YOUR PHONE ON AND OFF

Press and hold to

switch on your phone.

POWER OFF

Press and hold to

switch off the mobile.

POWER ON

HOME

MENU

SET TIME AND DATE

- Press from the Home screen and select
 SETTINGS > Time & date.
- Enter the date and time.
- Select SAVE.

CHOOSE A WALLPAPER

- Press from the Home screen and select SETTINGS > Display > Main screen.
- Scroll to Show wallpaper
 SELECT > select your
 preferred image > SELECT
 > SAVE.
- You can also select Show clock > ENABLE.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE







SET YOUR RINGTONE

- Press MENU from the Home screen and select SETTINGS > Profiles.
- Select Normal or other profiles > OPTIONS > Edit > OK.
- Select Ringtones & alerts > CHANGE > select your preferred tune from Track or Artist or Album etc. > SELECT.

SET YOUR SCREEN SAVER

- Press MENU from the Home screen and select SETTINGS > Display > Screensaver setting. Select Image > select your preferred image > SELECT.
- Or you can select Date & time > ENABLE or select OFF to turn off the screen saver.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND **CHARGE YOUR MOBILE**

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE



0

HOME

MENU

BACK

NEXT

SET UP VOICEMAIL

Press and hold Follow the voice prompts to choose a PIN and record your greeting.

SET UP VIDEOMAIL

Press and hold for a video call. Then follow the voice prompts to record your video greeting.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND **CHARGE YOUR MOBILE**

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE



HOME

MENU

BACK

CHOOSE A TEXT ENTRY METHOD

The multipress, T9 and numeric input modes can be changed by pressing within a text box.

- ABC Input: use the keypad to enter letters, numbers, symbols, and other characters. Press the same key repeatedly to cycle through available characters. If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- T9 Text Input: you press each key only once, even if the character you want is not the first character on the key. It tries to predict the word.
- 123 Input: if you want to input a series of numbers, you need to change to 123 mode or press and hold the particular key for three seconds.

- Symbol Input: In ABC and 123 mode, short press ★ and you can access the symbol menu. While in T9 mode, press and hold ★ for a few seconds to access the symbol menu.
- Select OPTIONS >
 Dictionary > Add to/Go to,
 to view the dictionary or add
 new words to it.
- Press == and scroll to select ENG to change the writing language. The options are:

Italiano IT

English ENG

Français FR

Deutsch DE

Dansk DA

Svenska SV

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD





PHONE MAINTENANCE

The following advice can help you to look after your phone and prolong its life.

- The phone and its spare parts should be kept out of the reach of children.
- Keep the phone dry. Rain, moisture or water will corrupt its electronic circuitry. If your phone does get wet, remove the battery immediately.
- Don't put the phone in dusty places or this will affect the everyday use of the phone.
- Don't touch the screen with a sharp object.
- Don't expose the phone to high temperatures. High temperatures will shorten the life of electronic devices, destroy the battery and destroy or melt a phone's plastic shell.

- Don't expose the phone to low temperatures.
 Otherwise, when the temperature rises, moisture will condense in the phone and could damage the phone's electronic circuitry.
- Don't throw, knock or shake the phone intensely as this could damage the electronic circuitry and structure of the phone.
- Use a clean, soft cloth to clean the camera lens and other delicate surfaces.

GET SET UP

INSERT YOUR USIM, BATTERY AND MEMORY CARD, AND CHARGE YOUR MOBILE

WIZARD

TURN YOUR PHONE ON AND OFF

SET THE DATE AND TIME

CHOOSE A WALLPAPER

SET YOUR RINGTONE

SET YOUR SCREEN SAVER

SET UP VOICEMAIL

SET UP VIDEOMAIL

CHOOSE A TEXT ENTRY METHOD

PHONE MAINTENANCE







INQMOBILE.COM

Your mobile can do a lot of things.

This section explains what all the icons and symbols mean, and shows you how to find your way around your mobile.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

HOME

MENU

BACK



YOUR MOBILE'S SCREEN

Your mobile's screen is divided into four basic screens: the Status bar, the Main Screen, Switcher and the Prompt box.

STATUS BAR

Shows what operations are taking place, the battery and signal strength. See the next page for status icon details.

HOME SCREEN

If you are not on the Home screen, the screen will show the main menu or the submenu related to that particular feature.

SWITCHER

Quick access to all open applications and easy to close open applications.

THE PROMPT BOX

Displays various prompts in the soft key boxes. These are activated by pressing the appropriate left and right soft key under each one.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



YOUR MOBILE'S SCREEN

Icon	Function description
DE Inc.	Signal strength - shows the strength of your mobile's connection with the network indicates you are outside the video service area
	Battery - shows the level of battery shows little battery power left
*	Profile - Normal - notifies you of an incoming call or message. ☑ Silent. ☑ Vibrate only. ☐ Loud. ☐ Headset. ☐ Customised and ☑ Aeroplane mode
="	Message – appears when there are new text messages
	New messages – appears when there are new unread text and multimedia messages
R	Roaming – appears when you are out of your home area and have registered on a different network

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

15

MENU

YOUR MOBILE EXPLAINED YOUR MOBILE'S SCREEN

Icon	Function description	
	MMS – appears when there are new multimedia messages	
@	Email - appears when there are new emails	
	Push message – appears when there are new push messages	
≡ "	Sending message background	
П	HSDPA network is available	
	3G network is available	
E	EDGE network is available	
6	GPRS network is available	
•	Alarm clock – appears when the alarm clock is set	

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



16 MENU HOME BACK NEXT

YOUR MOBILE'S SCREEN		
Icon	Function description	
8	PDP (Packet data protocol) - PDP always on	
*	Bluetooth® activated - this icon indicates Bluetooth® is active and connected to another device. If Bluetooth® isn't connecting with the other device, this icon will be grey but not blue	
*	Hide – Bluetooth® is hidden from other Bluetooth® enabled devices	
	Memory full – appears when the mobile memory is nearly full. In this case it may be necessary to release some memory on your mobile	
超	Calendar – appears on the day when a calendar event exists	
t⊞	Video call forward	
t⊟	Voice call forward	
>	Minimise media player – music is playing in the background	

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

NEXT

17

MENU

SWITCHER

No more tedious trawling through menus to find the things you use most often. The Switcher gives you instant access to things like Google or Facebook via a scrollable menu at the bottom of the Home screen. It shows your most important applications and anything you've got open at the moment.

You can choose to add or take away icons from the carousel, so if you've got a favourite application you can get to it straight away.

When you're using an application and you call up the Switcher, the home icon appears in the centre.

If the phone is idle, the home icon doesn't appear (seeing as you're already there).

- To add an item to the Switcher customise area, select OPTIONS > Add items to switcher.
- To remove item from the Switcher customise area. select OPTIONS > Remove from switcher.
- To set Switcher mode to Active one touch Switcher, select OPTIONS > Activate one touch switcher.
- To access an open application, use left or right key to select the application and then press OK.

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM – PC

MOBILE MODEM - MAC

CONTINUE -->




18

HOME **MENU BACK NEXT**

SWITCHER

- To close a current application select OPTIONS > Close.
- To see the help about
 Switcher select
 OPTIONS > About switcher.

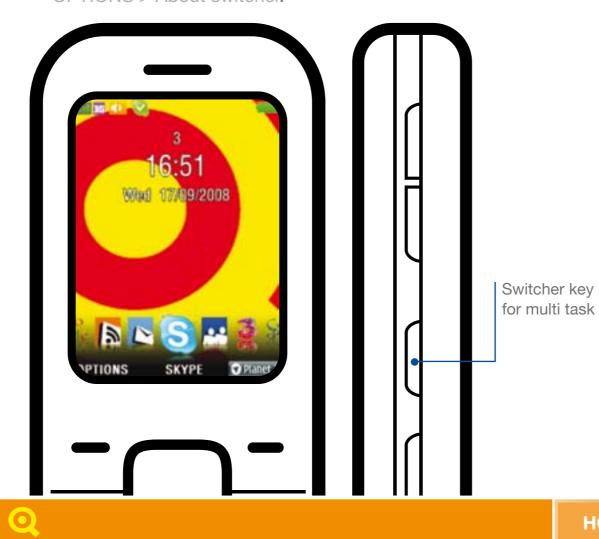

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

HOME

MENU

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





CAMERA

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





MEDIA PLAYER

- Now playing
- Artist
- Album
- Track
- Movies
- Playlist
- Recently playedRecently added
- 3MusicStore

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME

MENU

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





GAMES AND APPS

Applications

- Email on 3
- Facebook
- Skype
- WL MessengerTrial games from 3
- Homepage
- MShop
- Bejeweled
- PAC-MAN
- Tetris
- de Blob

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



Click below to see all of your mobile's menu options and what they include. Press MENU.





WEB

- Enter address
- Search

Google Yahoo!

- My bookmarks
- History
- Sign in
- Skype
- Saved pages
- Planet 3

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME

MENU

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.



MESSAGES

- New
- Inbox
- Email
- Email on 3

MESSAGES

- Facebook Inbox
- Pokes
- Requests
- Chats
- WL Messenger
- Outbox
- Drafts
- Sent
- Template
- Settings

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



Click below to see all of your mobile's menu options and what they include. Press MENU.





MY STUFF

- Music
- Photos - Movies
- Others
- Memory card (if memory card inserted)
- Skype

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME MENU BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





CALL LOG - All Calls

- Missed
- Dialled
- Answered
- Most used

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



MENU

BACK

NEXT

26

HOME

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

3

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

MENU

BACK

Click below to see all of your mobile's menu options and what they include. Press MENU.





YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

MENU

BACK

NEXT

29

HOME

Click below to see all of your mobile's menu options and what they include. Press MENU.





TOOLS

- Video camera
- Calendar
- Manage widgets
- Calculator
- Notepad
- PC Suite
- World time
- Stopwatch
- Voice recorder
- SIM Application (if supported)

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME

MENU

BACK

NEXT

Click below to see all of your mobile's menu options and what they include. Press MENU.





SETTINGS

- Profiles
- Bluetooth®
- Time & date
- Display
- Slide controls
- Network settings
- Advanced

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC



HOME

MENU

BACK

NEXT

MOBILE MODEM - PC

Your mobile gives you an ultra high speed internet connection for your laptop when you're out and about.

It's simple to use as your mobile has in-built drivers that will automatically install when you first connect up to your PC.

Just plug your mobile into your laptop and installation will start automatically. The Mobile Modem software will start up on your laptop screen and you will see a button saying Connect. Click this and you'll get online.



YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

CONTINUE -->



32

E MENU BACK NEXT


MOBILE MODEM - PC

The Mobile Modern software also shows you the strength of your mobile signal and how fast your internet connection is.



Offline

- Medium signal / medium
- Weak signal / slow
- Strong signal / fast

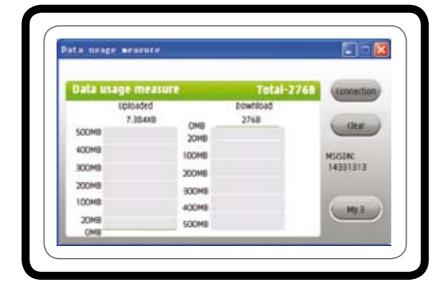

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM - PC

MOBILE MODEM - MAC

33


MENU **BACK**

HOME

MOBILE MODEM - MAC

Your mobile give you an ultra high speed internet connection for your laptop when you're out and about.

- Plug in your mobile to your MAC and the CD icon will show on your desktop. Double-click the INQ1 Driver Disc icon and select INQ1 USB Modem.pkg to install.
- Click Macintosh HD in desktop, select Applications > DialupKit.app.
- On the Mobile Modem window select Connect to go online.

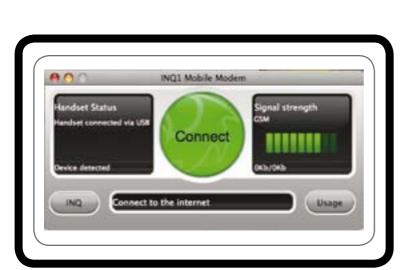

YOUR MOBILE EXPLAINED

GET TO KNOW YOUR HOME SCREEN

YOUR MOBILE'S SCREEN

SWITCHER

YOUR MOBILE'S MENU OPTIONS

MOBILE MODEM – PC

MOBILE MODEM - MAC

NEXT



INQMOBILE.COM

All your online favourites, right here.

The most widely used internet services are integrated into the heart of your mobile so you stay connected to them all the time, receiving updates when things change. That includes news updates, the status of your contacts on Facebook, messages and ebay notifications – instantly updated and always on.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

35

MENU

HOME

BACK

SIGN INTO SKYPE

With Skype on 3, you can make Skype-to-Skype calls from your mobile. Which means you can call people all over the world who use Skype, including other Skype on 3 users.

IF YOU HAVE A SKYPE ACCOUNT

- Scroll to screen and press OK.
- Select Sign in for existing users, then enter your username and password.
- Select Sign me in and set it as Automatically or Manually.
- If you select Automatically, you'll automatically sign into Skype each time you turn on your mobile.

IF YOU DON'T HAVE A SKYPE ACCOUNT

To create a new account:

- Scroll to screen and press OK.
- Scroll to Create account for new users and press OK.
- Read the Skype End User Licence, Terms of Service and Privacy Policy available at www.skype.com/eula, www.skype.com/tos, www. skype.com/privacy or on the CD version of this user guide, select Accept and enter a username, password and an email address on the Create account screen.
- Select OK to save the settings.

SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

MENU

IMPORTING SKYPE CONTACTS



BACK NEXT

Q

HOME

CHANGE SKYPE STATUS

- Scroll to screen and press OK.
- Select Options > Change status.

CHANGE SKYPE SIGN IN SETTING

- Scroll to screen and press OK.
- Select Options >
 Settings > Sign me in >
 Automatically / Manually.

SIGN OUT OF SKYPE

Q

- Scroll to screen and press OK.
- Select Options > Sign out.



SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

IMPORTING SKYPE CONTACTS

a

HOME

MENU

BACK

SKYPE STATUS ICONS

The Skype status icon you select will appear on your mobile's status bar. This can be seen by your Skype buddies.

You can choose to set your own status to:

- Online others will see you as online (default setting when you sign in)
- Away others will see you as 'away'
- Do Not Disturb others will see you as 'do not disturb'
- Invisible others will see you as offline

SKYPE

SIGN INTO SKYPE

CHANGE SKYPE STATUS

CHANGE SKYPE SIGN IN SETTINGS

SIGN OUT OF SKYPE

SKYPE STATUS ICONS

LINKS TO:

SKYPE CHAT

SKYPE CALLS

SKYPE CONTACTS

IMPORTING SKYPE CONTACTS

3

0

HOME

MENU

BACK

FACEBOOK

Facebook is completely integrated into your mobile. So, for example, your Facebook friends are integrated with your contacts book and you can send photos direct from your camera to Facebook. You can update your status, send messages, etc. Facebook is always on so you'll be aware of any changes to your inbox, pokes or requests.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK



FACEBOOK

SIGN IN

- Scroll to from the Home screen and press OK.
- Enter email address and password you use on Facebook or click on 'Need an account?'
- After you sign in for the first time, you will be asked if you want to add your Facebook friends to your Contacts, which we recommend you do. Then you will be able to see their status, their wall, send them messages and even give them a poke.
- To add friends to Contacts at a later date, select Friends and scroll (left) to the Mobile Friends tab.
 Select Edit mobile friends.

NOTE:

Once you are signed in the application will continually run

in the background until you sign out.

SIGN OUT

In Facebook press OPTIONS > Log out.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK

3

Q

HOME

MENU

BACK

NEXT

FACEBOOK ICONS		
Icon	Icon description	
F	New item / message / poke / friend request	
* f	Pending items to be sent from you to others	
=F	Facebook is currently updating	
f	Not logged in	
Û	Posting to Facebook (Status bar)	
	Logging in or downloading new content (Status bar)	

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SET UP FACEBOOK WIDGET

FACEBOOK MESSAGES AND POKES

IMPORTING FACEBOOK CONTACTS

UPLOADING PHOTOS TO FACEBOOK



HOME

MENU

BACK

WINDOWS LIVE MESSENGER

It's as easy to use Windows Live Messenger on your phone as it is on a computer. You can always be logged on, and you'll see new messages highlighted in the switcher and the status bar. Your Messenger buddies will be fully integrated in your Contacts.

SIGN IN

- Scroll to from the Home screen and press OK.
- Enter the email address and password you use for Messenger.

Within a few seconds you'll be able to import your buddies into the contacts book and start conversations.

SIGN OUT

From Windows Live Messenger press OPTIONS> Sign out.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SENDING MESSAGES USING WINDOWS LIVE MESSENGER

IMPORTING WINDOWS LIVE MESSENGER CONTACTS



HOME

MENU

BACK

NEXT

WLM Icons	
Icon	Icon description
2	Away
20	Blocked off
200	Blocked on
2	Busy
8	Off line
95	Off line mobile
	Messenger conversation

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

SENDING MESSAGES USING WINDOWS LIVE MESSENGER

IMPORTING WINDOWS LIVE MESSENGER CONTACTS



NEXT

EBAY

Whenever you look at eBay on your mobile you'll see an up to date view as it automatically refreshes. You can receive outbid alerts and notifications that auctions you're watching are close to ending.

SIGN IN

- Scroll to From the Home screen and select OK.
- Enter your eBay user ID and password.
- Within a few seconds your current Watches, buying and selling views will update.

SEARCH EBAY

 Select OPTIONS. This even remembers your previous 5 searches.

Ebay might not be available at launch.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

3

Q

HOME

MENU

BACK

NEXT

LAST.FM

Last.fm is the world's largest social music platform, and a buzzing online music community. The 'scrobbling' function means that the music you're listening to is sent to Last.fm and added to your music page, so you can keep track of your favourites and your friends can see what you're into. And now you can scrobble from your mobile when you're listening to the music tracks you have stored on it.



INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

NEXT

LAST.FM

SIGN IN

Q

- Press from the Home screen > MEDIA PLAYER > OPTIONS > Last.fm > Log in.
- This swill appear in the status bar when the Last.fm application is scrobbling.

SIGN OUT

 Press From the Home screen > MEDIA PLAYER.
 Select OPTIONS > Last.fm > Log out.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

LINK TO:

PLAY MUSIC

3

46

Feeds are basically a way of letting you know every time there's a change on a website you like, as long as it provides an RSS feed. That could mean updates on news, sports scores, entertainment gossip – whatever you're interested in. It's easy to choose a new feed and set it up. You can also set how often you want to be updated with any changes on the website.

ACCESS TO FEEDS

 Press from the Home screen, and select FEEDS.

ADD A FEED

- Press MENU from the Home screen and select FEEDS.
- Select OPTIONS > Add a feed > OK.
- To add a web feed from your browser, look for the RSS icon . When you see it use the OPTIONS menu to add the feed.
- Alternatively, you can enter a feed URL manually and select ADD.

VIEW A FEED

- Press MENU from the Home screen and select FEEDS > VIEW or select OPTIONS > View feed.
- Select GO TO to go to the browser, where you'll see the full content of the website that sent the feed.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

UPDATE A FEED

- Press from the Home screen and select FEEDS > OPTIONS > Update > Selected to update the single focus feed or select OPTIONS > Update > All to update the content of all feeds manually.
- While select OPTIONS > Set auto update to update the content of all feeds automatically. You can also set to auto update the feeds as Once an hour, Once a day, Once a week or Never.

MARK A FEED AS READ

- Press From the Home screen and select FEEDS > OPTIONS > Mark as read to mark the selected feed as read.
- To mark all feeds as read, select OPTIONS > Mark all as read.

ASSIGN A FEED TO CONTACTS

- Press MENU from the Home screen and select FEEDS > MY FEEDS > OPTIONS > Assign feed to contact.
- Use (up) and (down) to select the desired contact and select MARK > DONE > YES to assign the feed to the contact.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

EDIT A FEED

 Press from the Home screen and select FEEDS > OPTIONS > Edit.

DELETE A FEED

 Press from the Home screen and select FEEDS > OPTIONS > Delete feed > YES.

INTERNET SERVICES

ACCESS TO FEEDS

ADD A FEED

VIEW A FEED

UPDATE A FEED

MARK A FEED AS READ

ASSIGN A FEED TO CONTACTS

EDIT A FEED

DELETE A FEED

3

Q

HOME

MENU

BACK

SET THE HOME SCREEN WIDGETS

With the widgets function, you can bring all the things you love right to your desktop – things like the weather, RSS, Yahoo search, Clock, Google search.

- Press (up) from the Home screen and select Click to add widgets > ADD to add a widget directly. The phone has five preset widgets for you to select: RSS Widget, Clock Widget, Yahoo Search Widget, Weather Widget, Google Search Widget.
- On the Manage widget screen, use (up) or (down) to scroll to the desired widget, then press OK to select it, or you can select OPTIONS > Select widget, then click DONE and the widget will appear on the Home screen.
- To search for the desired widget, you can enter the

- widget name in the search bar until the widget is displayed. When you press a key, such as 2 , you will find widget names that begin with 'A', 'B' or 'C'. The next key you press continues to narrow the search.
- Or you can select OPTIONS
 > View widget to view the details of the selected widget or select OPTIONS
 > Delete widget > YES to delete it.

NOTE:

If the widget is showing on the Home screen, please deselect it at first before deleting it.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

3

USING WEATHER WIDGETS

By supplying location information, you can view the weather forecast for 5 days or 2 days.

- After selecting Weather Widget on the manage widgets screen, the weather widget will appear on the Home screen. You can add a new weather location in the search bar, then click SEARCH, and the phone will display the related locations. Press OK, and the weather forecast of the selected location will shown on the screen.
- To add more locations, press OPTIONS > Add new location > OK, then add the additional location in the search bar and click SEARCH. The weather information of the additional location will also be shown on the screen. Press (left) or (right) to switch between the different locations.
- To remove the unwanted location, when the weather forecast of the selected location displays on the screen. Press OPTIONS > Remove this location > OK.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

3

USING CLOCK WIDGETS

With the clock widget, you can adjust the time and date, add or remove time zone, set the alarm and clock, etc.

- To set an alarm, after selecting Clock Widget on the Manage widget screen, the clock widget will appear on the Home screen. Select the clock widget and click OPTIONS > Alarm, scroll to Alarm1. Press OK to set your alarm. After setting, select SAVE. Click Cancel all to turn off the alarm function.
- To adjust the time and date, highlight the clock widget from the Home screen and click OPTIONS > Adjust time and date, then enter the date and time and select the desired time format and date format. After editing, select SAVE.
- To add a time zone, highlight the clock widget from the Home screen and select OPTIONS > Add time zone. then use (up) or (down) to select the desired location or you can enter the location name in the search bar until the location is displayed. Click ADD > OK, and the time of the selected location will display on the Home screen. To add more time zones, repeat this step and use (left) or (right) to switch between different time zones.

INTERNET SERVICES

SET THE HOME SCREEN WIDGETS

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

CONTINUE -->



INTERNET SERVICES

- To remove a time zone, highlight the clock widget from the Home screen and use (left) or (right) to scroll to the desired time zone, then click OPTIONS > Remove time zone.
- To set a clock, highlight the clock widget from the Home screen and click OPTIONS
 > Analogue Clock/Digital Clock and press OK.

SET UP A FACEBOOK WIDGET

You can set Facebook to appear on your mobile's Home screen, allowing you to see updates as they happen. **SET THE HOME SCREEN WIDGETS**

USING WEATHER WIDGETS

USING CLOCK WIDGETS

SET UP A FACEBOOK WIDGET

LINK TO:

FACEBOOK

3

PLANET 3

From I planet you can...

Watch music videos and goals, play games and much more. It's free to browse and we'll tell you how much they cost before you download them.



Email & Social Networks - Meet friends, chat, or check out each other's pics and videos with applications such as Eyevibe.



Music - Fill your phone with tracks galore at the 3 MusicStore.



News & Info - Keep up with what's going down. Get the news from ITN, the BBC and others, as well as weather, horoscopes, magazines and more.



Games & Puzzles - Whether it's brain (s)training, old arcade favourites or all-action adrenaline fests - we've got the latest releases.



Sport - All the action across all the major sports, with updates from Sky Sports, Football365, the BBC and many others.



Entertainment - Find out what's on at the cinema, or watch your favourite TV from the BBC, ITV, MTV, Kerrang, Kiss and loads of others on your mobile.

CONTINUE -->



SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3



Q

HOME

MENU

BACK

NEXT

PLANET 3

From Thanet you can...



Restricted – If you're over 18, this is where you can access adult entertainment, gambling, horror and adult comedy.



Travel & Guides – Where to go to keep an eye on the jams, check your directions, pick the place to meet your mates, or even book a cab or a holiday.



Personalise & Downloads – loads of useful links, to Dialtunes, Realtunes, Pix, all sorts of applications and loads more. Everything you need to help you get your mobile looking and working just the way you like it.



Shopping & Lifestyle – lets you put in or check bids on eBay, order CDs and stuff on Amazon, look for a new job or even a new home, and generally keep your life ticking along.

All this plus news, showbiz, movie trailers, comedy and more through **Plants**.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3



EMAIL ON 3

Email on 3 pushes all your emails straight to your phone personal and work. Compatible with almost any email service, including Microsoft Hotmail, Google Mail and Yahoo! Mail, as well as most corporate work email systems (Microsoft Exchange and Lotus Domino). Add up to 7 email accounts never miss that important email again. Set up push schedules, so you're in control of your email, instead of it being in control of you.

INTERNET SERVICES

SKYPE

FACEBOOK

WINDOWS LIVE MESSENGER

EBAY

LAST.FM

FEEDS

WIDGETS

PLANET 3

HOME

MENU

BACK

NEXT

Right. Let's get some basic functions sorted out.

Making and receiving calls is as easy as you'd expect. Conference calls, Caller ID, Call Divert... take a look at the list right for the complete picture.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

MENU

VIDEO CALL SETTINGS

CALL LOG

d

57

CK

BACK

NEXT

HOME

MAKE VOICE AND VIDEO CALLS

To make a call from the Home screen:

- Enter the phone number.
- Press to make a voice call.
- Select OPTIONS > Video call > OK for a video call.

MAKE A CALL FROM CONTACTS

- Press (down).
- Scroll to your preferred contact and press for voice call.
- Scroll to your preferred contact and select OPTIONS
 Call > Video call > OK for a video call.

MAKE SKYPE-TO-SKYPE CALLS

- Scroll to screen and press OK.
- Scroll to your preferred contact.
- Press for Skype-to-Skype calls.

MAKE EMERGENCY CALLS

Enter the appropriate emergency number for your location then press ____.

RECEIVE CALLS

To answer a call press

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

LINK TO:

SET UP SKYPE

ADD A SKYPE CONTACT

IMPORT A SKYPE CONTACT



REJECT A CALL

Press .

END A CALL

Press to end a call.

CONFERENCE CALLS

While on a call, you can make another call or receive a second call and talk with up to three people at the same time.

- Enter the second number and press to make another call.
- Press OPTIONS > Conference.

MAKE A CALL FROM CALL LOG

- Press from the Home screen and scroll to your preferred contact.
- Press for a voice call.

CALL DIVERT

Lets you transfer incoming voice and video calls to a specified number. For video calls, it must be to another video mobile number.

- Press MENU.
- Select SETTINGS > Advanced > Calls.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG



59

CALL FEATURES

During a call select Options to access the following features:

- Hold: select to place the caller you are talking to on hold. Select Retrieve to remove the call from hold.
- Mute: select to turn off the microphone so that you can hear the caller but the caller cannot hear you. Select Mute off to switch on the microphone again.
- Call log: select to view your call log list.
- Contacts: select to view your Contacts list.
- Messages: select to access the Messages menu.

SHOW MY NUMBER

Enables you to choose whether your mobile number will be hidden or not during a call.

- Press MENU.
- Select SETTINGS >
 Advanced > Calls > Call
 settings > Show my number.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG

e e

VIDEO CALL SETTINGS

Enables you to change settings for video calls.

- Press and select
 SETTINGS > Advanced >
 Calls > Video call settings.
- My video size: allows you to set the size for your own video. You can choose either large or small.
- My video position: allows you to set the position of your image on the display. You can choose either left or right.
- Hide my video: allows you to choose whether to display your own video on the screen.
- Block my video: enables you to allow or stop the sending of your own video to the other party.

CALLS

MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

MENU

VIDEO CALL SETTINGS

CALL LOG



HOME

BACK

CALL LOG

To view call log:

From the Home screen, press

From the call log you have a number of options available. Choose your preferred contact, and select OPTIONS to access any of the following:

Options	Functions
View detail	Displays the status, time, name, number and picture (the picture will be displayed only when the number has been saved in the contacts and assigned the picture to the number) of this call.
Call	Makes a voice or video call to the selected number.
Send message	Send a message or an email to the selected number.
Skype	Skype call or Skype chat to the selected number.
Create contact	Creates a new contact, and the contact will be added to the Contact list automatically.
Add to contact	Adds the number to the contact which has been saved in Contact list.
Delete	Deletes the selected contact from the list.
Delete all	Deletes all contacts in current list.

 Press (left) or (right) to switch between ALL CALLS / MISSED / DIALLED / ANSWERED / MOST USED. MAKE VOICE AND VIDEO CALLS

MAKE A CALL FROM CONTACTS

MAKE SKYPE-TO-SKYPE CALLS

MAKE EMERGENCY CALLS

RECEIVE CALLS

REJECT A CALL

END A CALL

CALLS

CONFERENCE CALLS

MAKE A CALL FROM CALL LOG

CALL DIVERT

CALL FEATURES

SHOW MY NUMBER

VIDEO CALL SETTINGS

CALL LOG



62

HOME MENU

Get connected by text, Skype, email, Facebook and Windows Live Messenger

How do you like to keep in contact? It's all here. Whether you prefer texting, Skype calls, email, Facebook or Windows Live Messenger. Or all of them!

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE **MESSENGER**

NEXT

TEXT MESSAGES

- Press MENU from the Home screen and select MESSAGES and select New > Message.
- Enter the mobile number at To(1) or press CONTACTS to select preferred contact.
- Select Message and write the message. Select SEND to send the message.

SKYPE CHAT

- Scroll to screen and press OK.
- Scroll to select the preferred Skype contact, then select Options > Start chat.
- Write your message and select Send.

You can view your Skype chat log by pressing From the Home screen. Select MESSAGES > Chats.

Skype chat is a network dependent feature.

MULTI CHAT

To add participants to a chat select Options > Add participants and select from the list.

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



CREATE A NEW MULTIMEDIA MESSAGE

- Press from the Home screen and select MESSAGES > New > Message.
- Enter the mobile number or email address at To(1).
 Select Message > OPTIONS > Insert picture / video / sound and select a file.
 Select SEND to send the message.

TAKE A PICTURE OR VIDEO AND SEND IT

- From Home screen press on the right of your mobile.
- Select OPTIONS > Capture mode to switch between camera and video mode.
- Select BACK and press to take photo or to start video recording, and select STOP to stop video recording.
- Select SEND to send the message and follow the menu.

TEXT, CHAT, MULTIMEDIA AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



65

SET UP YOUR EMAIL

- Press and select Messages > Email on 3 and press OK.
- Select Next to get started.
- Select the email service you want to use with Email on 3 – Hotmail, Google Mail or Yahoo! Mail.
- Select your chosen service, enter your username and password.

WORK EMAIL

- For work emails, choose whether you want to use Outlook Web Access or a Workplace Connector.
- If you choose OWA, simply enter the address you use for your OWA service then the username and password you use to login.

 If your work doesn't offer OWA, then you'll need to download a separate application called a Workplace Connector.
 Follow the instructions on screen to do this.

OTHER EMAIL SERVICES

 If you use a different email service than from those mentioned, then select More.

You may need some details from your email provider, such as POP / IMAP server address. You can easily get these from your provider, usually from their website.

 Enter your email address and login details.

Remember you can add up to seven email accounts using Email on 3.

TEXT, MULTIMEDIA, EMAIL AND SKYPE CHAT

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



WRITE AN EMAIL MESSAGE

- Press and select EmailEmail on 3 > OK.
- Select the account from which you want to send an email and press Action.

You can either respond to an existing email, or send a new email.

 Enter the recipient's email address, subject and the text of your email then press Send.

TEXT, MULTIMEDIA, EMAIL AND SKYPE CHAT

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

3

ENABLE TEXT SELECTION

While viewing a text message, multimedia message, email or browser page, you can activate the hyperwords function, and text can be copied, shared or pasted into other applications. Take viewing a text message for example.

- Press from the Home screen and select
 MESSAGES > Inbox.
- Scroll to the desired message and select VIEW > OPTIONS > Copy > OK.
- Move the cursor to the text you want to copy, select START, then press and hold
 (up/down/left/right navigation key).
- After selecting, select STOP
 OK. Then select OPTIONS
 Paste > OK.

Select Search to search for the same text on Google Maps, on Google, on Amazon, on eBay or references, or you can select Paste to paste the selected text on other applications, such as Message, Email, Notepad, Calendar to do or Calendar event.

TEXT, CHAT, MULTIMEDIA, AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER



SEND A FACEBOOK MESSAGE

- Scroll to from the Home screen and press OK. Select Friends > then select the friend you wish to contact.
- Select Options > Send Message.

POKE A FRIEND

- Scroll to from the Home screen and press OK. Select Friends > then select the friend you wish to poke.
- Select Options > Poke.

TEXT, CHAT, MULTIMEDIA, AND EMAIL

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

LINK TO:

FACEBOOK SECTION

IMPORT FACEBOOK CONTACTS



69

Q

HOME

MENU

BACK

UPLOAD PHOTOS TO FACEBOOK FROM CAMERA

• Take a picture, select Send, scroll down to Facebook and select OK. Your photo will be sent to Facebook.

FROM MY STUFF

Browse to the photo that you want to send to Facebook, select OPTIONS > Send as > Facebook and select OK.

TEXT, CHAT, MULTIMEDIA, **AND EMAIL**

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING **WINDOWS LIVE MESSENGER**

LINK TO:

FACEBOOK SECTION

IMPORT FACEBOOK CONTACTS



70

Q

HOME

MENU

BACK

SEND MESSAGES USING WINDOWS LIVE MESSENGER **FROM CONTACTS**

From the contacts book you can select a Windows Live Messenger contact, then select OPTIONS > Messenger > Chat.

FROM WINDOWS LIVE **MESSENGER**

 Scroll to sfrom the Home screen and press OK. Scroll to a chosen contact and select OK.

TEXT, CHAT, MULTIMEDIA, **AND EMAIL**

TEXT MESSAGES

SKYPE CHAT

MULTI CHAT

CREATE A NEW MULTIMEDIA MESSAGE

TAKE A PICTURE OR VIDEO AND SEND IT

SET UP YOUR EMAIL

WRITE AN EMAIL MESSAGE

ENABLE TEXT SELECTION

SEND A FACEBOOK MESSAGES

POKE A FRIEND

UPLOAD PHOTOS TO FACEBOOK

SEND MESSAGES USING WINDOWS LIVE MESSENGER

LINK TO:

WINDOWS LIVE MESSENGER SECTION

IMPORTING WINDOWS LIVE MESSENGER CONTACTS

MENU



71

BACK

What's everyone up to.

Imagine that your address book came alive and told you what your friends were up to and when they were online. That's what's your contacts can do. Instead of a static list you've got a live, constantly updating part of your phone. Information is pulled from Skype, Facebook and Windows Live Messenger to let you know who's online, what people are up to, what's going on.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT


IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS



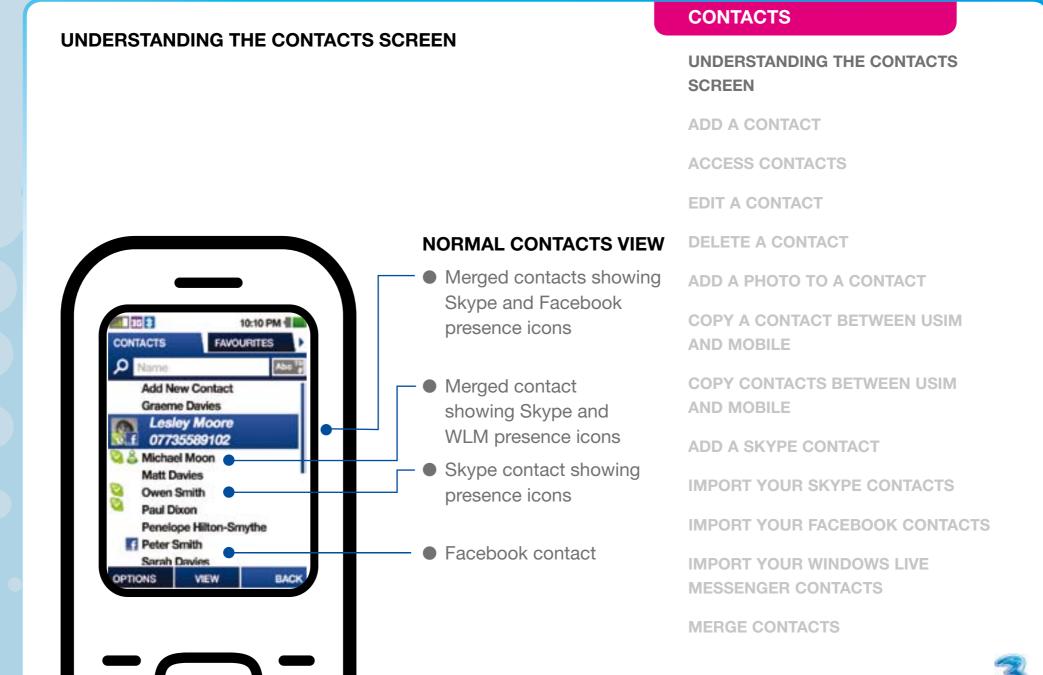

73

ADD A CONTACT

- Enter a contact number from the Home screen and select OPTIONS > Create contact.
- Enter name and other details and select SAVE.

ACCESS CONTACTS

- Press (down) from the Home screen.
- Scroll to the desired contact and select VIEW.

EDIT A CONTACT

- Press (down) from the Home screen.
- Select OPTIONS > Manage contacts > Edit to edit your contact and then press SAVE.

DELETE A CONTACT

- Press (down) from the Home screen.
- Scroll to the contact and press > Yes to delete the contact.

ADD A PHOTO TO A CONTACT

You can add a photo to a contact stored on the mobile (not on your USIM card).

- Press (down) from the Home screen.
- Scroll to highlight the desired contact, select OPTIONS > Manage contacts > Edit.
- Scroll to Picture > OPTIONS
 > From pictures and select
 your preferred image or
 Picture > OPTIONS > New
 photo to take a photo. Press
 OK to save the setting.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS



COPY A CONTACT BETWEEN USIM AND MOBILE

- Press (down) from the Home screen.
- Scroll to the desired contact and select Options > Manage Contacts > Move > Copy to your USIM / Copy to your phone. In this case, only one contact will be moved / copied at the same time.

COPY MORE THAN ONE CONTACT BETWEEN USIM AND MOBILE

- Press (down) from the Home screen.
- Select Options > Manage
 Contacts > Mark > Mark all
 or Mark > Options > Move >
 Copy to your USIM / Copy
 to your phone.

ADD A SKYPE CONTACT

- Scroll to S from the Home screen and press OK.
- Select Options > Add a contact to enter the contact's Skype name and select Save.

IMPORT YOUR SKYPE CONTACTS

You can save your Skype contacts onto your mobile along with your other contacts.

- Press (down) from the Home screen.
- Select OPTIONS > Skype > Get contacts from Skype.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINK TO:

SET UP SKYPE

SKYPE CALLS



Q

HOME

MENU

BACK

IMPORT YOUR FACEBOOK CONTACTS

When logging into Facebook for the first time you are presented with an option to import our Facebook contacts into the Contact book. If you press OK all your Facebook friends will be imported into your contacts book. If there is not enough room left in your contacts book for all your friends you will be given the option to choose who you would like to import.

TO IMPORT YOUR FRIENDS AT A LATER DATE

 Select Friends from the Facebook application and press (right) to the Mobile Friends tab. Select Edit mobile friends to import your contacts book.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINK TO:

FACEBOOK

FACEBOOK MESSAGES AND POKES



NEXT

76

Q

HOME

MENU

BACK

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

When logging into Windows Live Messenger for the first time you are presented with an option to import Windows Live Messenger contacts into the Contact book. If you press OK all your Windows Live Messenger friends will be imported into your contacts book. If there is not enough room left in your contacts book for all your friends you will be given the option to choose who you would like to import.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS

LINKS TO:

WINDOWS LIVE MESSENGER SECTION

MESSAGING USING WINDOWS LIVE MESSENGER



NEXT

77

MERGE CONTACTS

Combine your friends' accounts for Skype, WLM or Facebook with their address book details.

- Press (down) from the Home screen.
- Make sure you're in the CONTACT LIST tab, otherwise press (right) to get there.
- Select Options > Merge Contacts.
- Mark the contact whose name you want to keep.
 Then mark his or her Skype account too. Select DONE
 NO, or continue to merge another contact.

CONTACTS

UNDERSTANDING THE CONTACTS SCREEN

ADD A CONTACT

ACCESS CONTACTS

EDIT A CONTACT

DELETE A CONTACT

ADD A PHOTO TO A CONTACT

COPY A CONTACT BETWEEN USIM AND MOBILE

COPY CONTACTS BETWEEN USIM AND MOBILE

ADD A SKYPE CONTACT

IMPORT YOUR SKYPE CONTACTS

IMPORT YOUR FACEBOOK CONTACTS

IMPORT YOUR WINDOWS LIVE MESSENGER CONTACTS

MERGE CONTACTS





INQMOBILE.COM

Let's play.

Take pictures, play music, record videos or pick from a stunning choice of games. The media centre is where you'll find a whole array of entertaining stuff that your mobile can do for you.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

PLAY MUSIC

- Press From the Home screen.
- Select MEDIA PLAYER > Artist,
 Album, Track, Recently added, etc.



MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

3

HOME MENU

BACK

PLAY MUSIC

The icons are:

Icon Functions

Indicates the current volume status, press Side Up key to increase the volume and press Side Down key to decrease the volume.

Shuffle play.


Press (down) to play the next file.

Press (up) to play the previous file.

Press to switch between Play and Pause.

Press (left) to fast reverse.

Press (right) to fast forward.

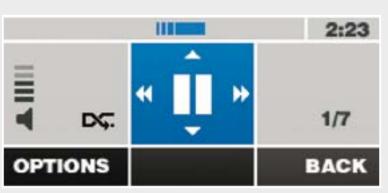

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

LINK TO:

LAST.FM



HOME MENU

BACK

TAKE PHOTOS OR MAKE VIDEO CLIPS

- From the Home screen, press on the right of your mobile.
- Select OPTIONS > Capture mode to switch between camera and video mode.
- Select BACK and press to take a photo or to start video recording, and select STOP or Camera key to stop video recording.
- For additional camera features, select OPTIONS by pressing the left soft key.

VIEW YOUR PHOTOS OR VIDEO CLIPS

- Press MENU.
- Select MY STUFF > Photos
 to view photos or MY
 STUFF > Movies > Video rec
 to view movies.
- Select your preferred picture or video clips and press OK to view or play.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

LINK TO:

UPLOADING PICTURES TO FACEBOOK

TAKE A PICTURE OR VIDEO AND SEND IT

3

НОМЕ

MENU

BACK

ACCESS GAMES AND APPS

Your mobile supports Java so you can download games from Planet 3 Games, and play them on your mobile.

Press MENU and select
 GAMES AND APPS.

DOWNLOAD GAMES AND APPS

Select Homepage to access and download new applications and games for your mobile.

MEDIA AND GAME CENTRE

PLAY MUSIC

TAKE PHOTOS OR MAKE VIDEO CLIPS

VIEW YOUR PHOTOS OR VIDEO CLIPS

ACCESS GAMES AND APPS

DOWNLOAD GAMES AND APPS

3



Those useful extras.

Your mobile has a bunch of useful extra features, including a Calendar with alarm to remind you of specific appointments, alarm clock and a way to lock your mobile.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

HOME

MENU

BACK

NEXT

Q

84

SET AN ALARM

You can set the music you wish to wake up to as well as the volume, and it will even ring when the phone is set to silent or turned off.

- Press MENU.
- Scroll to select ALARM > Alarm1. Press OK to set your alarm.
- After setting, select SAVE.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

3

Q

HOME

MENU

BACK

CALENDAR

You can use the calendar to keep track of important meetings.

To create a new event/task:

- Press MENU.
- Scroll to select TOOLS > Calendar.
- Scroll to your preferred date. Press VIEW and select YES to create a new calendar entry.
- Select New event / New to do > OK.
- Enter the details and select SAVE.

CALCULATOR

To use the calculator:

- Press MENU.
- Scroll to select TOOLS > Calculator.
- Use to Add, Multiply, Divide or Subtract and
 to select Equals. Press 🖪 to delete a number and *** for decimal point.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

Q

MENU

BACK

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

ACTIVATE AND CHANGE YOUR USIM PIN

Your PIN (Personal Identification Number) code protects the information stored on your USIM.

To activate your USIM PIN:

- Press MENU.
- Scroll to select Settings > Advanced > Security settings > Activate PIN > Enable.
- Enter the default PIN 0000, and press OK.

CHANGE YOUR USIM PIN

Once you have activated your PIN, each time you turn on your mobile, you'll need to enter your PIN.

- Press MENU.
- Scroll to select SETTINGS > Advanced > Security settings > Change PIN.
- Enter your default PIN (0000), press OK and enter your new PIN (4-8 digit) twice.
- Select OK to save the setting.

Caution

- If you enter an incorrect PIN code three times in succession, your USIM and mobile functions will be locked. For more details, please refer to SAFETY AND MAINTENANCE.
- If you do not know the correct PIN code and PUK code, please contact your operator or network service provider.



Q

MENU

BACK

NEXT

87

HOME

NETWORK SETTINGS

You can also manually select the network you wish to be on when travelling abroad.

- Press MENU.
- Scroll to select SETTINGS > Network settings > Search > Manual.
- Select your preferred network and press SELECT.

MASTER RESET

The Master reset function enables you to reset your mobile back to the factory settings.

- Press MENU from the Home screen.
- Scroll to select SETTINGS > Advanced > Master reset.
- Enter the default handset code 0000 and press OK.

Press to mark the preferred menu, then select OPTIONS > Reset > YES to reset the marked settings. To reset all factory settings, select OPTIONS > Reset all > Yes.

For more details about master reset settings, select OPTIONS > Guide.

You can change this code by:

● Press MENU > SETTINGS > Advanced > Security settings > Lock your phone > Change your code.

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

88

Q

HOME

MENU

BACK

EXTRA FEATURES AND SECURITY

SET AN ALARM

CALENDAR

CALCULATOR

ACTIVATE AND CHANGE YOUR USIM PIN

CHANGE YOUR USIM PIN

NETWORK SETTINGS

MASTER RESET

LANGUAGE

LANGUAGE

This function allows you to choose the language for the display of your mobile. Several options are available.

- Press MENU.
- Scroll to select SETTINGS > Advanced > Language settings > Language.
- Press (up) or (down) to select the preferred language and select OK.



Q

HOME

MENU

BACK

How to get connected.

Keep track of your appointments and updates of your contacts by copying them to your PC and connect to your friends' mobiles with Bluetooth®.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION

CONNECT WITH A BLUETOOTH® HEADSET

Before making calls with a Bluetooth® headset, you must first set up the headset to work with your mobile. Once you've done this, your mobile remembers the headset's ID. You can find more details in your Bluetooth® headset user guide.

To connect with a Bluetooth® headset:

- Press MENU.
- Scroll to select SETTINGS
 Bluetooth > Switch on >
 SELECT to switch on the
 Bluetooth® function.
- Scroll to Search for new devices > SELECT.

Make sure that your headset's Bluetooth® is switched on. See your Bluetooth® headset user guide for how to connect your mobile and headset.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION



91

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH®

You can transfer files from your mobile to PC or to other mobiles via Bluetooth®.

- Press MENU.
- Scroll to select MY STUFF and select your preferred file.
- Select OPTIONS > Send as > Bluetooth > Select SEARCH and select the device you want to transfer to, then follow the instructions.

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

Connect your mobile and PC using the USB cable. You don't need to install any drivers on your PC. You'll need to make sure that your mobile's memory card is inserted.

- First insert the USB cable into your handset and your PC.
- Select Memory card transfer.
- Open your media folder on your PC. Then drag and drop your preferred tracks between your PC and mobile.

CONNECTIVITY SETTINGS

CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE USING BLUETOOTH

TRANSFER FILES BETWEEN YOUR MOBILE AND PC

PC SYNCHRONISATION



NEXT

92

CONNECTIVITY SETTINGS

Calendar, SMS and files are up to date and match each other.

PC SYNCHRONISATION

made for your mobile.

You can set up your mobile and PC so that the Contacts,

For more information, please refer to the PC sync software


CONNECT WITH A BLUETOOTH HEADSET

TRANSFER FILES FROM YOUR MOBILE **USING BLUETOOTH**

TRANSFER FILES BETWEEN YOUR **MOBILE AND PC**

PC SYNCHRONISATION

93

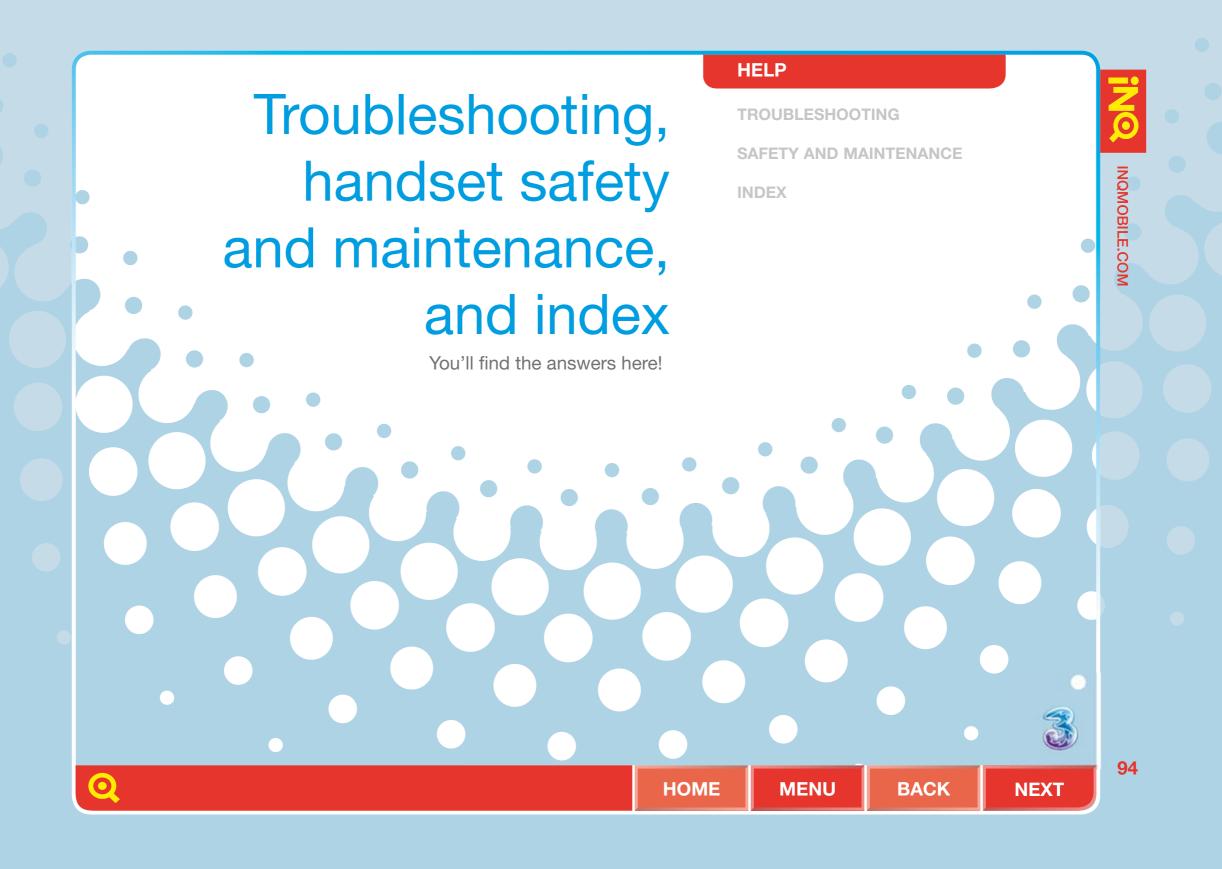

INQMOBILE.COM

TROUBLESHOOTING

Having problems with your mobile? See below for a list of common questions. If we can't answer your questions here, then just call us on 333 from your mobile or 0870 7330 333 from another mobile.

THE MOBILE CAN'T BE SWITCHED ON

POSSIBLE REASON

SOLUTION

You are not holding down for long enough.

Press and hold.

The battery power is used up.

Charge the battery.

Incorrect battery insertion.

Check and insert the battery correctly.

THE MOBILE IS SWITCHED OFF AUTOMATICALLY

POSSIBLE REASON

SOLUTION

Low battery power.

Charge the battery.

THE CALL VOLUME IS TOO LOW

POSSIBLE REASON

SOLUTION

The call volume has been set too low.

Increase the call volume.



l

HOME

MENU

HELP

INDEX

TROUBLESHOOTING

SAFETY AND MAINTENANCE

BACK

TROUBLESHOOTING

THE PERSON YOU ARE CALLING CANNOT HEAR YOUR VOICE

POSSIBLE REASON

Call status has been set to mute.

The microphone is too far from the sound source.

SOLUTION

Turn off the mute function on the call menu.

Put the mobile's microphone closer to your mouth.

THE INCOMING CALL DOESN'T RING

POSSIBLE REASON

The mobile has been set to silent mode.

The ring volume has been set too low.

The call diverting option has been set.

SOLUTION

Reset the ring type in Profiles to Normal or Loud.

Increase the volume in Profiles.

Cancel call diverting in Settings.

THE BATTERY CAN'T BE CHARGED

POSSIBLE REASON

The battery is worn out and the charging time takes too long.

The battery doesn't connect well to the mobile.

SOLUTION

Charge when the mobile prompts low battery.

Ensure the battery has been inserted correctly.

SAFETY AND MAINTENANCE

HELP

INDEX

TROUBLESHOOTING



96

0

HOME

MENU

BACK

TROUBLESHOOTING

CAN'T DISPLAY NETWORK

POSSIBLE REASON

The USIM card has been incorrectly inserted.

The phone has been set to Airplane Mode.

SOLUTION

Refer to the USIM card insertion method.

Change the setting when it is safe to do so.

THE MOBILE DOES NOT RECOGNISE THE MEMORY CARD

POSSIBLE REASON

The memory card has been incorrectly inserted.

The memory card has been damaged.

SOLUTION

Insert the memory card correctly according to instructions in the user manual.

Replace the memory card.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX



USAGE ENVIRONMENT

Please remember to obey the relevant rules and regulations whenever you use your mobile. This will help keep you and others around you safe.

- Switch off your mobile when close to petrol stations, bunkers, chemical factories or explosive areas and follow any safety signs and instructions there.
 Breaking any rules could cause explosion or injury.
- Using the mobile in a plane can cause interference and danger to an aircraft navigation system and network. You must switch off your mobile before boarding and make sure your mobile is switched off during the whole flight.
- Please place the mobile somewhere safe and don't put it on a seat or in places where it could fall and break. To keep safe on the road, please don't use the mobile when you're driving. If you must use it, please use the mobile on hands-free kit with a fixed cradle (and make sure you still exercise proper control of the vehicle) or stop at a safe location by the roadside before making or answering a call.

MEDICAL DEVICES

Please switch off your mobile near electronic medical equipment (such as heart pacemakers, hearing aids etc). Most medical devices can shield the mobile's RF signal, but some can't. If you have any questions or need to find out more, please consult your doctor or medical device manufacturer.

PACEMAKER

Pacemaker manufacturers advise keeping a distance between your mobile and heart pacemaker of at least 6 inches (15.3cm), or the mobile could interfere with the pacemaker.

Anyone wearing a pacemaker should do the following:

- Always keep a distance between the mobile and pacemaker of more than 6 inches (15.3cm) when the mobile is switched on.
- Avoid carrying the mobile in a breast pocket.
- Listen to the mobile using the ear on the opposite side of the body to the pacemaker.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

Caution

If you are unsure as to the level of interference, please switch off the mobile at once and consult a doctor immediately.



HEARING AIDS

Phones may cause interference to some hearing aids. If there is any interference, please get in touch with the manufacturers of the hearing aid immediately.

EMERGENCY CALLS

It is impossible to ensure your mobile can be connected successfully in every situation, so please don't rely purely on your mobile as the only means of communication in an emergency (such as medical first aid).

MAKE AN EMERGENCY CALL

If your mobile is switched off, please turn on your mobile and check whether the network signal is strong enough.

You can't use Skype to make emergency calls.

- 1. Input the local emergency number correctly (such as 999). Different areas have different emergency numbers.
- 2. Press to call.

Caution

While making an emergency call, you should try to provide all important information correctly. Don't end the call without being told to do so by the emergency services.

PASSWORD ACCESS

Your mobile and USIM card can be protected by a password to stop others using it without your permission.

PHONE PASSWORD

This protects your handset from unauthorised use by other people. The preset password is 0000.

Please modify your handset password as soon as possible and keep it secret.

PIN CODE

This is a personal identification code which is used to protect the USIM card from unauthorised use by other people. Generally, the PIN code and USIM card are provided together. After activating the PIN code, you can use the handset normally by correctly inputting your password each time.

Caution

If you input your PIN code incorrectly three times in succession, the USIM card will be locked. You will need to input the PUK code to unlock it. (If you don't have a PUK code, please contact your operator and USIM card provider for this information. Please input all characters.)

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

3

99

PIN2 CODE

This is the password which activates the special USIM card functions. Usually, the PIN2 code and the USIM card will be provided together. If you incorrectly input the PIN2 code three times in succession, it will be locked and you will need to input PUK2 to unlock it again.

PUK CODE

This is used to unlock the PIN code. If you incorrectly input the PUK code ten times in a row, then the USIM card cannot be used again. Usually the PUK code and USIM card are provided together. If you lose PUK code or it isn't supplied with USIM card, please contact your network operator or USIM card provider.

PUK2 CODE

This is used to unlock the PIN2 code.
Usually the PUK2 code and the USIM card are provided together. PUK2 can modify the locked PIN2 code. If you incorrectly input the PUK2 code ten times in a row, you will not be able to access some of the functions. Please apply to your operator for a new card. The PUK2 code cannot be changed. If you lose it, please contact your service provider.

NOTE ABOUT CHARGING THE BATTERY

The handset uses a lithium battery. How long a charged battery lasts will be influenced by the system's environment and mobile settings.

 Please use the battery and charger provided by INQ with this handset.
 INQ will take no responsibility for damage caused by using the wrong battery or charger.

Caution

Generally, the charging time is 3-5 hours according to the current status of the mobile (whether switched on, making a call, etc).

 Don't touch the handset, battery or charger with wet hands while it's charging.

Caution

To charge a new battery as fully as possible, please charge and discharge the mobile twice or three times.

BATTERY INFORMATION AND CARE

- Never use any battery that has been damaged.
- When you use the handset near a network station, the power consumption is very low, which means that how long

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX



you can use it before charging the battery depends greatly on the signal strength of the network and other factors.

- The battery charging time will depend on the amount of electricity remaining and the type of battery and charger used. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- Only use batteries that are compatible with your handset and only recharge your battery with a compatible charger. If a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, as overcharging may shorten its life.
- Do not connect the anode and cathode of a battery the wrong way round.
- Do not leave the battery in places with too high or too low temperature (such as in a car during summer or winter), or the battery capacity will be reduced and battery life will be shortened. Always try to keep the battery at room temperature.
- Do not short-circuit the battery. This may damage the electronic core or the protected circuit inside the battery.

Accidental short-circuiting can take place when a metal object (coin, clip or pen) causes a direct connection between the anode and cathode of the battery, for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting. So please store the battery carefully and on its own.

- Don't burn your handset battery or treat it as common rubbish. Please follow the local environmental policy in order to avoid endangering life and causing environmental damage, and recycle your batteries.
- If your handset, battery or other charging device leaks due to carelessness, you must not put it inside any piece of equipment that heats up (such as drier, microwave etc). The handset or other products may go wrong, and you could even cause the handset, battery or other charging device to burn, expand and explode.

INQ will take no responsibility for any direct or indirect damage caused by user error.

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

HELP

3

101



INQMOBILE.COM

SAFETY AND MAINTENANCE

NOTE ABOUT USING SPARE PARTS

- Please put all spare parts (such as USIM card, storage card, battery, etc) out of reach of children.
- Please switch off the handset and disconnect the handset and charger before removing the battery from the mobile.
- As the mobile's spare parts are not waterproof, please keep all spare parts dry.
- You should pull out the plug of any spare part correctly when you switch off the power; don't pull strongly on the power line.

If the handset, battery and charger don't operate normally, please contact one of our maintenance centres with a qualified repair service as soon as possible.

OTHER SAFETY INFORMATION

- When you are not using your handset, it is a good idea to switch it off. You can remove the battery to save energy.
- If you use earphones to listen to music or watch a film, please don't turn the volume up too high as this could damage your hearing.
- Don't dismantle the terminal and battery of the mobile – this should be left to qualified staff.

HELP

TROUBLESHOOTING

SAFETY AND MAINTENANCE

INDEX

3

В		Feeds		L		S	
Battery		- Access	47	Last FM	45	Safety and	
Charging	4	– Add	47			maintenance	98
 Power display 	15	Delete	49	M		Skype	
		– Edit	52	Menu tree	20	- Call	58
С		 Mark as read 	48	Messages		- Chat	64
Call		Update	48	 Email messages 	67	Sign in	36
Conference	59	– View	47	- Multimedia		– Sign out	37
Features	60			messages	65	- Status	38
– Making	59	G		Setting up		Switcher	18
Receiving	58	Games and		your email	66		
 Video call settings 	61	applications	83	 Text messages 	64	T	
		General set up		Windows live		Transfer	94
E		 Choosing a text 		messenger	42	Troubleshooting	95
Ebay	44	entry method	10	Modem	32		
Extra feature and security		Ringtone	8	Multimedia		W	
 Activate and change 		 Voicemail and 		 Playing music 	80	Widgets	50
your USIM PIN	87	videomail	9	 Taking a photo 		Wizard	5
Alarm	85	Wallpaper	7	or video	82		
Calculator	86			 Viewing photos 		Y	
Calendar	86	Н		and video clips	82	Your mobile	
 Master reset 	88	Hyperwords	68			Front view	13
 Network settings 	88			P		 Keys and navigation 	13
		1		Phone maintenance	11	 Idle screen 	14
F		Inserting		Planet 3	54		
Facebook	39	 Memory card 	4	Power on/off	6		
		 USIM card 					
		and battery	4				3
							6

INDEX

103

MENU BACK HOME NEXT

The SAR values for this model tested by TMC is below 1.23W/KG when in GSM1900

Safety precautions.

Cautions:

Any unapproved changes or modifications by the party responsible for compliance might infringe the user's authority to operate this mobile phone.

This mobile phone may generate radio frequency energy, which, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this mobile phone does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of measures listed below to clear the interference:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- --Consult the dealer or an experienced radio/TV technician for help.

Attention:

- 1. Please send used li-ion batteries to appropriate disposal locations or return them to our company. Do not dispose of the batteries in the dustbin.
- 2. For body worn operation this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines

Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.