

Item	Multi Web Pad	Model Name	E&M-100
Overview	<p>On the basis of dual touch monitor, it allows the use of dual monitors on 1 PC. It is available in various fields depending on user's purpose. (Student, businessman, governmental office, financial field, etc.)</p>		
Function	<ul style="list-style-type: none"> As Dual touch LCD monitor, it is easy to operate and it allows both-directional use with pivot function. Usability, which is similar to that of popular Windows. Through convenient one-button operation, entire screen presentation function and fast, effective use are allowed. Because of high-function embedded camera, image and voice recording are allowed. Availability of high-function sound dual speaker. Availabilities of both of wire and wireless network. Main functions are controlled by external icon touch button. 		
Spec.	<ul style="list-style-type: none"> CPU : AMD Geode LX800 OS : Microsoft Windows XP Home Edition SP2 HDD : 30G / 60G / 80G Memory : 512M SO-DIMM PC2700 DDR333 / 1G SO-DIMM PC2700 DDR333 Graphic System : SM722 (128-Bit 2D/3D Graphics Engine) Display : Dual LCD (Main LCD :14.1 Wide TFT Glare LCD – standard 1280 x 800 Sub LCD : 7" Wide TFT Glare LCD – standard 1024 x 600) Pointing device : Touch screen Battery : Lithium ion battery (8.4V, 5600mAH), 2Hour(on wireless) AC adapter : Input 100–240V 50/60Hz , Output 12V 5A Size : 362*240*30.2mm 		

Item

Multi Web Pad

Model Name

E&M-100

Front Side

LCD

It presents work process of the computer or you can install functions by softly pressing it.

Microphone

A device to record sound.

Camera

A front-view camera to shoot motion pictures.

Speaker

A device to output the sound.

Operation Light

It presents operational status of the Multi-Web PAD.

Touch-sensor Button

You can install functions by softly pressing it.

Item

Multi Web Pad

Model Name

E&M-100

Operational Light

Sleep (stand-by)

It presents that
Multi-Web PAD is on stand-by.

POWER

It shows operational
status of Multi-Web PAD.
On : The computer is operating



POWER SLEEP HOLD BEAM HDD CHARGE

HOLD(locking)

It shows the holding status.

Beam (connected with the projector)

It shows modes of the beam projector.

HDD(hard operation)

It shows operational status of hard disk.

CHARGE(adapter)

It shows connecting status of adapter.

Item

Multi Web Pad

Model Name

E&M-100

Touch Sensor Button



DVsn(LCD Screen change)

It is a function to change the LCD screen into clone mode, dual mode, or switching mode.

CAM(camera)

It operates the camera to record and replay video.

DVsn

CAM

BEAM



BEAM

It is a function to change the screen with beam project.

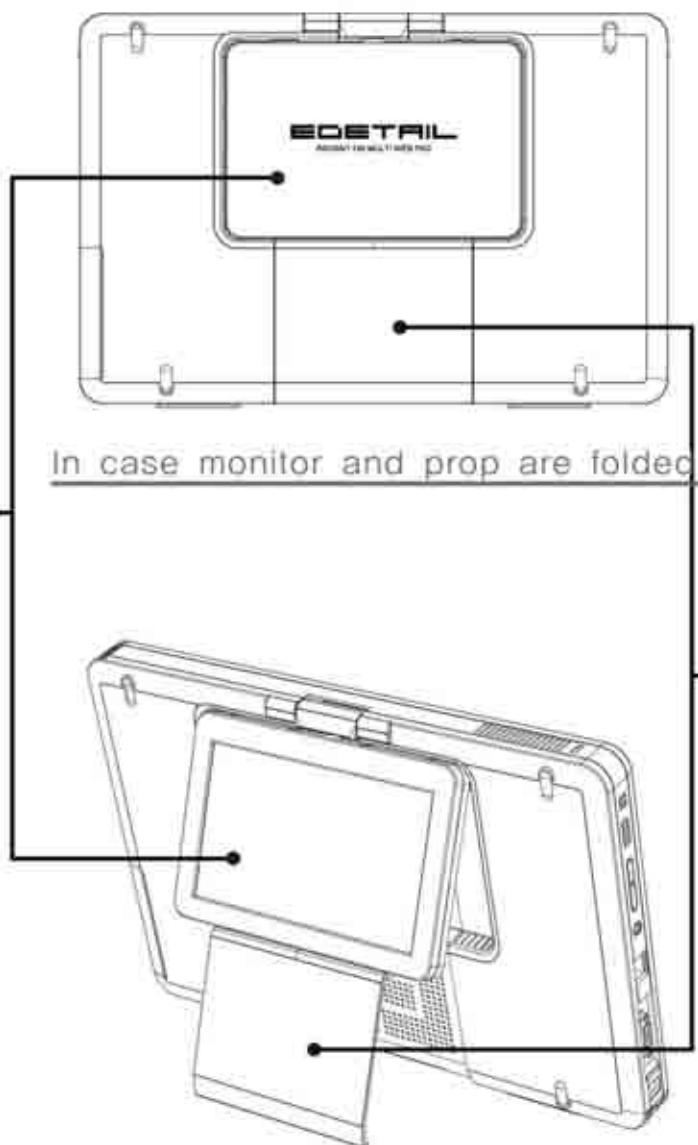
Item

Multi Web Pad

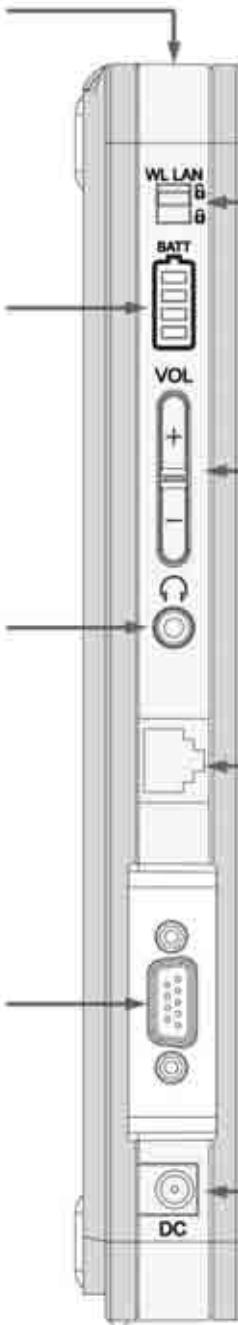
Model Name

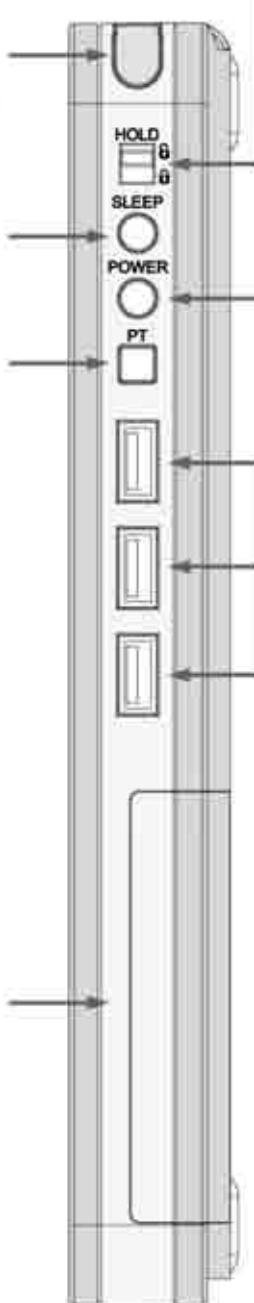
E&M-100

Back Side



In case monitor and prop are unfolded

Item	Multi Web Pad	Model Name	E&M-100
Left Side			
			
<p>Ventilating Opening It is to let out the heat generated in Multi-Web PAD. (location: upper left)</p> <p>Battery Charge Lamp It shows a battery charging state.</p> <p>Headphone Jack It is a jack to connect the headphone.</p> <p>Monitor Port It is a port to connect the monitor to support 15-pin D-SUB and TV projector.</p>	<p>Wireless LAN Connection Button It is used to connect or disconnect wireless LAN.</p> <p>Volume Control Button It controls volume scales of the speaker.</p> <p>Wired LAN Port It is to connect wired LAN to go into internet.</p> <p>Power Connection Jack It is a jack to connect AD adapter, which supplies power on the computer.</p>		

Item	Multi Web Pad	Model Name	E&M-100
Right Side			
<p>Stylus Pen It is a pen to input information on LCD with touch. Pen is fixed and stored in the slot.</p> <p>SLEEP Button (Stand-by Mode) Make Multi-Web PAD into stand-by mode by pressing the button.</p> <p>PT Button(PT Hot Key) At the same time of resolving stand-by button, it opens pre-reserved presentation file directly on the screen, without booting.</p> <p>Battery It is a chargeable battery to offer power to Multi-Web PAD.</p>		<p>HOLD Switch(Locking) Function When you scrawl the switch down, operational lamp (HOLD) on the front side lights and you can use no function. (locked) When you scrawl the switch up, operational lamp (HOLD) on the front side goes out and you can use Multi-Web PAD again. (locking-cancelled)</p> <p>Power Button You can power on or off by pressing this button.</p> <p>USB Port It is a port to connect USB devices. (Keyboard, mouse, USB ODD)</p>	