

Multi-Web PAD



Attention!

These are the cases where the user may be wounded or it may cause loss in property unless he follows the instructions.

Do not disassemble the battery in the middle of using the product.
※It may cause damage in the product and the battery.

Do not throw away the battery recklessly but follow instructions to waste it. (It may be different according to nations and regions. You must recognize it firstly before wasting.)

※There is danger of explosion or fire.

Fully understand the instructions before charging the battery.

※There is danger of explosion or fire due to damaged product.

Multi-Web PAD

Attentions related with Hard Disk



Attention!

The product may be damaged unless the user follows instructions.

Do not move the product or give a severe shock to it while the hard disk is operating.

※There may be an error in hard disk.

Do not disassemble Multi-Web PAD or give a severe shock on the external part while installing it.

※There may be damage in the product or hard disk.

There may be data loss when Multi-Web PAD is reset (restarted-up) while running the product, due to black out and so on.

You may not restore the data due to such reasons as virus infection. Be careful.

Hard disk and data may be damaged if you power off in the middle of operating programs.

If the hard disk or data was damaged due to the user's heedlessness or external environment, the user must take responsibilities. Manufacturer of Multi-Web PAD is not responsible for these cases at all.

Always backup the additionally installed application programs and worked data to minimize damage due to damage of hard disk.

Multi-Web PAD

Attentions related with Touch Screen



Attention!

The product may be damaged in case of not following the instructions.

Do not use other things (pen, pencils etc) than Stylus Pen, which is offered when you purchased the product.

※It could occur damage on TFT LCD monitor.

When you press the screen with your finger directly, watch out whether the nail-tip is pointed, sharp, or wet before using it.

※It could occur damage on TFT LCD monitor.

Do not excessively stress or severely press the screen when you use Stylus Pen or fingers.

※It could occur damage on TFT LCD monitor.

Do not use more than two Stylus Pen's or fingers at the same time.

※It could occur damage on the product due to malfunction.

Multi-Web PAD

Attentions related with Upgrade



Attention!

The user may be wounded or it may incur any property loss unless he follows the instructions.

Be careful all the time when you handle devices or parts of the product.

※The user may be wounded or the device may be damaged.

Be careful not to drop devices or parts of the product, and do not give any strong shock.

※The user may be wounded by devices or parts of the product, and the product would possibly malfunction.

Essentially off the power when you disassemble the product. After disassembly, connect the power after closing the cover of Multi-Web PAD and connect the power.

※There is danger of electric shock if the assembled part is connected with power.

Do not repair or check the inner side on your own.

※There is danger of electric shock or fire.

Use approved products only by the manufacturer of Multi-Web PAD.

※There is danger of fire or product damage.

Multi-Web PAD

◎ Correct Attitudes of Using the Product

It is desirable to make an environment for users to work Multi-Web PAD comfortably and safely. Following is correct attitudes for using Multi-Web PAD, so please fully recognize about it before using the product.

Correct Postures

- Do not use Multi-Web PAD for a long time with the product on part of your body (hand, knees etc.) There is danger of burn if temperature of the product goes high.
- When you use the product while you are on the phone, use ear-microphone or use it after finishing the phone-conversation. Your postures may be distracted if you use Multi-Web PAD with the phone on your shoulder or neck.
- Keep frequently-using things within (your hands') reach.

Position of Eyes

- Leave at least 50cm distance between LCD and your eyes.
- Meet the upper side of LCD or slightly lower than that with your eyes.
- Do not make the LCD too light, and avoid any reflecting light.

Position of Hands

- In case you use Multi-Web PAD comfortably for a long time, it is recommended to connect keyboard or mouse with the product.
- Slightly hold the Stylus Pen, and do not excessively press the Touch Screen.
- Adjust height of the chair for proper position of arms and hands when you use a keyboard.

Multi-Web PAD

Volume Adjustment

- Before using headphone, confirm the scale of volume. Begin with low volume and gradually raise it.
- It is not good to use a head phone for a long time.

In Case of a Long Time Use

- Take a rest regularly when you work it for a long time.
- Take a rest for eyes essentially to protect your eyesight.
- Take a natural and comfortable position when you use it for a long time, since your muscle would feel fatigue.

Multi-Web PAD

Merits of the Product

Dual LCD Monitor

- It is convenient to operate with Dual Touch LCD Monitor. Two-ways use is available by Pivot function.
- Resolved the limitation of PDA and Pocket PC.
- It is similar with popularly used Windows PC.



Presentation Support Function

- Full-screen presentation with simple one-button operation.



Multimedia Function

- By employing highly functional camera, it operates built-in programs as well as image and voice recording.
- Convenient camera programs with touch button.
- Dual speaker with highly-functional sound.



Multi-Web PAD

Microsoft Windows XP Home Edition SP2

- Employed the operating system with optimal convenience.
- Resolved the limitation of PDA and Pocket PC.
- It is similar with popularly used Windows PC.




Support of Wireless Communication and Speedy Data-transportation

- Resolved the limitation of space by wireless LAN.
- Speedy data-transportation is possible with external devices, by employing USB 2.0.



Convenient Mobility / Splendid Design

- Employed external icon-touch button for simple design and convenient operation.
- 14-inch notebook size with high mobility.

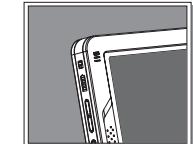


Multi-Web PAD

◎ Nomination of Each Part

Reference

- Items with no (*) mark are optional, which may be offered after change or may not be offered.
- External appearance and color of the computer may be different from the picture.
- Shape and size of the icon on the product may be different actually.

Front Side

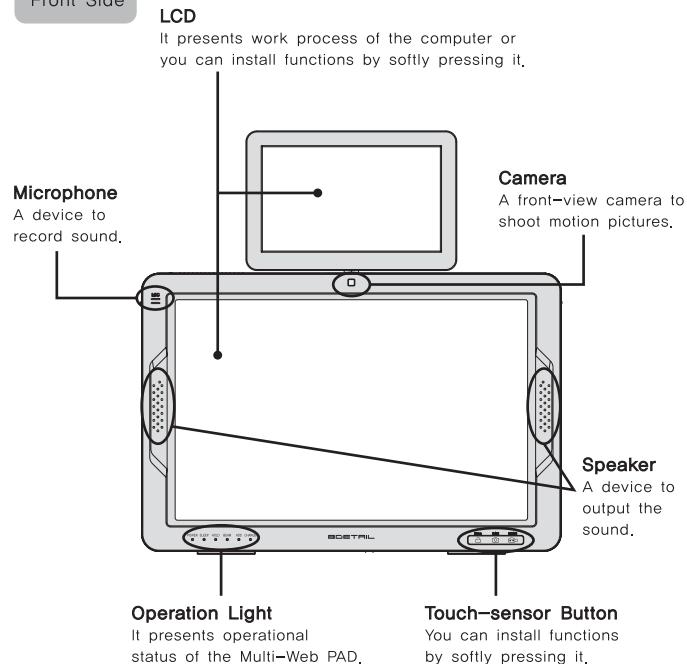

Multi-Web PAD

Operational Light

Sleep (stand-by)

It presents that Multi-Web PAD is on stand-by.

POWER

It shows operational status of Multi-Web PAD.
On : The computer is operating

POWER SLEEP HOLD BEAM HDD CHARGE

HOLD(locking)

It shows the holding status.

Beam (connected with the projector)

It shows modes of the beam projector.

HDD(hard operation)


It shows operational status of hard disk.

CHARGE(adapter)

It shows connecting status of adapter.

Multi-Web PAD

Touch Sensor Button

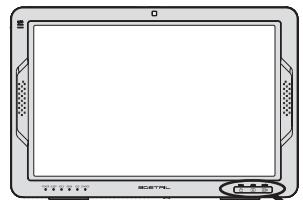

DVsn(LCD Screen change)

It is a function to change the LCD screen into clone mode, dual mode, or switching mode.

CAM(camera)

It operates the camera to record and replay video.



BEAM


It is a function to change the screen with beam project.

► Attentions when you Use the Touch Sensor Button

- Touch sensor button works only in the state of computer on.
- When Multi-Web PAD is locked, touch sensor button does not work although it is pressed.
- Use the touch sensor button with clean and dry hands. Remove humidity of the hands or surface of the button in humid environment.
- Touch sensor button normally works with slight touch. Do not strongly press it. Touch sensor button may be damaged by a strong shock. Be careful.
- Do not press it with pointed things such as knife or ball pen. Pointed things may damage touch sensor button.
- When you press touch sensor button, be careful not to touch other functions. Accurately press the required function of touch sensor button with your finger-tip.
- Touch sensor button may not operate normally when you wear gloves or when the product is covered by vinyl or protector.
- In case conducting things such as metal contact the product, it may malfunction. Be careful not to touch any metal things on the surface of touch sensor button.


Multi-Web PAD

Back Side

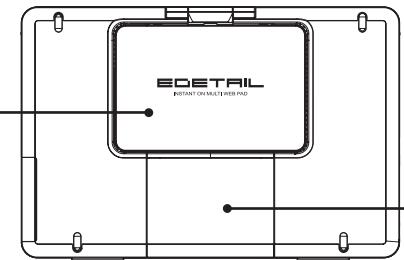

Dual LCD

In case monitor and prop are folded

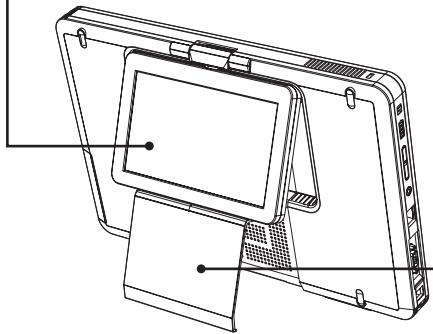


Prop
Is used to stand up Multi-Web PAD.


In case monitor and prop are unfolded

Multi-Web PAD

Left Side

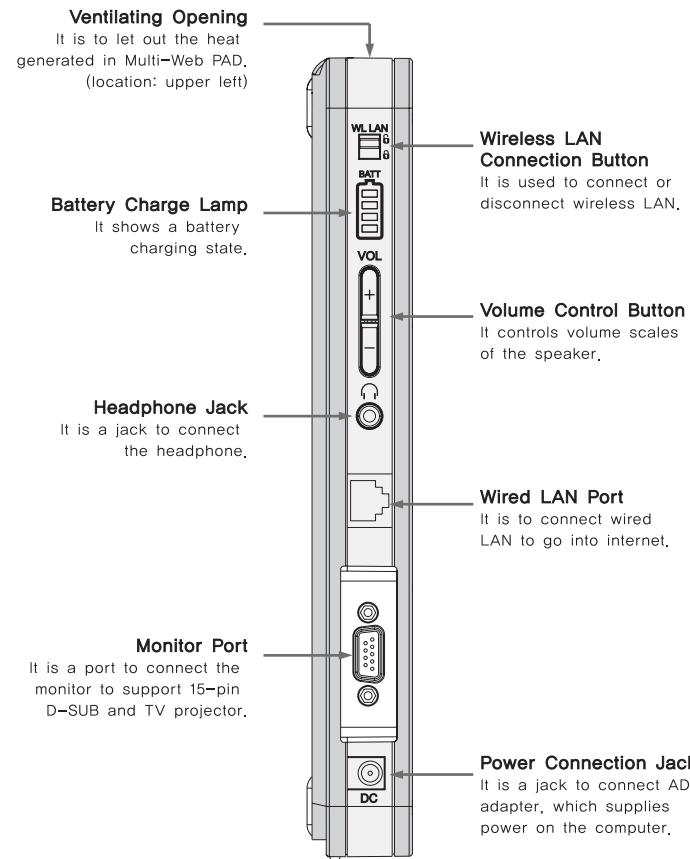

Right Side

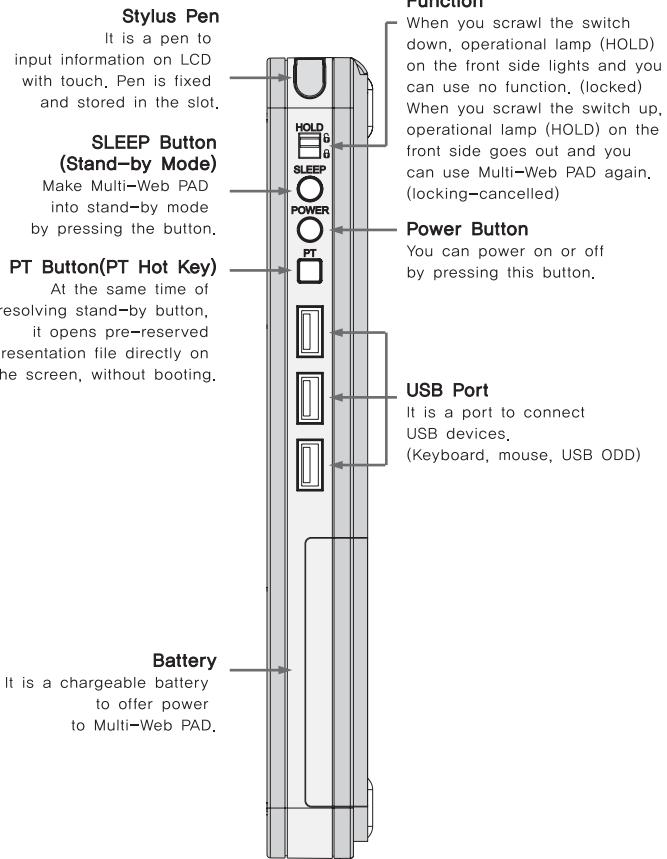


Multi-Web PAD

How to Use Multi PAD

Turning on Multi-Web PAD

- 1) Connect AC adapter after installing the battery.
- 2) Adjust the angles of prop on the back of Multi-Web PAD and dual monitor to be conveniently used.
- 3) Press the power button, and Multi-Pad would be power-on followed by lights on Power LED.

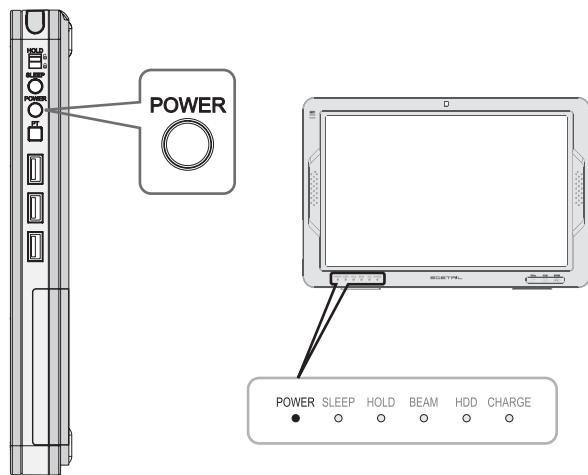

Reference

- LCD brightness is established as low in case of operation by the battery.

Multi-Web PAD

Turning off Multi-Web PAD

- 1) Click Start on the work presentation bar and then click Turn off Computer.



- 2) When you click Turn off from (Turn off Computer,) Multi-PAD would be ended.



Reference


- When Multi-Web PAD is not ended due to system error, press power switch to end it.
- You can execute the system check program if you turn on Multi-Web PAD again after ending power switch to end it.

Multi-Web PAD

- Stylus Pen -

Letting out Stylus Pen

- 1) Pull out Stylus Pen from the slot located on the upper right side of Multi-Web PAD.
- 2) After using Stylus Pen, keep it on the slot again.

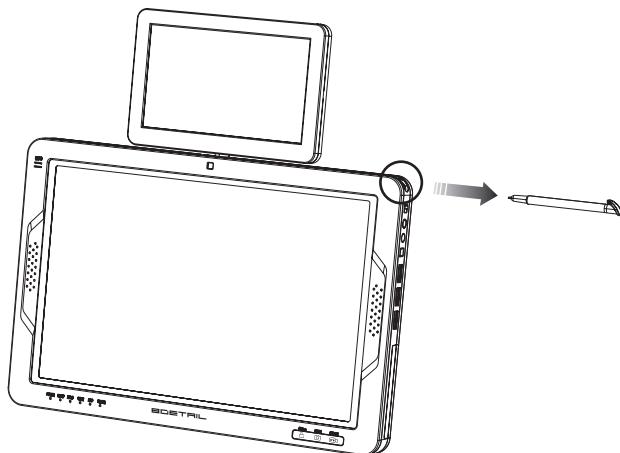


Reference

- What is Stylus??
It is a pen to directly press LCD instead of mouse, which has the same functions with a mouse.
- Operate the product with Stylus Pen or fingers. LCD may be damaged if pointed or sharp things are used.
- In case Multi-Web PAD is used for a long time, it is recommended to connect a mouse.

Multi-Web PAD

Functions of Stylus Pen

Mouse	Stylus Pen Operation	Function
One click	One touch	 Press an item once with the pen to choose it.
Two clicks	Two touches	 Press an item twice with the pen to choose it.
Right click	Keep pressing	 Press the screen with the pen for about 3 seconds, and pop-up menu would appear.
Drag	Drawing	 Put the pen on an item and drag it to where you want.

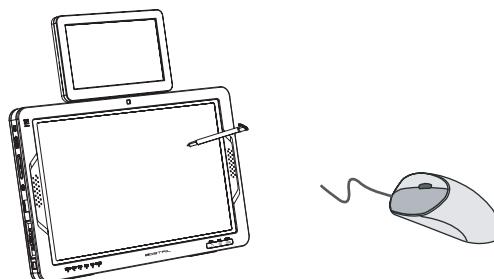


Multi-Web PAD

Screen Correction

If you use Stylus Pen for the first time, if you cannot control the pen pointer, or if the pen is not enough accurate, correct the screen with Jastec program.

- 1) Start > All Program > Jastec > Jastec Panel
- 2) Calibration Tab > Calibration
(Calibration Point is established as basic 5 Point)

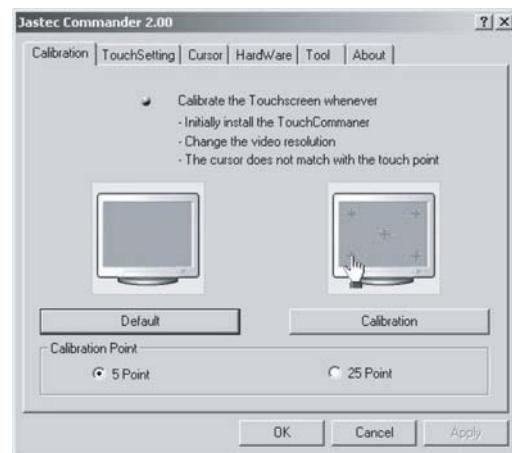

Reference

To Raise Accuracy

In case the more accurate adjustment is required, you can control it by 25 Point.

- 1) After pressing Start > All Program > Jastec > Jastec Panel, press Calibration Tab > Calibration Point > 250 Point.
- 2) In tools tab, press linear correction. The higher the figure goes up, the finely it is corrected.

Multi-Web PAD

- 3) Press central part of on mark flickering on the screen until its color turns from orange to blue. Then P figure on the upper central screen goes 100. Mark appears as the quantity of chosen dots. (Reference →)



- 4) Press Confirm when the result screen of location-correction appears. Location of Stylus Pen is corrected.

