

Multi-Web PAD

- Putting in Letters -


On-Screen Keyboard

You can input letters with Keyboard and On-screen Keyboard. When you use the product for a long time, USB Keyboard is recommended. The manual explains how to put in letters using On-Screen Keyboard.

[How to Use On-Screen Keyboard]

On-Screen Keyboard is a image keyboard program with which users can put in letters on the LCD by Stylus Pen or hands.

- 1) Press Start > All Program > Accessories > Accessibility > On-Screen Keyboard.
- 2) Put in letters by pressing the keys you want with Stylus Pen or hands, once the program is executed.

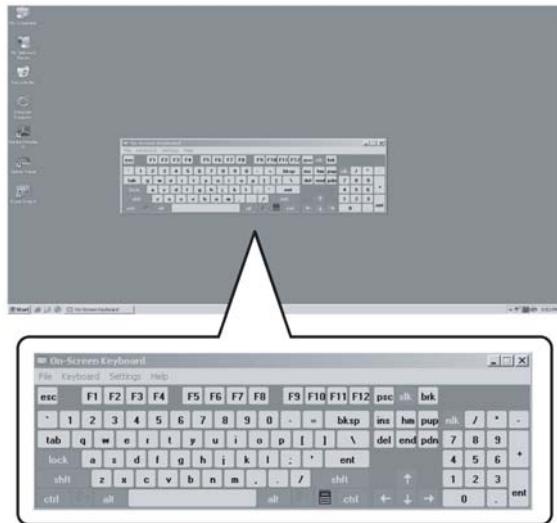

Multi-Web PAD


- How to Use the Button -

Touch Sensor Button

It explains how the touch sensor button uses and functions, which are located on the front side of Multi-Web PAD.

DVsn

When you press the button, it turns into clone mode, dual mode and switching modes.

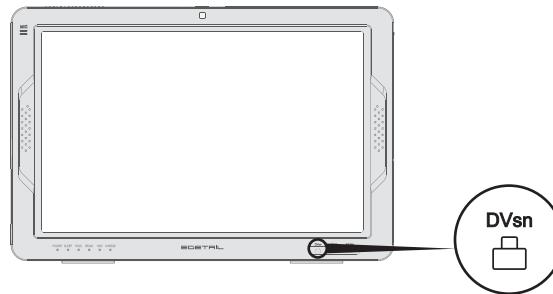

[How to Use DVsn]

- 1) Press DVsn button located on lower part of the front side, as the above picture.
- 2) Initial status when Multi-Web PAD is booted: Clone mode
In case of pressing DVsn button in clone mode: dual mode
In case of pressing DVsn button in dual mode: It is changed into switching mode.


Reference

- This function is offered only by specific model.

Multi-Web PAD


Clone Mode :

A function to present the same screen on 2 LCD's.

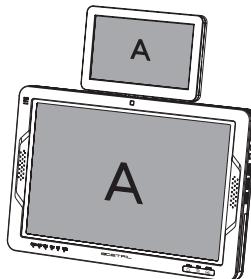


Dual Mode :

A function to present 2 different screens on 2 LCD's.

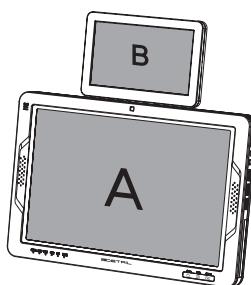

Switching Mode :


A function to interchange 2 screens of the dual mode.

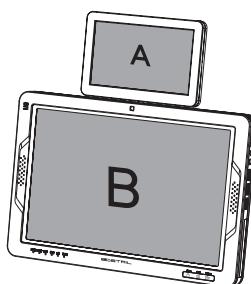

Multi-Web PAD

CAM

On the upper-front side of Multi-Web PAD, a camera is installed to shoot motion pictures. You can shoot motion pictures with the camera.

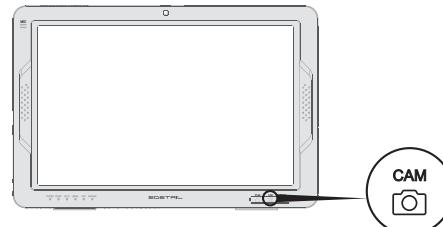

[How to Use CAM]


- 1) Press CAM button that is located on lower-front side of Multi-Web PAD, as the above picture.
- 2) A program related with camera would appear on the screen. Put the thing to be shot in front of the camera, and start recording by pressing Video in case of video recording, and Audio in case of audio recording. Press stop button when you end the recording.
- 3) When you want to replay the recorded file, find out the file name out of the list on the right side of the screen. Then press replay button to replay it. Press stop button to stop it.
- 4) Press end button on the upper-left screen to end the program.

Reference

- The program versions explained on this manual is changeable, and used images and terms may be different with actual ones.

Multi-Web PAD

Display Screen :
shows the appearances
captured by the camera
or replayed images.

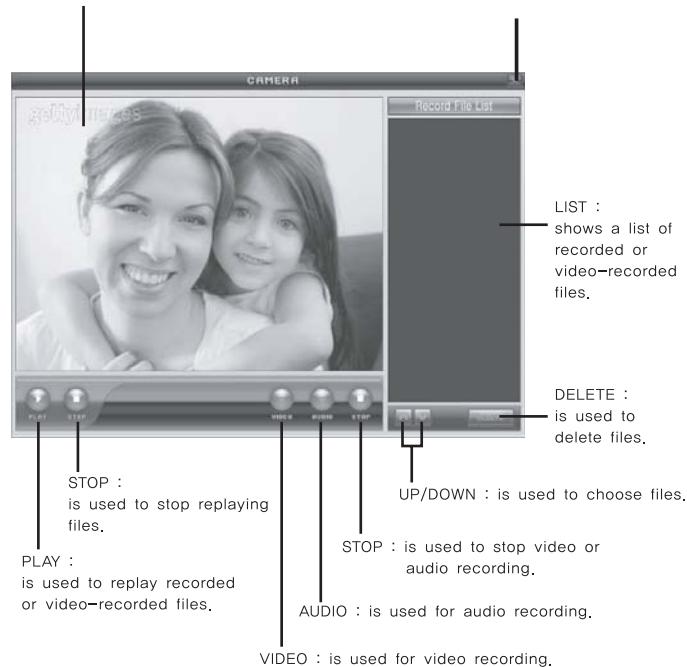

Reference


- 1) Do not video or audio-record without permission of others. You could violate their privacy.
- 2) Do not use where video recording is prohibited.
- 3) Be particularly careful not to expose any secret or personal information of individuals.

BEAM


It is a function to see the screen of Multi-PAD, using other display devices than Multi-Web PAD. (beam projector, monitor etc.)

[How to Use BEAM]


- 1) Turn on the power after connecting monitor port and display devices. (display devices: monitor etc.)

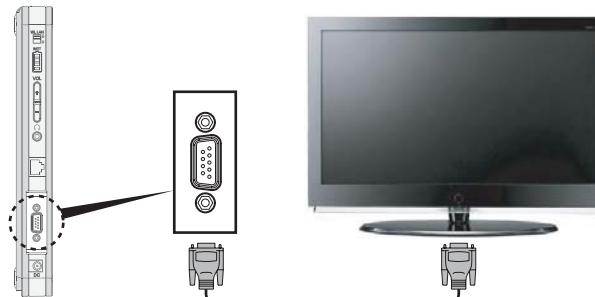

- 2) Press BEAM button located on the lower-front side of Multi-Web PAD. (When BEAM functions, LED lights on.)

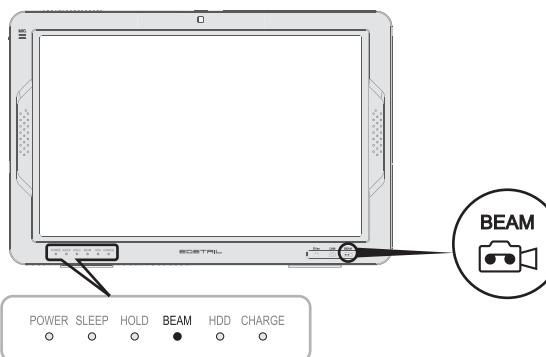

Multi-Web PAD

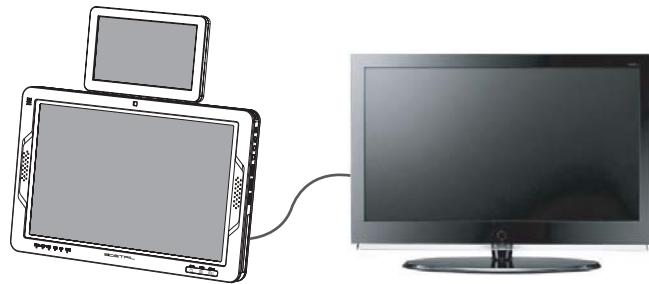

- 3) After using BEAM function, press the button again to end the program.

Multi-Web PAD

Sound Control Button


Scale of sound can be controlled by volume control button and volume control program.

Volume Control Button

Use VOL button located on the lower-left side of Multi-Web PAD.

[How to Use VOL]

- 1) Press '+' to increase the sound.
- 2) Press '-' to decrease the sound.

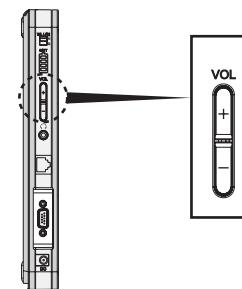

Volume Control Program

Control it when a volume control program appears after clicking the volume icon on the work presentation bar.




Multi-Web PAD

- 1) Increase the sound by moving up the volume bar.
- 2) Decrease the sound by moving down the volume bar.
- 3) Remove the sound by clicking Mute.



- 4) Click the volume icon twice to see master volume item.
- 5) Adequately control the items you want.

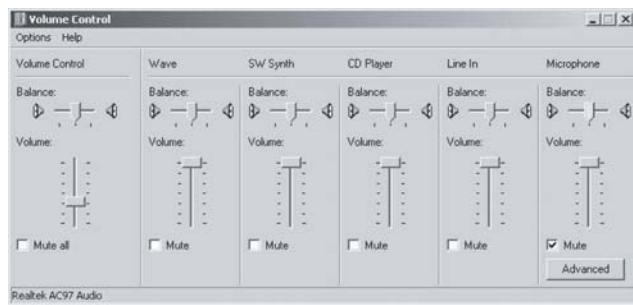

Multi-Web PAD

Special Functions Button


Special functions button is consisted of 2 kinds, which are SLEEP and PT.

SLEEP button


Use the SLEEP button located on the right-flank side of Multi-Web PAD. As a function to temporarily sleep the function of Multi-Web PAD, SLEEP button executes the same function with Stand-by status to receive a call of mobile phones.

[How to Use SLEEP]

- 1) Press SLEEP button on right side of Multi-Web PAD.

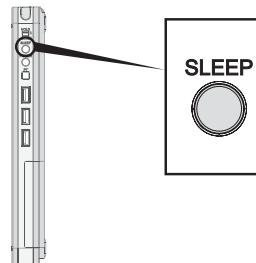

- 2) SLEEP LED on the lower part of the product would light on, to change into stand-by status.

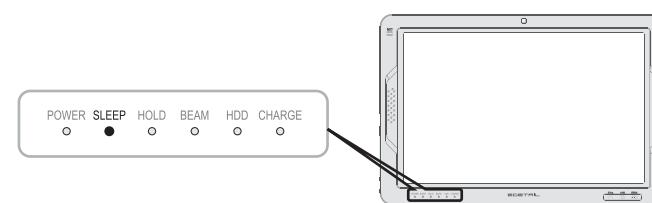

Multi-Web PAD


3) Press power or PT button once to end the stand-by status.

PT Button

One touch of PT Hot Key opens the pre-designated file on full-screen without booting, allowing swift presentation.

[How to Use PT]

- 1) Press PT button on the right side of Multi-Web PAD.
- 2) Presentation screen would show up, which is pre-established.

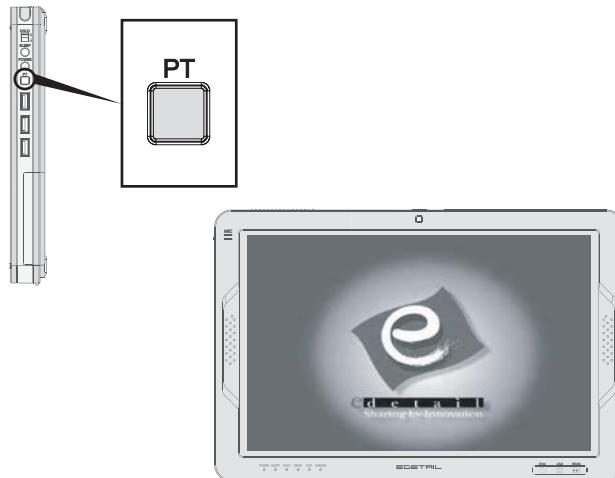

3) Press presentation program end button to end it.


Multi-Web PAD

Information on Windows XP Screen Composition

Windows XP Home Edition is an operation system, which offers optimal convenience to users.

Basic Window

Basic Window means a workspace of Multi-Web PAD, which is consisted as following.

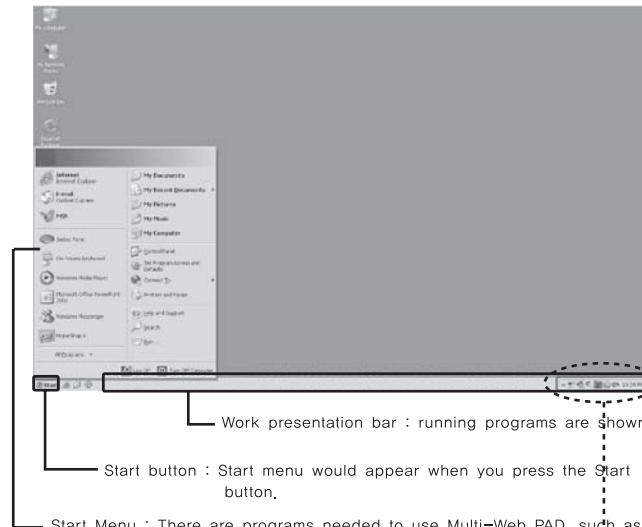


Notification area : It shows some icons of programs running at the moment, while icons of not-running programs are hidden. Click the left arrow to see hidden icons.

Multi-Web PAD

Start Menu

It is a menu to start programs. Press start button to see it.

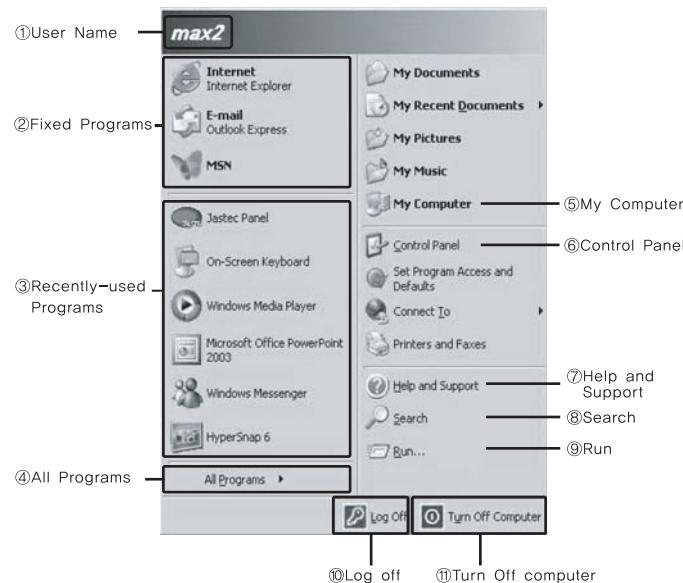

Reference

1) Appearing icons, items, and names may be different according to OS versions and models, and used programs.


Multi-Web PAD

1	User Name	It shows the name of user who logged in.
2	Fixed Programs	It is a fixed menu presented on the start menu always.
3	Recently-used Programs	It shows recently used programs.
4	All Programs	It includes other programs not appeared on the basic window or start menu. Run it by pertinent button.
5	My Computer	You can see saving devices such as hard disk or network drive etc. You can manage folders and files.
6	Control Panel	You can change Windows establishment such as adding/deleting programs, or adding/changing user's account.
7	Help and Support	You can solve the problem by using searching word when you need help to use Windows.
8	Search	Search out folders and files.
9	Run	Run programs and documents.
10	Log Off	You can end or change the logged-in user into other.
11	Turn Off Computer	You can turn off or re-start Multi-Web PAD, or change it into stand-by mode.

Multi-Web PAD

Window

Window is a basic space of Multi-Web PAD work.

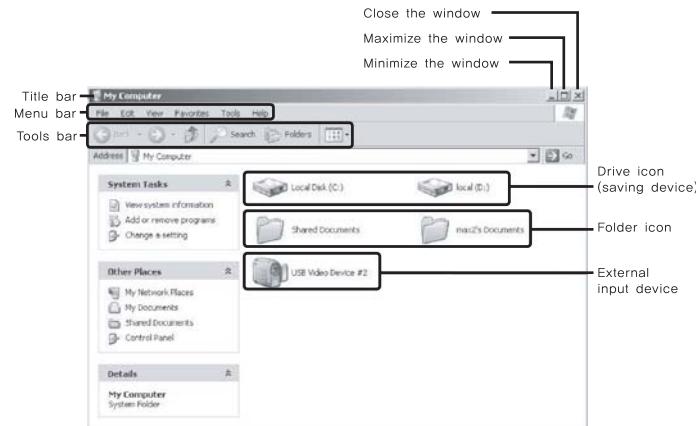


Example) Windows of My Computer

Multi-Web PAD

Control Panel

Control panel is where the tools to control windows—establishments are gathered. Click the control panel.

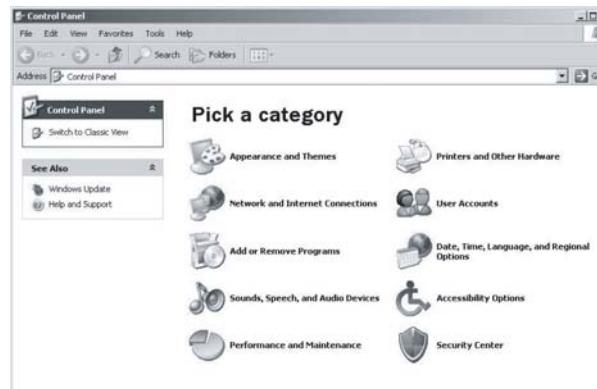

1	Drive	As a device to read or record information, it includes folders and files. Double-click the pertinent disk to see detailed list (folders and files.)
2	Folder	It is a space to contain files and folders, and you can put files or folders of similar types. (Click the pertinent folder to see detailed files.)
3	File	It is a minimum data made as a program, which is also called data.
4	External Input	It is an external device to connect with Multi-Web PAD using USB port.

Multi-Web PAD

	Appearance and Themes	Use it when you correct any parts related with windows shape. You can change the appearance of basic window, apply theme or screen protector on the computer, or change start menu or work presentation bar.
	Network and Internet Connections	Use it when you want to add or change network or internet-connection establishments.
	Add or Remove Program	Use it when you add or delete auxiliary programs of Windows.
	Sound, Speech, and Audio Device	Use it when you control volume or change establishments of voice-composition table or speaker.
	Performance and Maintenance	You can correct options, which can influence on performances of Windows. It is also used to manage hard disk and hard ware.
	Printers and Other Hardware	It is used to add or establish printer, mouse, keyboard, scanner, camera or game wares.
	User Accounts	It is used to add user of Windows XP or change user account.
	Date, Time, Language, and Regional Options	It is to correct options for date, time, language, and nation.
	Accessibility Option	It offers options for blind men and who cannot use the keyboard conveniently.
	Security Center	You can check current status of protection to protect the computer, and can establish a firewall or virus vaccines.


Multi-Web PAD

User Account

Several users can establish respectively and use one Multi-Web PAD.

[How to Use User Account]

1) Click Start > Control Panel > User Account.

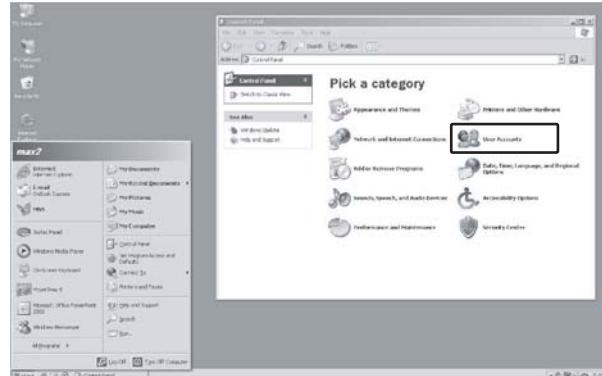

2) In Work Option

Click Change an Account to change a user account.
Click Create a New Account to add a user account.

Click Change the Way Users Log On or Off to change the way users log on or off.

Multi-Web PAD

3) Examples of Users Accounts.



Click Create a New Account.



Click the Next button after putting in the name of new account.



Click Create a New Account after choosing the type of account.



A new account would be shown.

Multi-Web PAD

4) Click Change an Account to add or remove information about user account.



Click the account to be added or removed.



When the question 'What information would you like to change among the account?' appears, click Remove an Account on the lowest part. (This manual takes an example of deleting process of MultiWebPad account, and the user may choose the list to be changed.)



When the question 'Would you like to reserve the file?' shows up, choose and click the pertinent button.



Deleted account would be disappeared.



- 1) Or on Change the Account, you can change the account name, password, account type, or picture, other than deleting the account.
- 2) You cannot delete logged-in manager's account.