

T21 tune up procedure

Tune-Up procedure over the power range is 1W

Tolerance while tuning up is +/- 10%

1. Watch the keypad as below picture shows:




2. Press F4 to enter the following interface:



3. Input 12345 as below picture:



4、 Press ENT to enter normal user setup, move to Project set

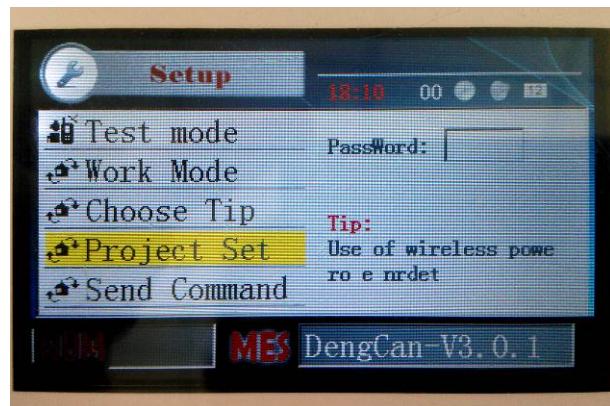


5、 Press ENT and the icon will turn gray, as below picture



6、 Input password 49391, as below picture



7. Press ENT to enter Super User mode, find Send Test

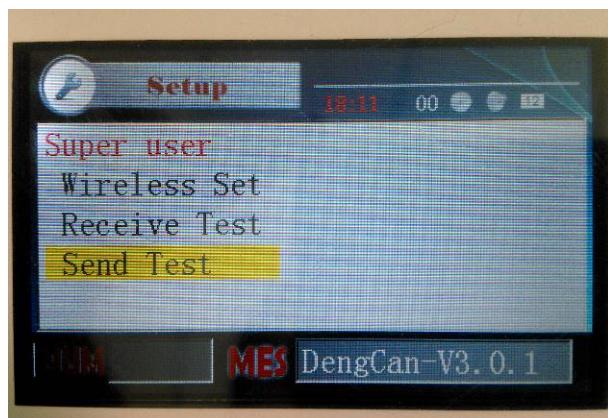

8. Press ENT, the icon turns green, as below picture, which means it already enter the continuous transmitting status.

