

Manual

Handset are pre-configured when packaged – the handsets in the case are setup to communicate with the receiver in the case. To easily identify the handsets each handset has the handset ID label on the back.

To confirm the handset ID you can see it by switching on the handset (press the “on” button) and the handset ID can be seen on the top right hand side of the LCD screen.

Please note: Handset ID 255 is reserved for the teacher remote and ID's 126 and 206 are reserved by the system.

Firstly make sure the hardware drivers are installed on the PC. Take the handset to close proximity of the new receiver (50cm) and hold down the “?” key until you see the download/upload indicators flashing on the handset, you will then see a four digit value on LCD which confirms that the handset has successfully configured communicate with new receiver

Hold down the “/” key until the “?” appears on the screen, then input the digits 1 2 3 4 and press the “ ” then type in the new ID of the handset i.e. if you want to make it handset ID 32 then type 0032 and press the “ ” key. The new handset ID can be seen on the top right hand side of the LCD screen.

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation